



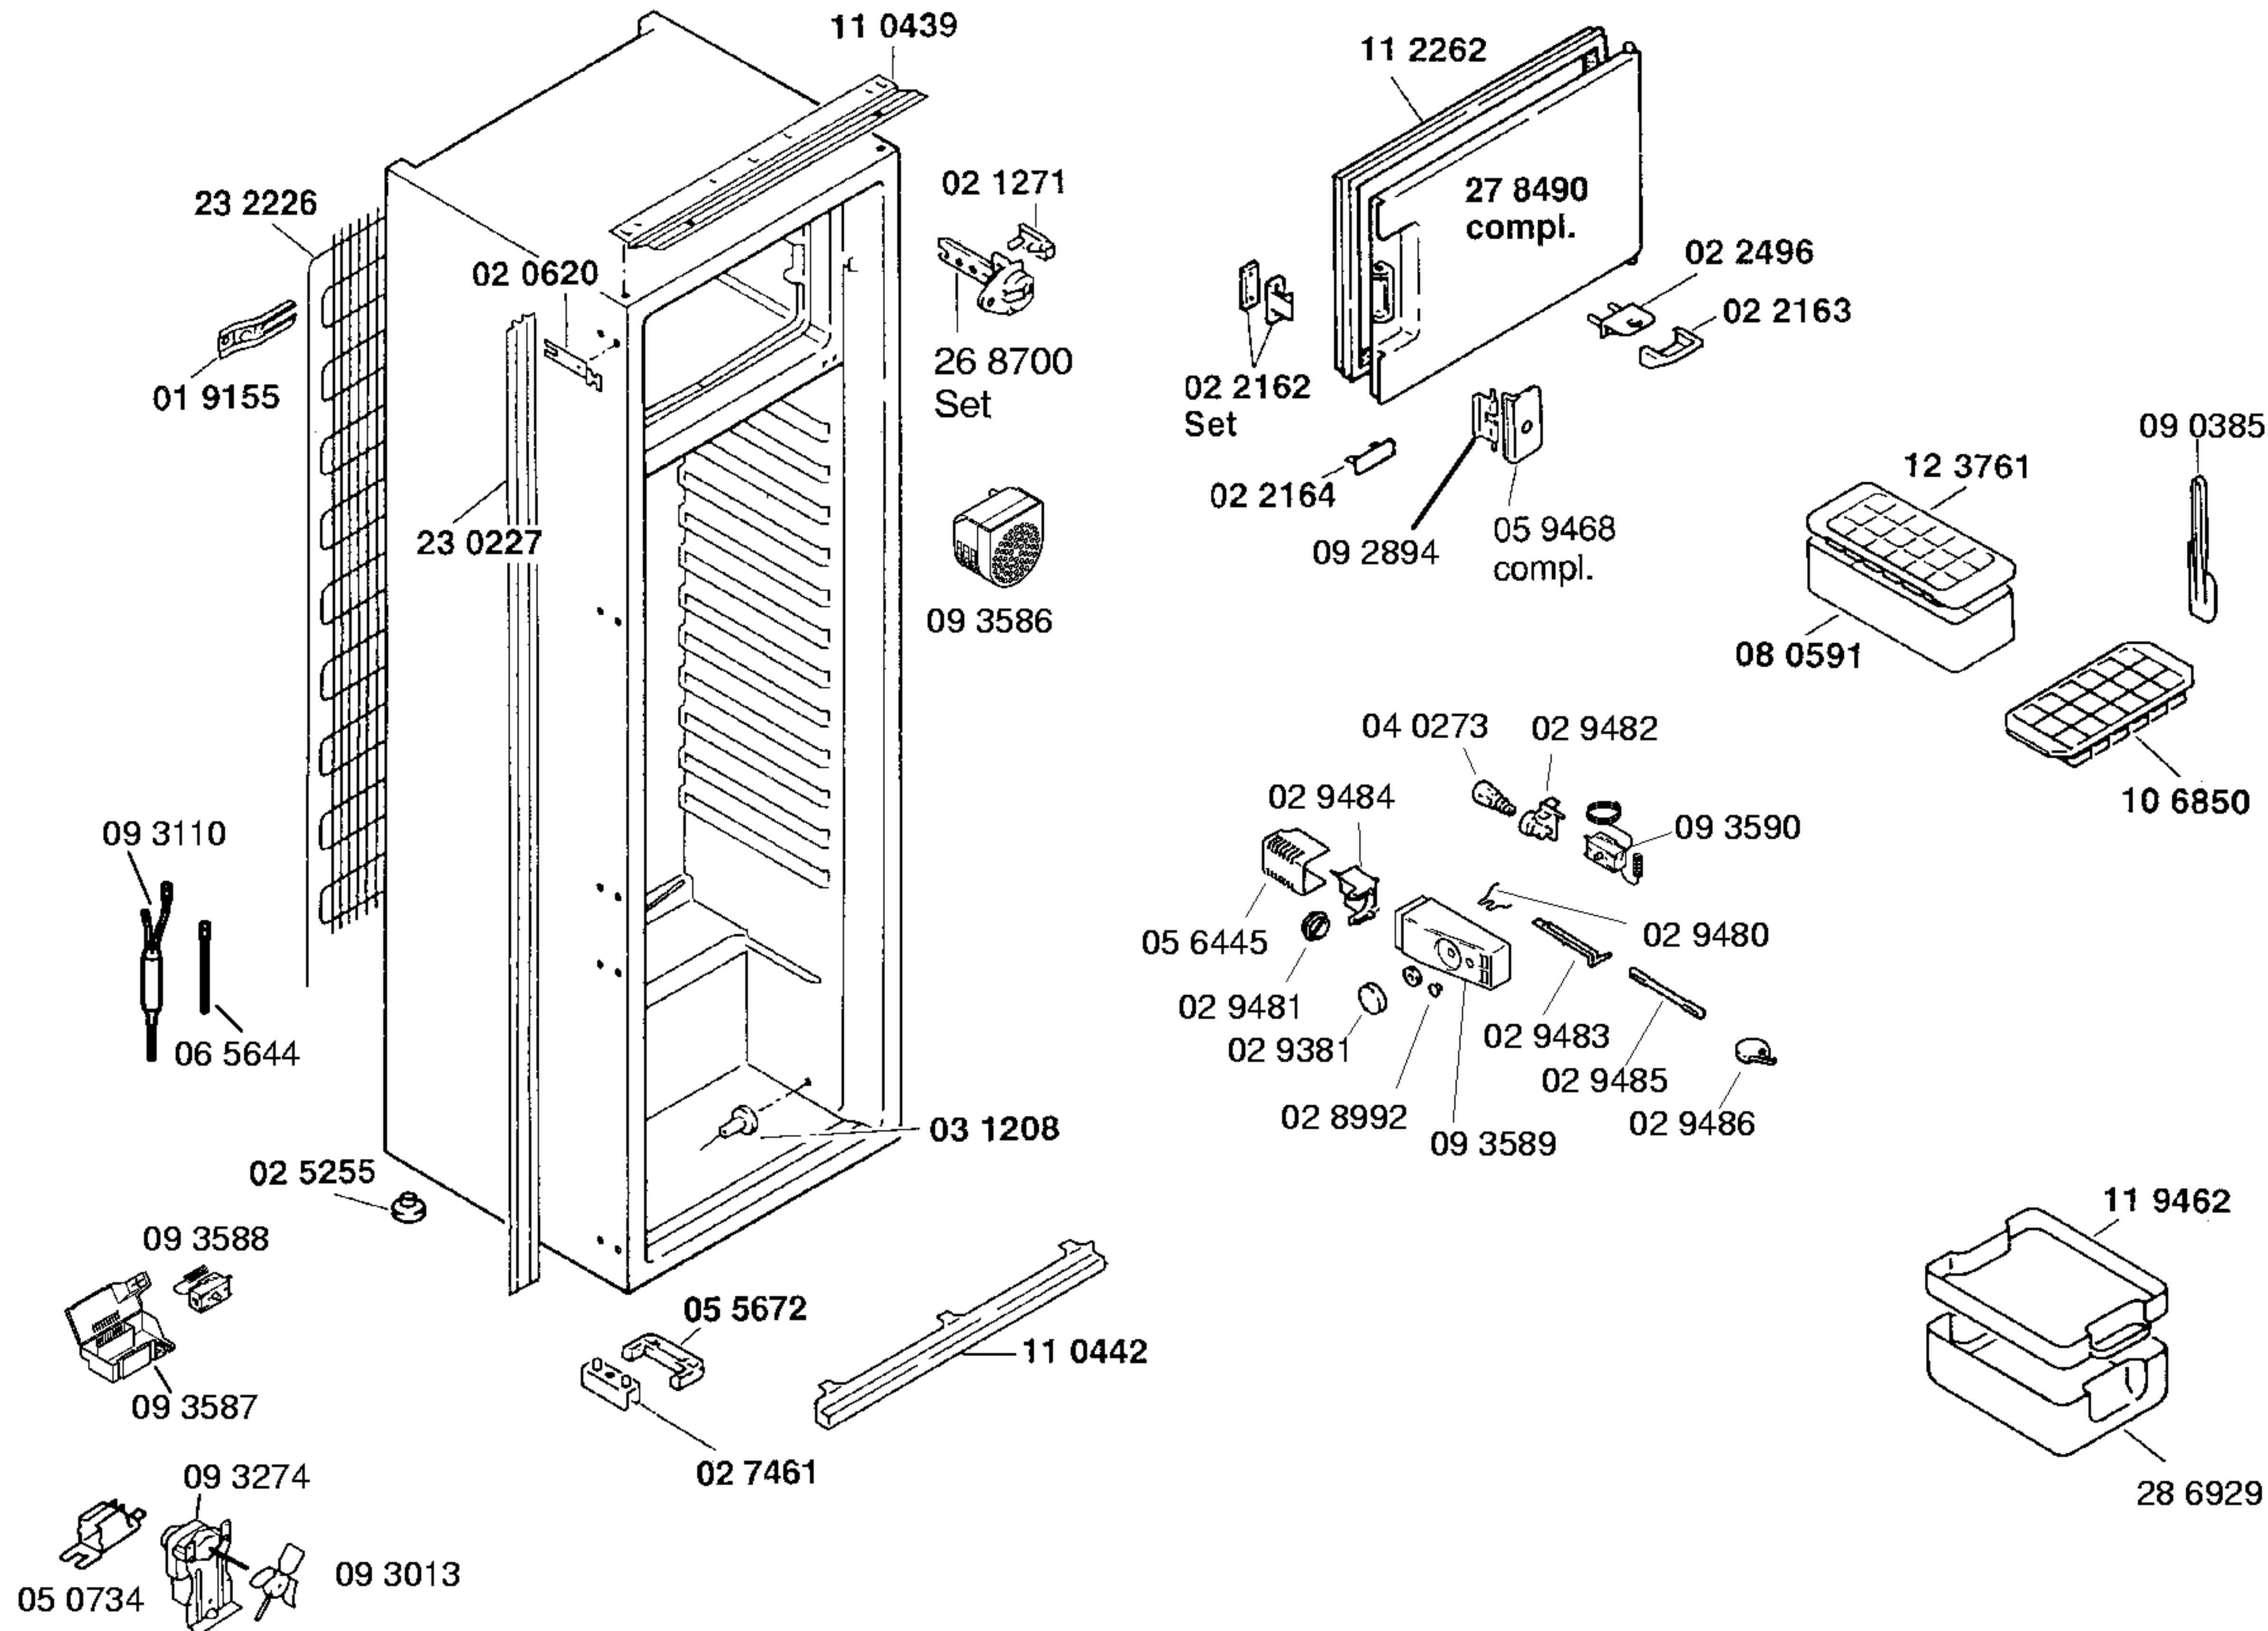


Gebrauchsanweisung
51 4430
(D,GB,F,I,NL,E)
Montageanweisung
51 5436
(D,GB,F,I,NL,N,S,E)

Schraubensatz
08 4136

Befestigungssatz
08 8957

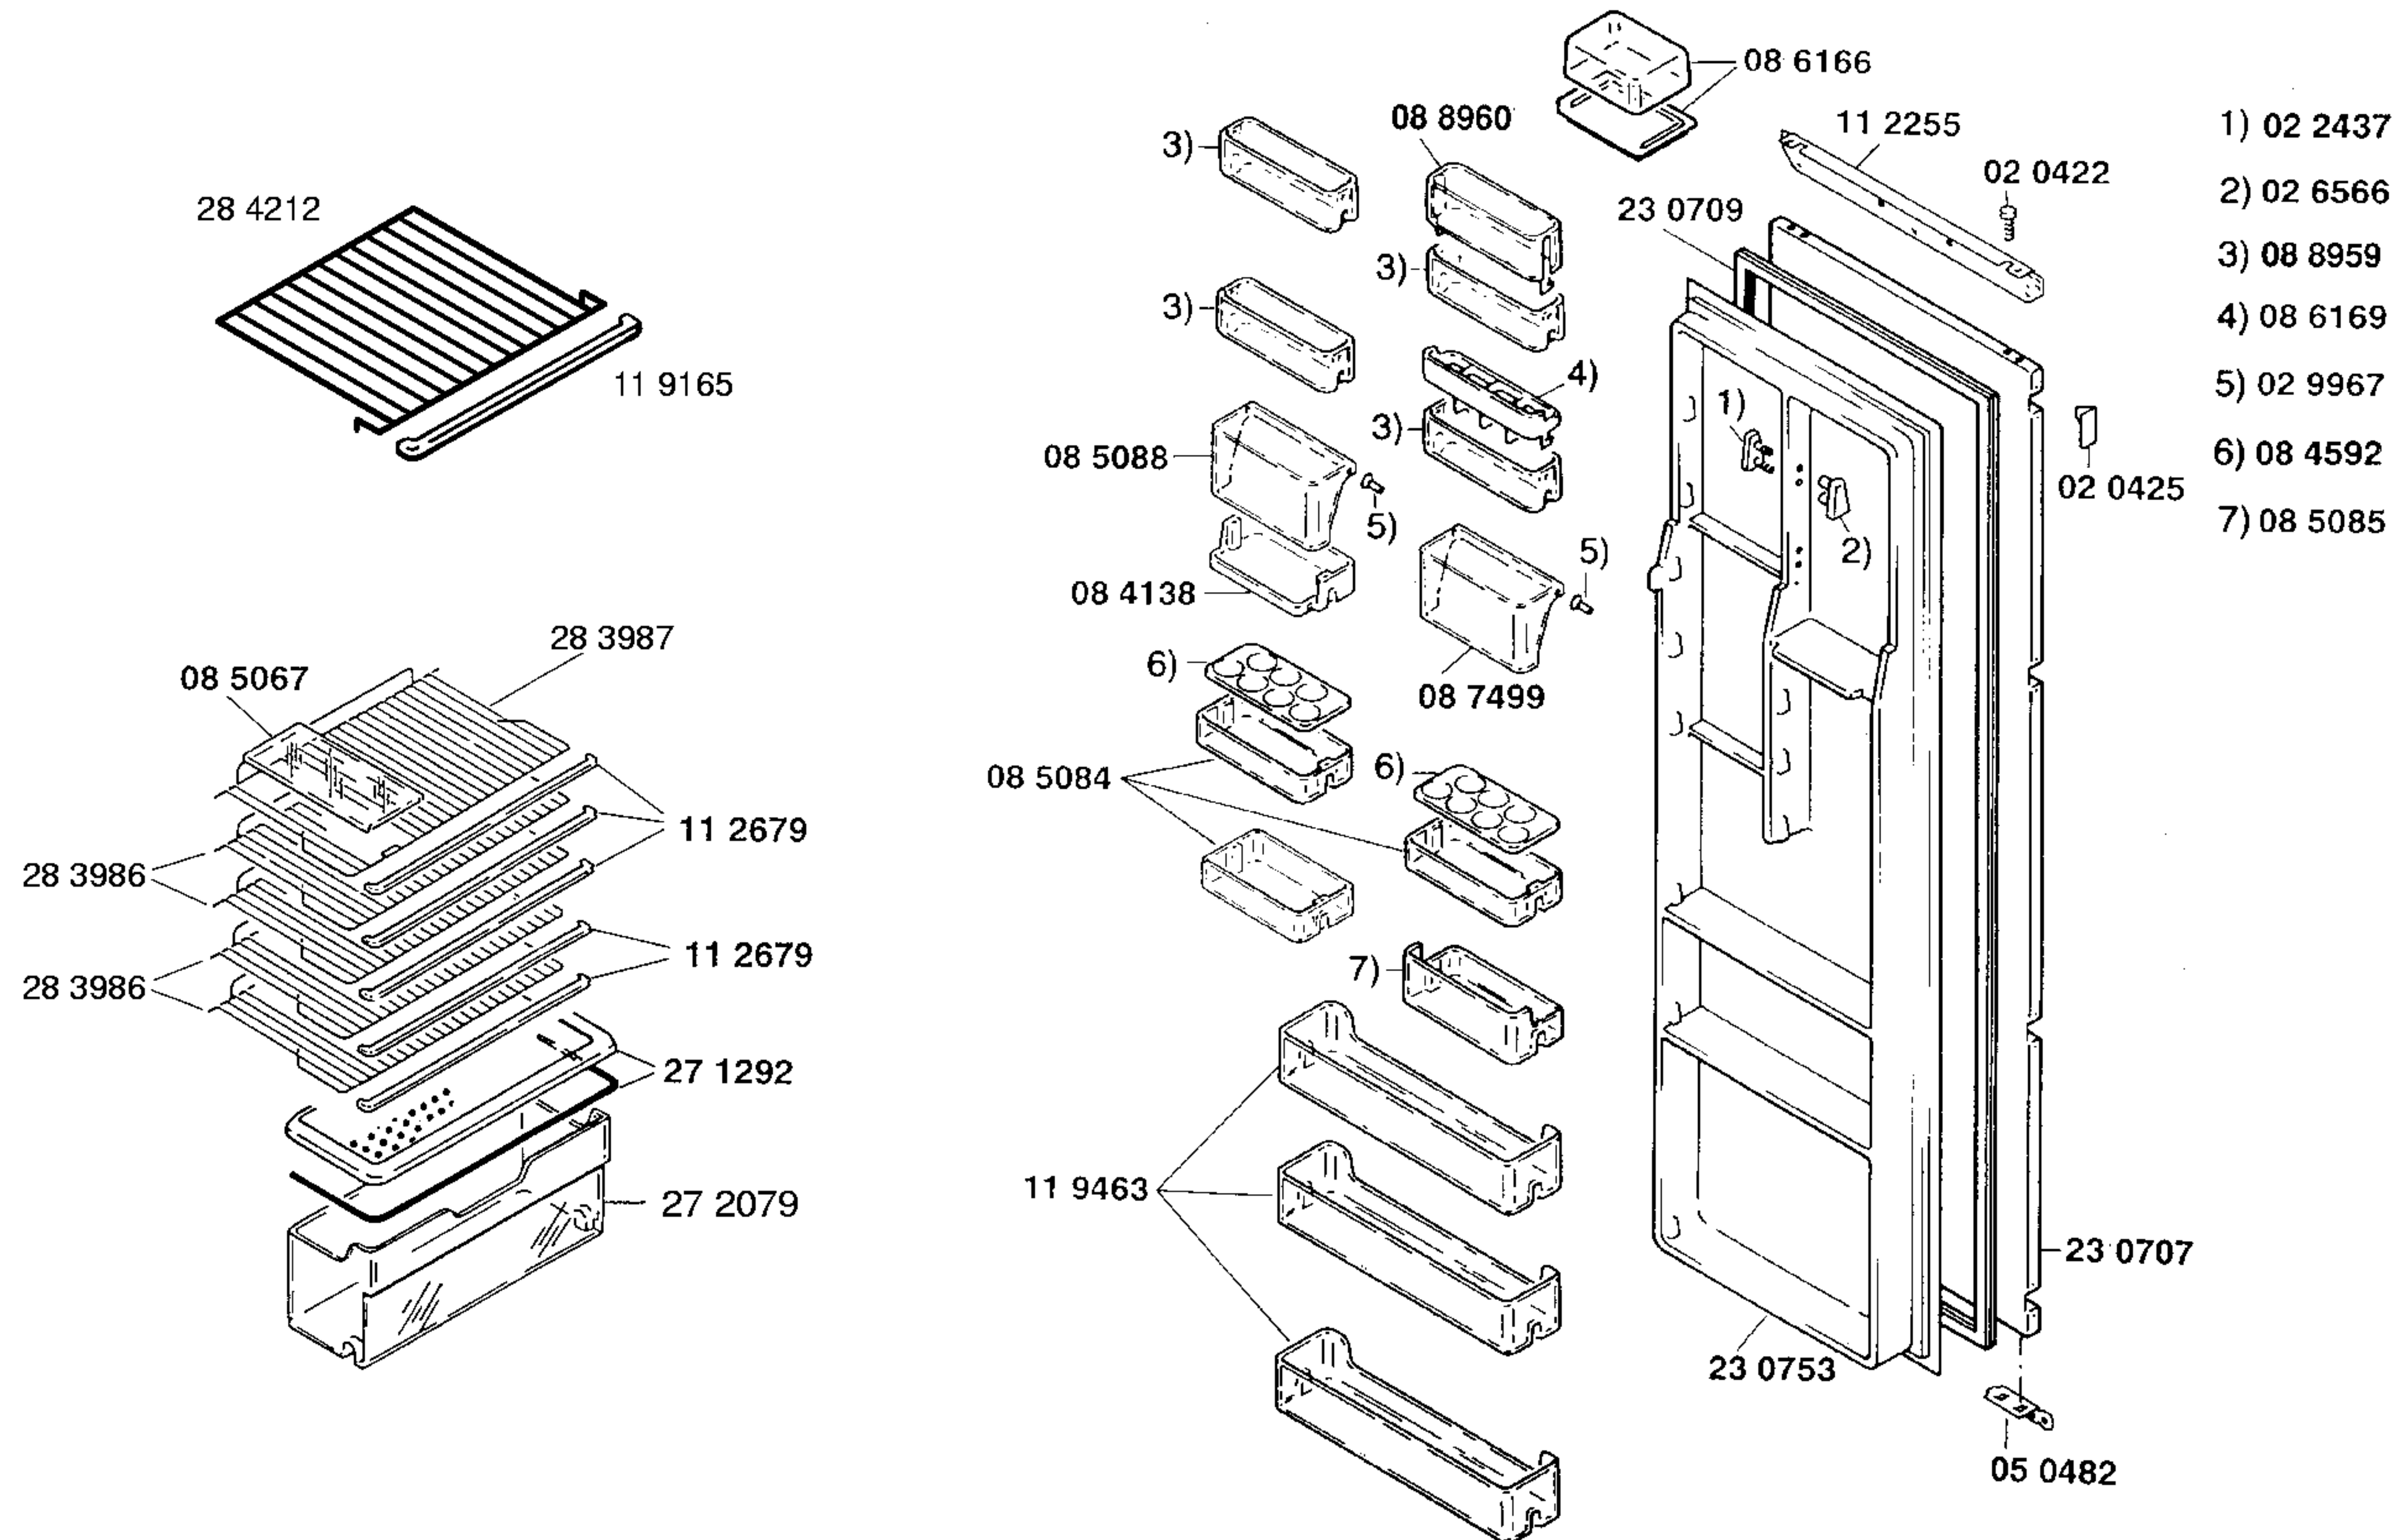

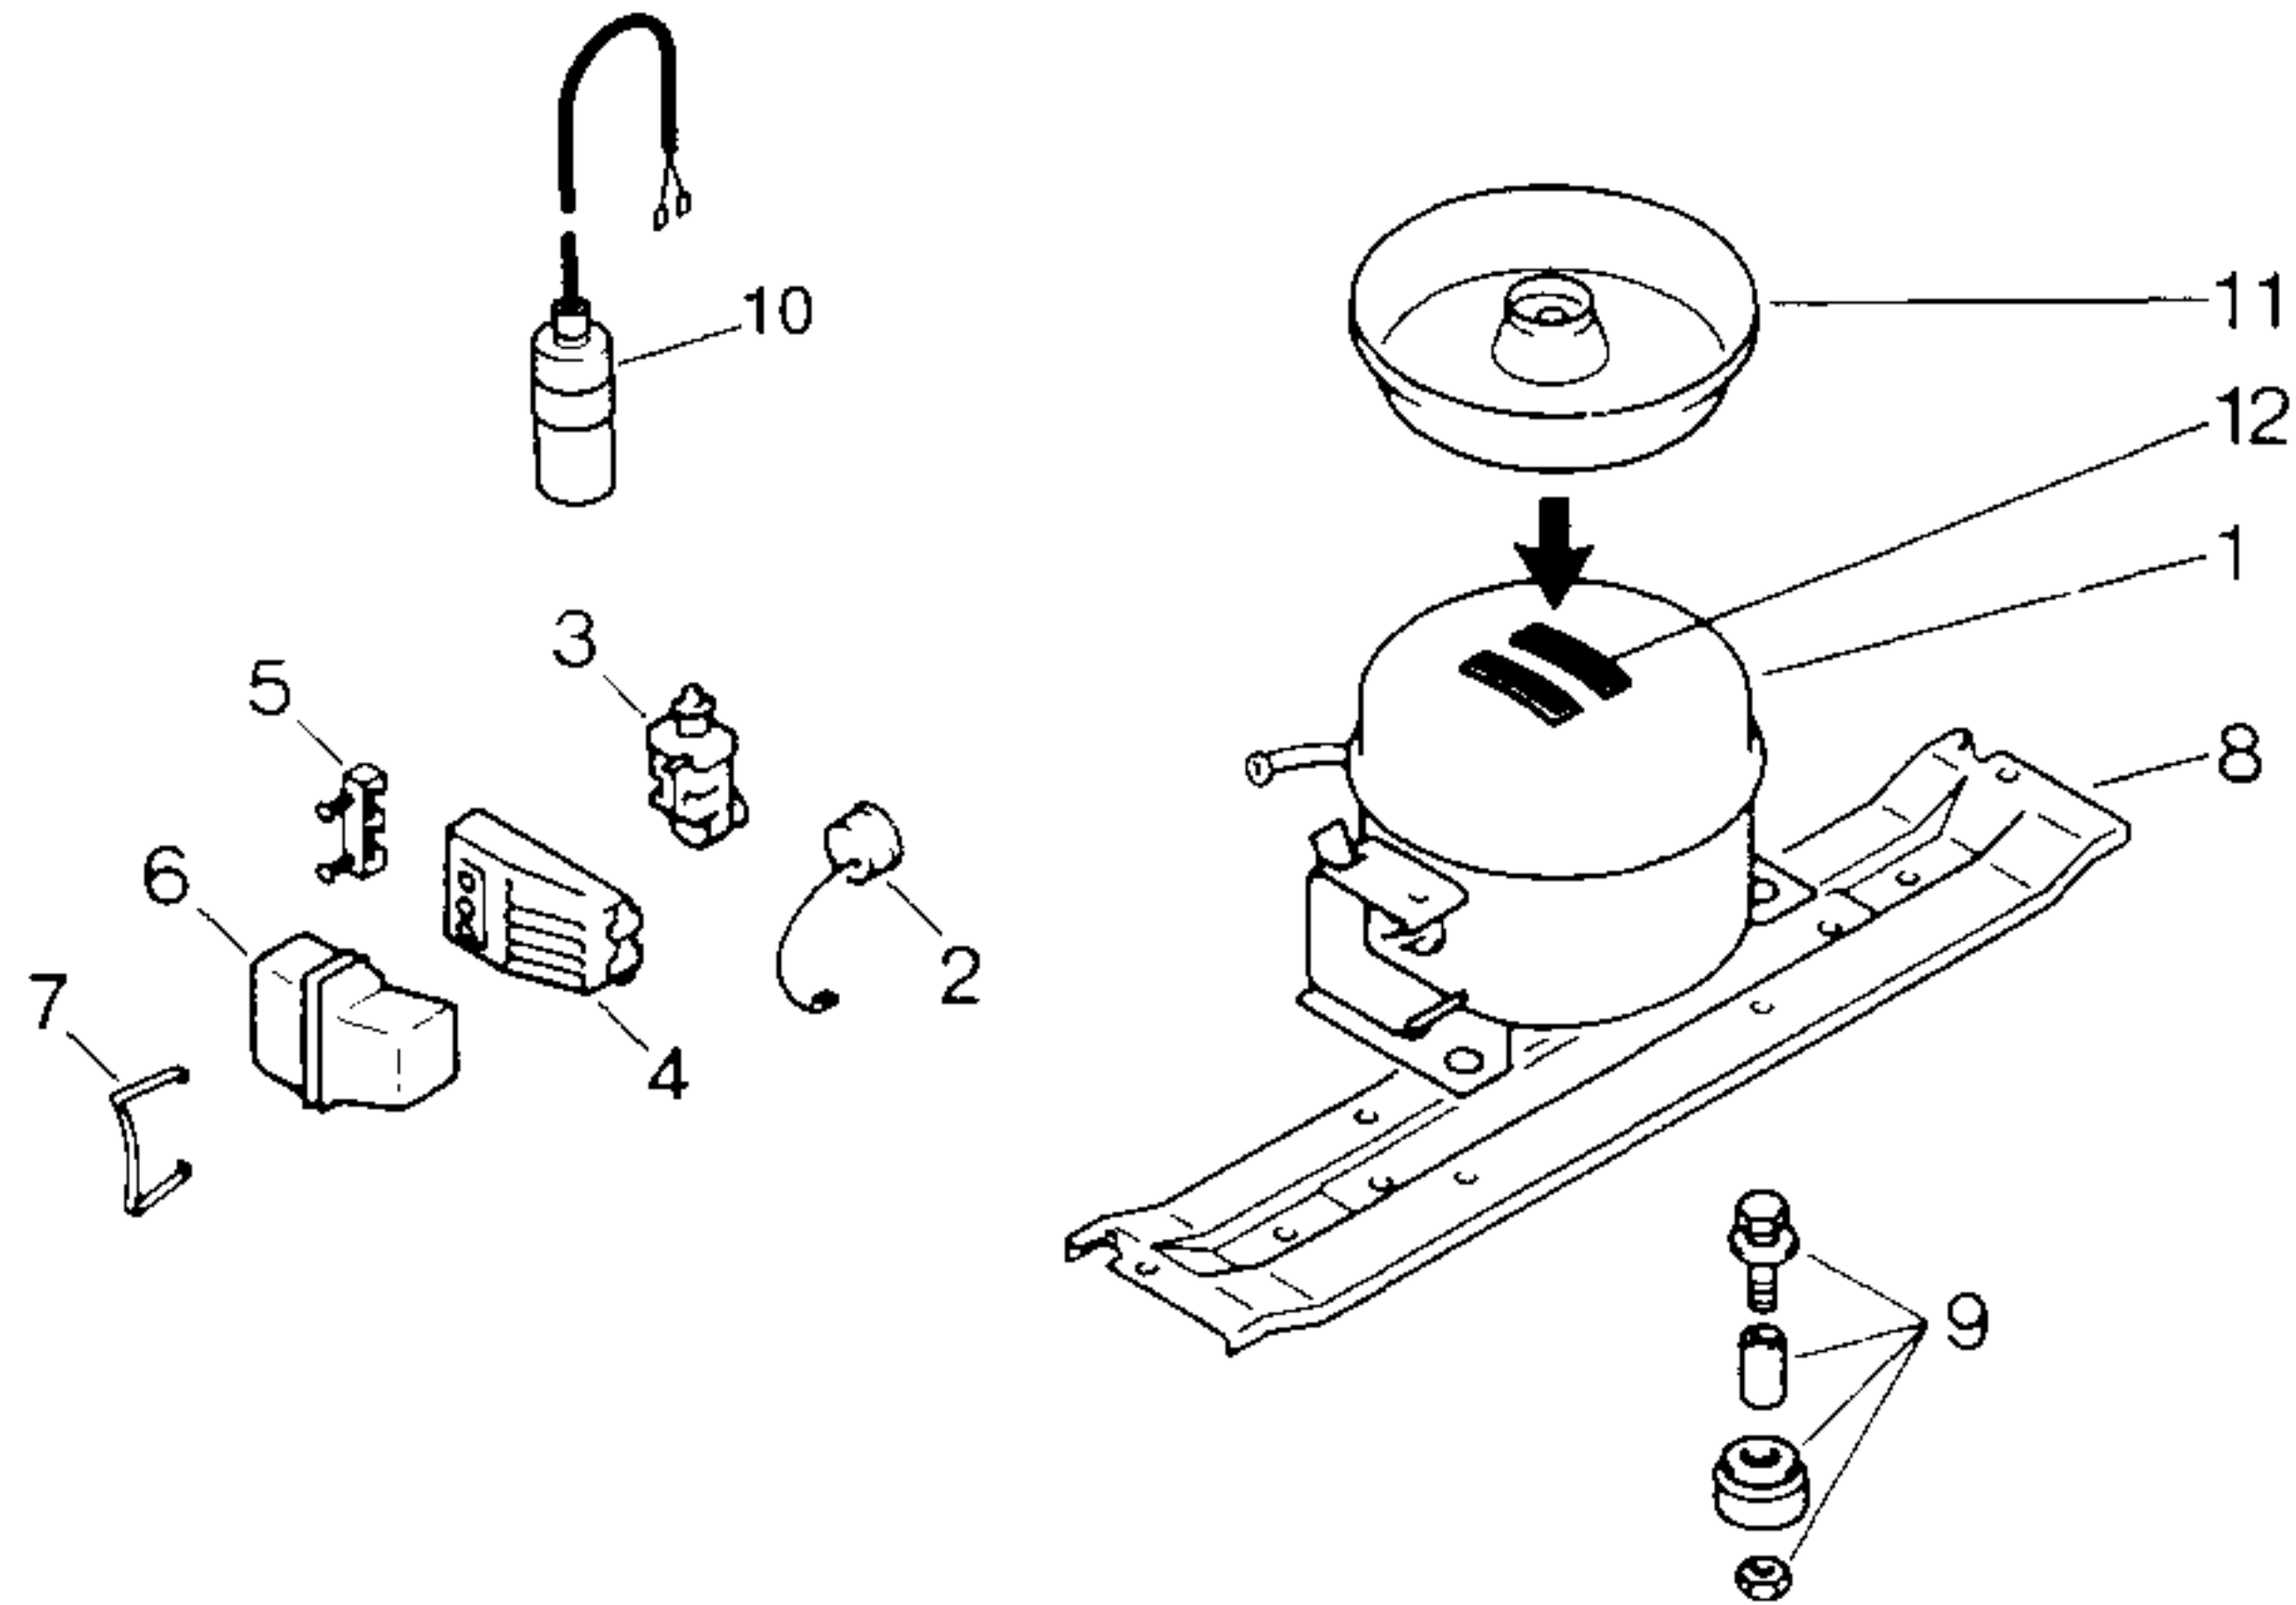

Pos.	V01,V02	V03	
	Danfoss	Danfoss	
	NLE 15 K	NLE 15 K	
1	14 1311	14 1752	
2			
3	15 1055	15 1055	
4			
5	15 0760	15 0760	
6	15 1072	15 1072	
7	02 6731	02 6731	
8	28 1825	28 1825	
9	05 0166	05 0166	
10			
11	08 4744	08 4744	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		NLE15K		
Förderleistung/Delivery/Débit		2637		
Anlaufstrom/Starting current/Cour de démarrage		A		
Widerstand/Resistance/Résistance		Ha/main/prin.		
		Hi/aux		
Temp.-Regler/Thermostat				
Typ/Type		Ranco	Innentemp.	Außentemp.
Reglerstellung/Position		°C	K 52-1	K 50-L5772
Schaltwerte/Switching values/		„ein“	kalt	warm
Valeurs de commutation		„aus“	+4	+7,5
(„abtauen“ od.)		„alarm“	0	+10
				+31,5
				+28,5
Füllmenge/Fill.quantity/Charge		R600a	g	55
Anschlußwert/Conn.load/Puiss. connectée		W	150	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω	Innen	Außen
			1300	350
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		