 
 



BOOK A			NILFISK POWER - SPARE PARTS LIST	05-12
2	1.6.1	A	MOTORS, ON/OFF SWITCHES, AND PCB	

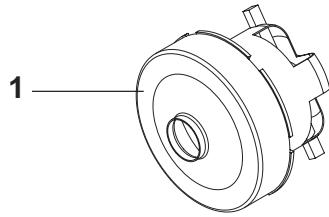


2

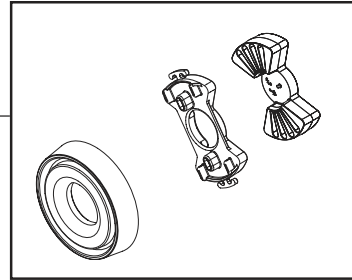

 
3

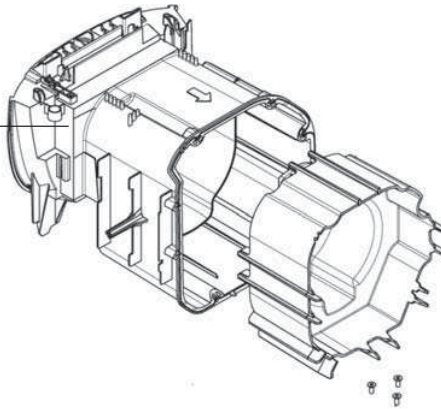

4

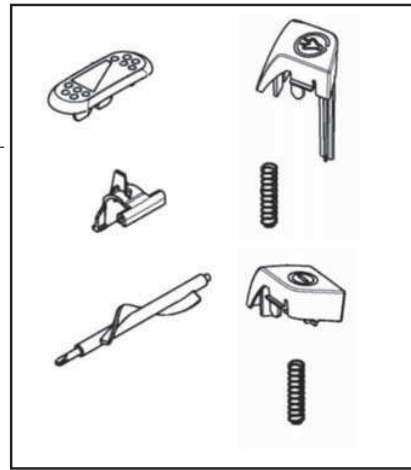 


5

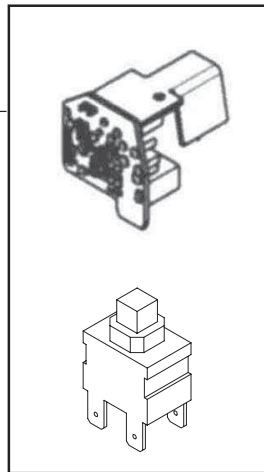 


6














BOOK A			NILFISK POWER - SPARE PARTS LIST	05-12
4	1.6.1	A	CORD SETS	

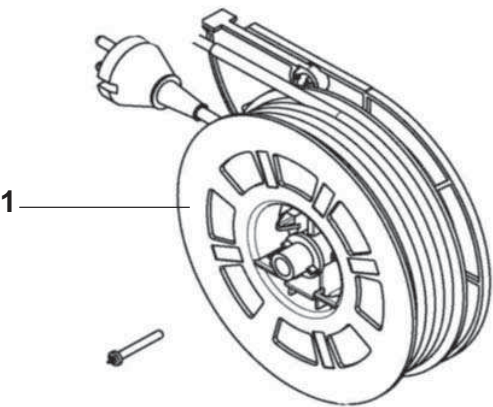 







Cord with plug/socket for bracket			
	Voltage	Plug type	
EU	220-240		
UK	220-240		
AUS/NZ	220-240		

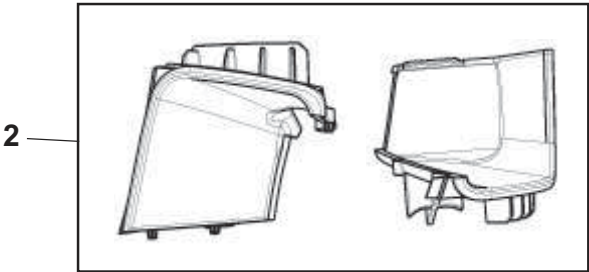 


BOOK A			NILFISK POWER - SPARE PARTS LIST	05-12
6	1.6.1	A	BODY AND BODY PARTS	

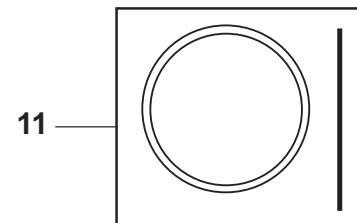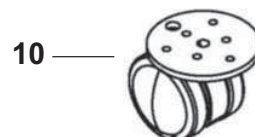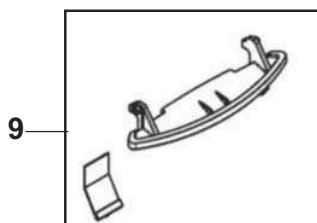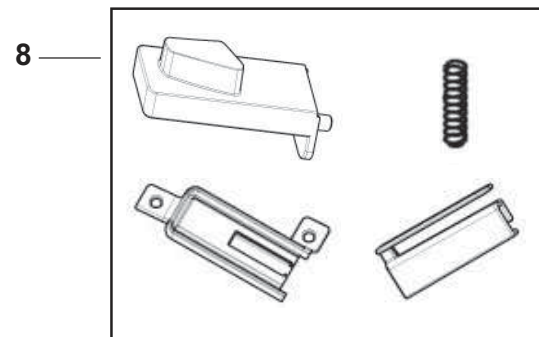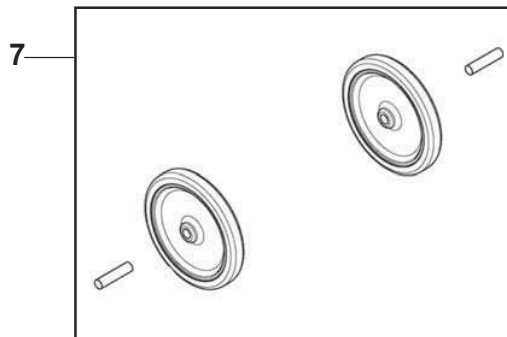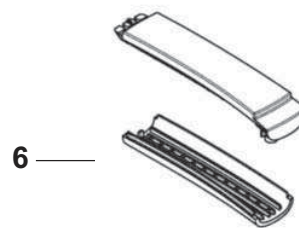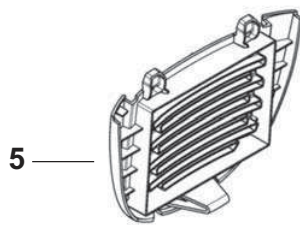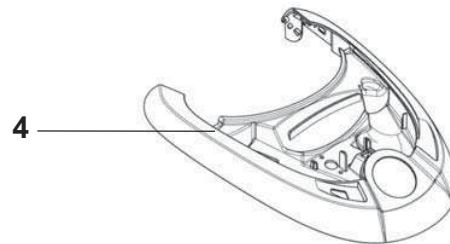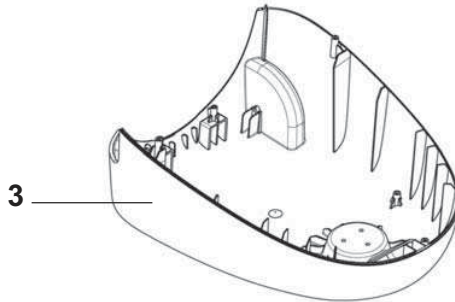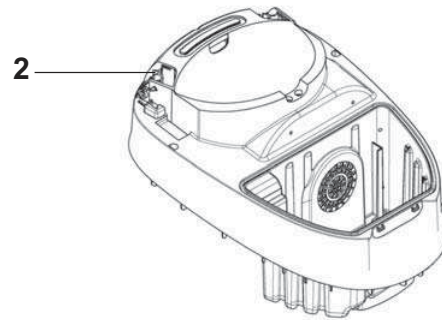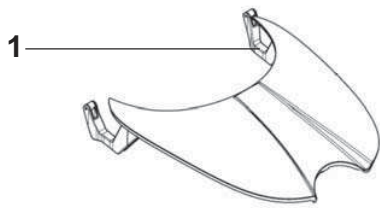           

BOOK A			NILFISK POWER - SPARE PARTS LIST	05-12
8	1.6.1	A	DUST BAGS AND FILTERS	

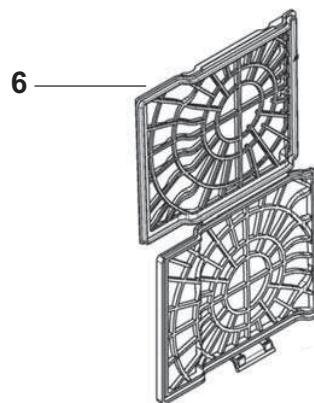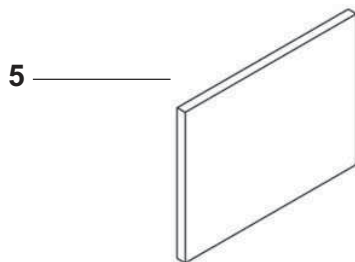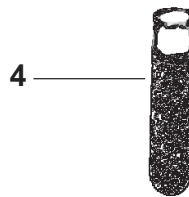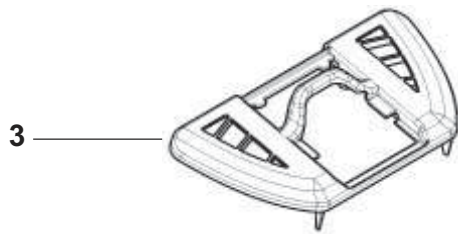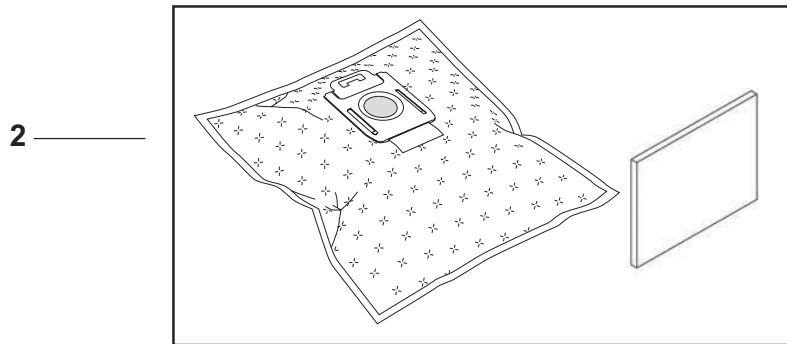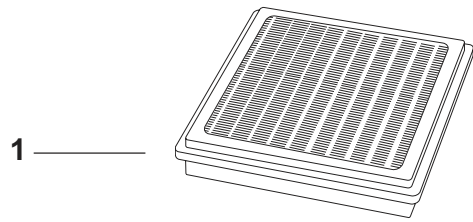      

BOOK A			NILFISK POWER - SPARE PARTS LIST	05-12
10	1.6.1	A	HOSE AND TUBE	

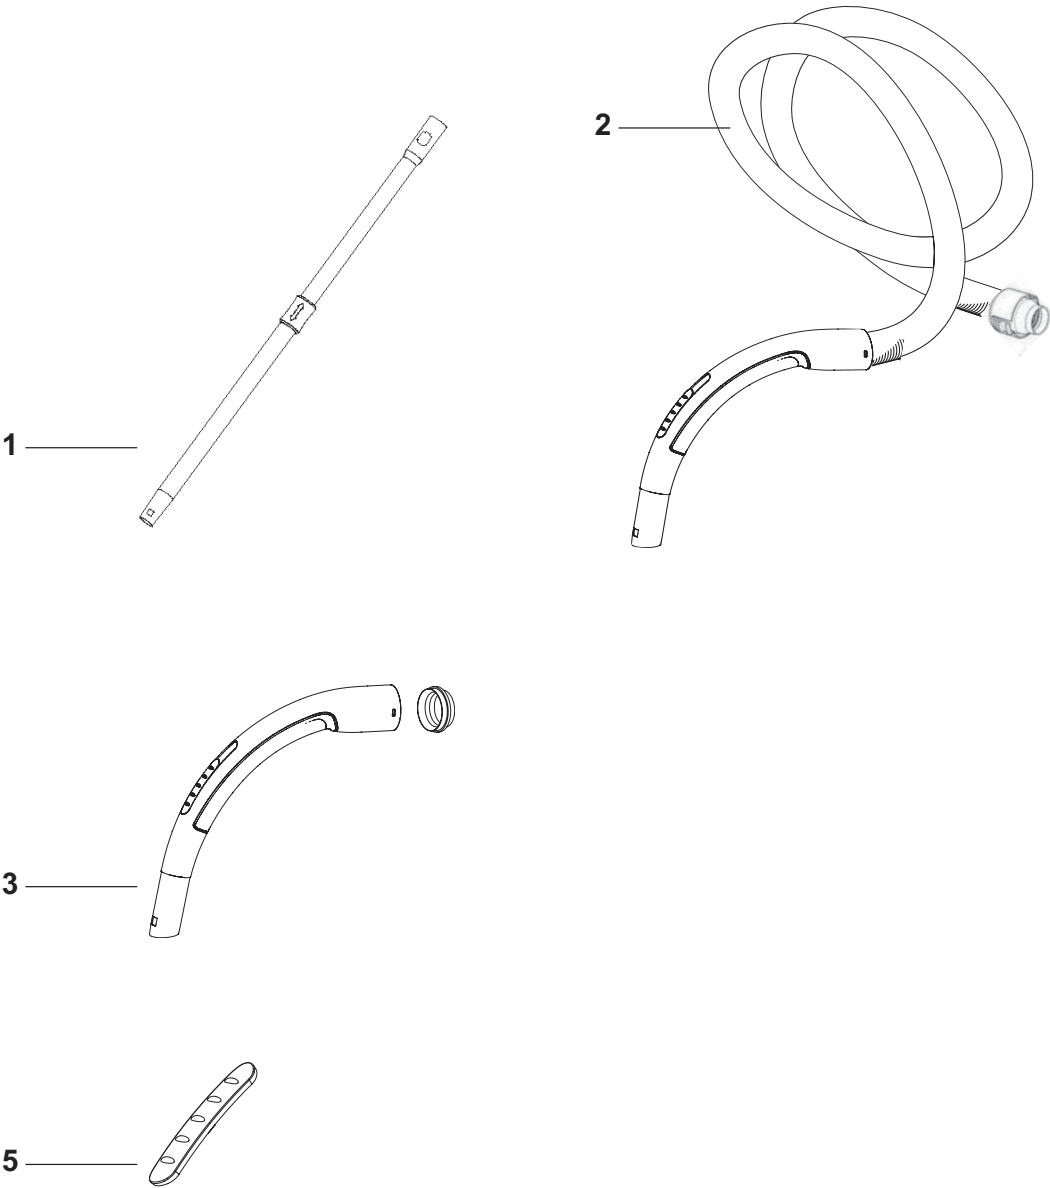 

BOOK A			NILFISK POWER - SPARE PARTS LIST	06-01
12	1.6.1	A	NOZZLES	05-12

