


10. EXPLODED VIEW AND PARTS LIST

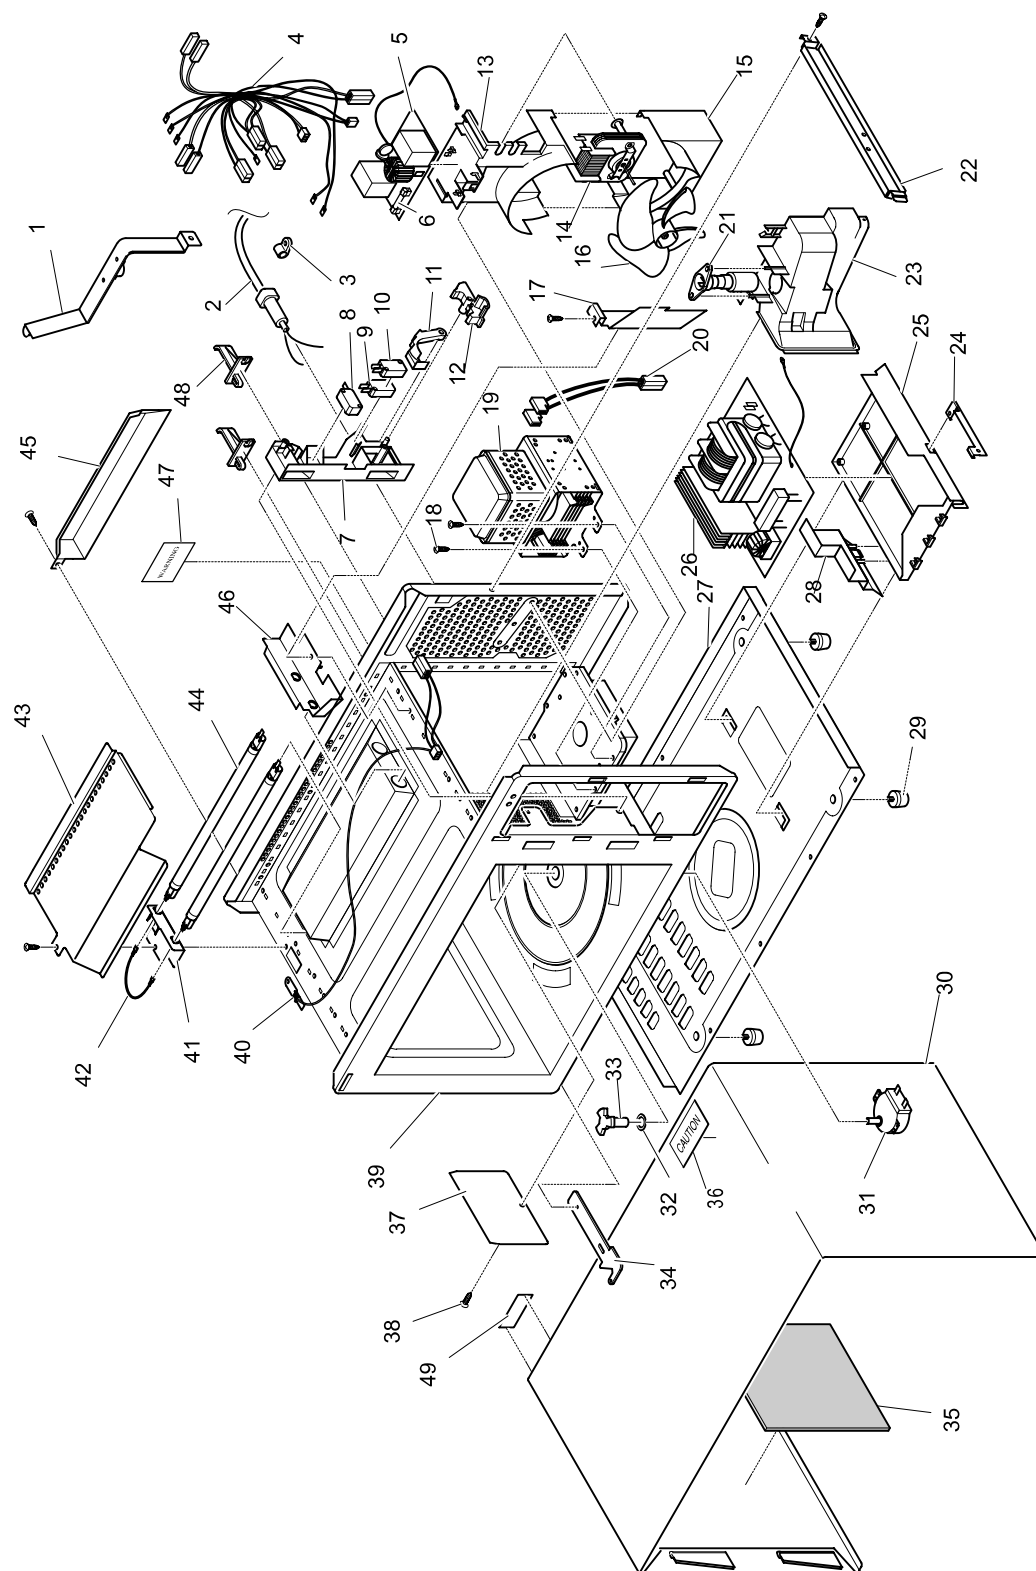

11. PARTS LISTS

NOTES: *When ordering replacement part(s), please use part number(s) shown in this parts list.


Do not use description of the part.

*Important safety notice:

Components identified by ! mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

Ref. No		Part No.	Part Name and Description	Pcs/set	Remarks
1	!	E610U4L50GS	THERMAL CUTOFF ASSEMBLY	1	
2	!	E900C4L50GS	POWER CORD	1	
3		AEE9108A20GN	POWER CORD CLIP	1	
4	!	E030A4L50GS	LEADWIRE HARNESS	1	
5	!	E607X4L00BP	NOISE FILTER ASSEMBLY	1	
6	!	E67597550GP	10A FUSE	1	
7	!	E30208000BP	DOOR HOOK	1	
8	!	AEE6142-F61	PRIMARY LATCH SWITCH	1	V-15G-3C26
9	!	E61785180AP	SHORT SWITCH	1	L-2C2-2
10	!	E61425180AP	SECONDARY SWITCH	1	L-3C2-2
11	!	E31384830AP	HOOK SPACER C	1	
12	!	E31374830AP	HOOK SPACER B	1	
13		E41444L00GS	UPPER ORIFICE	1	
14	!	E400A4760JP	FAN MOTOR	1	
15		E42094L00GS	LOWER ORIFICE	1	
16		E4008-1640	FANBLADE	1	
17		E40314L00GS	AIR GUIDE C	1	
18	!	XTWANE4+12B	SCREWS	4	FOR MAGNETRON
19	!	2M236-M42G	MAGNETRON	1	
20	!	E030E4L00GS	H.V.LEADWIRE	1	
21	!	E610T6700BP	OVEN LAMP	1	
22		E20994L00GS	TIE BAR	1	
23	!	E40254L00GS	AIR GUIDE A	1	
24	!	E66014L00GS	INVERTER EARTH BRACKET	1	
25	!	E65854L00GS	INVERTER SUPPORT BRACKET	1	
26	!	E606Y4L10GP	INVERTER	1	
27		E10014L00GS	BASE PLATE	1	
28		E10614L00GS	WATER SHEILD	1	
29		E1008-1180	RUBBER FOOT	4	
30		E110D4L00HBP	OUTER PANEL	1	NN-F369WB NN-F359WB
30		E110D4L00KBP	OUTER PANEL	1	NN-F369BB
31	!	E63268960JP	TURNTABLE MOTOR	1	
32		AEE2177-F80	PULLEY SHAFT WASHER	1	
33		E21315540AP	PULLEY SHAFT	1	
34		E30074L00GS	LOWER HINGE	1	
35		E09020000UK	CUSHION	1	
36	!	E01505870EP	WARNING LABEL	1	
37	!	E20554L00GS	COVER A	1	
38	!	XT4+W5V	SCREW	1	H1 TORQUE FOR COVER A
39		E200A4L50GS	OVEN CAVITY	1	
40	!	E030F4L00GS	LEADWIRE HARNESS B	1	INC. THERMISTOR
41		E64924L50GS	LEFT HEATER BRACKET	1	
42		E03596540GP	GRILL LINK	1	
43		E22784L50GS	UPPER HEATER PANEL	1	
44		E630G7550GP	GRILL HEATER	1	
45		E40244N30BP	EXHAUST GUIDE	1	
46		E64604L50GS	RIGHT HEATER BRACKET	1	
47	!	E00069000EP	WARNING LABEL	1	
48		E11406520GP	STOPPER A	2	
49		E66224L50GS	OUTER PANEL SPACER	1	


12. DOOR ASSEMBLY

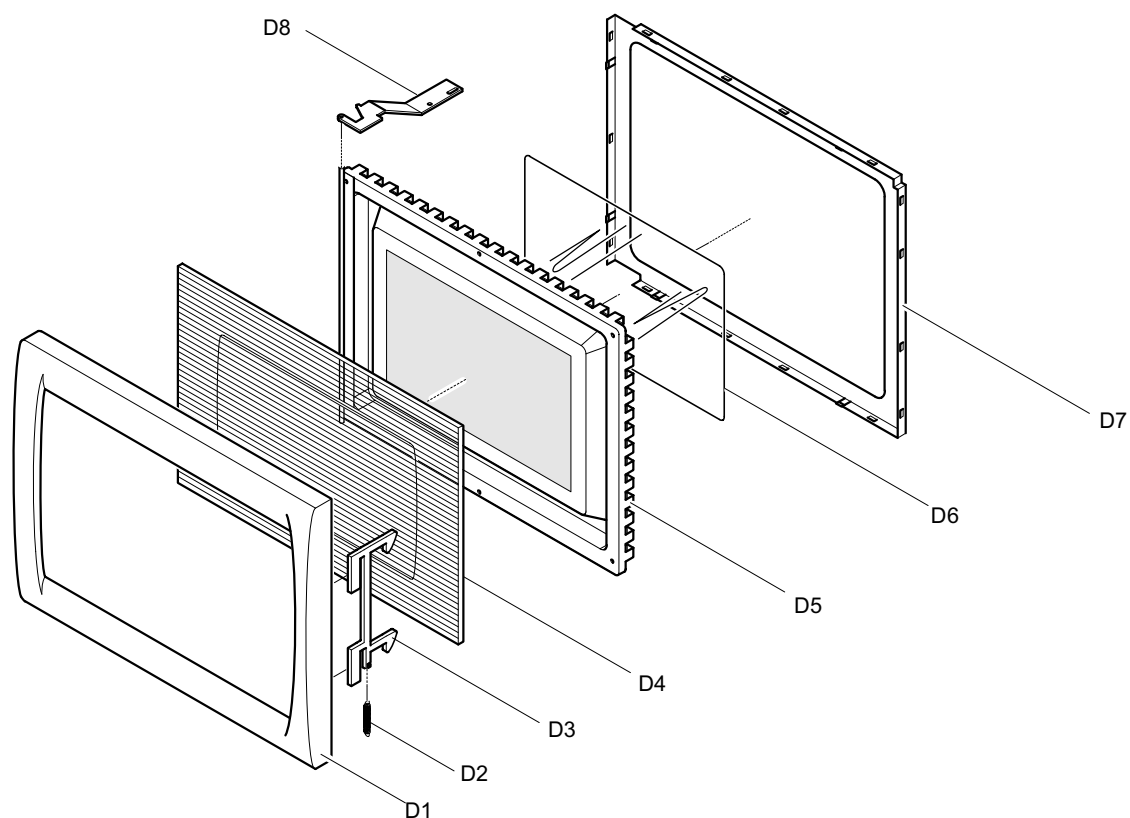

Ref. No.	Part No.	Part Name and Description	Pcs/Set	Remarks
D1	E30014L20HBP	DOOR A	1	NN-F369WB NN-F359WB
D1	E30014L20KUP	DOOR A	1	NN-F369BB
D2	E30214000AP	DOOR KEY SPRING	1	
D3	E30184L00GS	DOOR KEY A	1	
D4	E31464L60UP	DOOR SCREEN B	1	
D5	! E302K4L00GS	DOOR E AND SCREEN A UNIT	1	
D6	E31454L00GS	SCREEN A	1	
D7	E30854L00GS	DOOR C	1	
D8	E30064L00GS	UPPER HINGE	1	

NOTE: When ordering any door component also order door C as this part may become damaged during disassembly.


13. ESCUTCHEON BASE ASSEMBLY

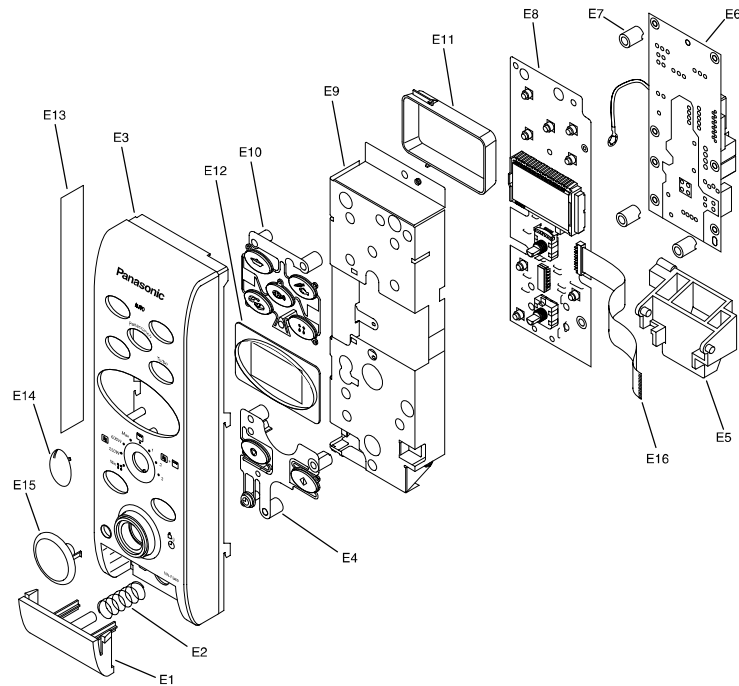

Ref. No.	Part No.	Part Name and Description	Pcs/Set	Remarks
E1	E80724L10HBP	DOOR OPENING BUTTON	1	NN-F369 WB EPG NN-F369WB UPG NN-F359 WB EPG NN-F359WB UPG
E1	E80724L10KBP	DOOR OPENING BUTTON	1	NN-F369 BB EPG NN-F369BB UPG
E2	E80378AOAG	DOOR BUTTON SPRING	1	
E3	E80344L60HUP	ESCUTCHEON BASE	1	NN-F369 WB EPG NN-F369WB UPG
E3	E80344L60KUP	ESCUTCHEON BASE	1	NN-F369 BB EPG NN-F369BB UPG
E3	E80344L50HUP	ESCUTCHEON BASE		NN-F359 WB EPG NN-F359WB UPG
E4	E83874L60HUP	START/STOP BUTTON	1	NN-F369 WB EPG NN-F369WB UPG NN-F359 WB EPG NN-F359WB UPG
E4	E83874L60KUP	START/STOP BUTTON	1	NN-F369 BB EPG NN-F369BB UPG
E5	E82564L10BP	DOOR OPENING LEVER	1	
E6	E603Y4L20BP	DPC DU	1	
E7	E83094L60UP	PCB SPACER	1	
E8	E603L4L60EP	PCB ASSEMBLY AU	1	NN-F369 WB EPG NN-F369BB EPG
E8	E603L4L60UP	PCB ASSEMBLY AU	1	NN-F369 WB EPG NN-F369BB UPG
E8	E603L4L50EP	PCB ASSEMBLY AU	1	NN-F359 WB EPG
E8	E603L4L50UP	PCB ASSEMBLY AU	1	NN-F359 WB UPG
E9	E81274L60UP	ESCUTCHEON BACKPLATE	1	
E10	E80244L60HUP	OPERATION BUTTON	1	NN-F369 WB EPG NN-F369WB UPG
E10	E80244L60KUP	OPERATION BUTTON	1	NN-F369 BB EPG NN-F369BB UPG
E10	E80244L50HUP	OPERATION BUTTON		NN-F359 WB EPG NN-F359WB UPG
E11	E80164L60UP	DISPLAY SPACER	1	
E12	E81894L60UP	DISPLAY WINDOW	1	
E13	E00074L50GP	NAMEPLATE	1	
E14	E83924L60HUP	SELECT KNOB	1	NN-F369 WBEPG NN-F369WB UPG NN-F359 WBEPG NN-F359WB UPG
E14	E83924L60KUP	SELECT KNOB	1	NN-F369 BBEPG NN-F369BB UPG
E15	E80204L60HUP	T. S. KNOB	1	NN-F369 WBEPG NN-F369WB UPG NN-F359 WBEPG NN-F359WB UPG
E15	E80204L60KUP	T. S. KNOB	1	NN-F369 BBEPG NN-F369BB UPG
E16	E66164L60UP	RIBBON CABLE	1	

NOTE: When ordering E3 also order E13 Nameplate.

14. PACKING AND ACCESSORIES

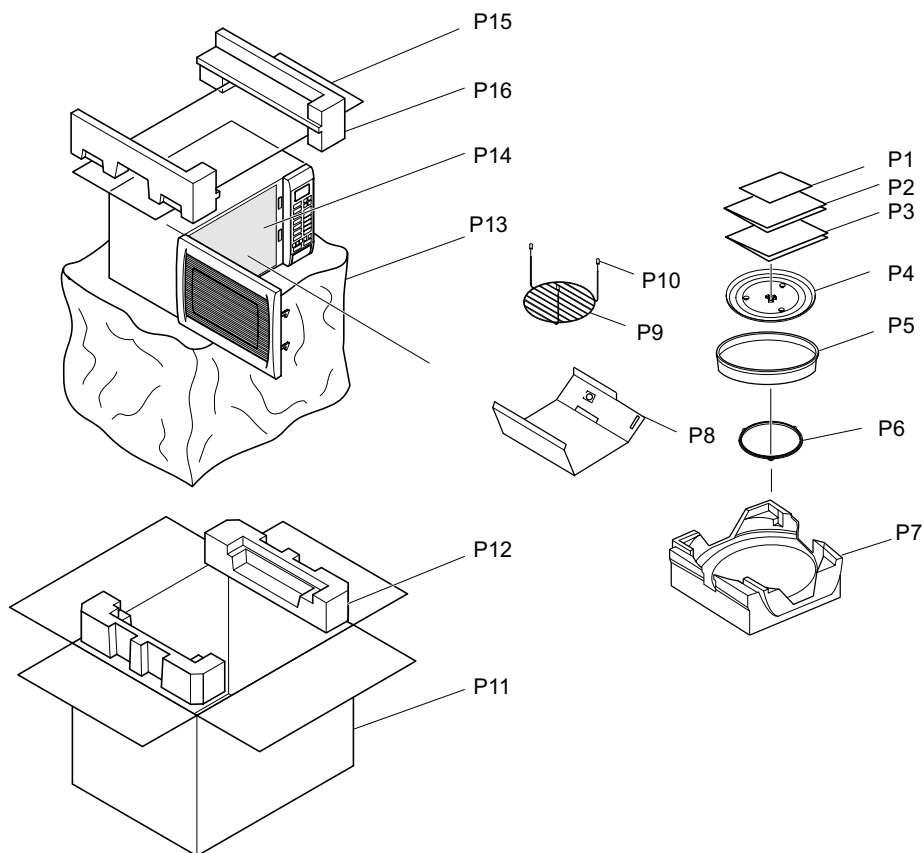

Ref. No.	Part No.	Part Name and Description	Pcs/Set	Remarks
P1	E01695750BP	SERVICE CENTER LIST	1	
P2	E00034L50EP	INSTRUCTION BOOK	1	NN-F369 NN-F359 EPG
P2	E00034L50UP	INSTRUCTION BOOK	1	NN-F369 NN-F359 UPG
P3	E000B4L50EP	COOKBOOK	1	NN-F369 NN-F359 EPG
P4	E06014L00BP	GLASS TRAY	1	
P5	E060W4L60UP	CRISP PAN	1	NN-F369
P6	E290D6150WN	ROLLER RING	1	
P7	E01134L60UP	TRAY STYROL	1	NN-F369
P8	E01084L60UP	TRAY PACKING	1	NN-F369
P8	E01084L00GS	TRAY PACKING	1	NN-F359
P9	E060V4L50GS	WIRE RACK ASSEMBLY	1	
P10	E06435870GS	WIRE RACK FOOT	3	
P11	E01024L60HUP	CARTON BOX	1	NN-F369WB UPG
P11	E01024L60KUP	CARTON BOX	1	NN-F369BB UPG
P11	E01024L60HEP	CARTON BOX	1	NN-F369WBEPG
P11	E01024L60KEP	CARTON BOX	1	NN-F369BBEPG
P11	E01024L50HUP	CARTON BOX	1	NN-F359WBUPG
P11	E01024L50HEP	CARTON BOX	1	NN-F359WBEPG
P12	E01054L00BP	LOWER FILLER	1	
P13	AEE01066Q0BP	VINYL COVER	1	
P14	E01078890BP	DOOR SHEET	1	
P15	E01927550GP	PROTECTOR SHEET	1	NN-F369BB
P16	E01044L00BP	UPPER FILLER	1	

E607X4L00BP - Noise Filter Assembly

Ref. No.	Part No.	Description	Qty	Remarks
R1	ERG1SJ753P	RESISTOR	1	75K Ω 1W
C1&C2	AECQJ5225KX1	CAPACITOR	2	2.2 μ f
C3&C4	ECKMNA472ME	CAPACITOR	2	4700pF 250V AC
L1	E621A4J00XN	FILTER COIL	1	2.4mH
GND	E03594080BP	EARTH WIRE	1	
F1	E62316010BP	FUSE HOLDER	1	10A 250V AC