



Domestic Appliances and Personal Care

Service Manual 4822 729 21892 is herewith cancelled

Service Manual

PRODUCT INFORMATION

General : Cutting unit : 32 mm - removeable
Cutting adjustment : 1 - 7 (4 - 17 mm)

HS 015 / HQ-C 242 : AC/DC adapter : 100 - 127V AC / 7.5 V DC
: 220 - 240V AC / 7.5 V DC
motor : 7.5V DC - 7500 rpm
operation : mains only

HS 025 / HQ-C 282 : AC/DC adapter : 100-127V AC / 1.3V DC
: 220-240V AC / 1.3V DC
motor : 1.2V DC - 7500 rpm
operation : rechargeable / mains
charge indication : green LED
batteries : 1 x NiCd or 1 x NiMh - 1.2 V
charging time : NiCd - 12 hours
: NiMh - 16 hours

MSH coding : HS 015 : 8847 015 00000
: HS 025 : 8847 025 00000

 
: HQ - C 242 : 8849 242 00000
: HQ - C 282 : 8849 282 00000

Product meets the requirements regarding interference suppression on radio and TV.



HS 015/A
HS 025/A

HQ-C 242
HQ-C 282

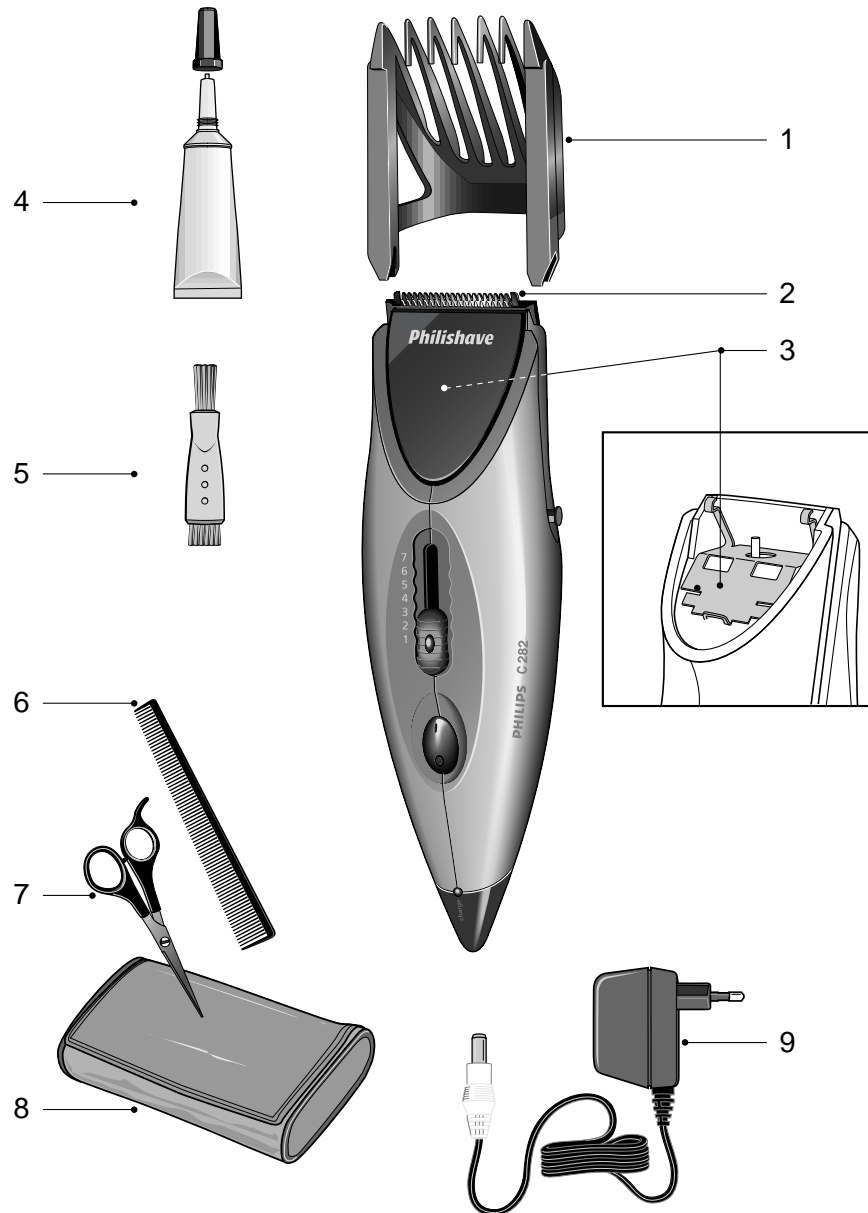




Partslist

pos	description	service code
1	adjustable comb	4822 690 30432
2	cutter	4822 690 10212*
3	trimmer clamp	4822 492 11095
4	oil tube	4822 390 10125
5	cleaning brush	4822 479 30077
6	styling comb	4822 690 30433

pos	description	service code
7	scissors	4822 690 30434
8	pouch	4822 600 10343
9	AC/AD adapter EURO	4822 690 30441
	AC/AD adapter UK	4822 690 30442
	AC/AD adapter USA	4822 690 30443
	AC/AD adapter CDN	4822 690 30444

pos	description	service code
9	AC/DC adapter EURO	4822 690 30436
	AC/DC adapter UK	4822 690 30437
	AC/DC adapter USA	4822 690 30438
	AC/DC adapter CDN	4822 690 30439

   NOTES: For HS025 and HQ-C282 only
When discarding the appliance, remove the built in rechargeable battery. The battery should be completely empty of charge.

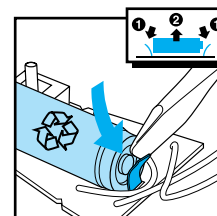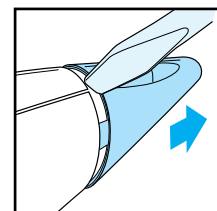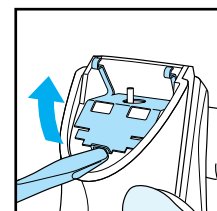

* Changed