


HS 015/A
HS 025/A

HQ-C 242
HQ-C 282

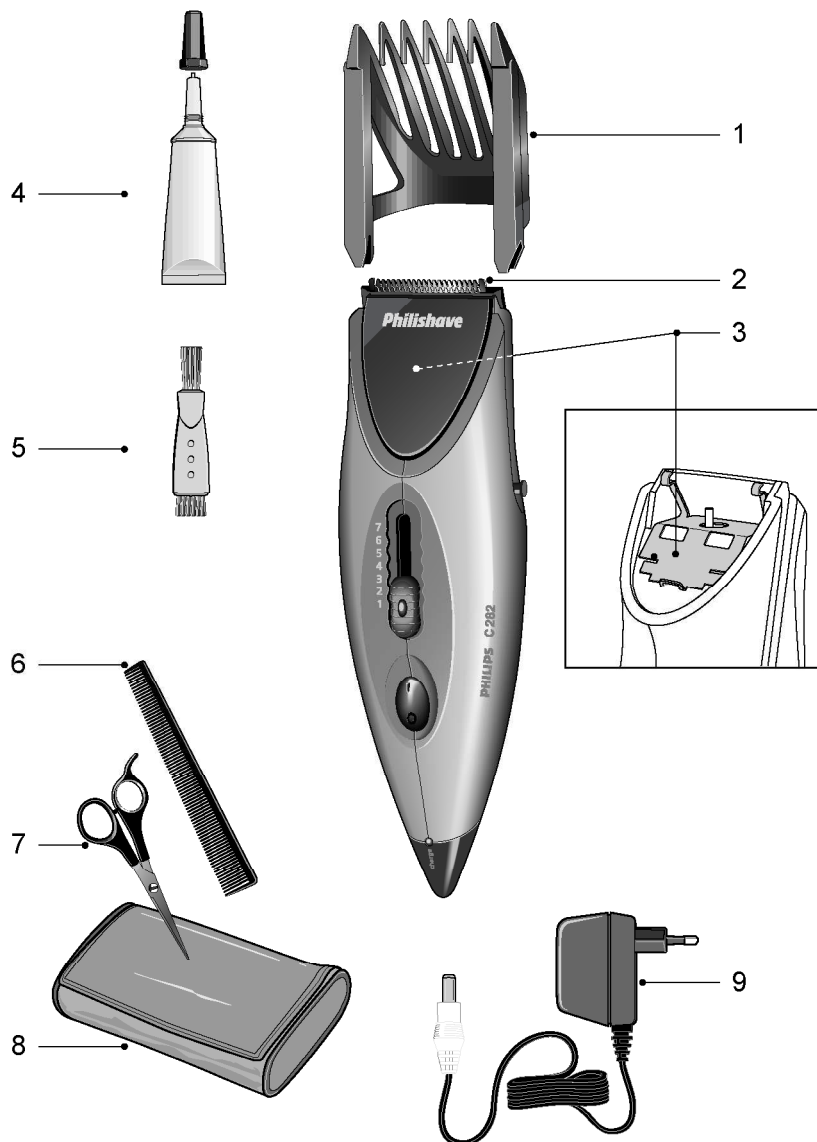

Partslist

HS015 / HS025 / HQ-C242 / HQ -C282

pos	description	service code
1	adjustable comb	4822 690 30432
2	cutter	4822 690 10212*
3	trimmer clamp	4822 492 11095
4	oil tube	4822 390 10125
5	cleaning brush	4822 479 30077
6	styling comb	4822 690 30433




HS025 / HQ - C282 ONLY

pos	description	service code
7	scissors	4822 690 30434
8	pouch	4822 600 10343
9	AC/AD adapter EURO	4822 690 30441
	AC/AD adapter UK	4822 690 30442
	AC/AD adapter USA	4822 690 30443
	AC/AD adapter CDN	4822 690 30444

HS015 / HQ - C242 ONLY

pos	description	service code
9	AC/DC adapter EURO	4822 690 30436
	AC/DC adapter UK	4822 690 30437
	AC/DC adapter USA	4822 690 30438
	AC/DC adapter CDN	4822 690 30439

NOTES: For HS025 and HQ-C282 only
When discarding the appliance, remove the built in rechargeable battery.
The battery should be completely empty of charge.

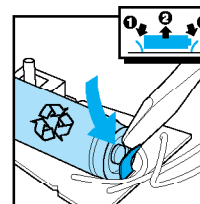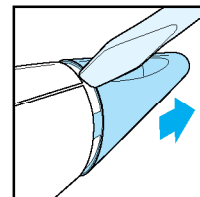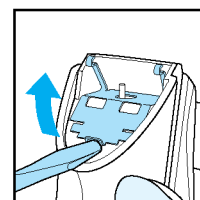

* Changed