

Service
Service
Service



Philips Consumer Lifestyle

Service Manual

PRODUCT INFORMATION

General:

- Rechargeable total body grooming system
- World wide automatic voltage selection
- Washable
- 5 integrated length setting
- Cordless use only

Safety information

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

- Mains : Voltage - Input : 100 - 240 V / 50 - 60 Hz
 - Output : 15 V
- Power system : Rechargeable
- Batteries : NiMh
- Charging time : 8 hours
- Capacity : up to 50 minutes
- Motor voltage : 2,4 Volt

REPAIR INSTRUCTION

- No specific issues


OPTIONAL (accessories)

- No specific issues

DISASSEMBLY- AND RE-ASSEMBLY ADVICE


Disassembly

1. Remove comb.
2. Open trimmer.
3. Remove trimmer by turning the trimmer to the left or the right. (see picture)

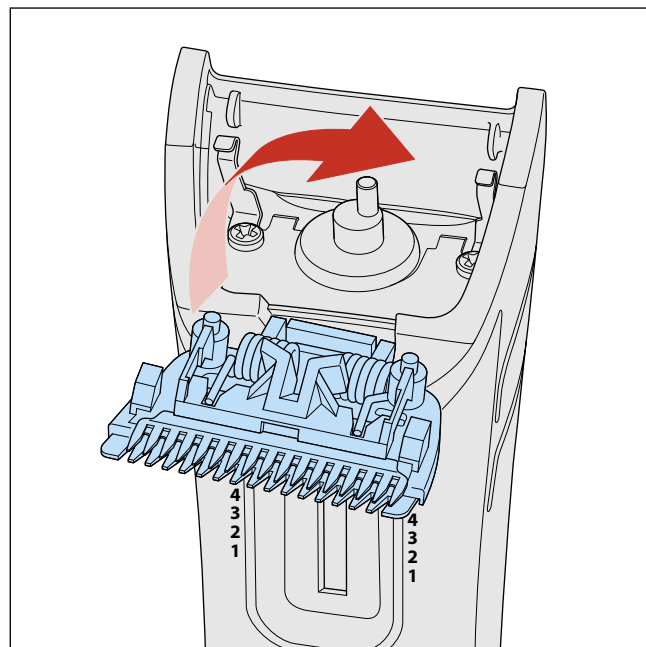

Re-assembly

- Do this opposite.

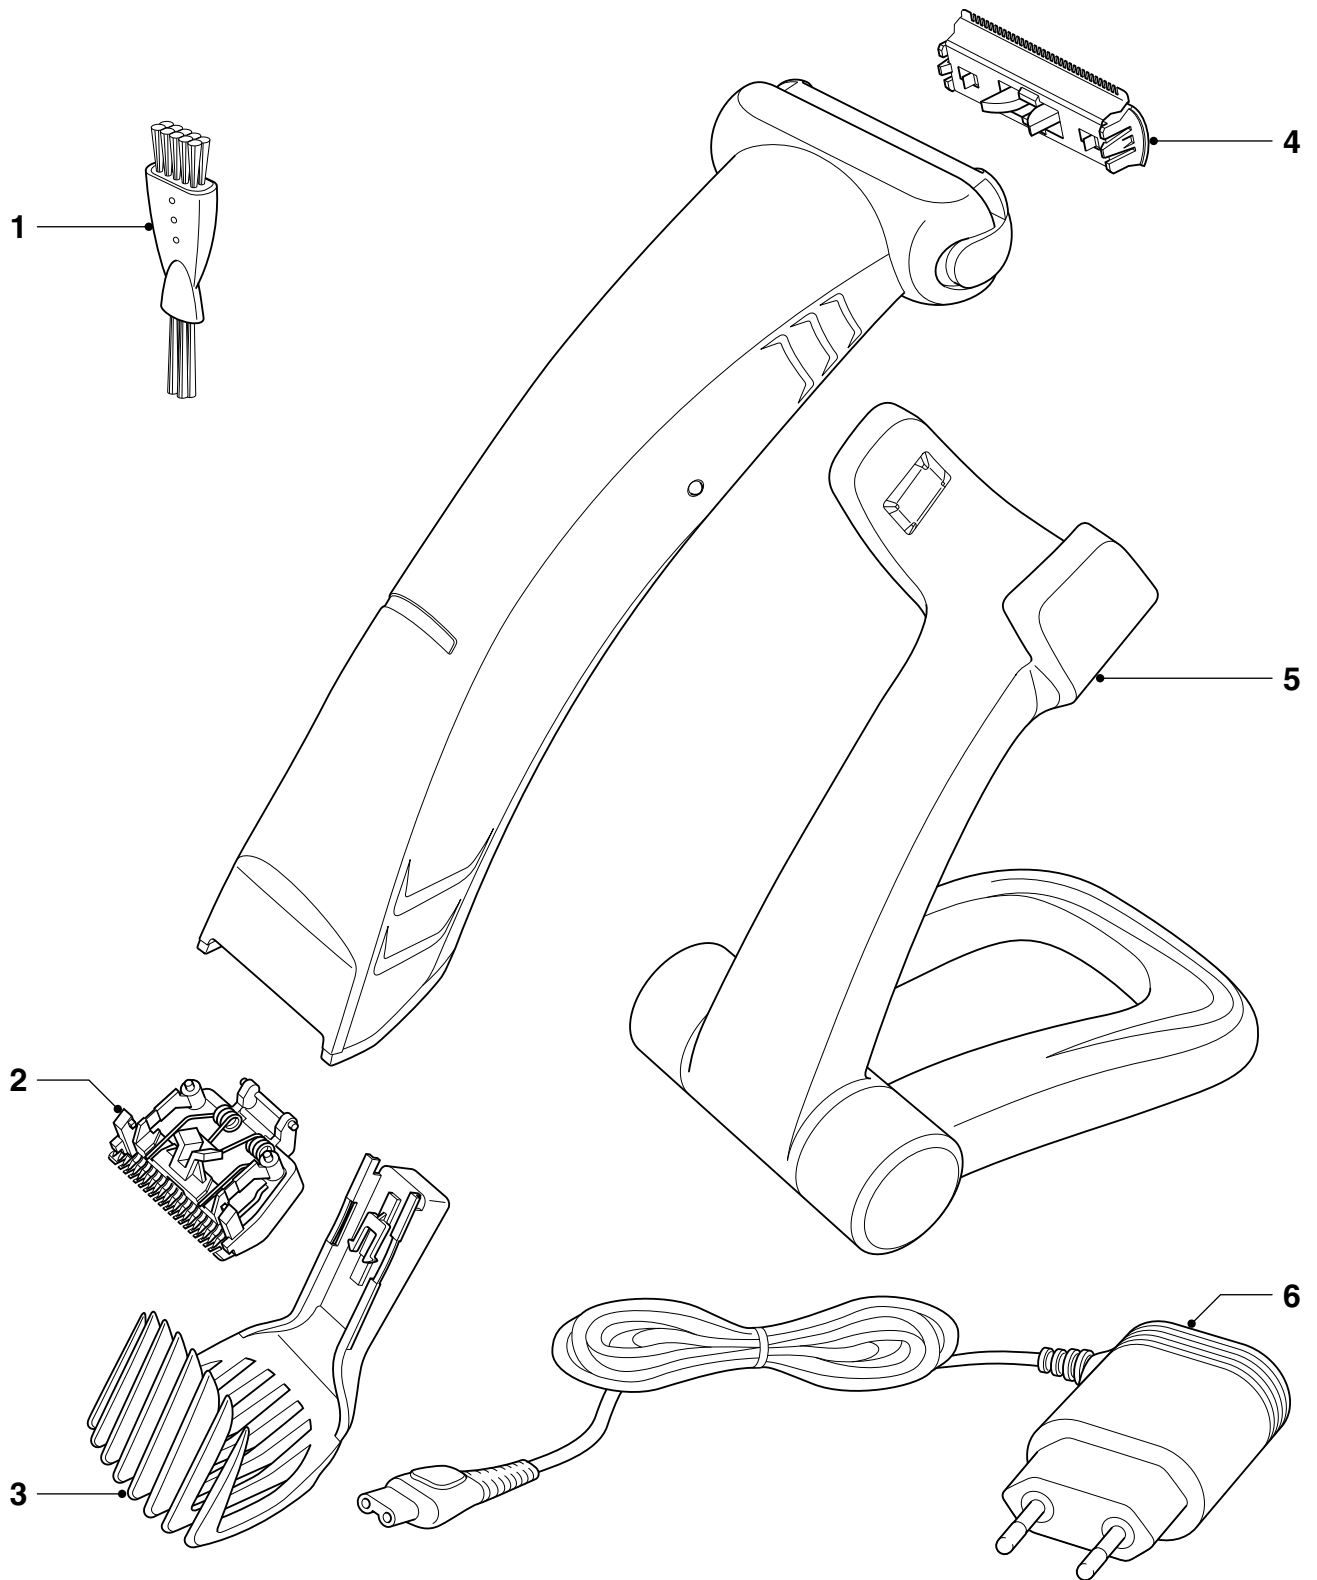

Pos	Service code	Description
1	4222 036 02770	Brush
2	4222 036 17461	Cutter
3	4222 036 17471	Comb
4	4203 035 51110	Shaving unit
5	4222 036 17481	Stand
6	4222 036 04080	Power Plug EUR
	4222 036 05160	Power Plug NOR
	4222 036 05120	Power Plug AUS/NZ

Pos	Service code	Description
6	4222 036 04090	Power Plug GBR
	4222 036 05110	Power Plug CAN/TW
	4222 036 03810	Power Plug MEX
	4222 036 04850	Power Plug KOR
	4222 036 03870	Power Plug JAP
	4222 036 10320	Power Plug PRC
	4222 036 03760	Power Plug ARG