SHARP PARTS LIST

MICROWAVE OVEN

HOW TO ORDER REPLACEMENT PARTS

To have your order filled promptly and correctly, please furnish the following information.

- 1. MODEL NUMBER
- 2. REF. NO.
- 3. PART NO.
- 4. DESCRIPTION


MODELS R-270KM R-270SLM R-270KW

Parts marked "*" may cause undue microwave exposure. Parts marked "//\" are used in voltage more than 250V.

CONTENTS

[1] OVEN PARTS

PARTS

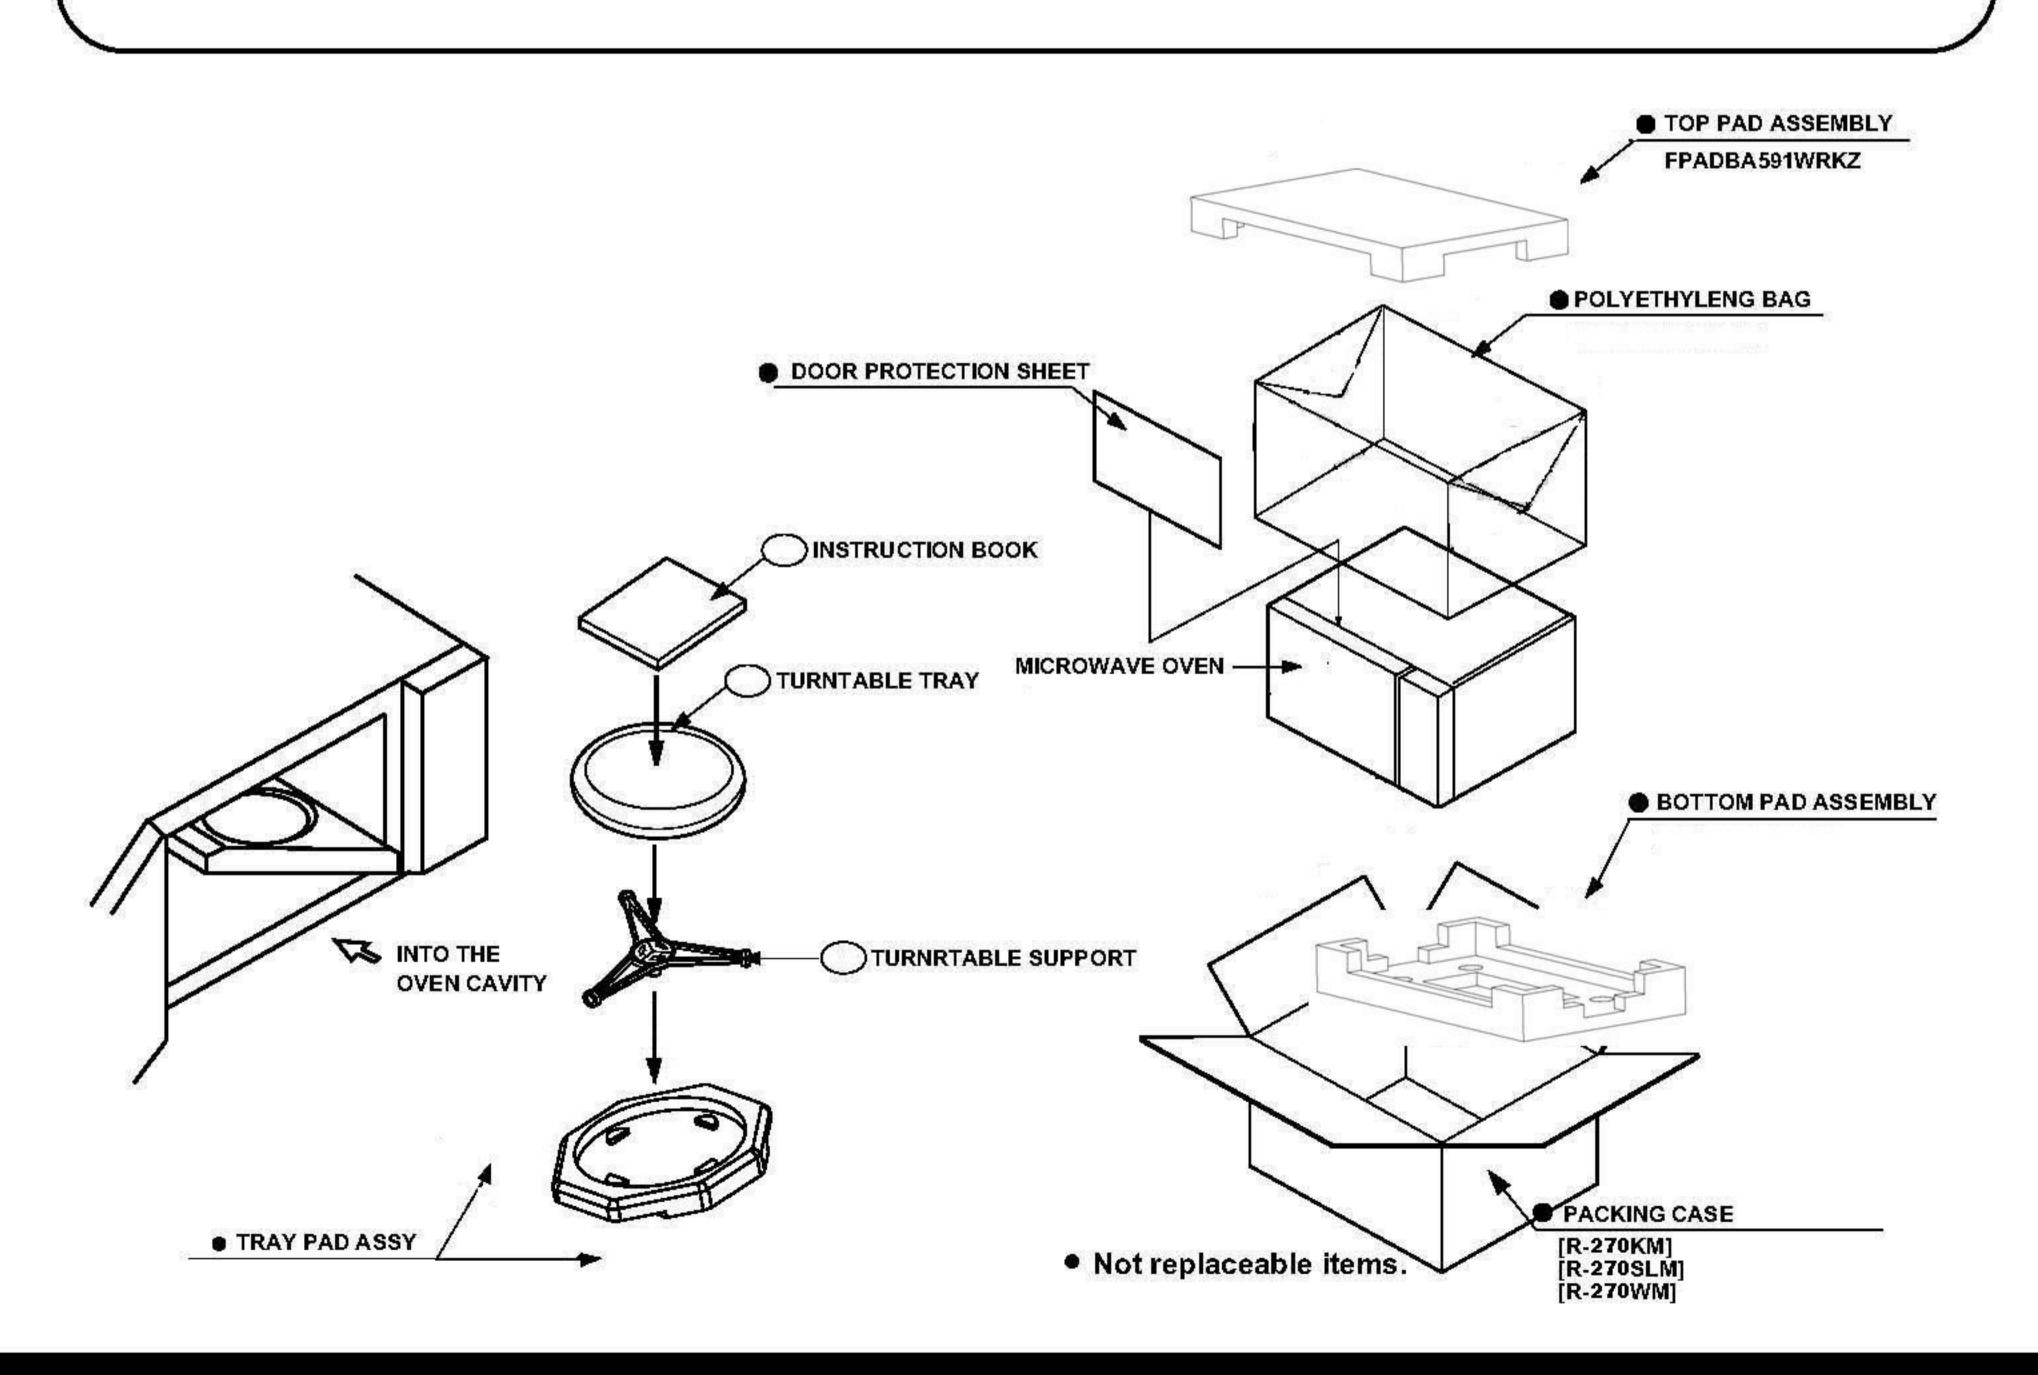

R270WM (1)OVEN PARTS (P17) (P18) (P13) (P16) (007)(P14) (P12) (P11) (B01) (P08) (P07) (P21) (555) (C09) (P23) (C09) (P01 ©10 ©11 (804) (BO2) (P02) (808) (C08) (BO) (B08) P117 P118 P28 P26 (P29)(P32)(P31)(P87)(C17)