

Gebrauchsanweisung
 59 0350
 (nl,fr)
 V01,V02,V03


59 0351
 (es,pt,it)
 V01,V02,V03


59 0352
 (el,tr,ru)
 V05

59 0353
 (cs,pl,hu)
 V05


59 0354
 (de,en)
 V04

Kochbuch
 58 3533
 (de)
 58 3673
 (en)

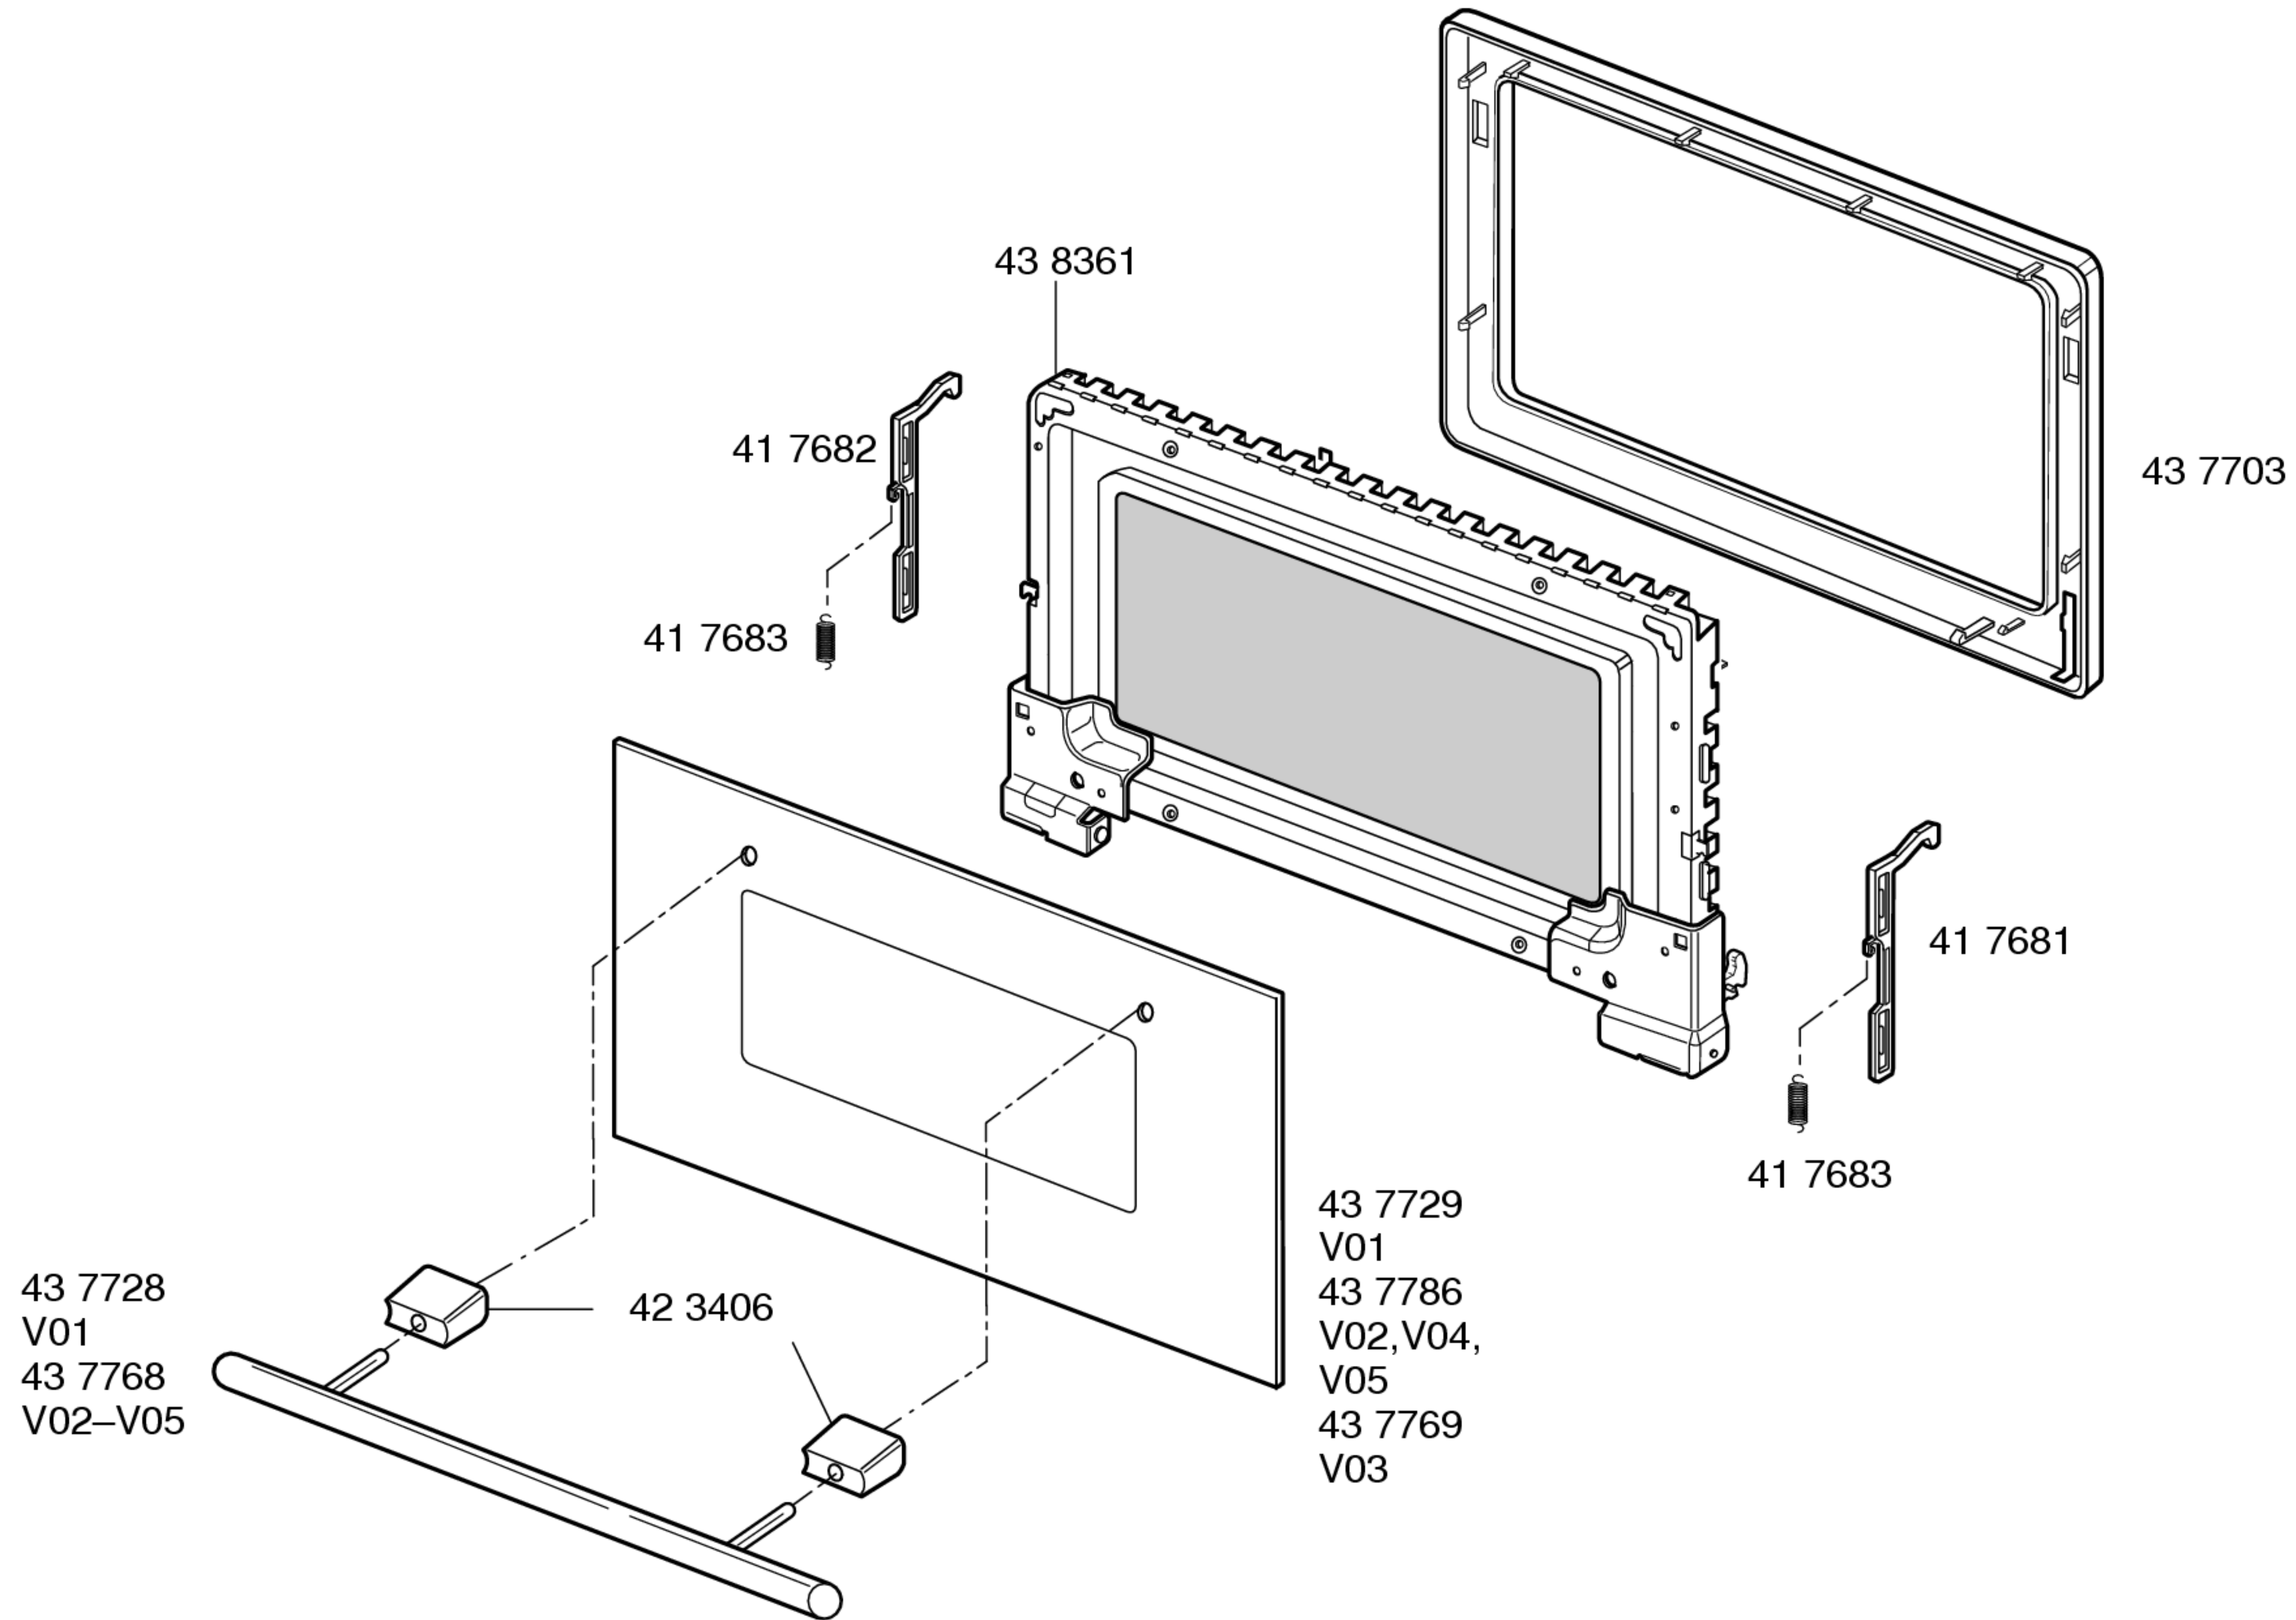

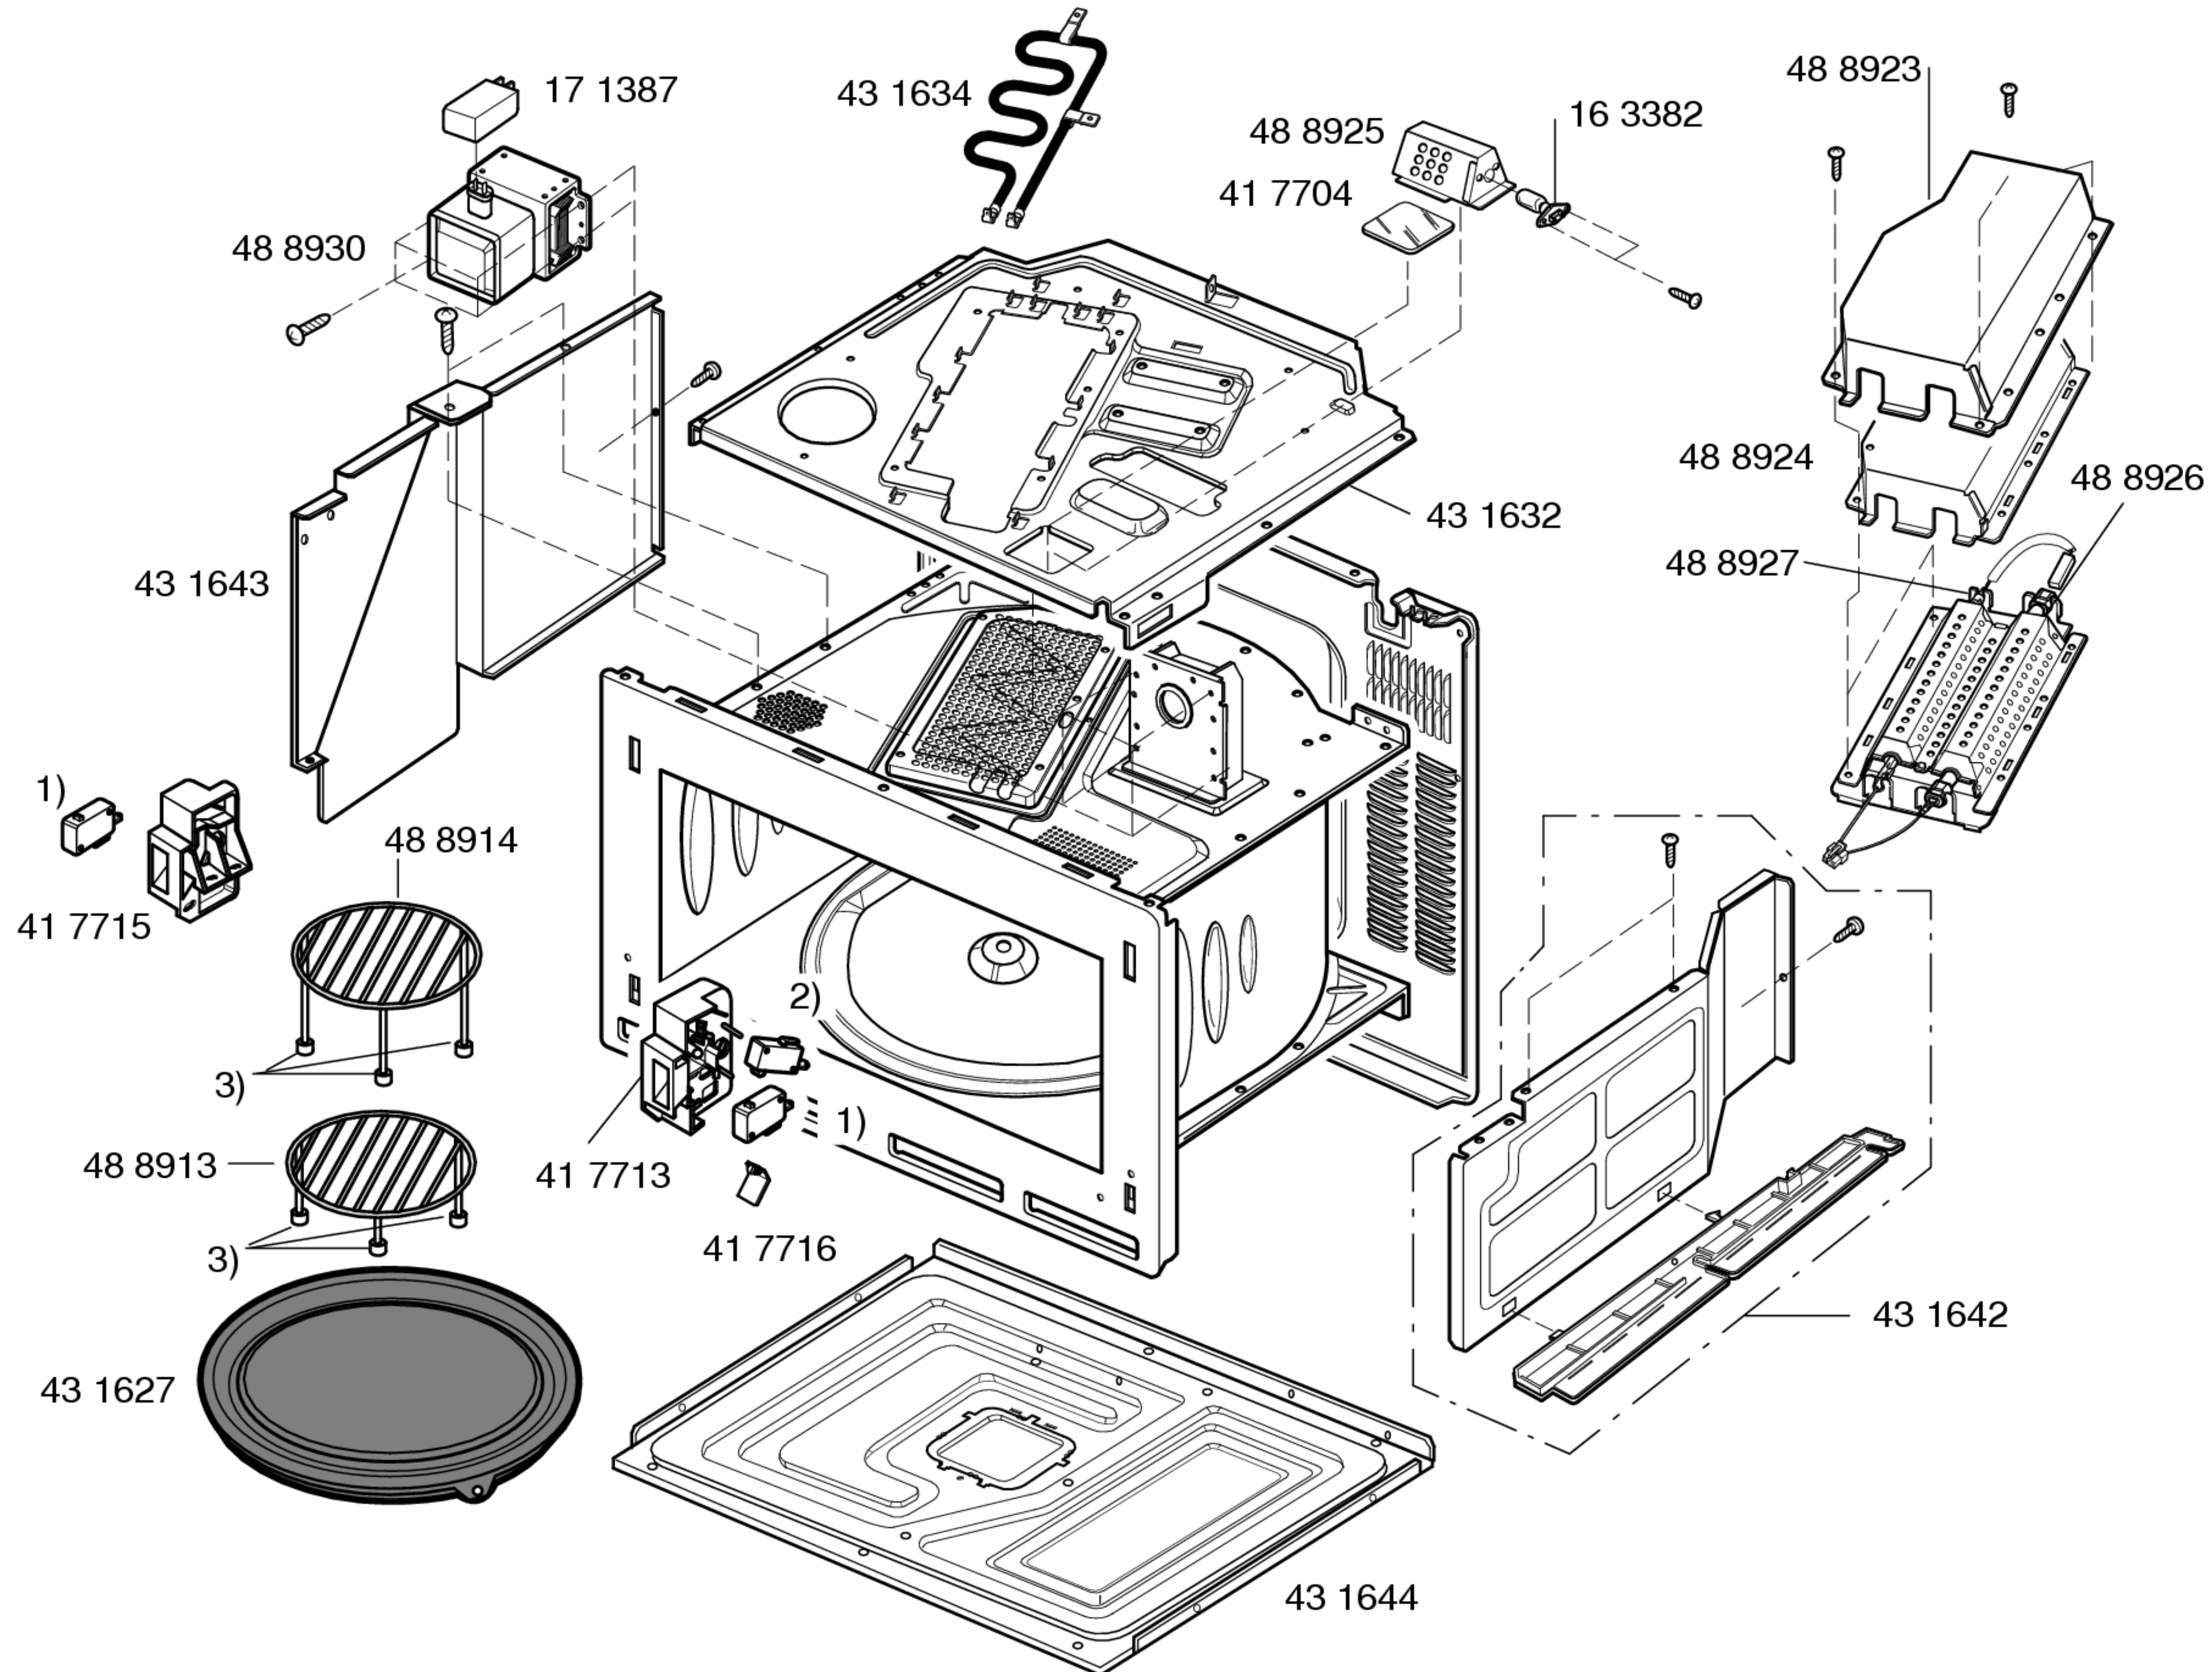

- 1) 15 1177
- 2) 18 3612
- 3) 03 2620

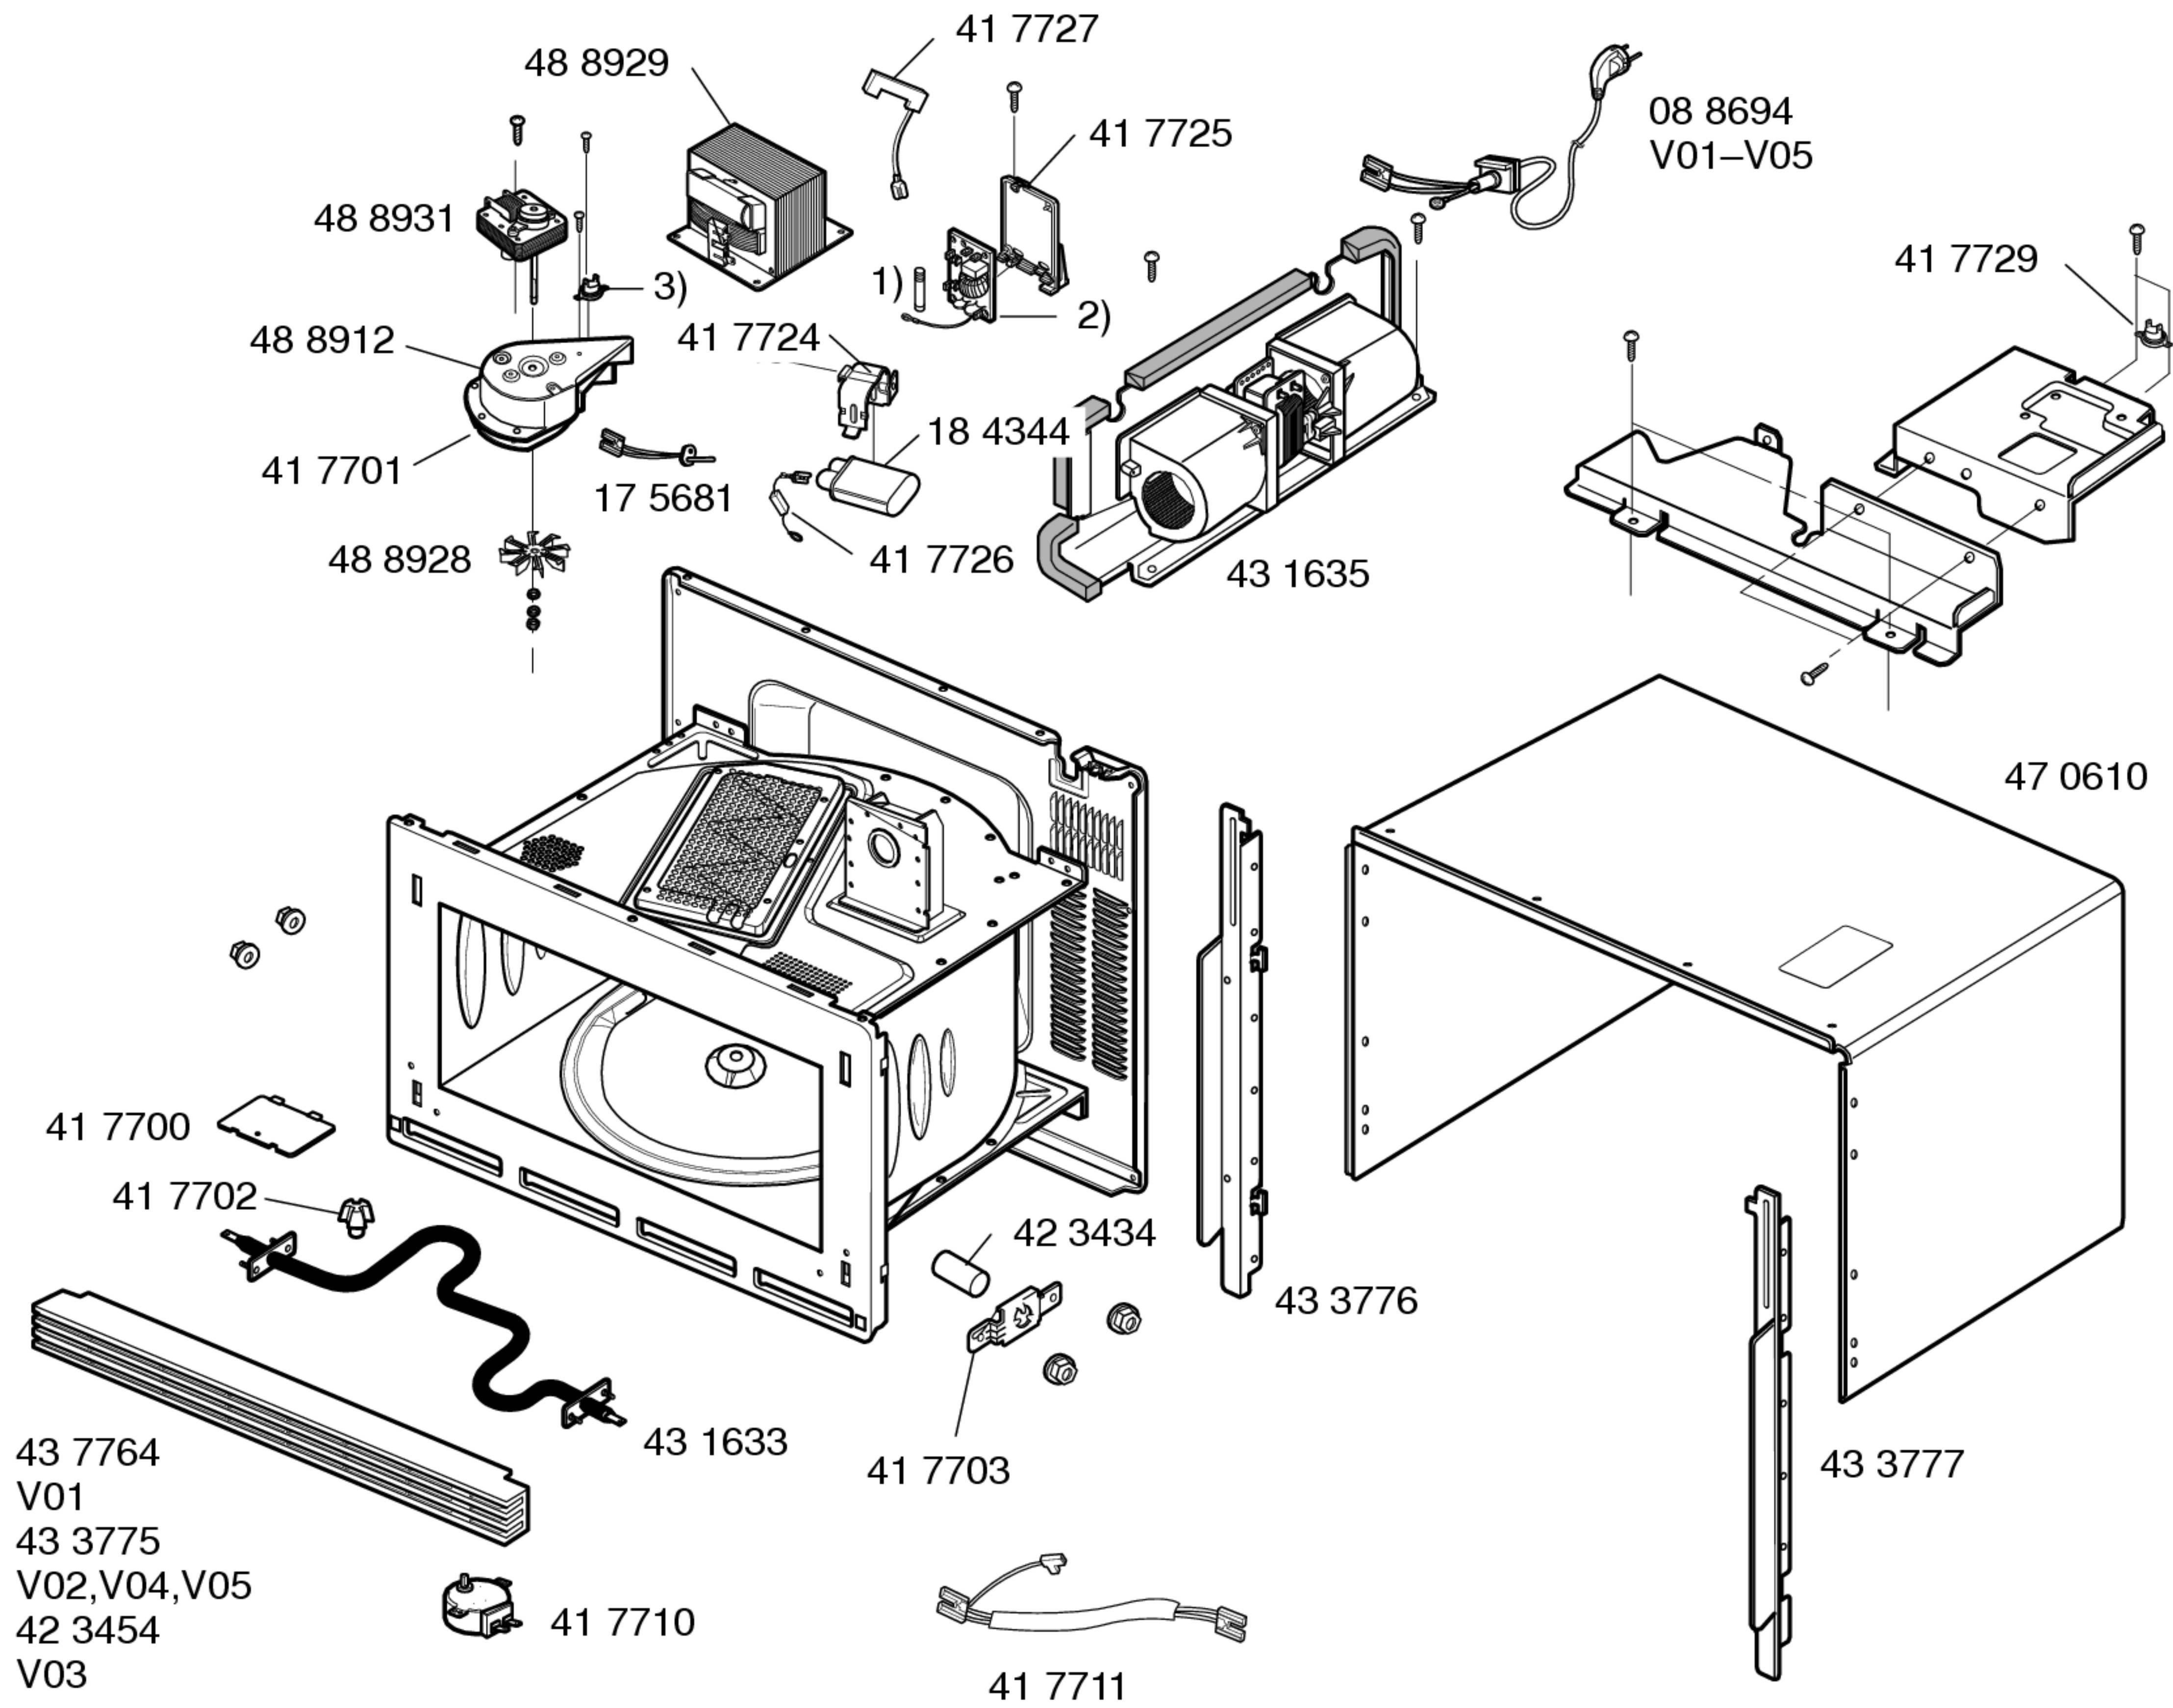

- 1) 15 1660
- 2) 18 4345
- 3) 41 7728