



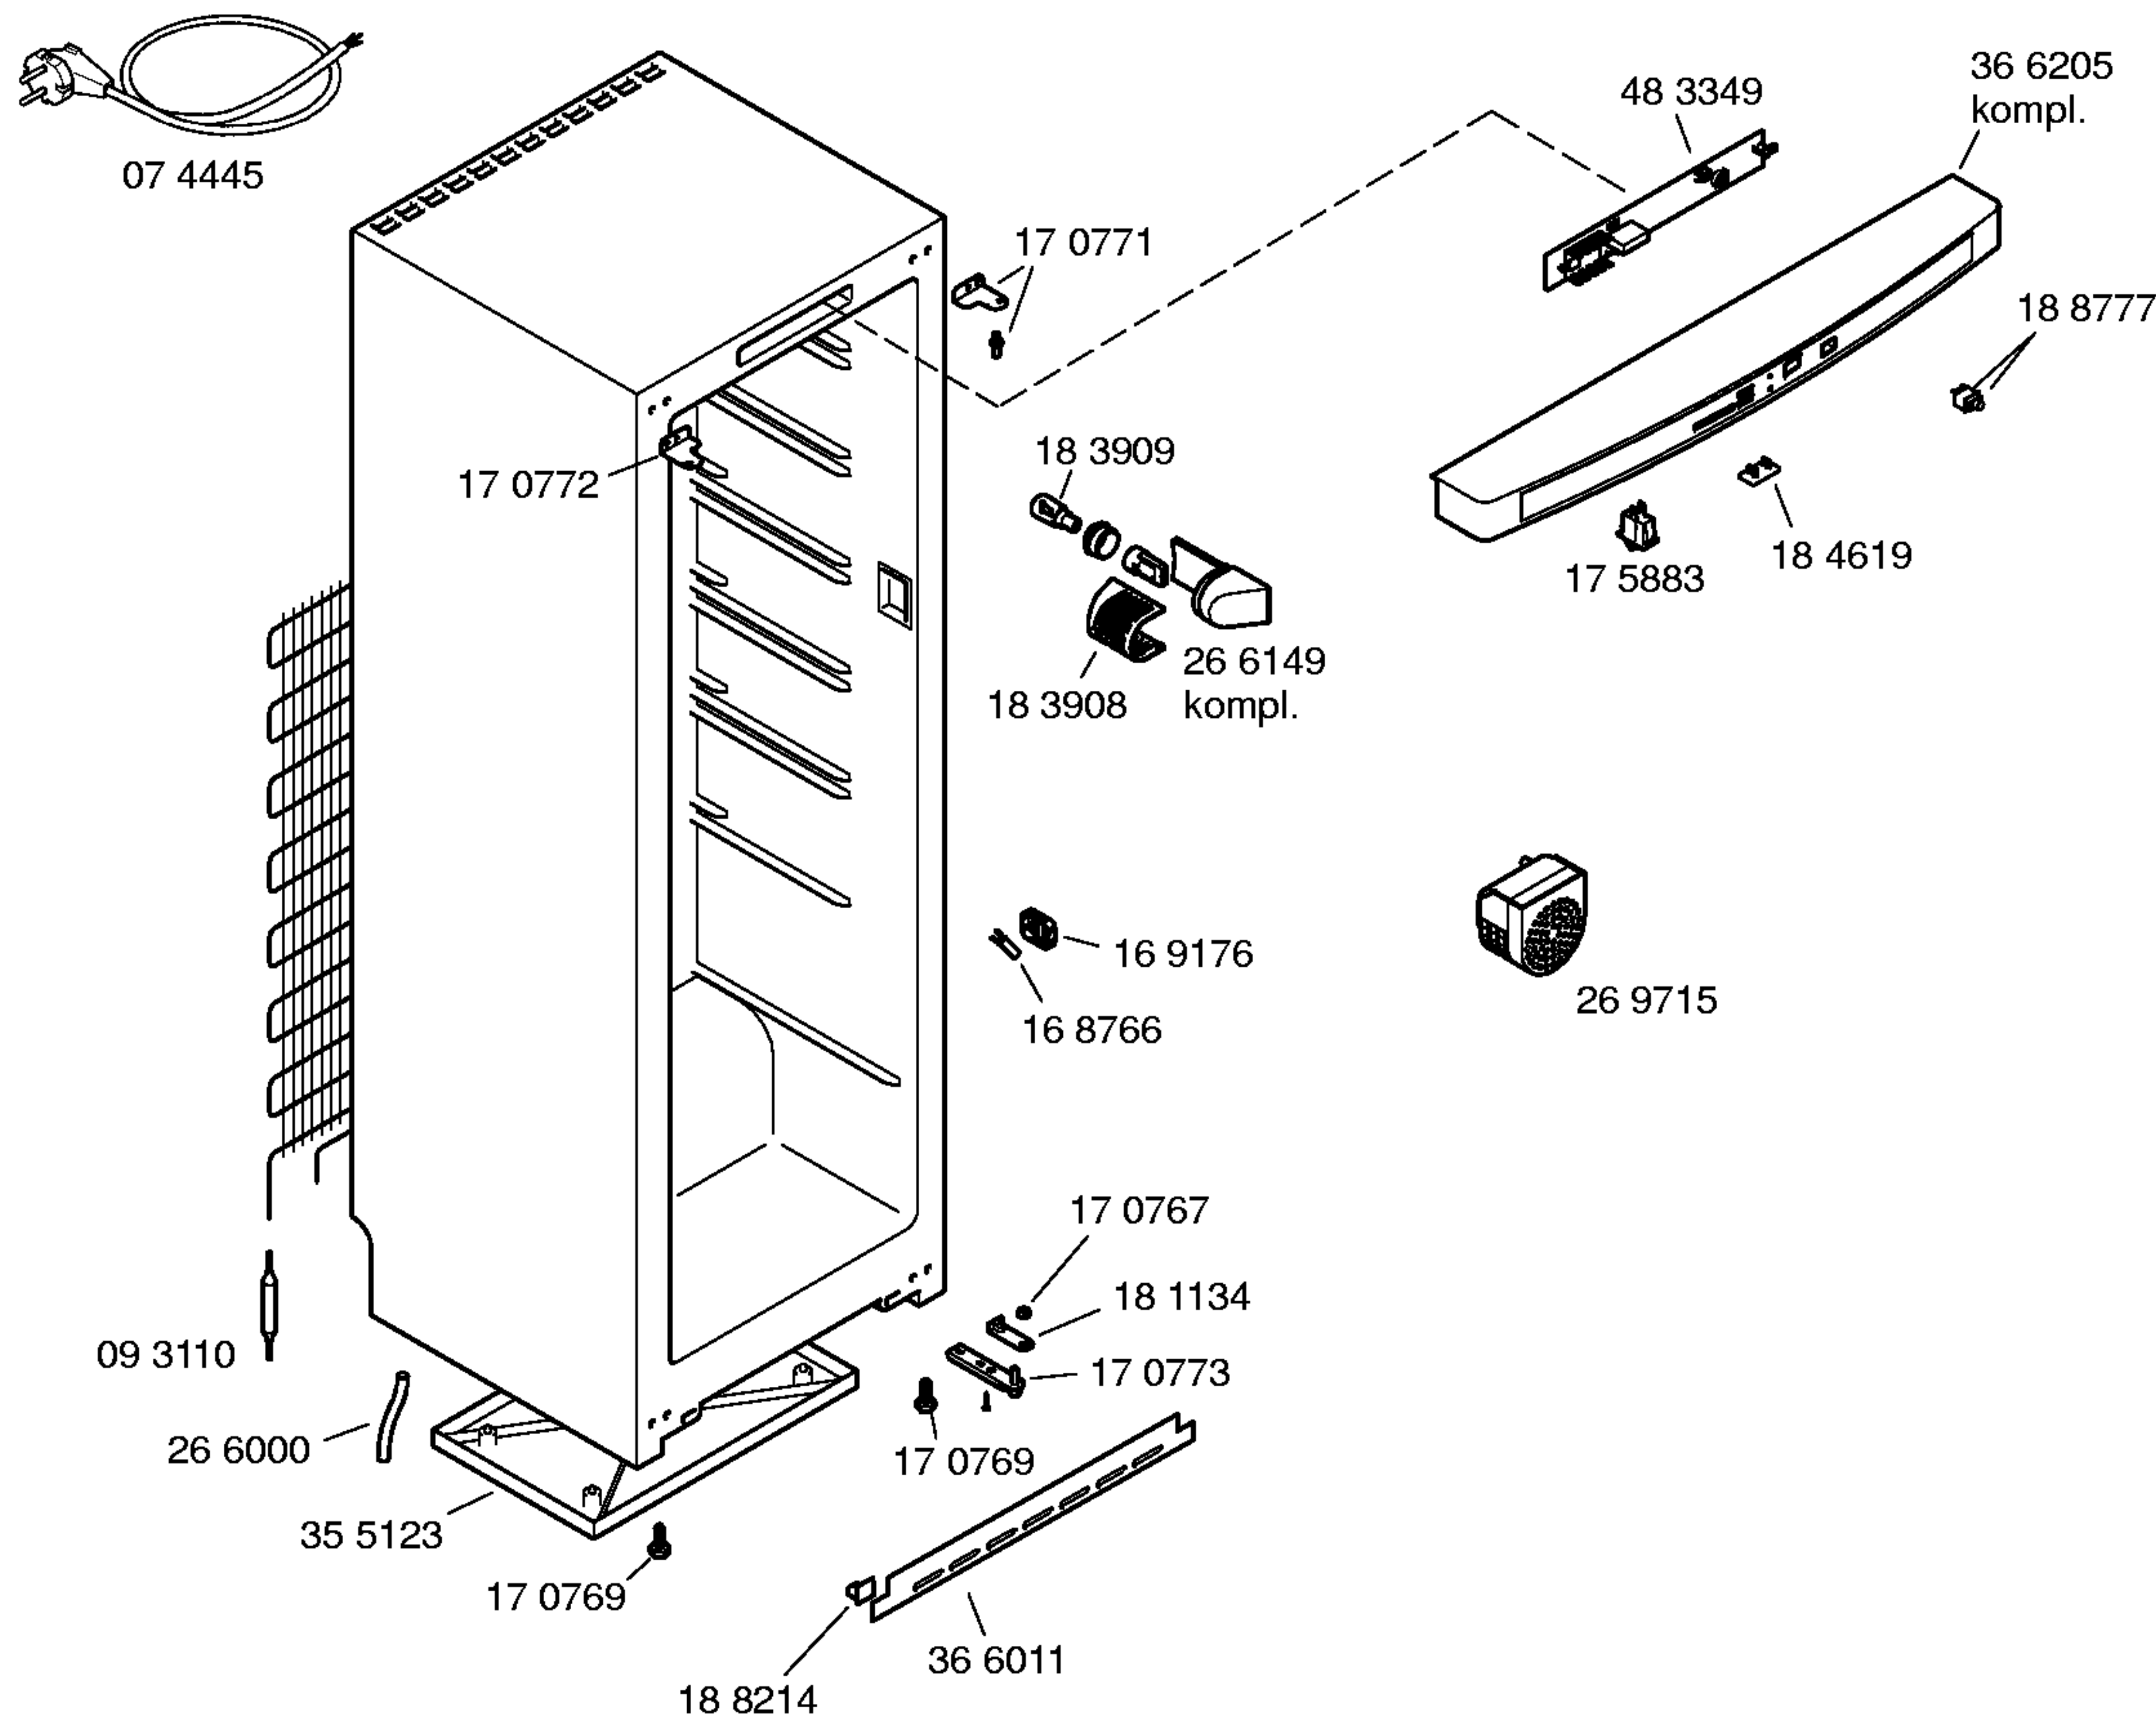


Gebrauchsanweisung
58 0707
(D,GB,F,I,NL,DK,N,S,
SF,E,P,GR,TR)
Montageanleitung
58 0241

Beistellsatz
26 5627

Side by Side
Beistellsatz zu GS
48 1044
Edelstahlpflegemittel
16 6787

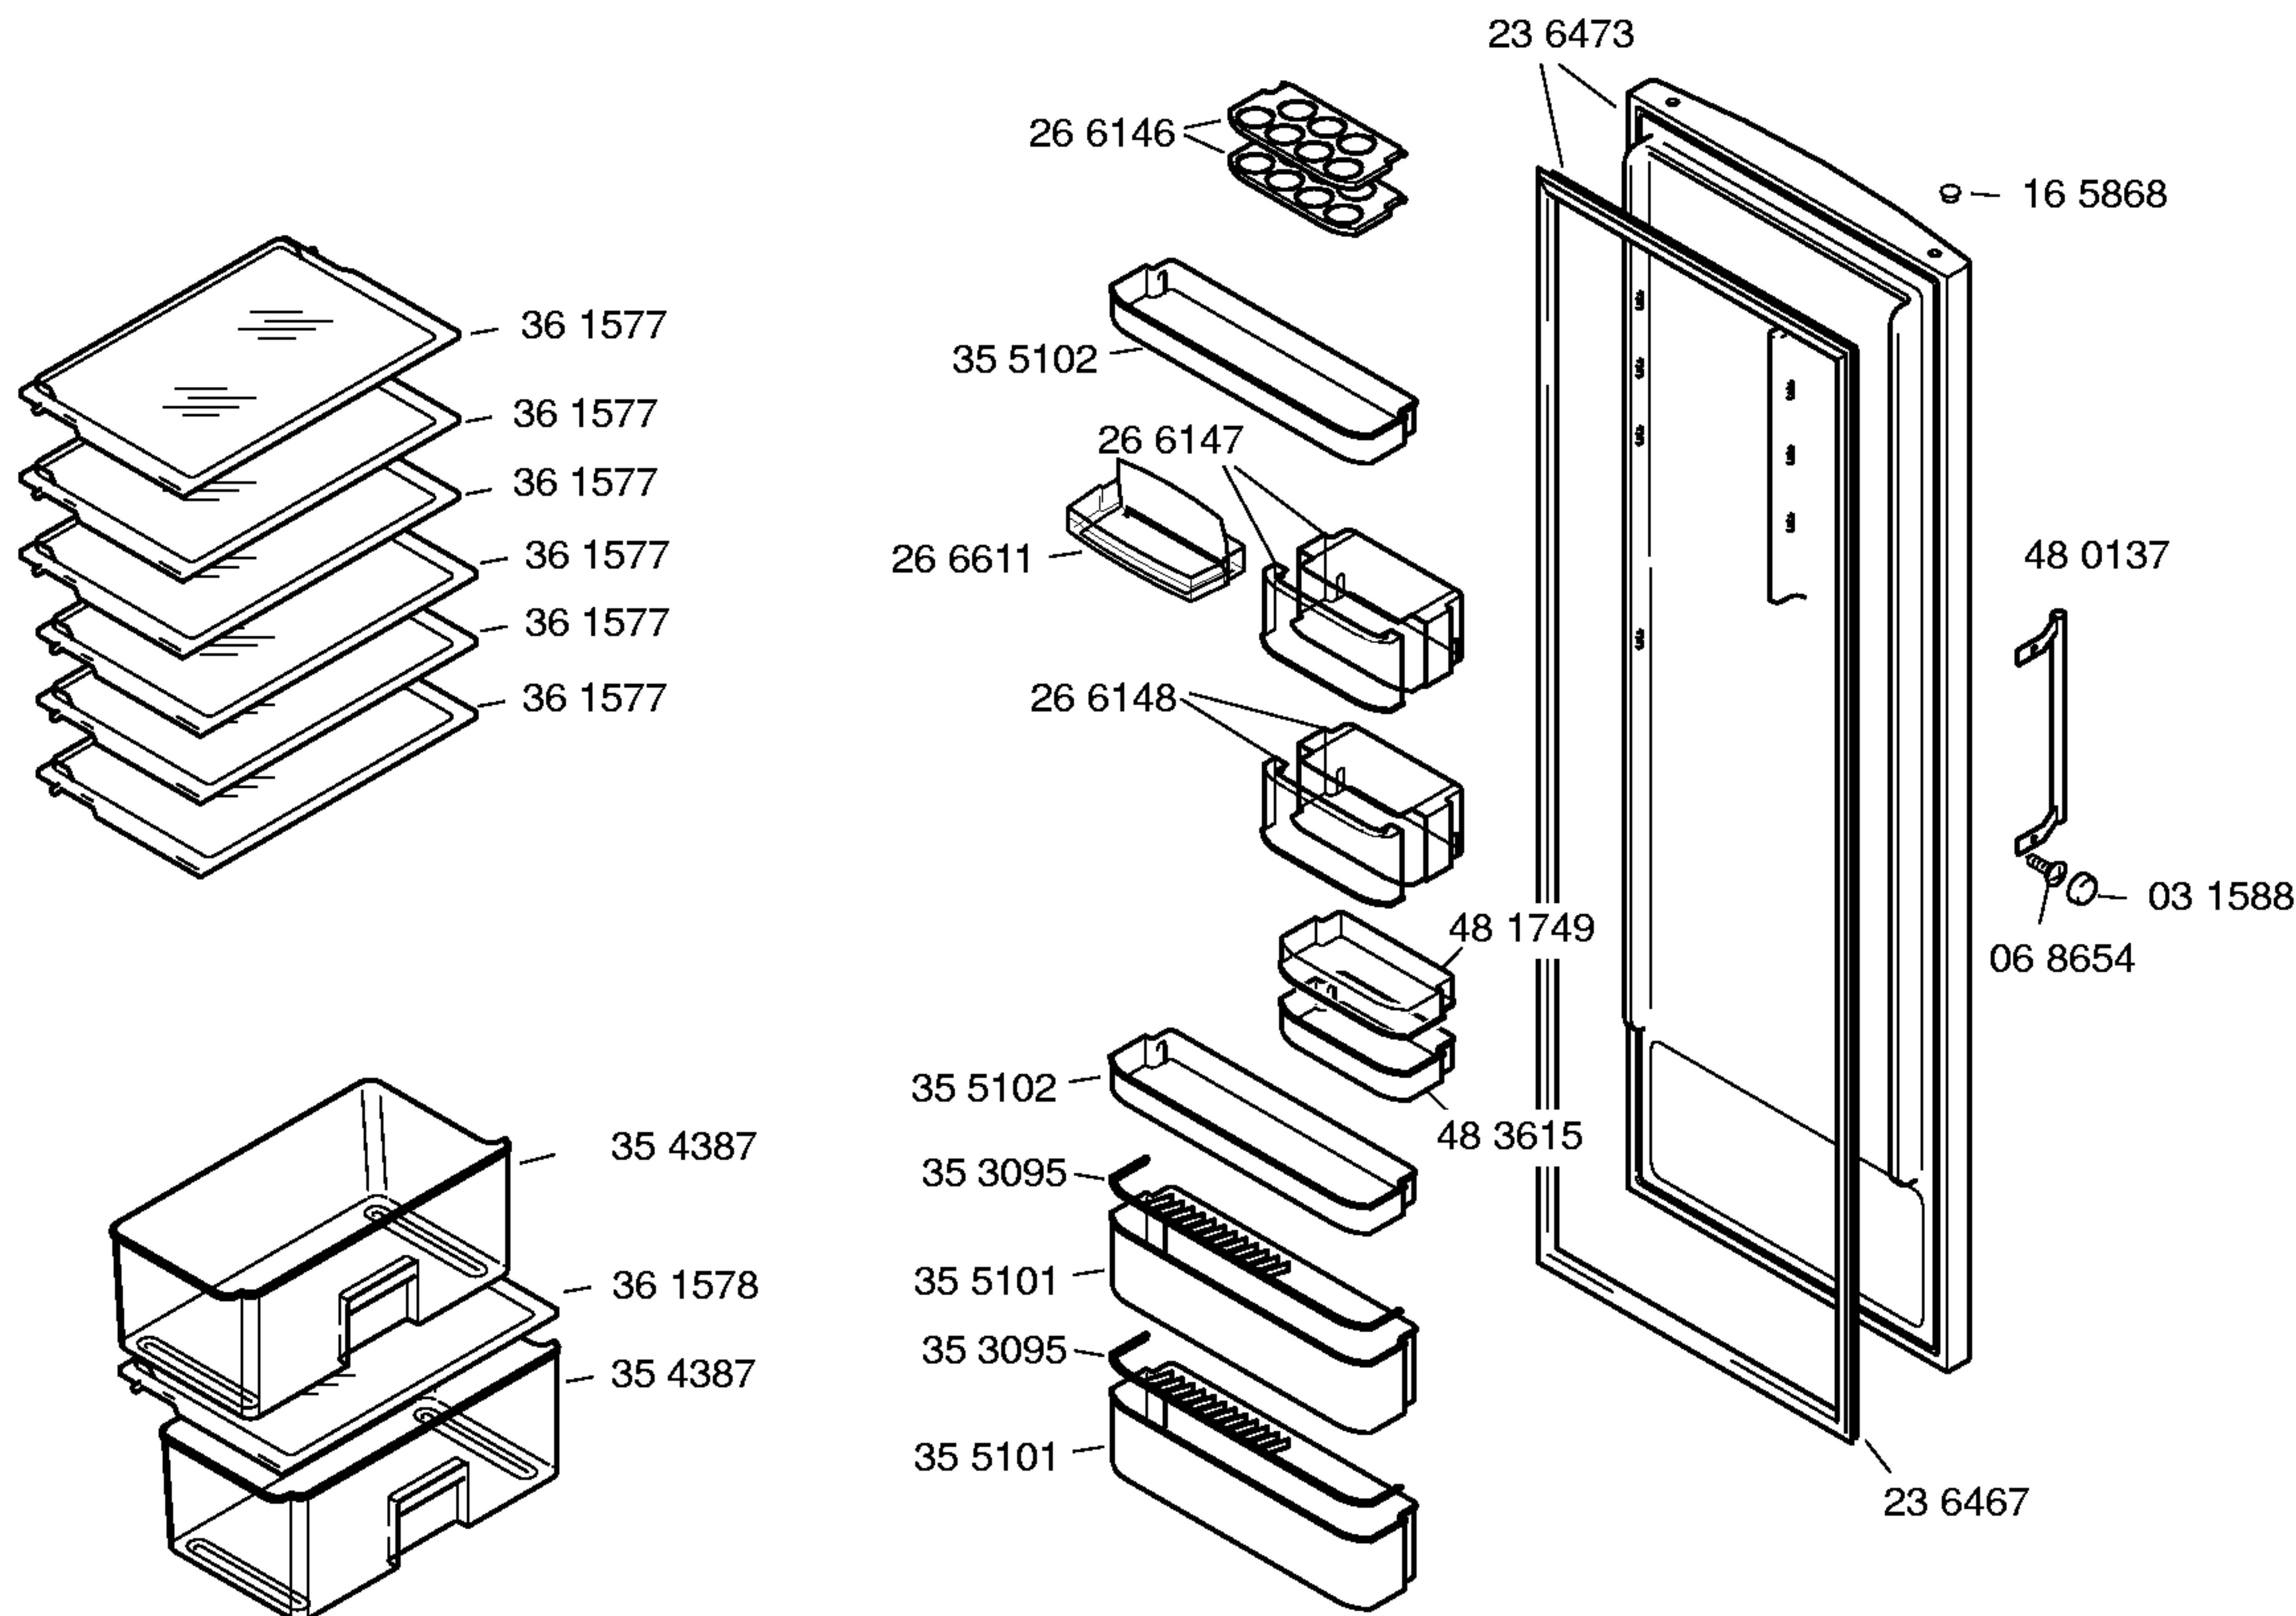

Mat. – Nr. – Konstante
3740

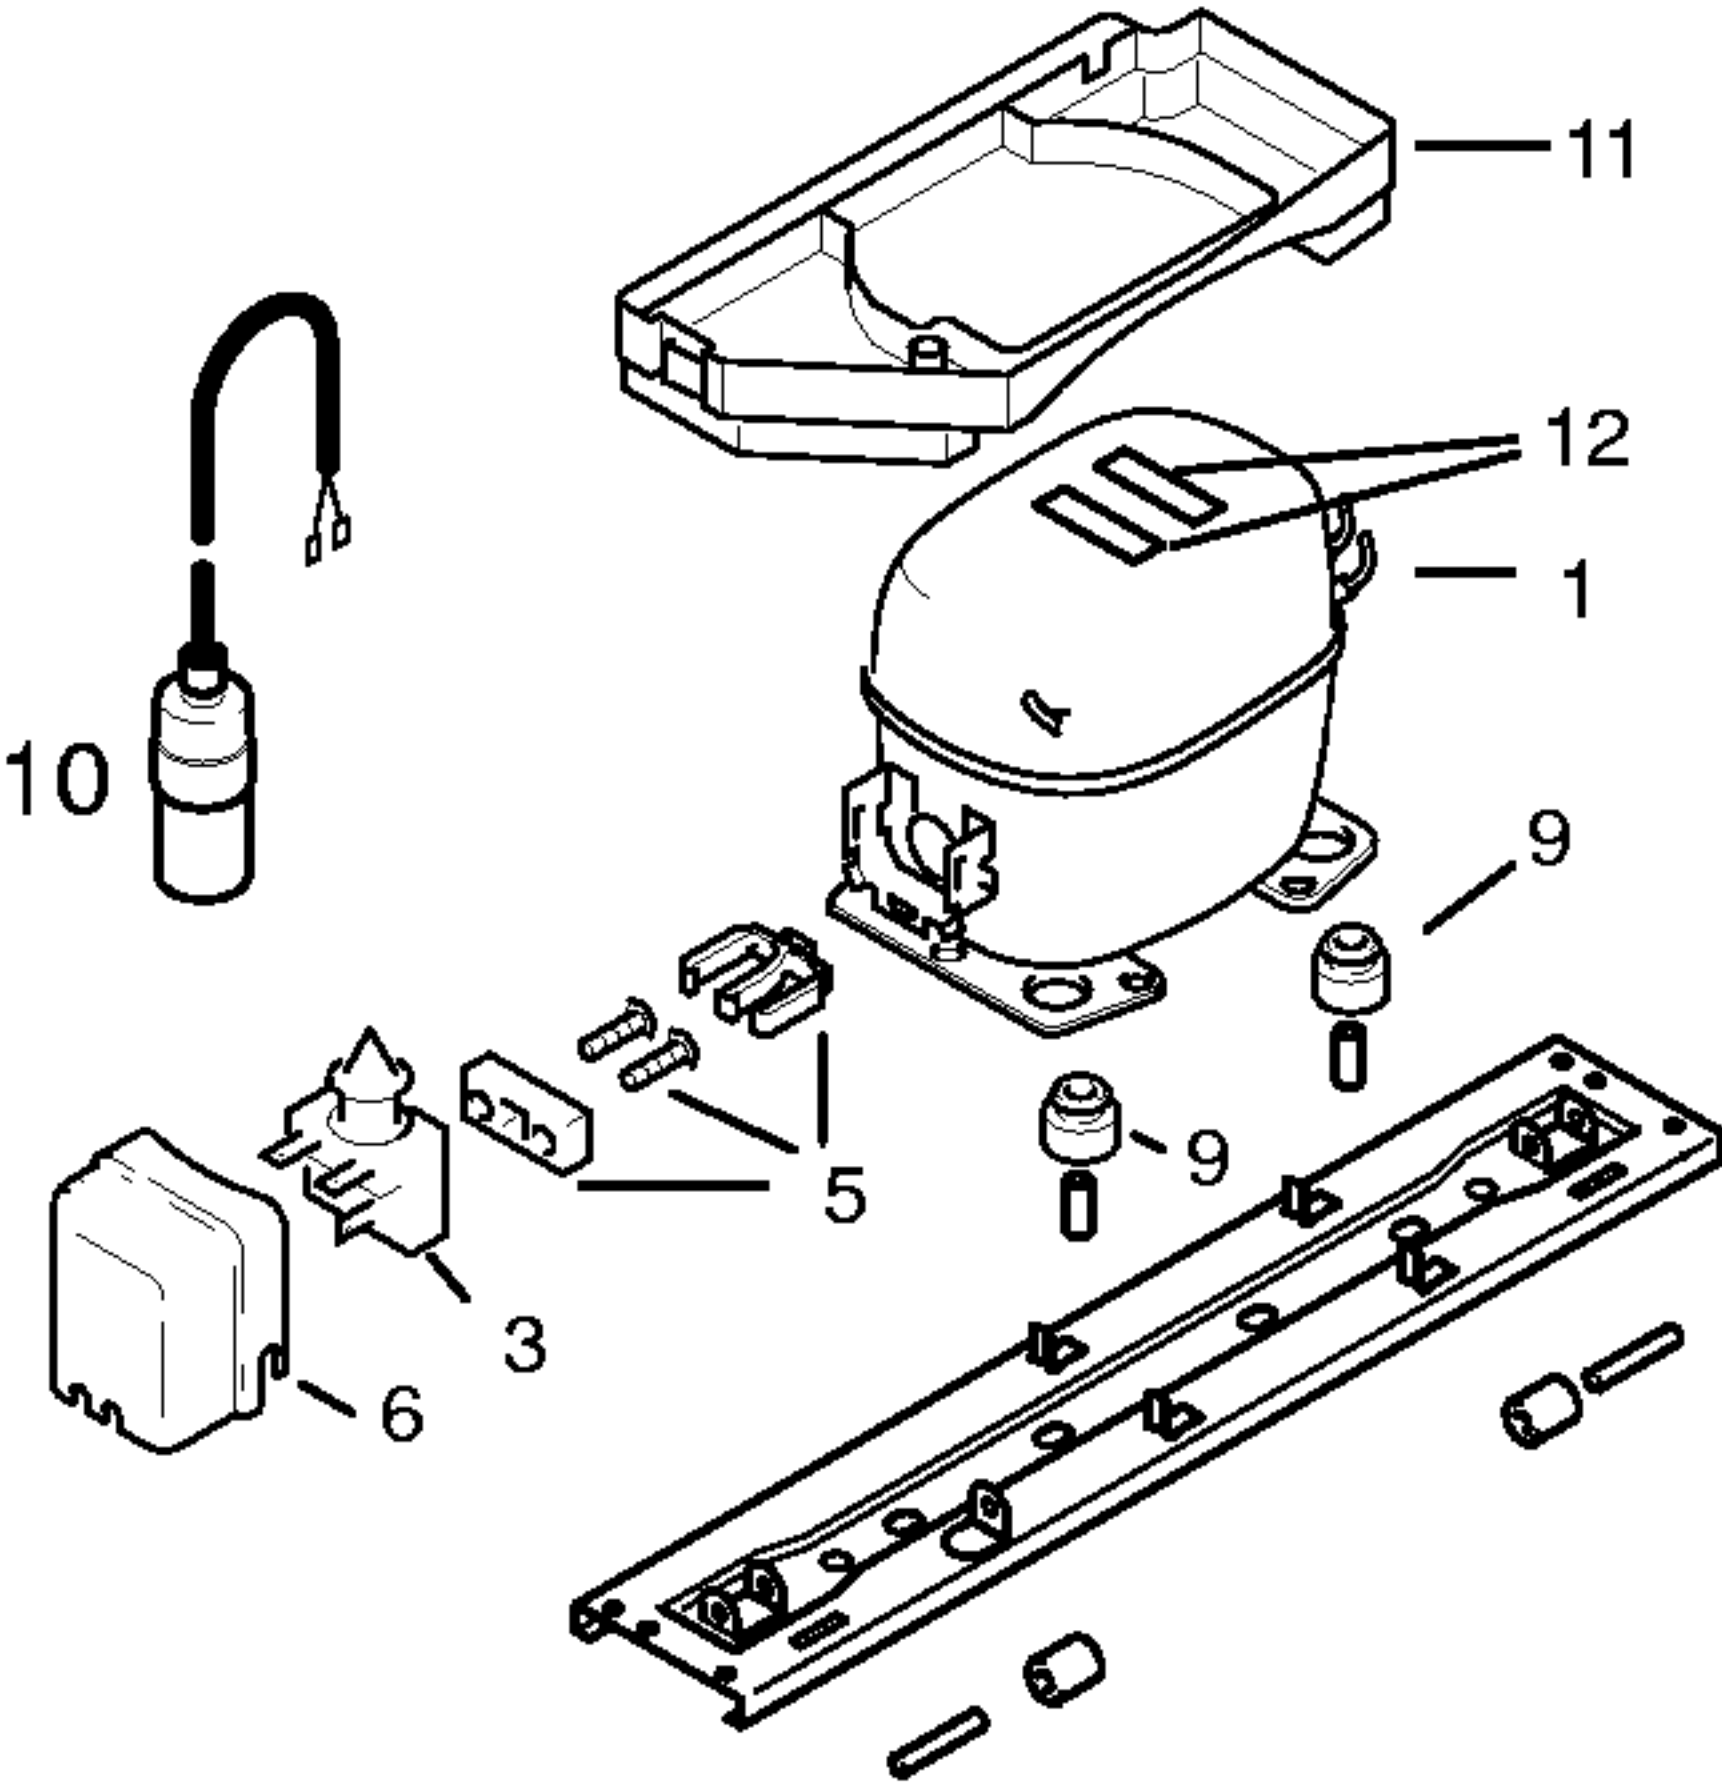

Pos.	V01,V02		
	Goldstar		
	NDA62NAEM		
1	14 2037		
2			
3	17 0743		
4			
5	17 0745		
6	17 0744		
7	16 9319		
8	26 4879		
9	05 0166		
10			
11	26 9660		
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Goldstar			
Typ/Type		NDA69NAEM			
Förderleistung/Delivery/Débit		l/h	1120		
Anlaufstrom/Starting current/Cour de démarrage		A			
Widerstand/Resistance/Résistance		Ω			
Hi/aux		Ω			
Temp.–Regler/Thermostat					
Typ/Type					
Regelstellung/Position					
Schaltwerte/Switching values		"warm"			
Valeurs de commutation		"kalt"			
		"alarm"			
Füllmenge/Fill.quantity/Charge		R600a	*		
Anschlußwert/Conn.load/Puiss. connectée		W	67		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
NTC–Fühler / Sensor		°C	kΩ	°C	kΩ
		+10	9,95 ±0,18	–18	43,31 ±1,10
		+5	12,70 ±0,18	–22	54,66 ±1,59
		0	16,33 ±0,16	–26	69,42 ±2,29
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

* siehe Typenschild