



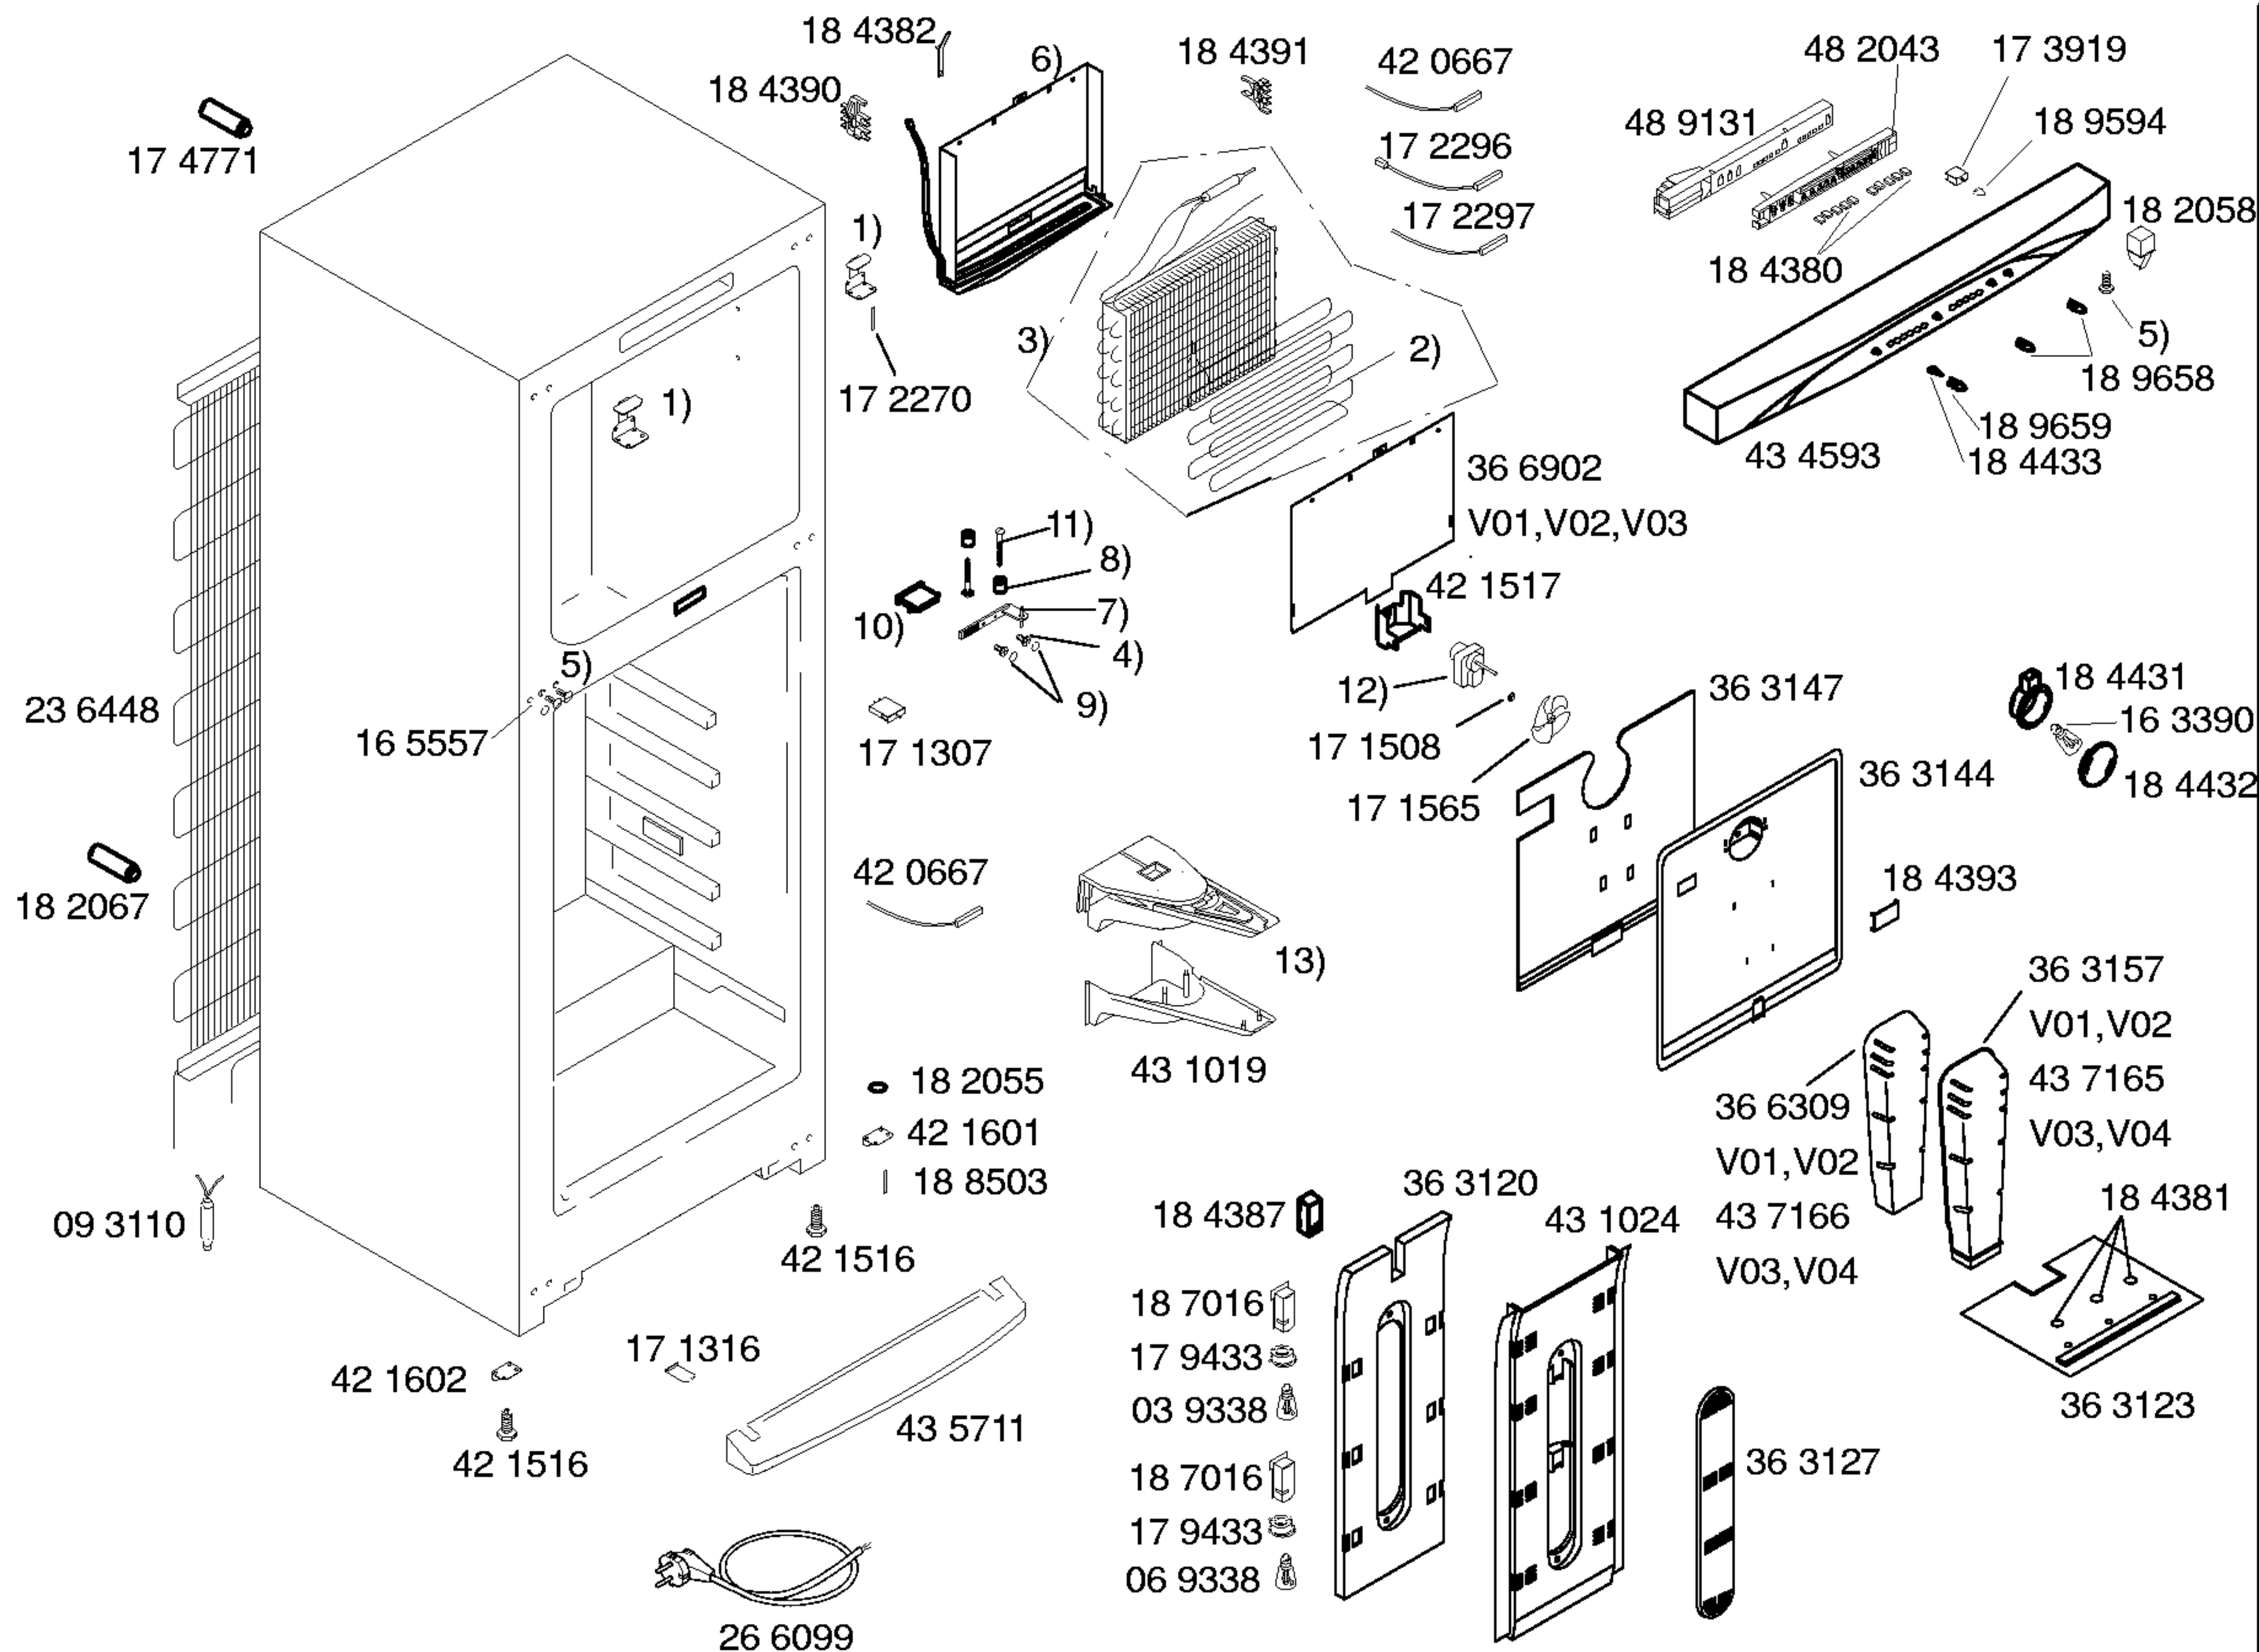


Gebrauchsanweisung
58 7176

- 1) 17 1312
- 2) 36 9816
V01,V02,V03
- 3) 36 9815
V01,V02,V03
43 8726
V04
- 4) 18 8196
- 5) 16 5552
- 6) 36 9905
- 7) 42 0644
- 8) 18 8188
- 9) 17 6137
- 10) 41 8128
- 11) 18 8194
- 12) 49 0859
- 13) 43 2092
- 14) 17 1307
V01
42 2142
V02,V03,V04

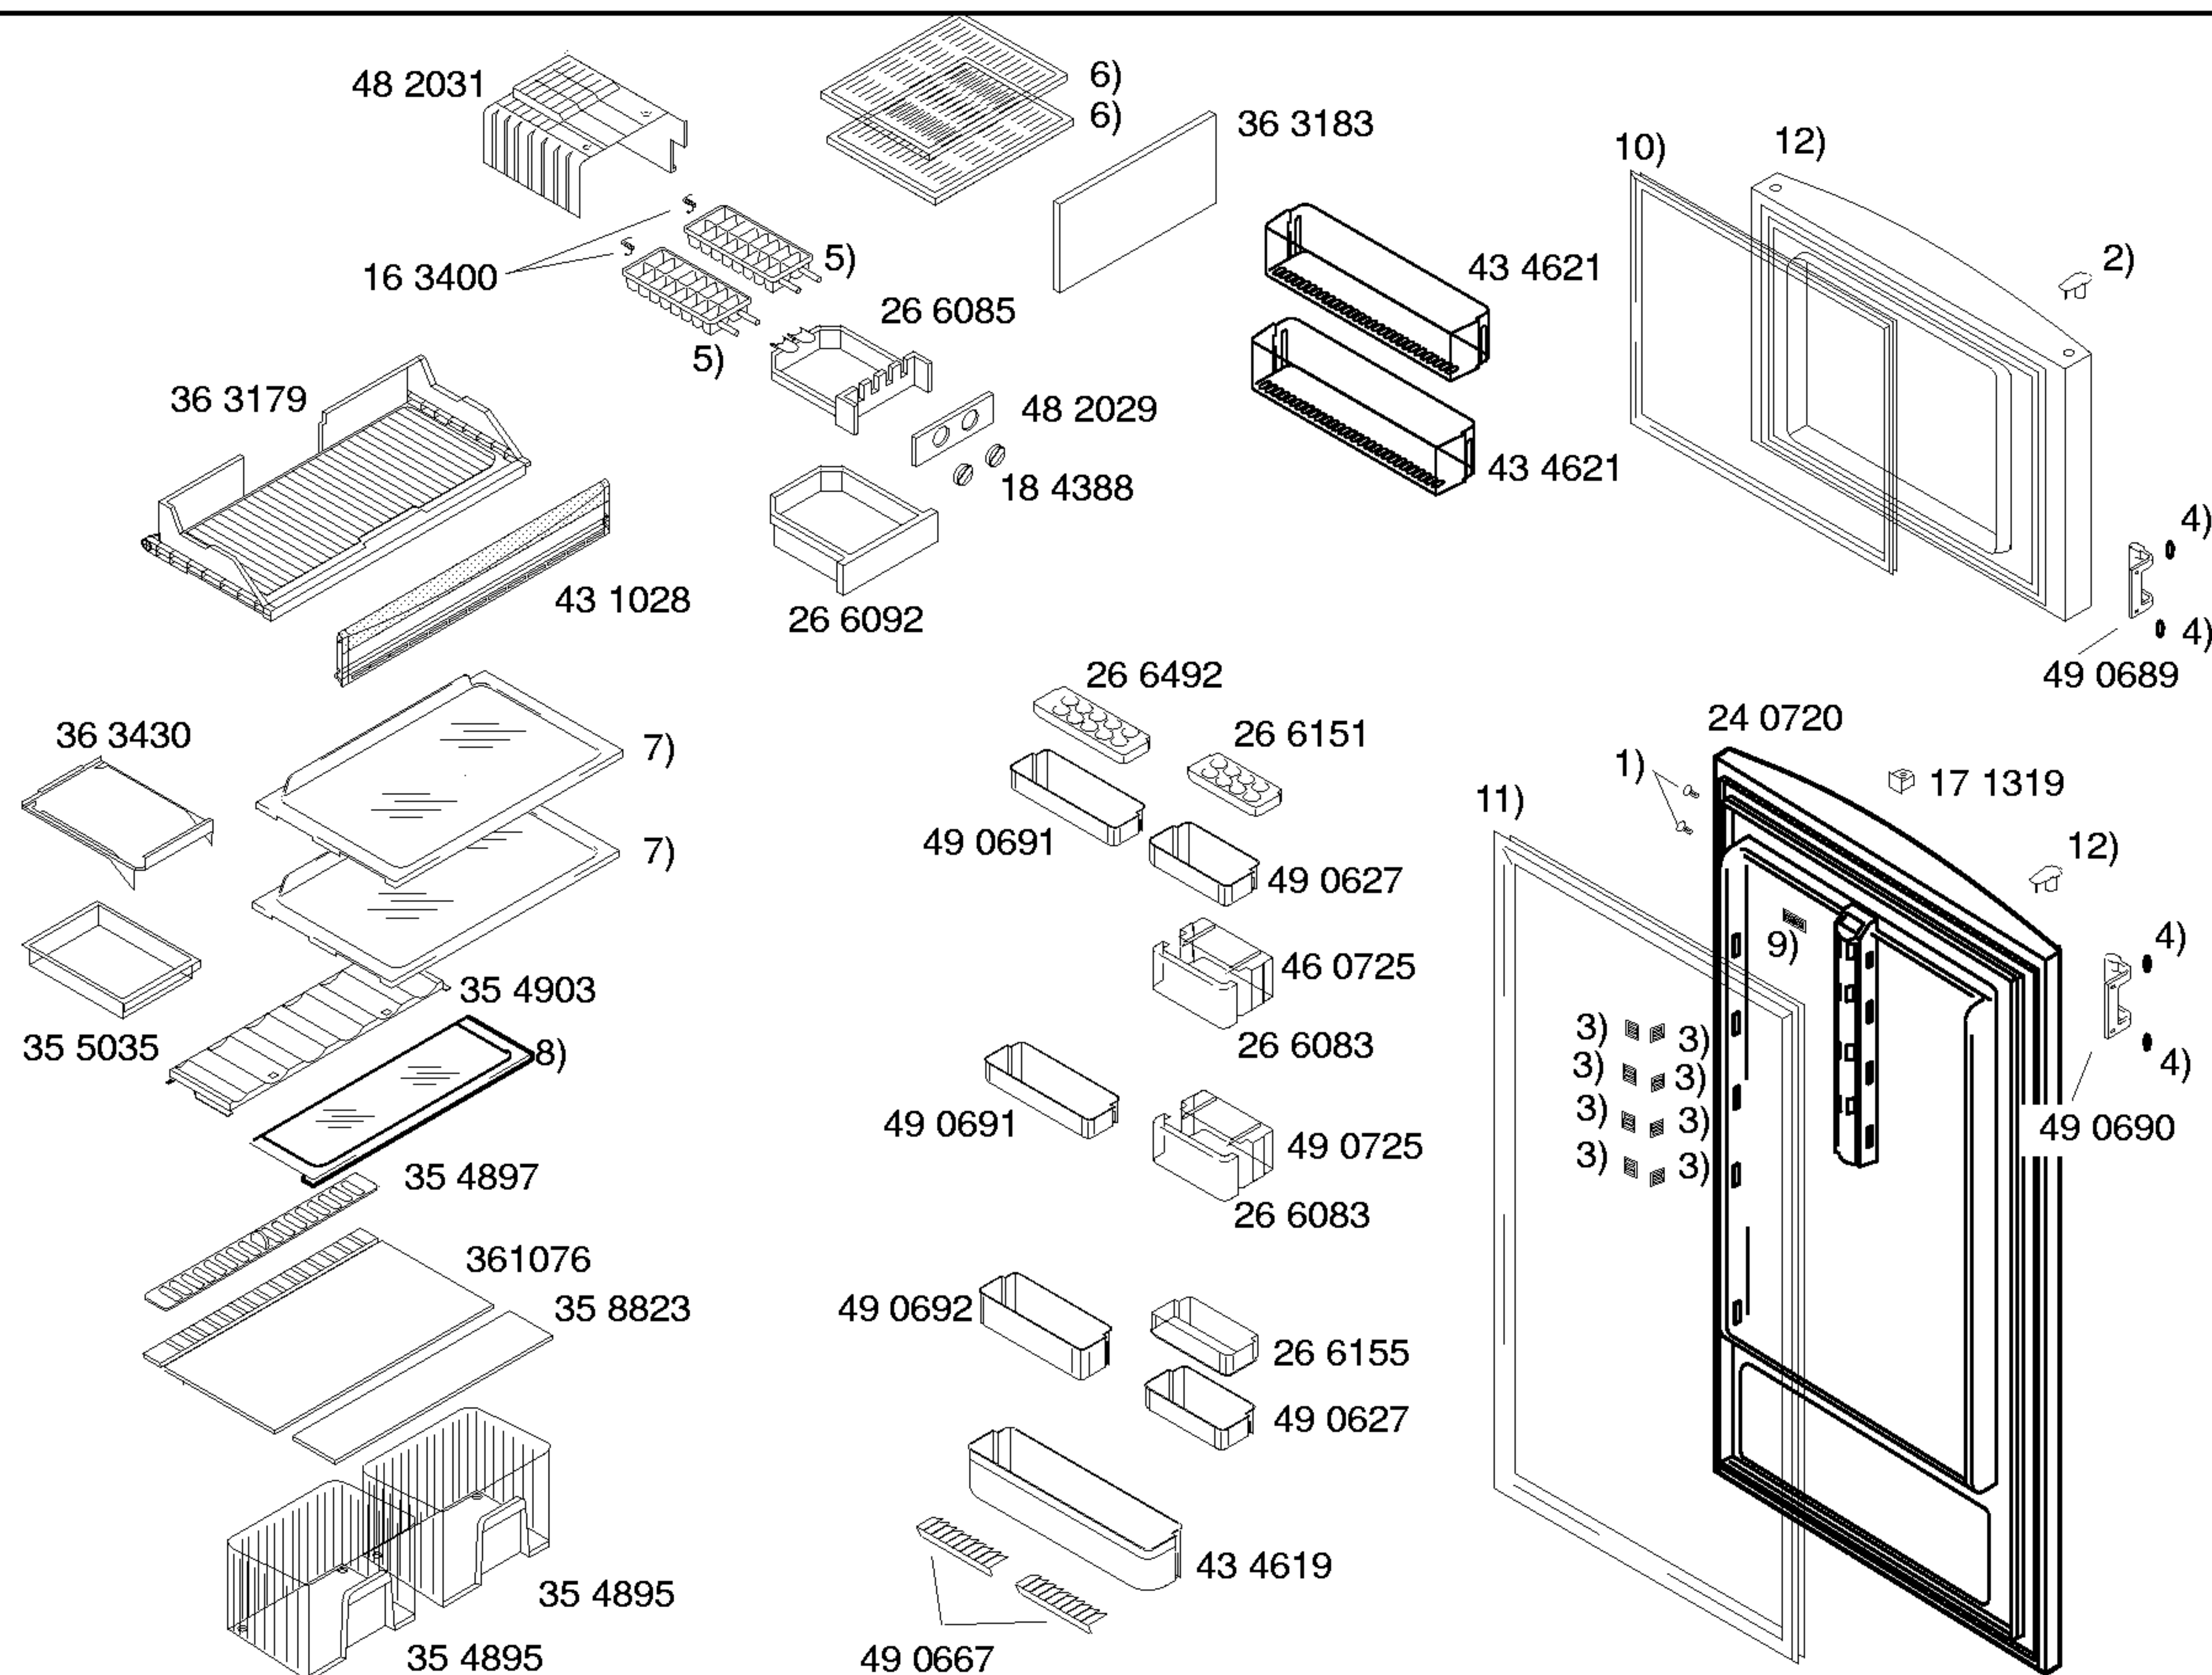

- 1) 06 0083
- 2) 17 1321
- 3) 41 6844
- 4) 16 5557
- 5) 48 9770
- 6) 36 3171
- 7) 43 3726
- 8) 43 4091
- 9) 41 6902
- 10) 21 8857
- V01,V02
- 47 1878
- V03,V04
- 11) 23 8423
- V01,V02
- 24 1272
- V03,V04
- 12) 47 1139

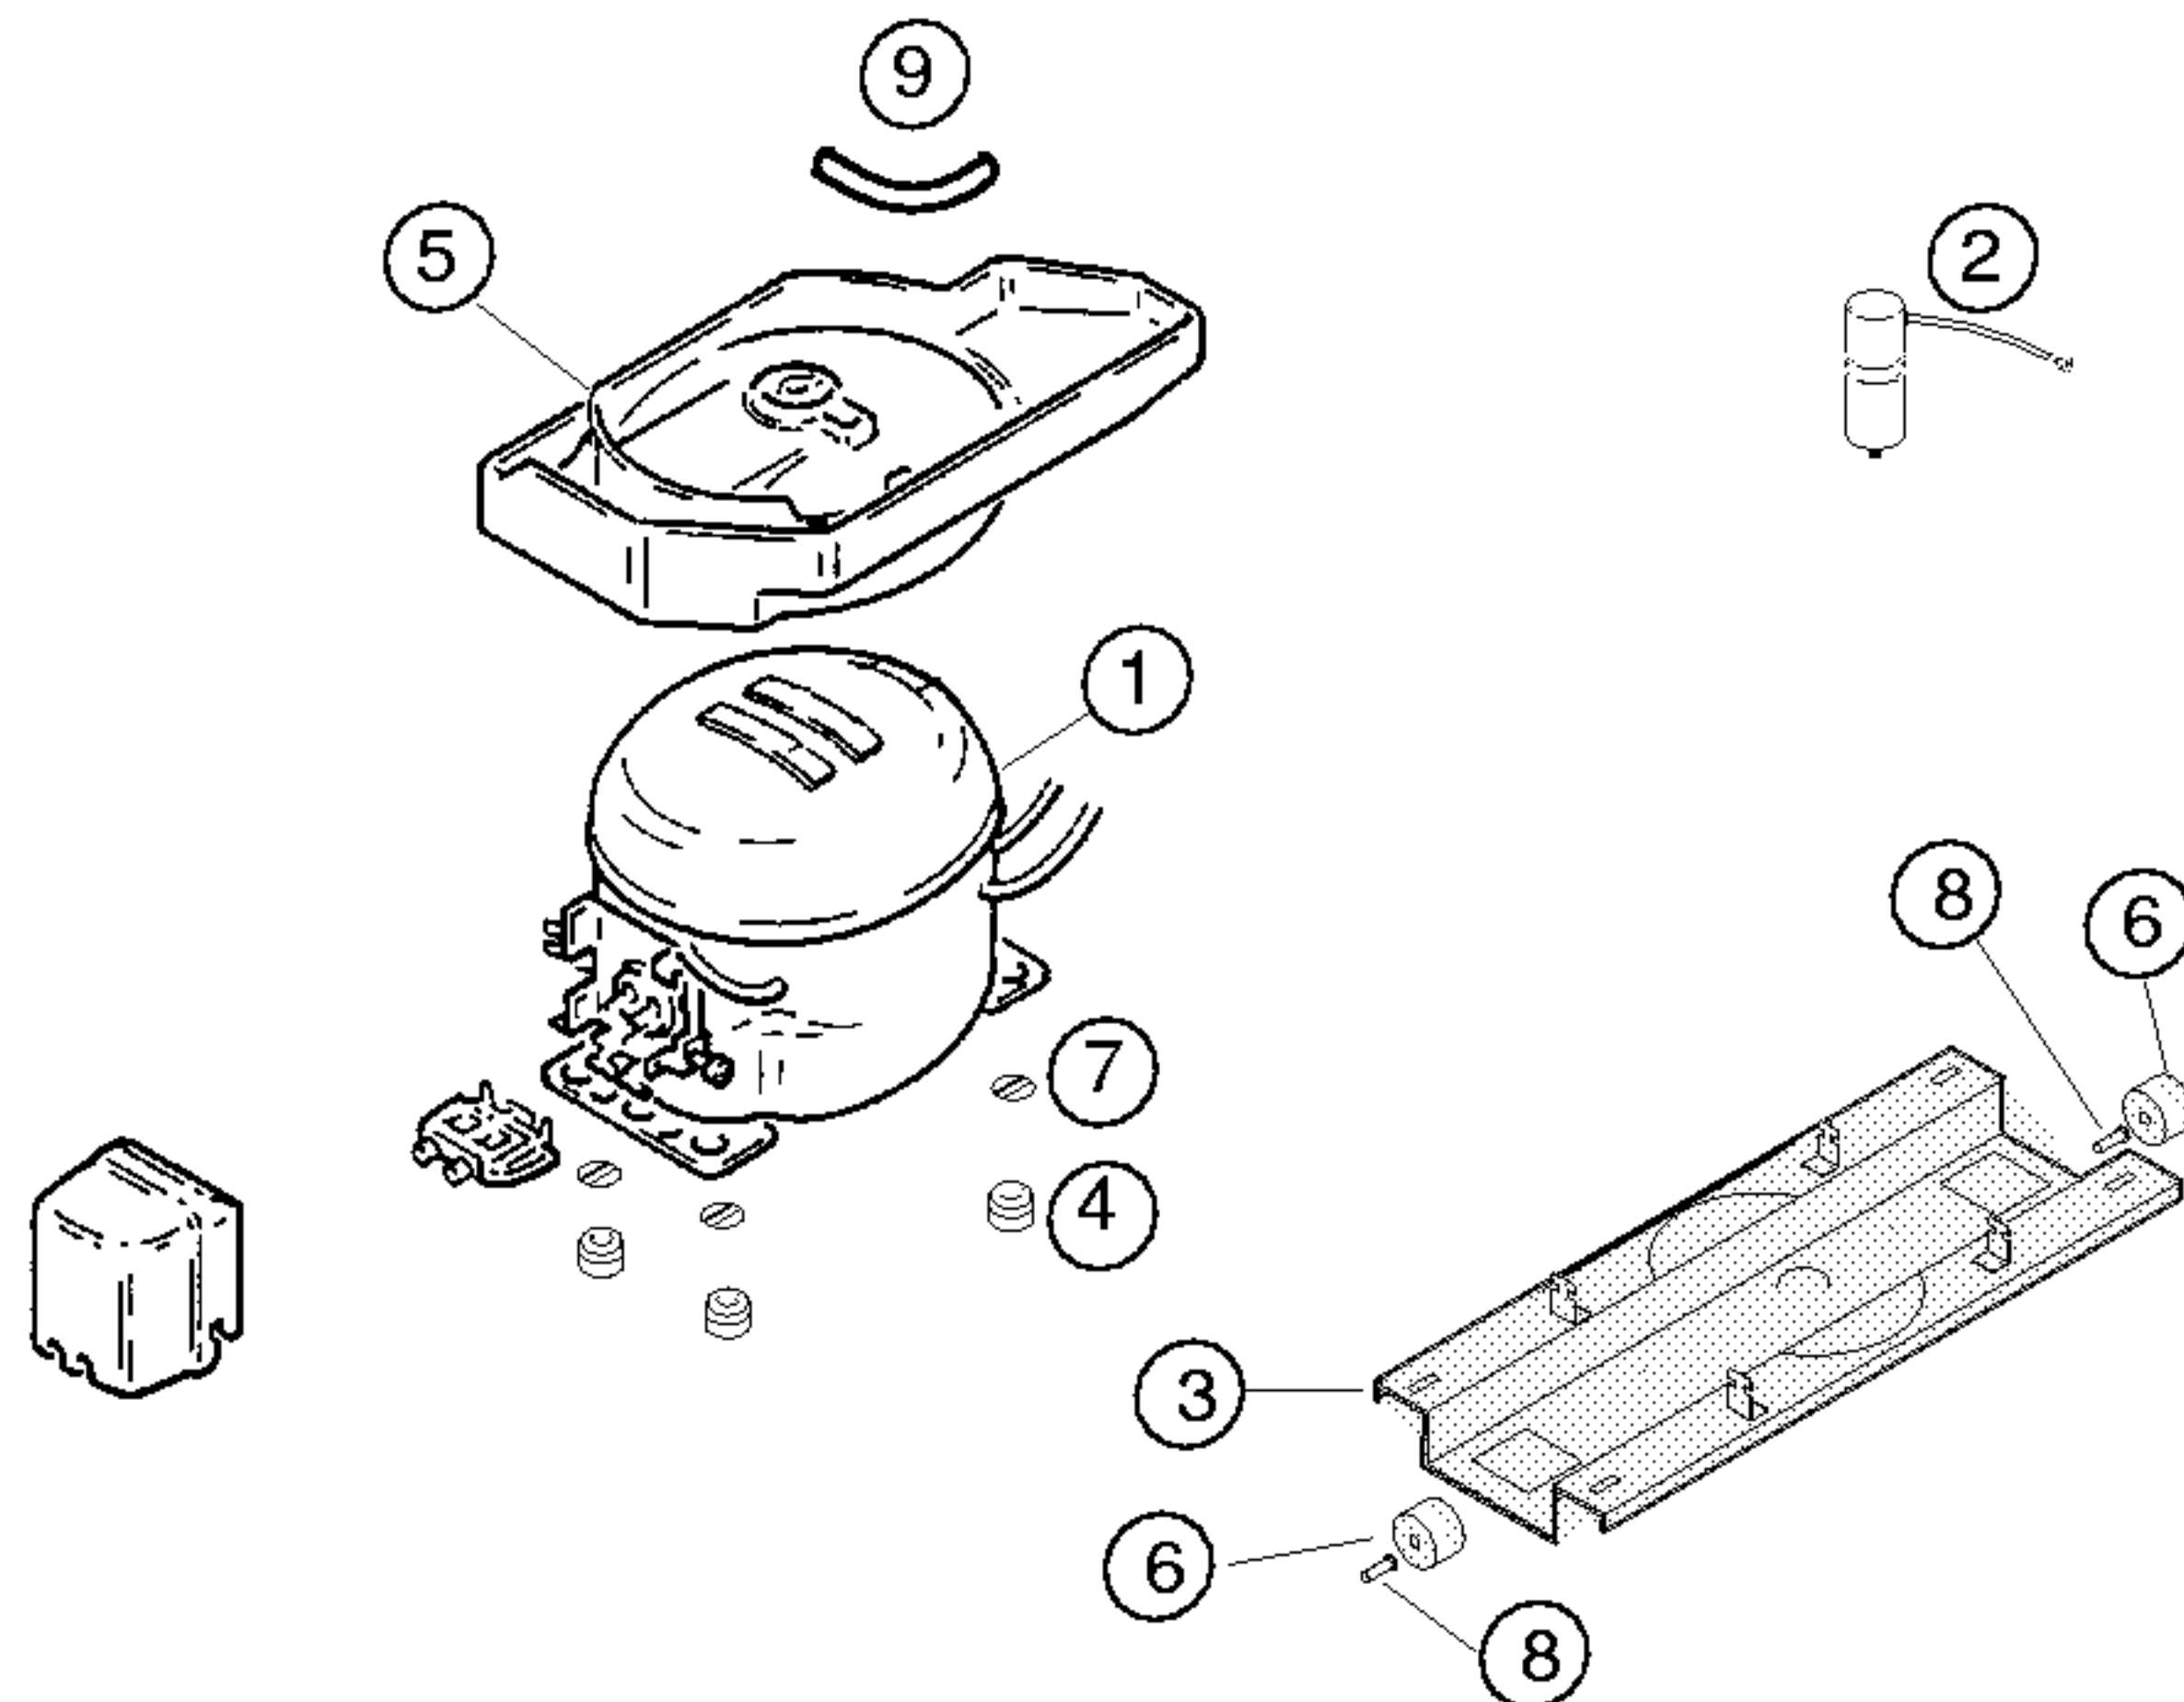

Pos.	Mats.		
	DGX125E		
1	14 3603		
2			
3	35 4583		
4	16 3427		
5	49 1245		
6	17 1318		
7	17 1519		
8	18 1014		
9	42 0376		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	Mats. DA125E		
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acma kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)	Elektronisch		
Füllmenge/Fill. quantily/ Dolum miktari	R600a	g	*
Anschlusswert/Comm. load/Giris gucu	W	200	
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc (Annehmbare min Wete in 220V)	Ω W	Verdampfer 200	Ablaufrinne 61 Klappe 4
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans	Ω	Verdampfer	
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	Ω V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz