



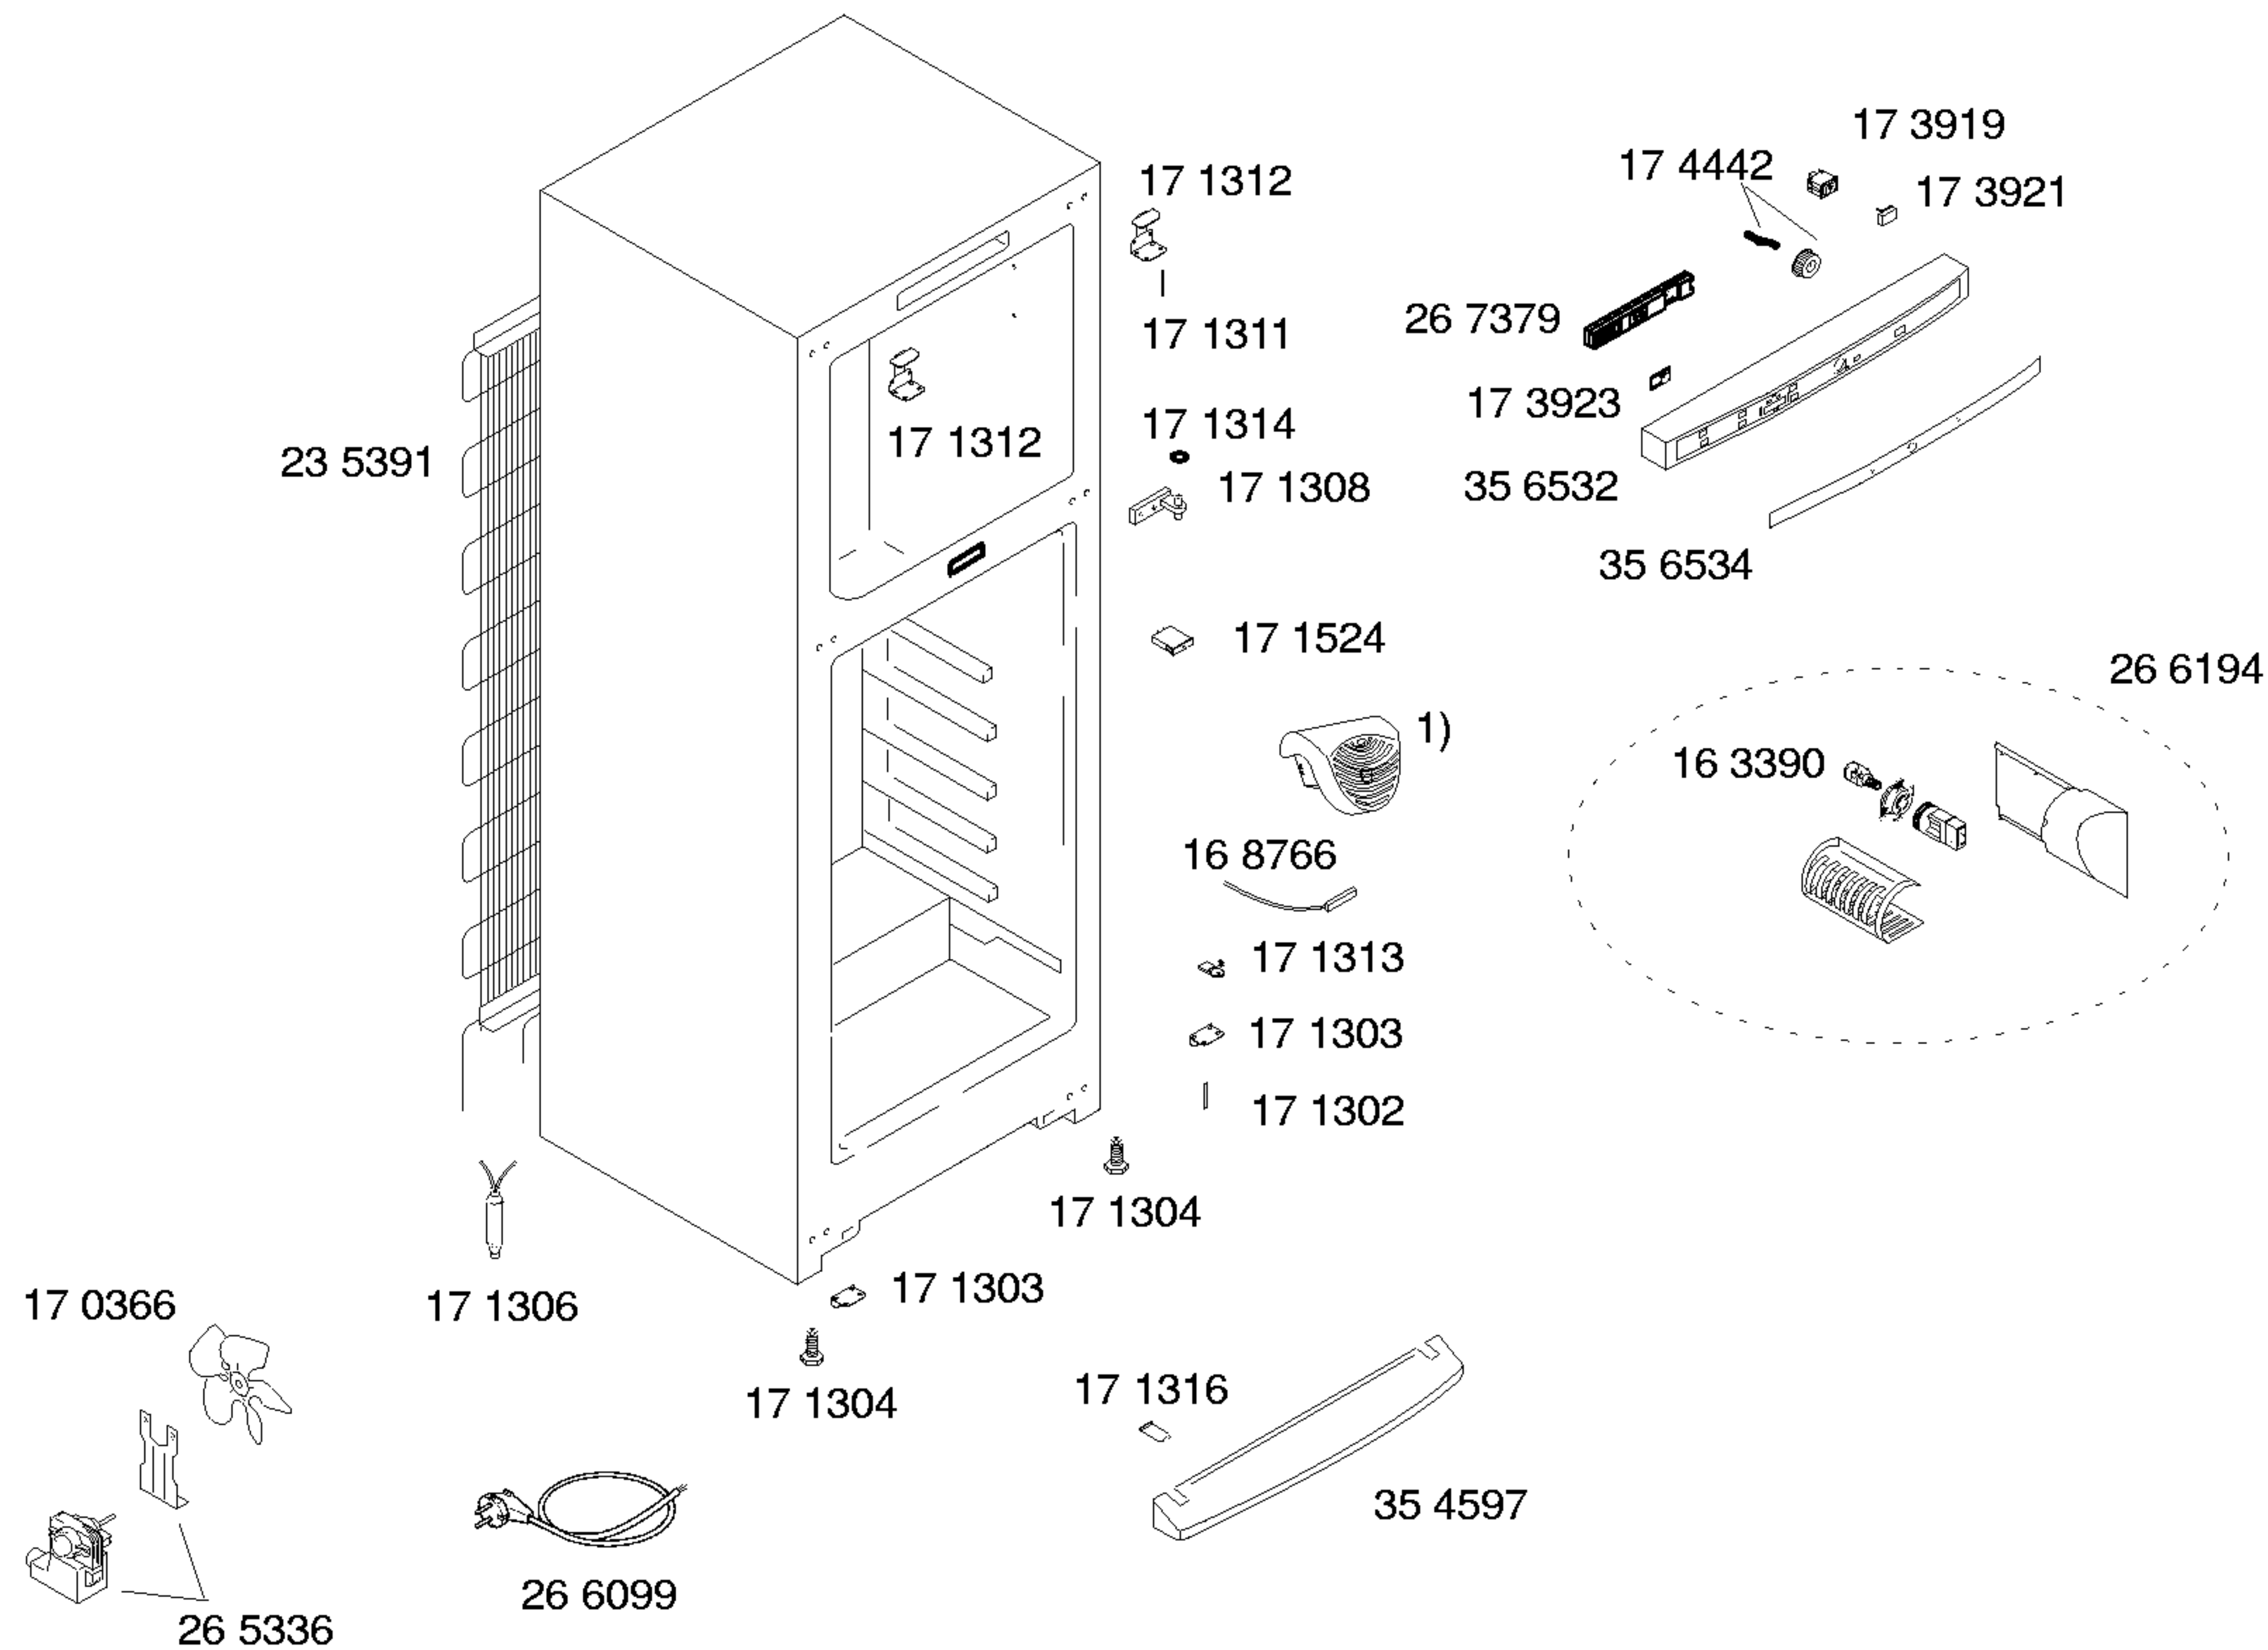


Gebrauchsanweisung
52 4298
(DE,GB,FR,NL,IT,
ES,PT,GR)

1) 26 7380
V01
26 8654
V02,V03,V04,V05
V06

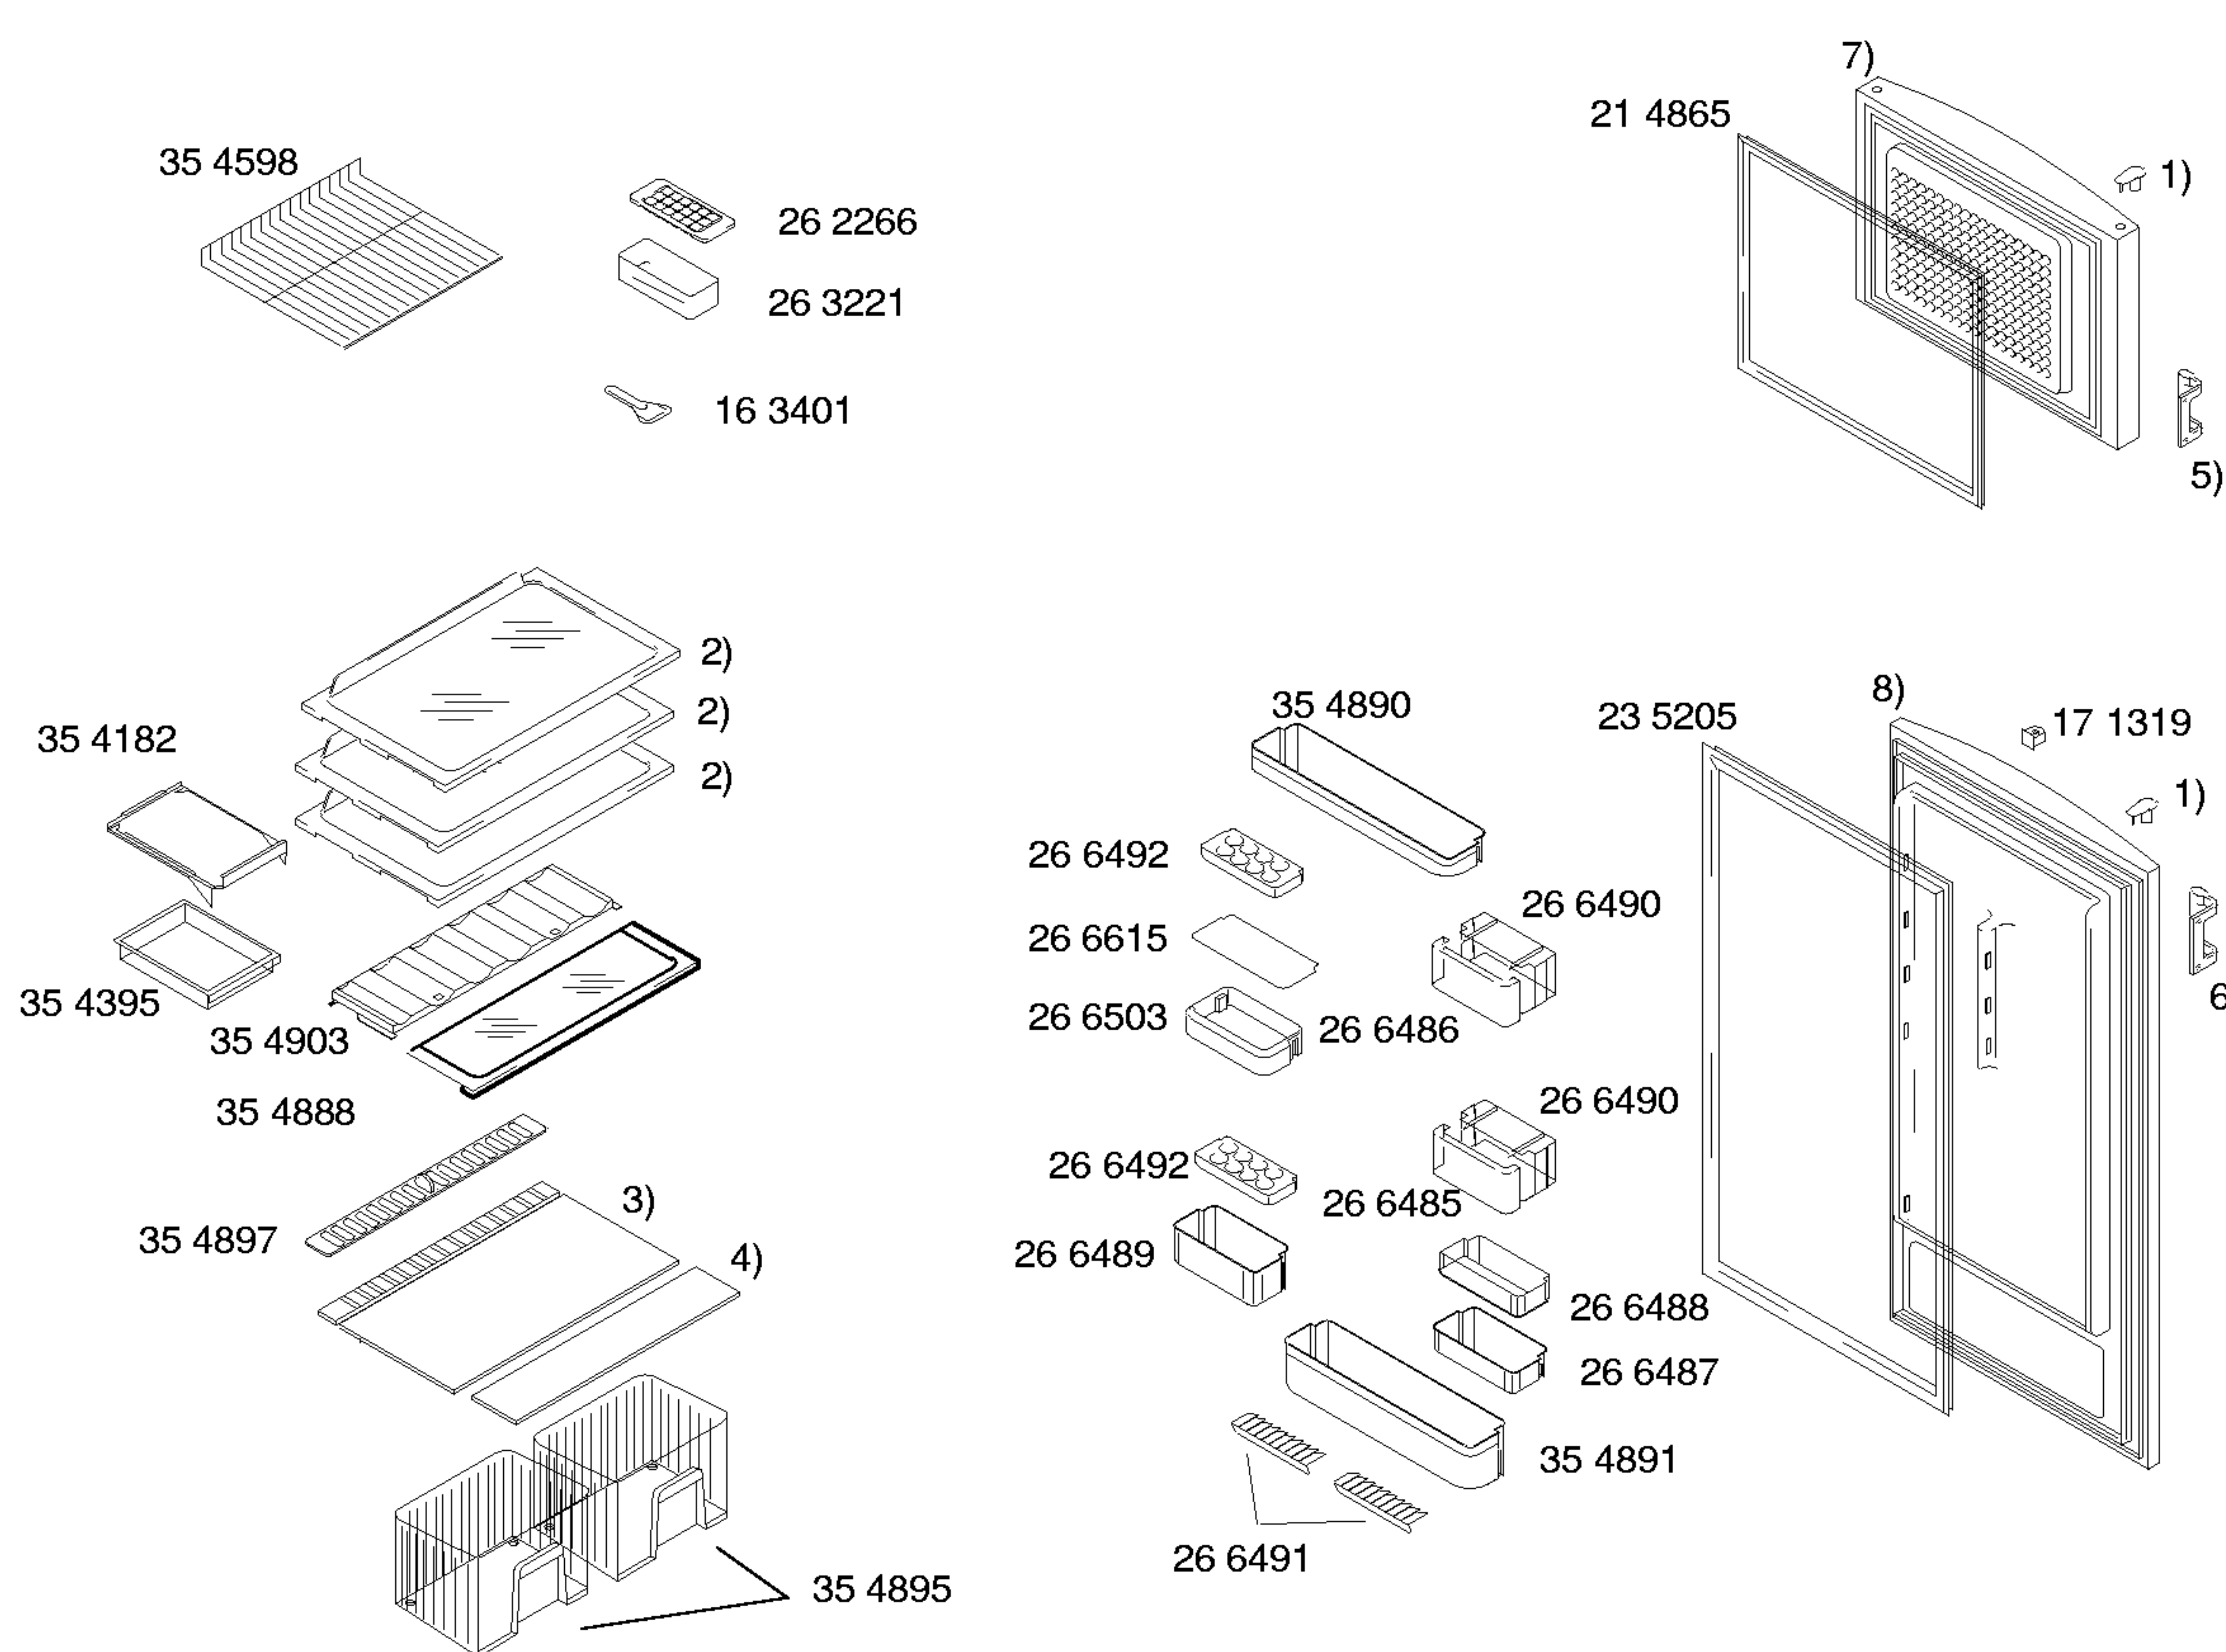

- 1) 17 1321
- 2) 35 4887
V01,V02,V03,V06
36 0393
V04,V05
- 3) 35 4894
V01
35 8821
V02,V03,V04,V05
V06
- 4) 35 4893
V01
35 8823
V02,V03,V04,V05
V06
- 5) 26 6075
V01,V02,V03
48 0520
V04,V05
48 0648
V06
- 6) 26 6076
V01,V02,V03
48 0519
V04,V05
48 0646
V06
- 7) 21 4897
V01,V02,V03
21 7060
V04,V05,V06
- 8) 23 5390
V01,V02,V03
23 6396
V04,V05,V06

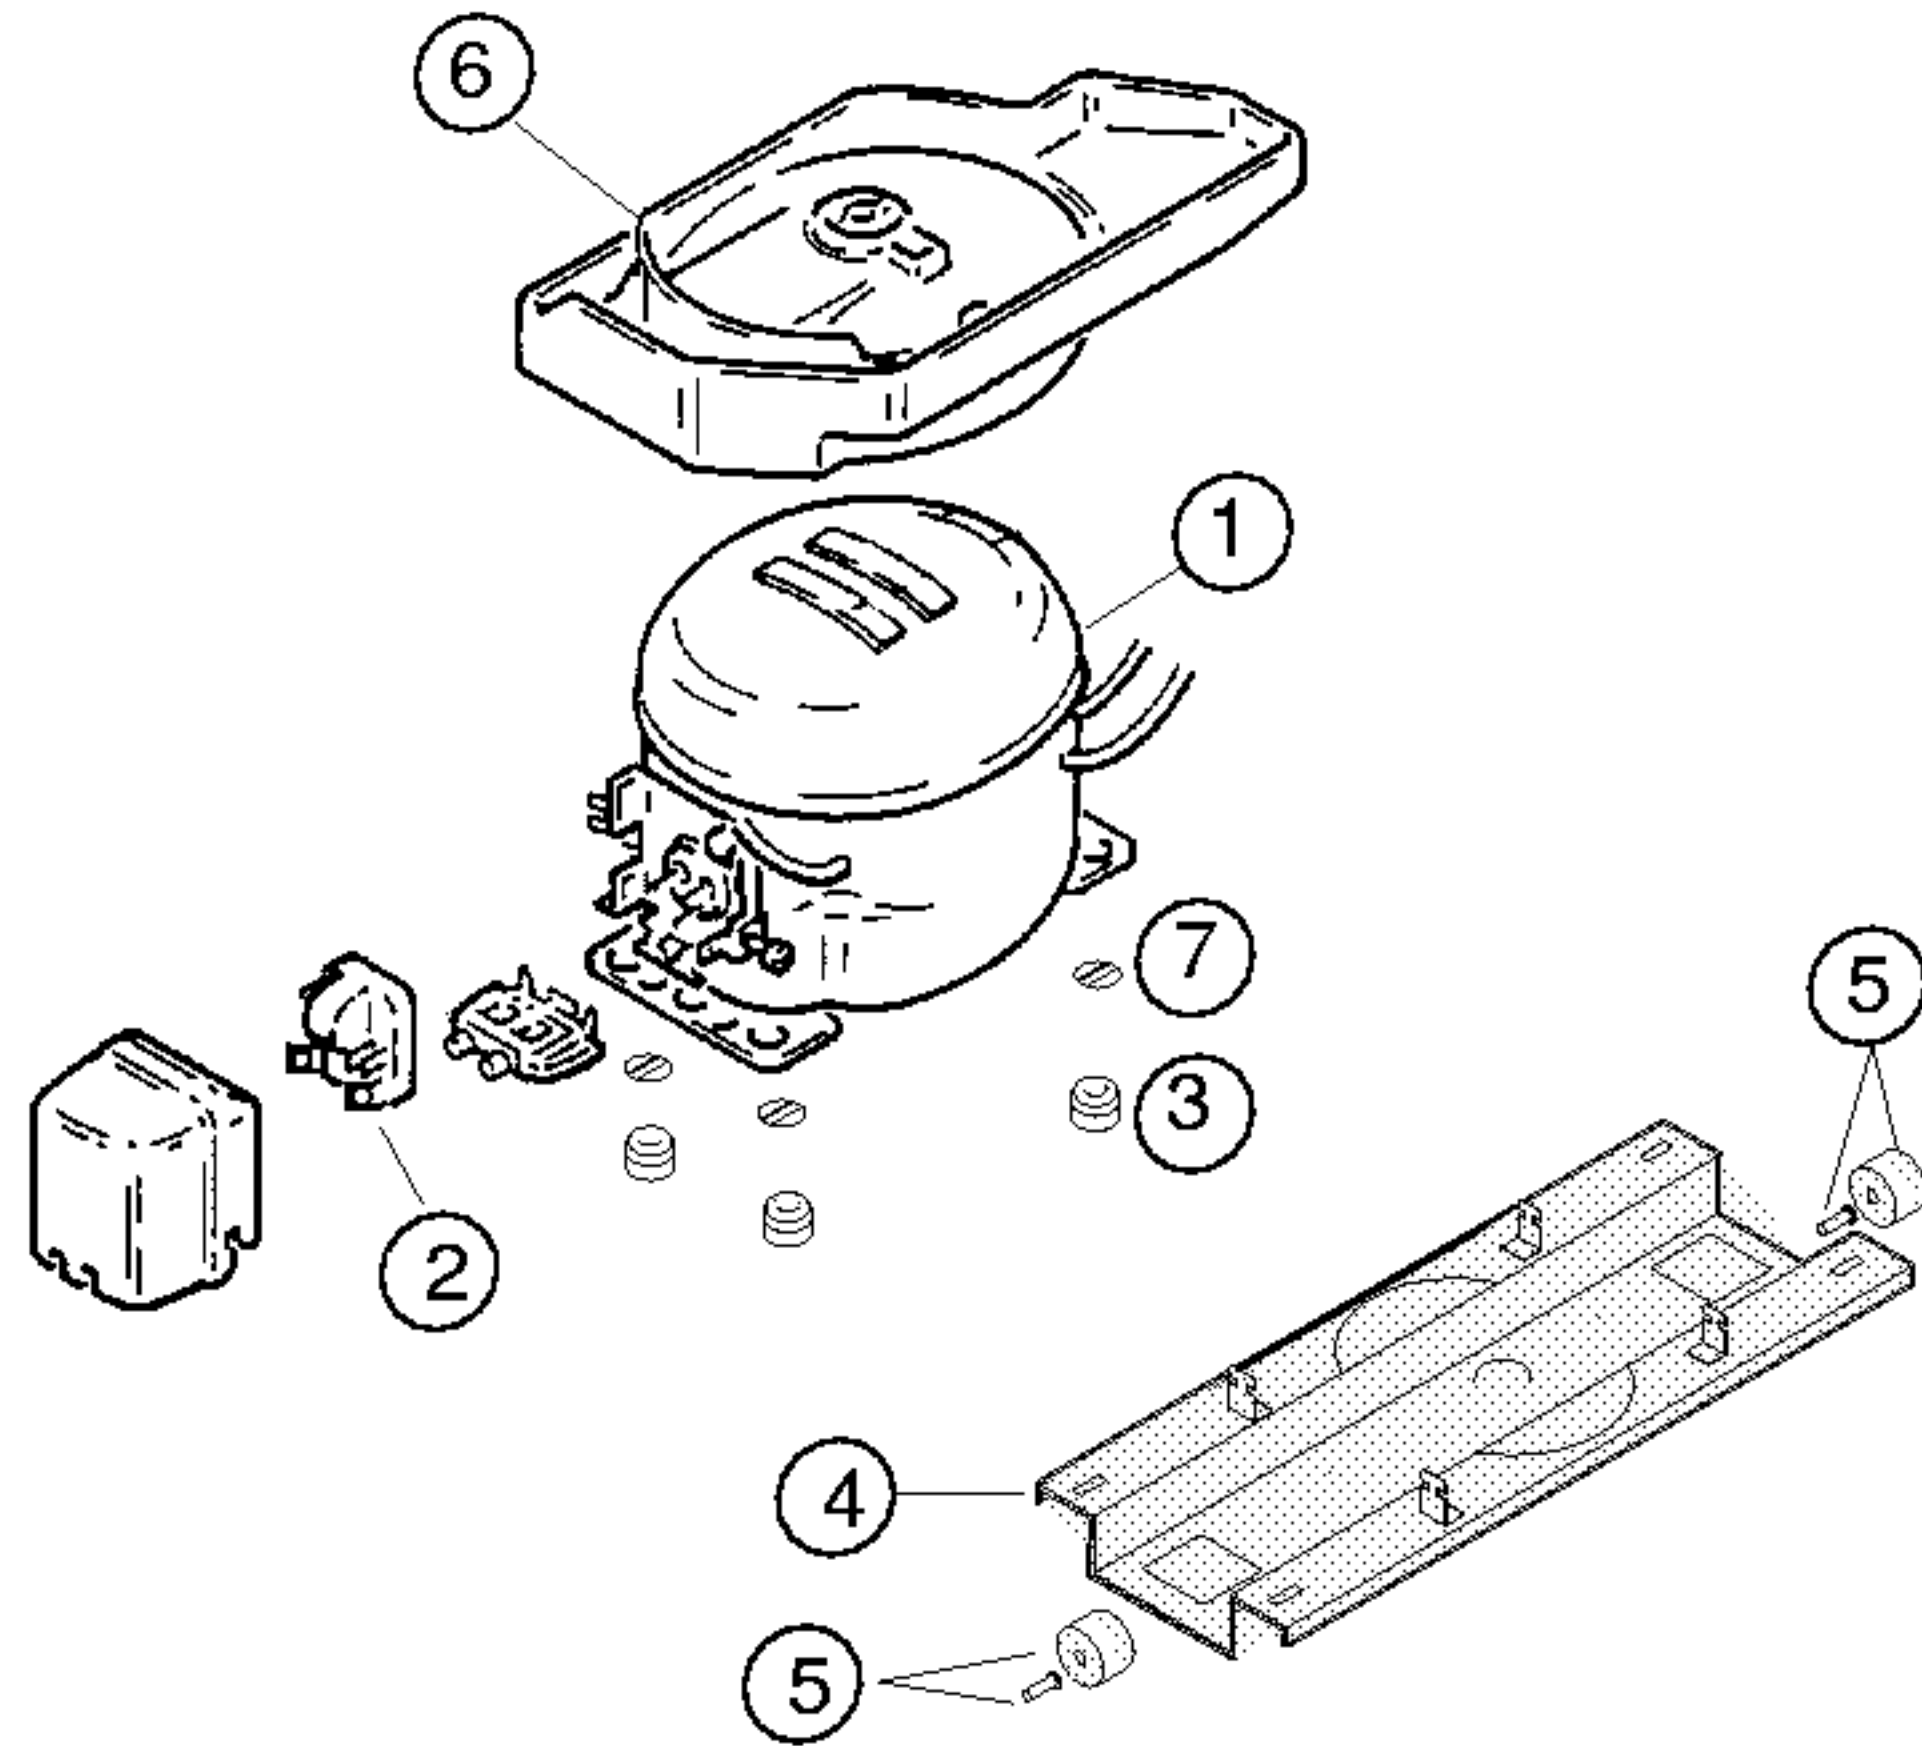

Pos.	Danfoss		
	NLE15K		
1	14 1926		
2	16 5570		
3	16 3427		
4	35 4583		
5	17 1318		
6	26 5327		
7	17 1519		
8			
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör	Danfoss		
Typ/Type/Tip	NLE15K		
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	A	6.6	
Widerstand/Resistance/Rezistans Ha/Hi/aux.	Ohm	10.7	
		13	
Temp.Reyler/Thermostat/Termostat	ELECTRONIC		
Typ/Type/Tip			
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Acta kapama degerleri	..ein/acma °C		
Valeurs de commutation/Termostat degeri	..aus"/kapama		
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantity/ Dolum miktarı	R600	g	*
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans	Ohm		
Widerstand/Resistance/Direnc	W		
Leistung/Power/Guc			
Ventilador/Blower/Vantilatör	Ohm		
Widerstand/Resistance/Rezistans			
Magnetventil/Magnetic valve/Manyetik valf	Ohm		
Widerstand/Resistance/Rezistans	V		
Spannung/Voltage/Gerilim			
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz