


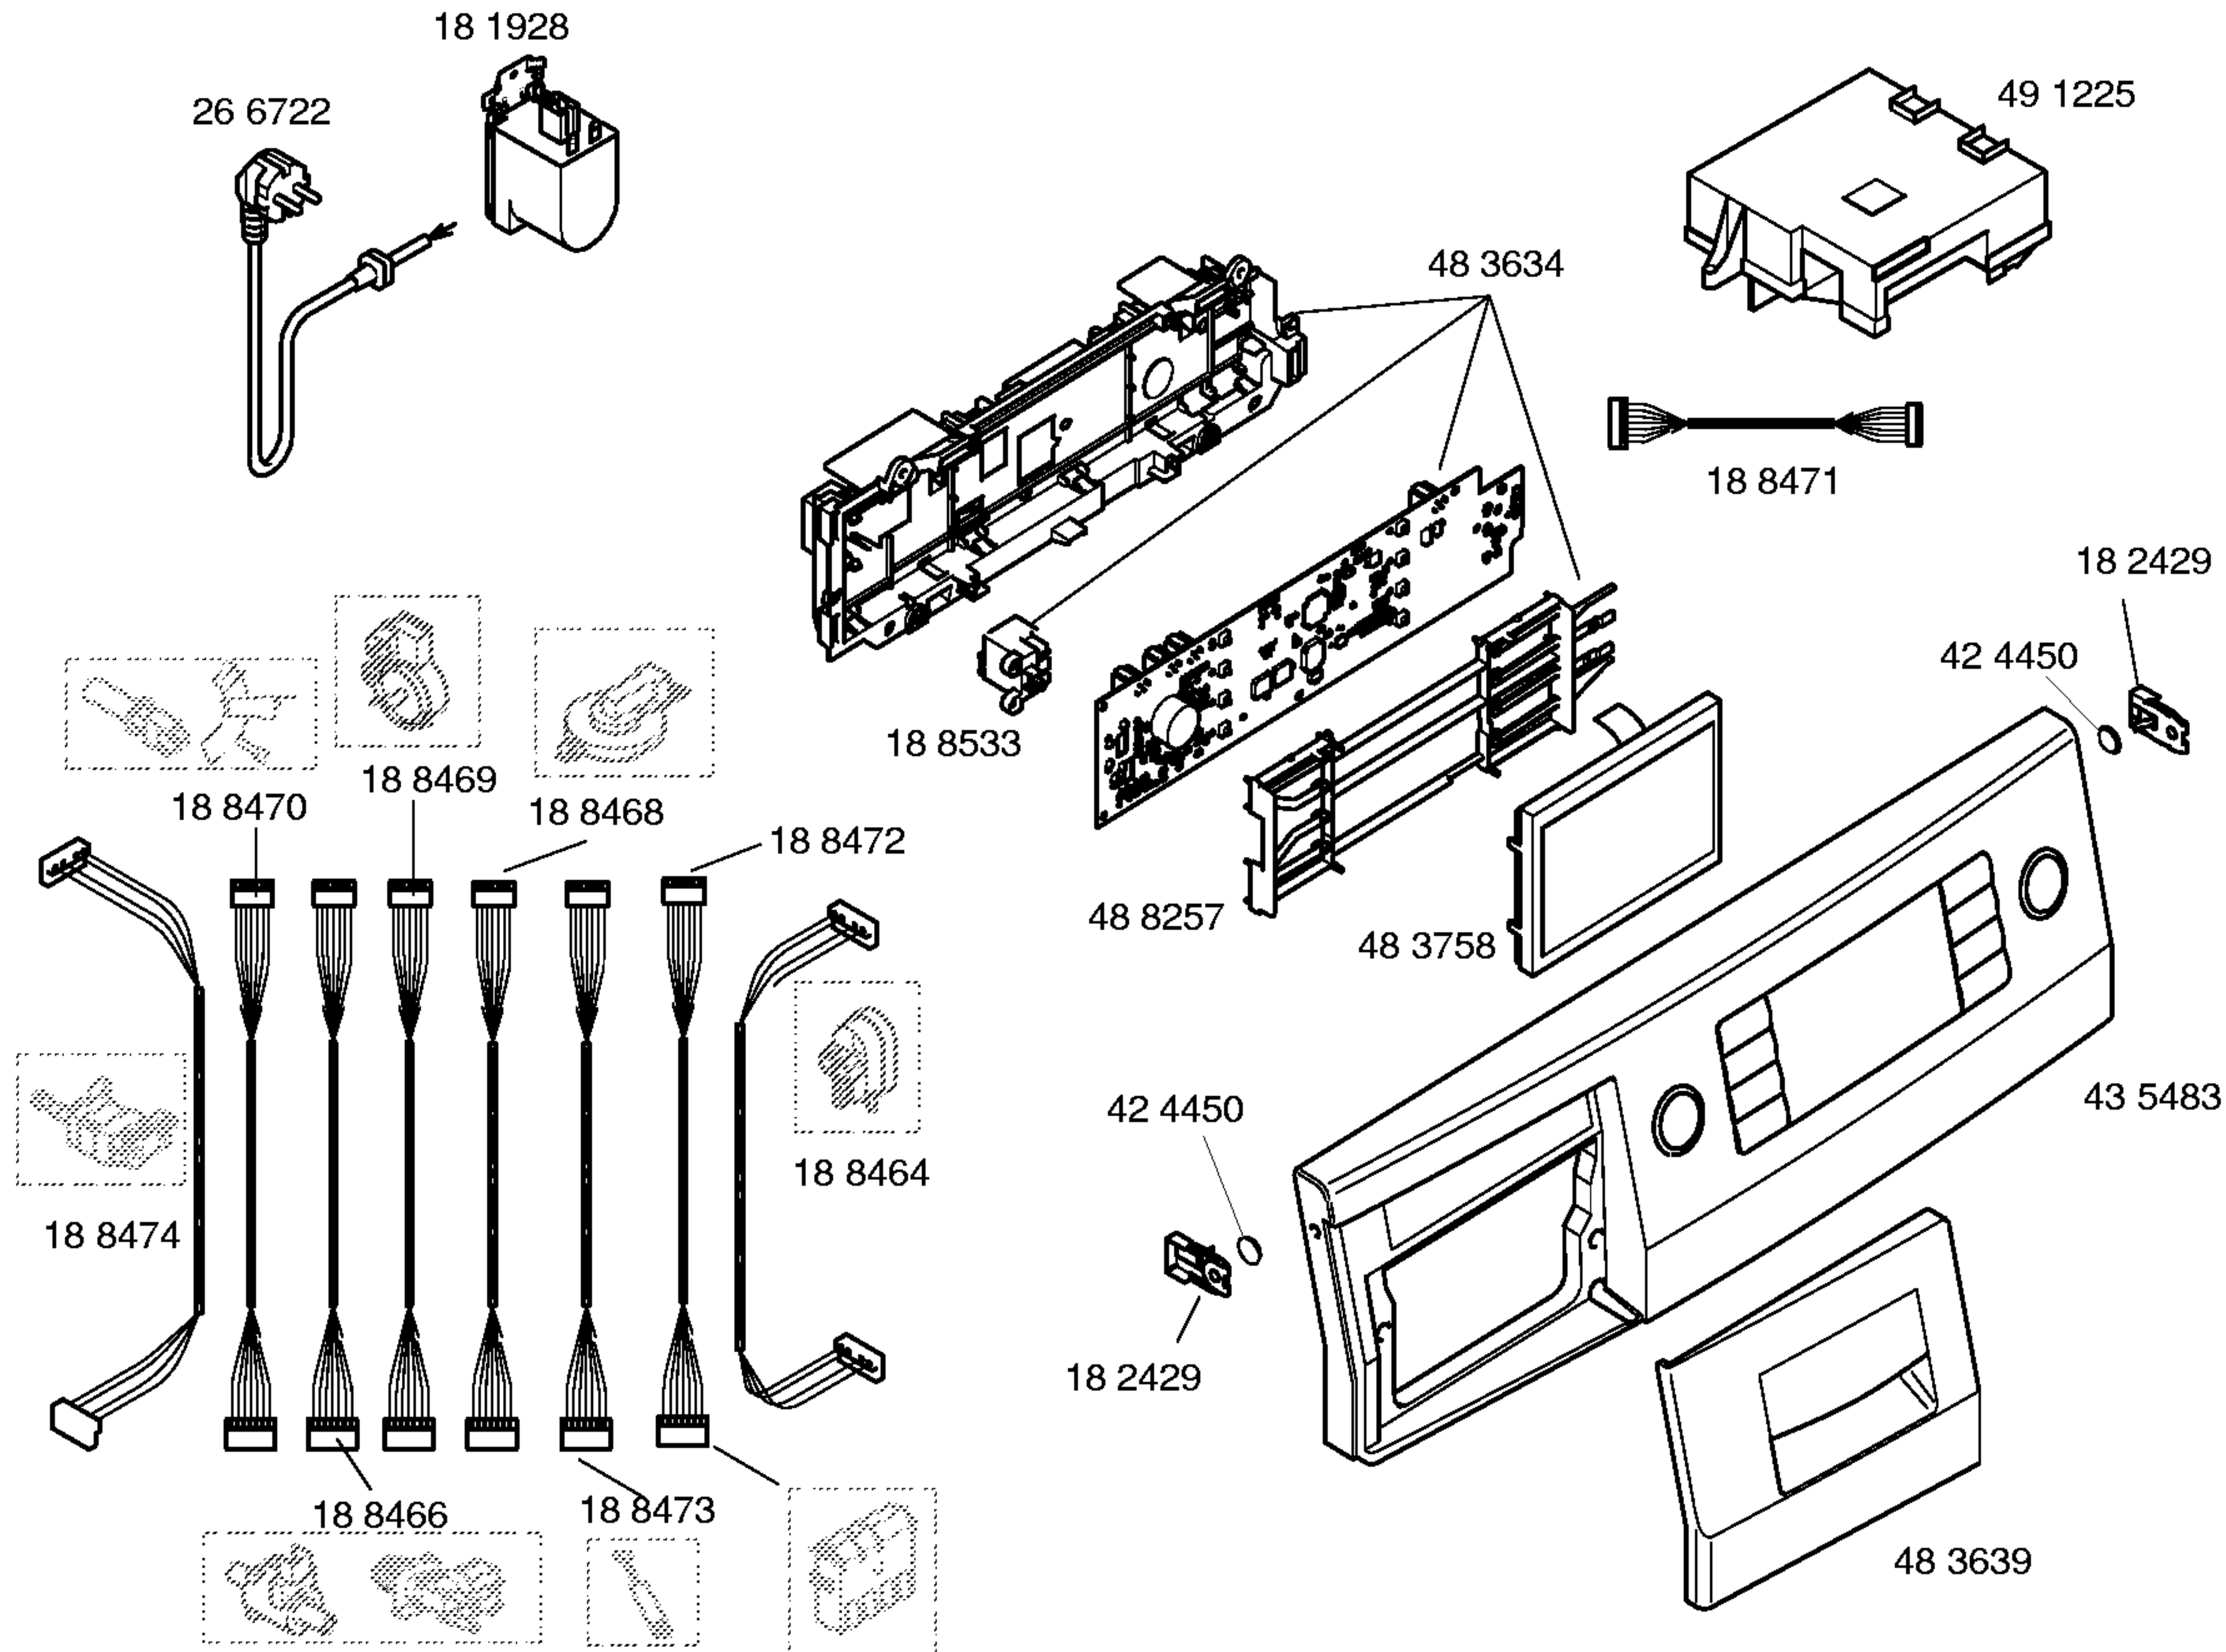


Gebrauchs-/
Aufstellanweisung


58 7206	58 7254
(de)	(da)
58 7226	58 7232
(en)	(es)
58 7255	58 7233
(fi)	(fr)
58 7207	58 7256
(it)	(nl)
58 7257	58 7259
(no)	(pt)
58 7258	58 7260
(sv)	(el)
58 7261	58 7262
(ru)	(tr)
58 7263	58 7264
(pl)	(cs)
58 7265	58 7266
(ro)	(hu)


Programmtabelle

58 7208 (de)	58 7234 (da)
58 7227 (en)	58 7235 (es)
58 7236 (fi)	58 7237 (fr)
58 7209 (it)	58 7238 (nl)
58 7239 (no)	58 7240 (pt)
58 7241 (sv)	58 7242 (el)
58 7243 (ru)	58 7244 (tr)
58 7245 (pl)	58 7267 (cs)
58 7268 (ro)	58 7269 (hu)

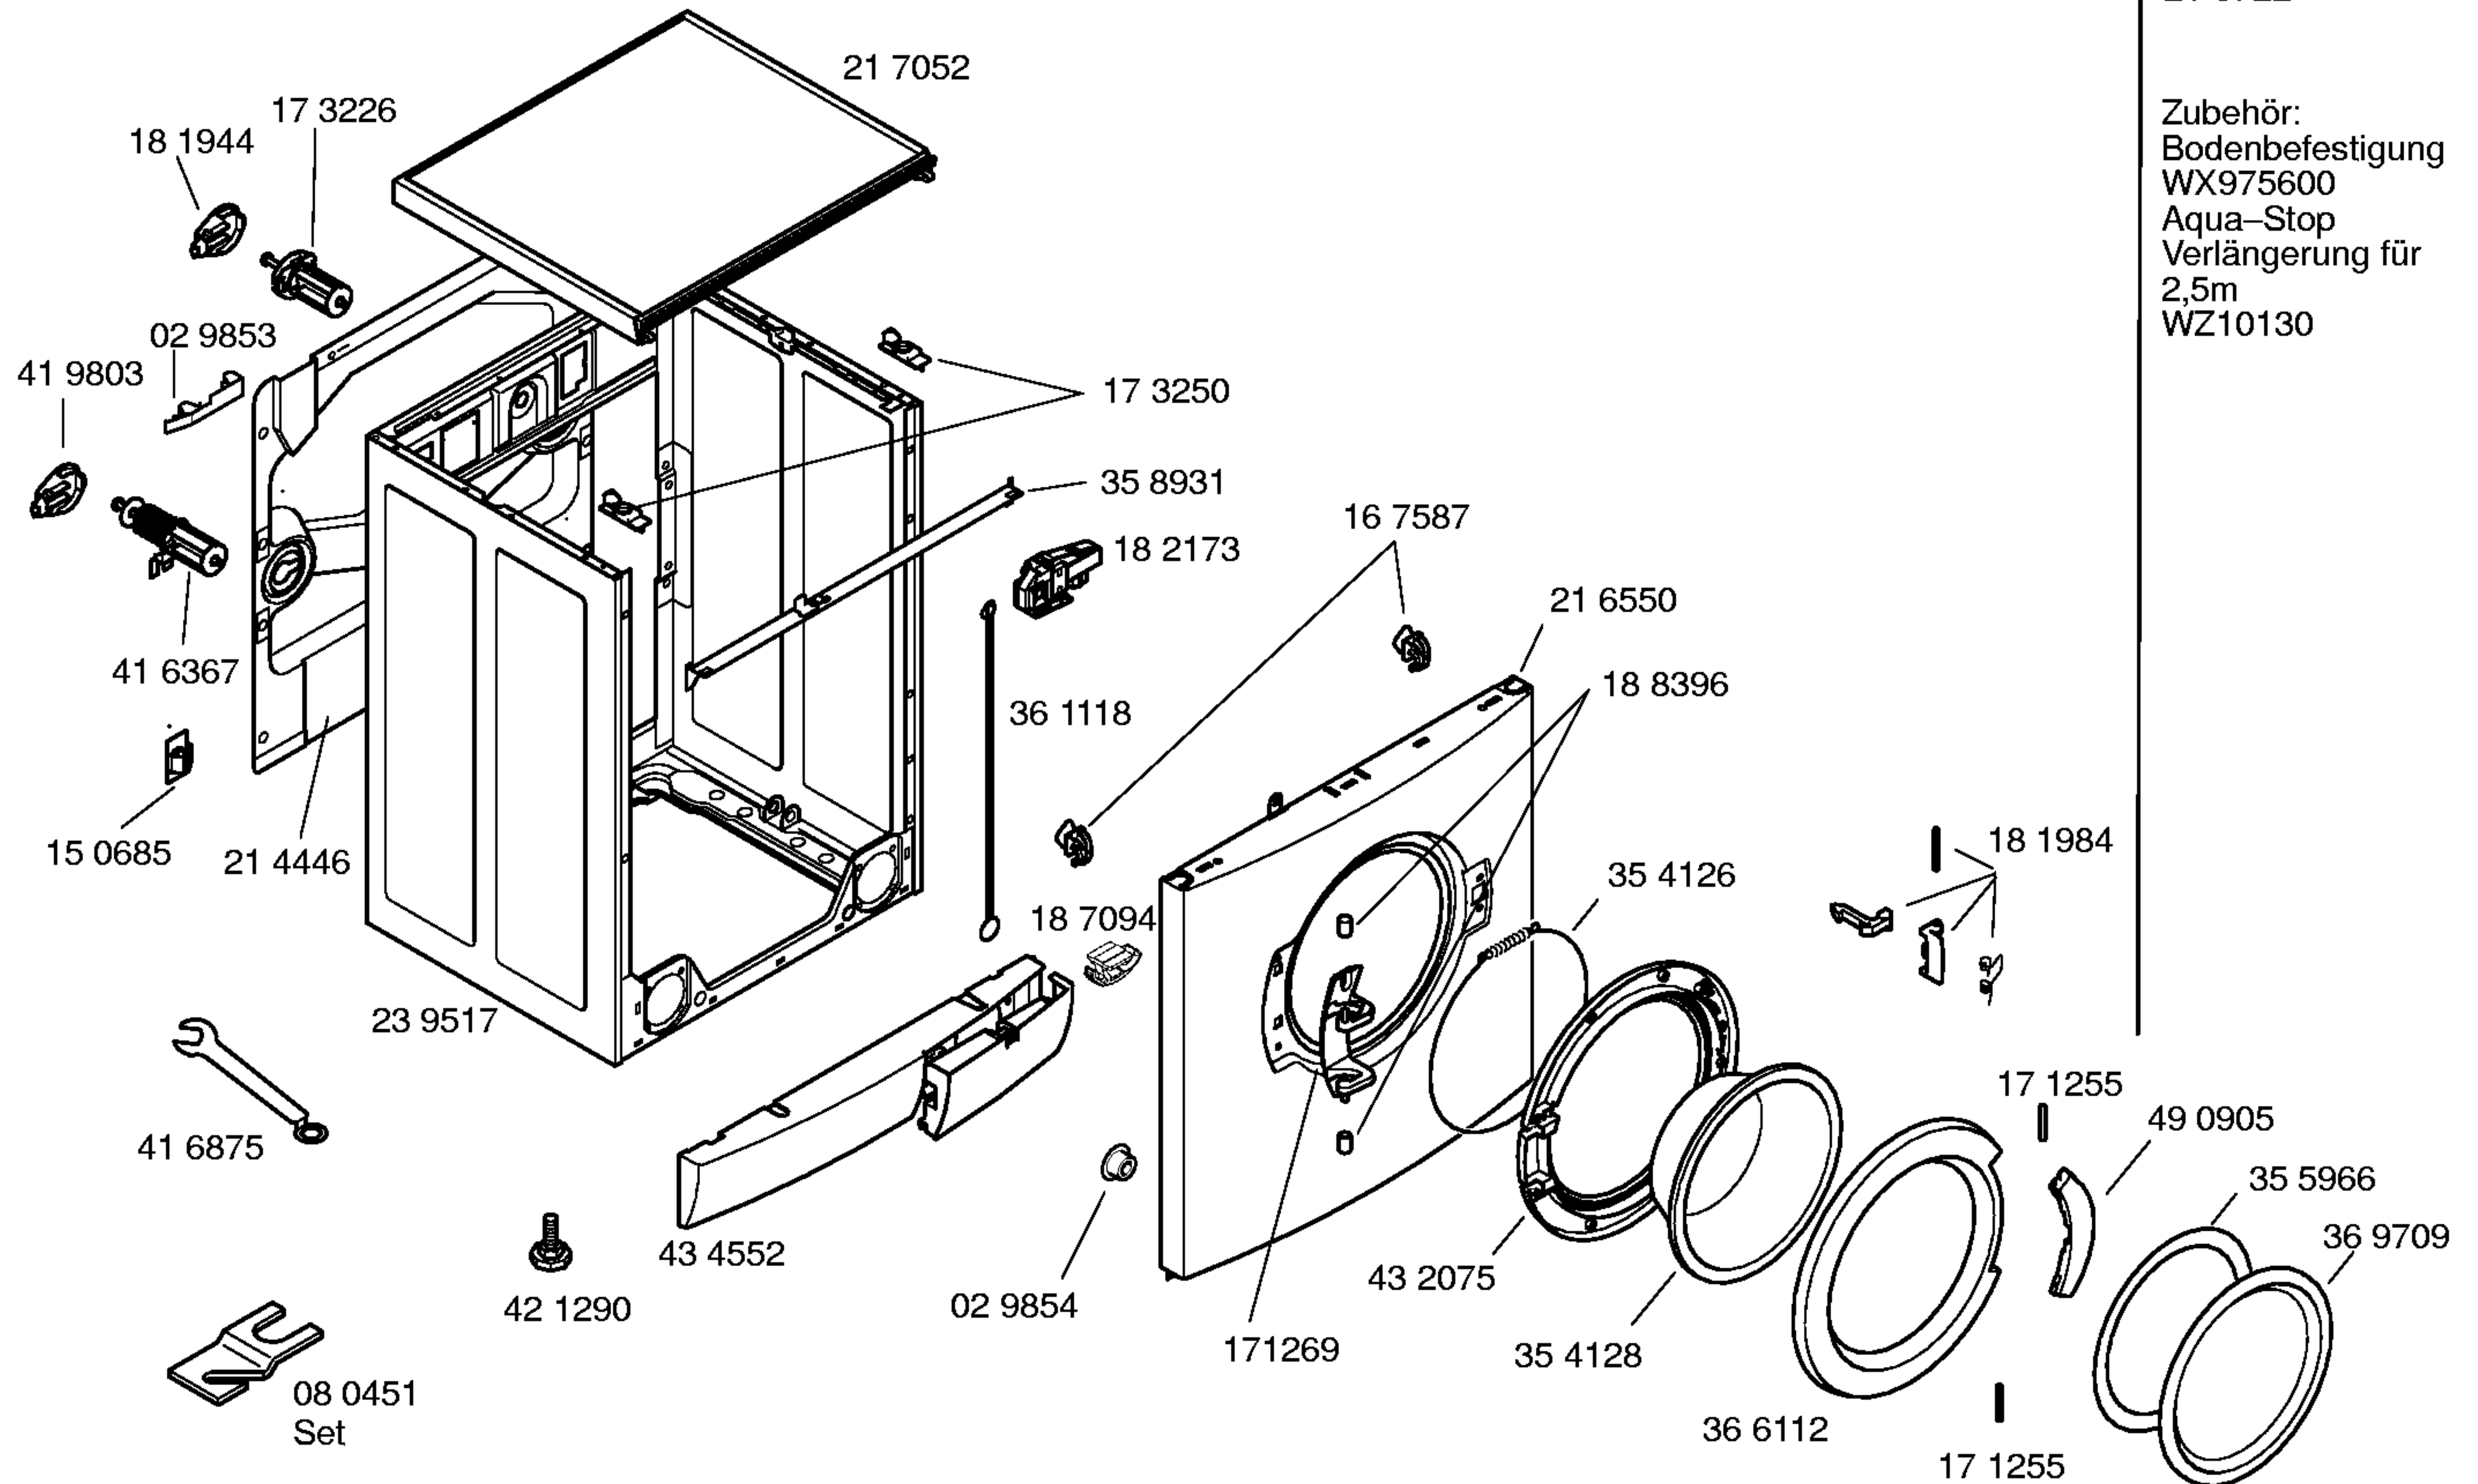

- 1) 41 6876 mitbestellen
41 6886 mitbestellen
- 2) 41 6876 mitbestellen

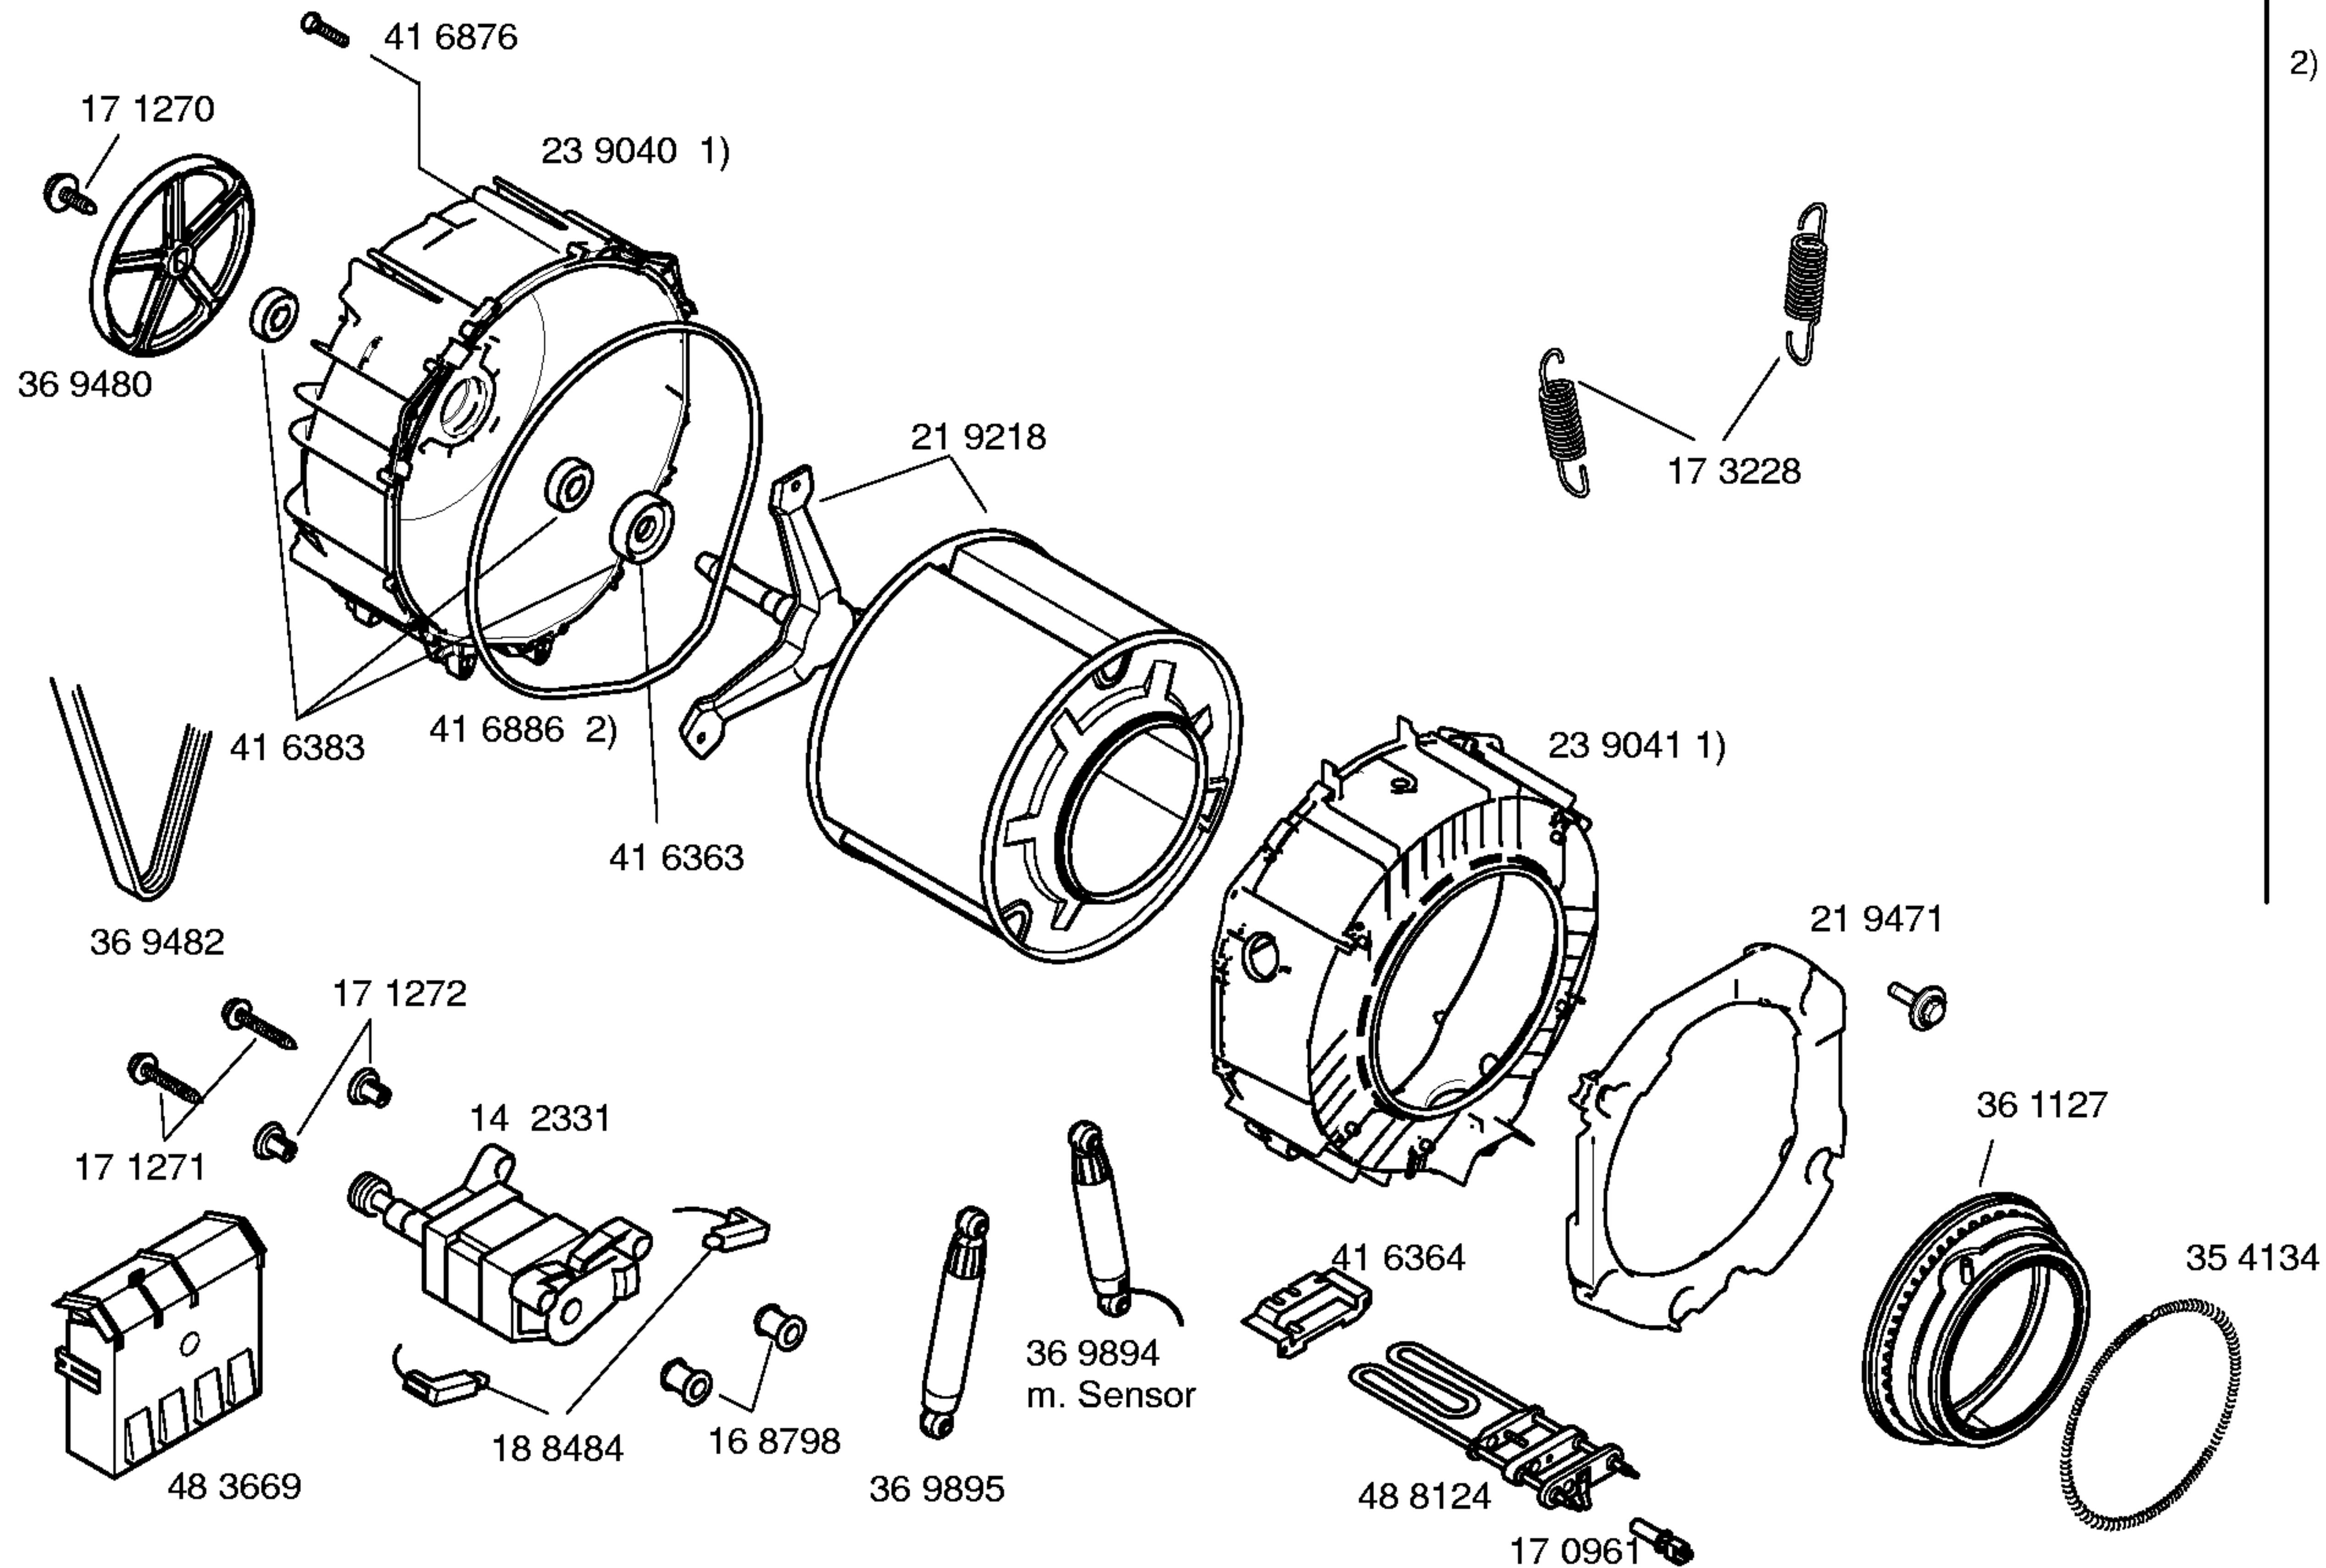

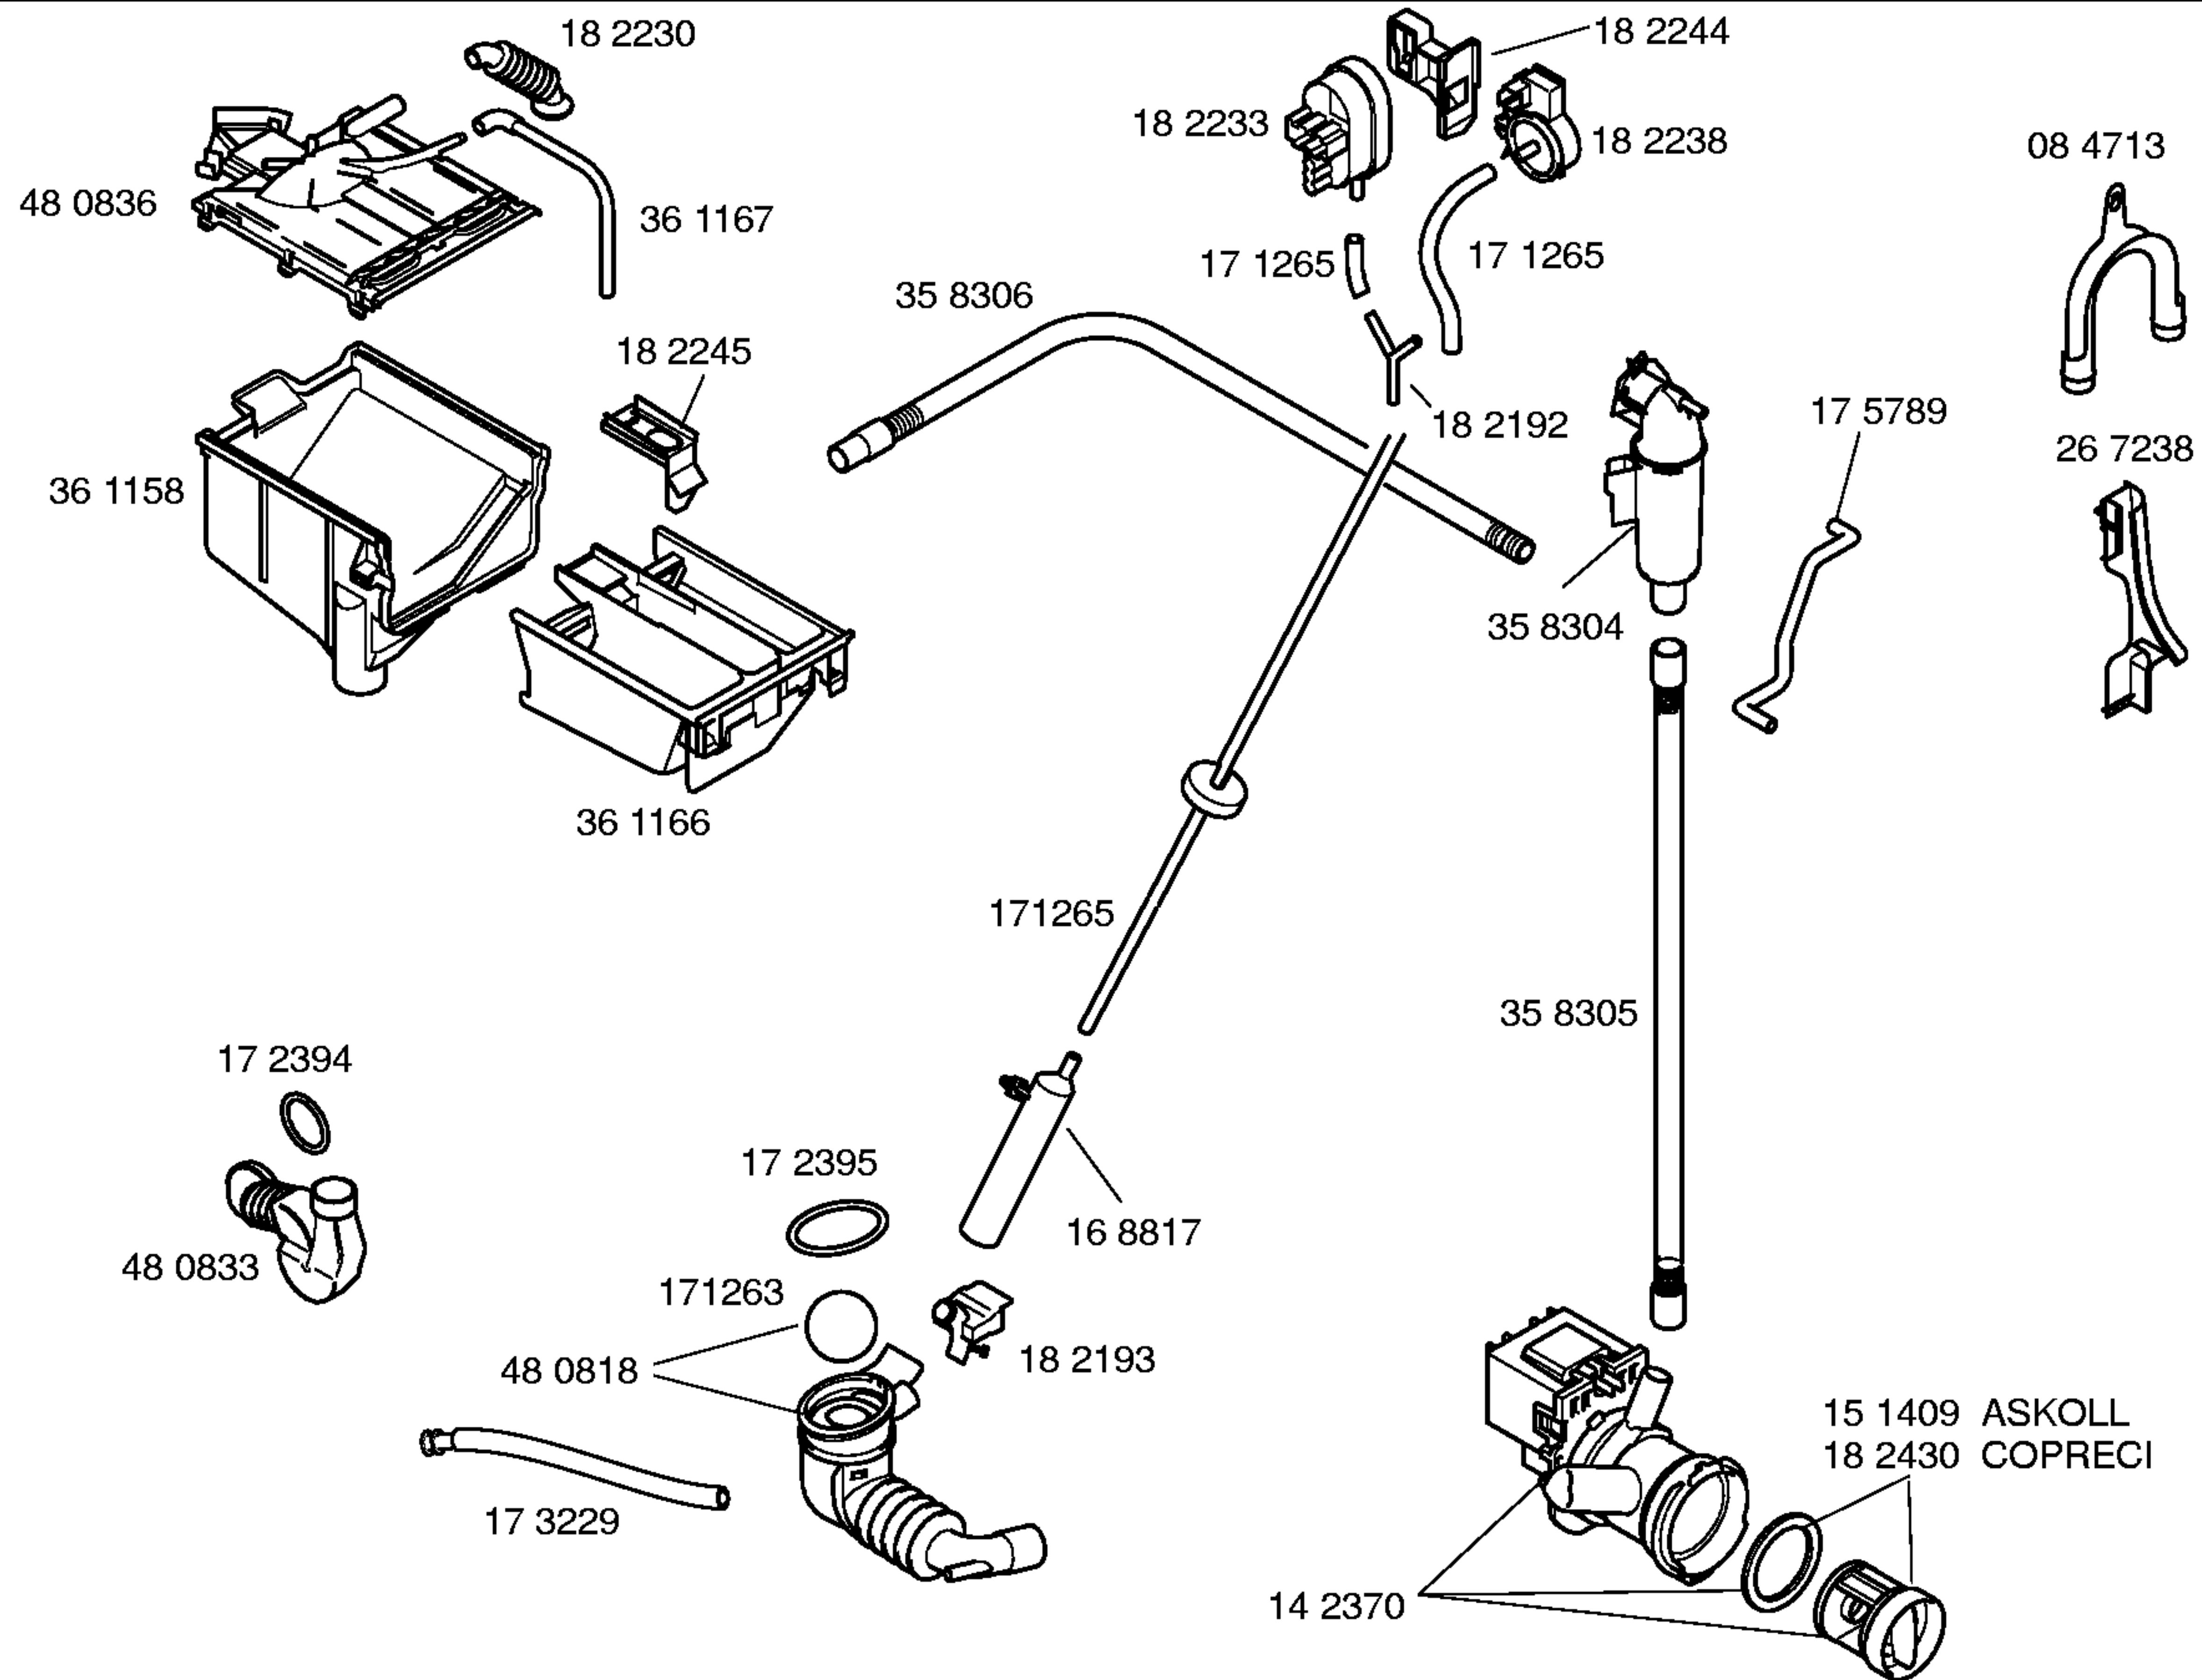

01 9760

02 2514
1/2" – 3/4"

