

Gebrauchsanweisungen:

51 3964

(D)

51 3549

(D,I,S,N,SF)

51 3551

(NL,F,E,GB)

Programmtabellen:

51 3552

(D)

51 3967

(D,I,S,N,SF)

51 3555

(NL,F,E,GB)

Aufstellanweisungen:

51 3965

(D)


51 3968


(D,I,S,N,SF)


51 3969

(NL,F,E,GB)

- 1) 08 8174
(D,I)
08 8716
(GB)
08 8717
(N,SF)
08 8718
(S,DK)
08 8719
(NL,F)
08 8720
(YU,TR)
08 8721
(E,GR)

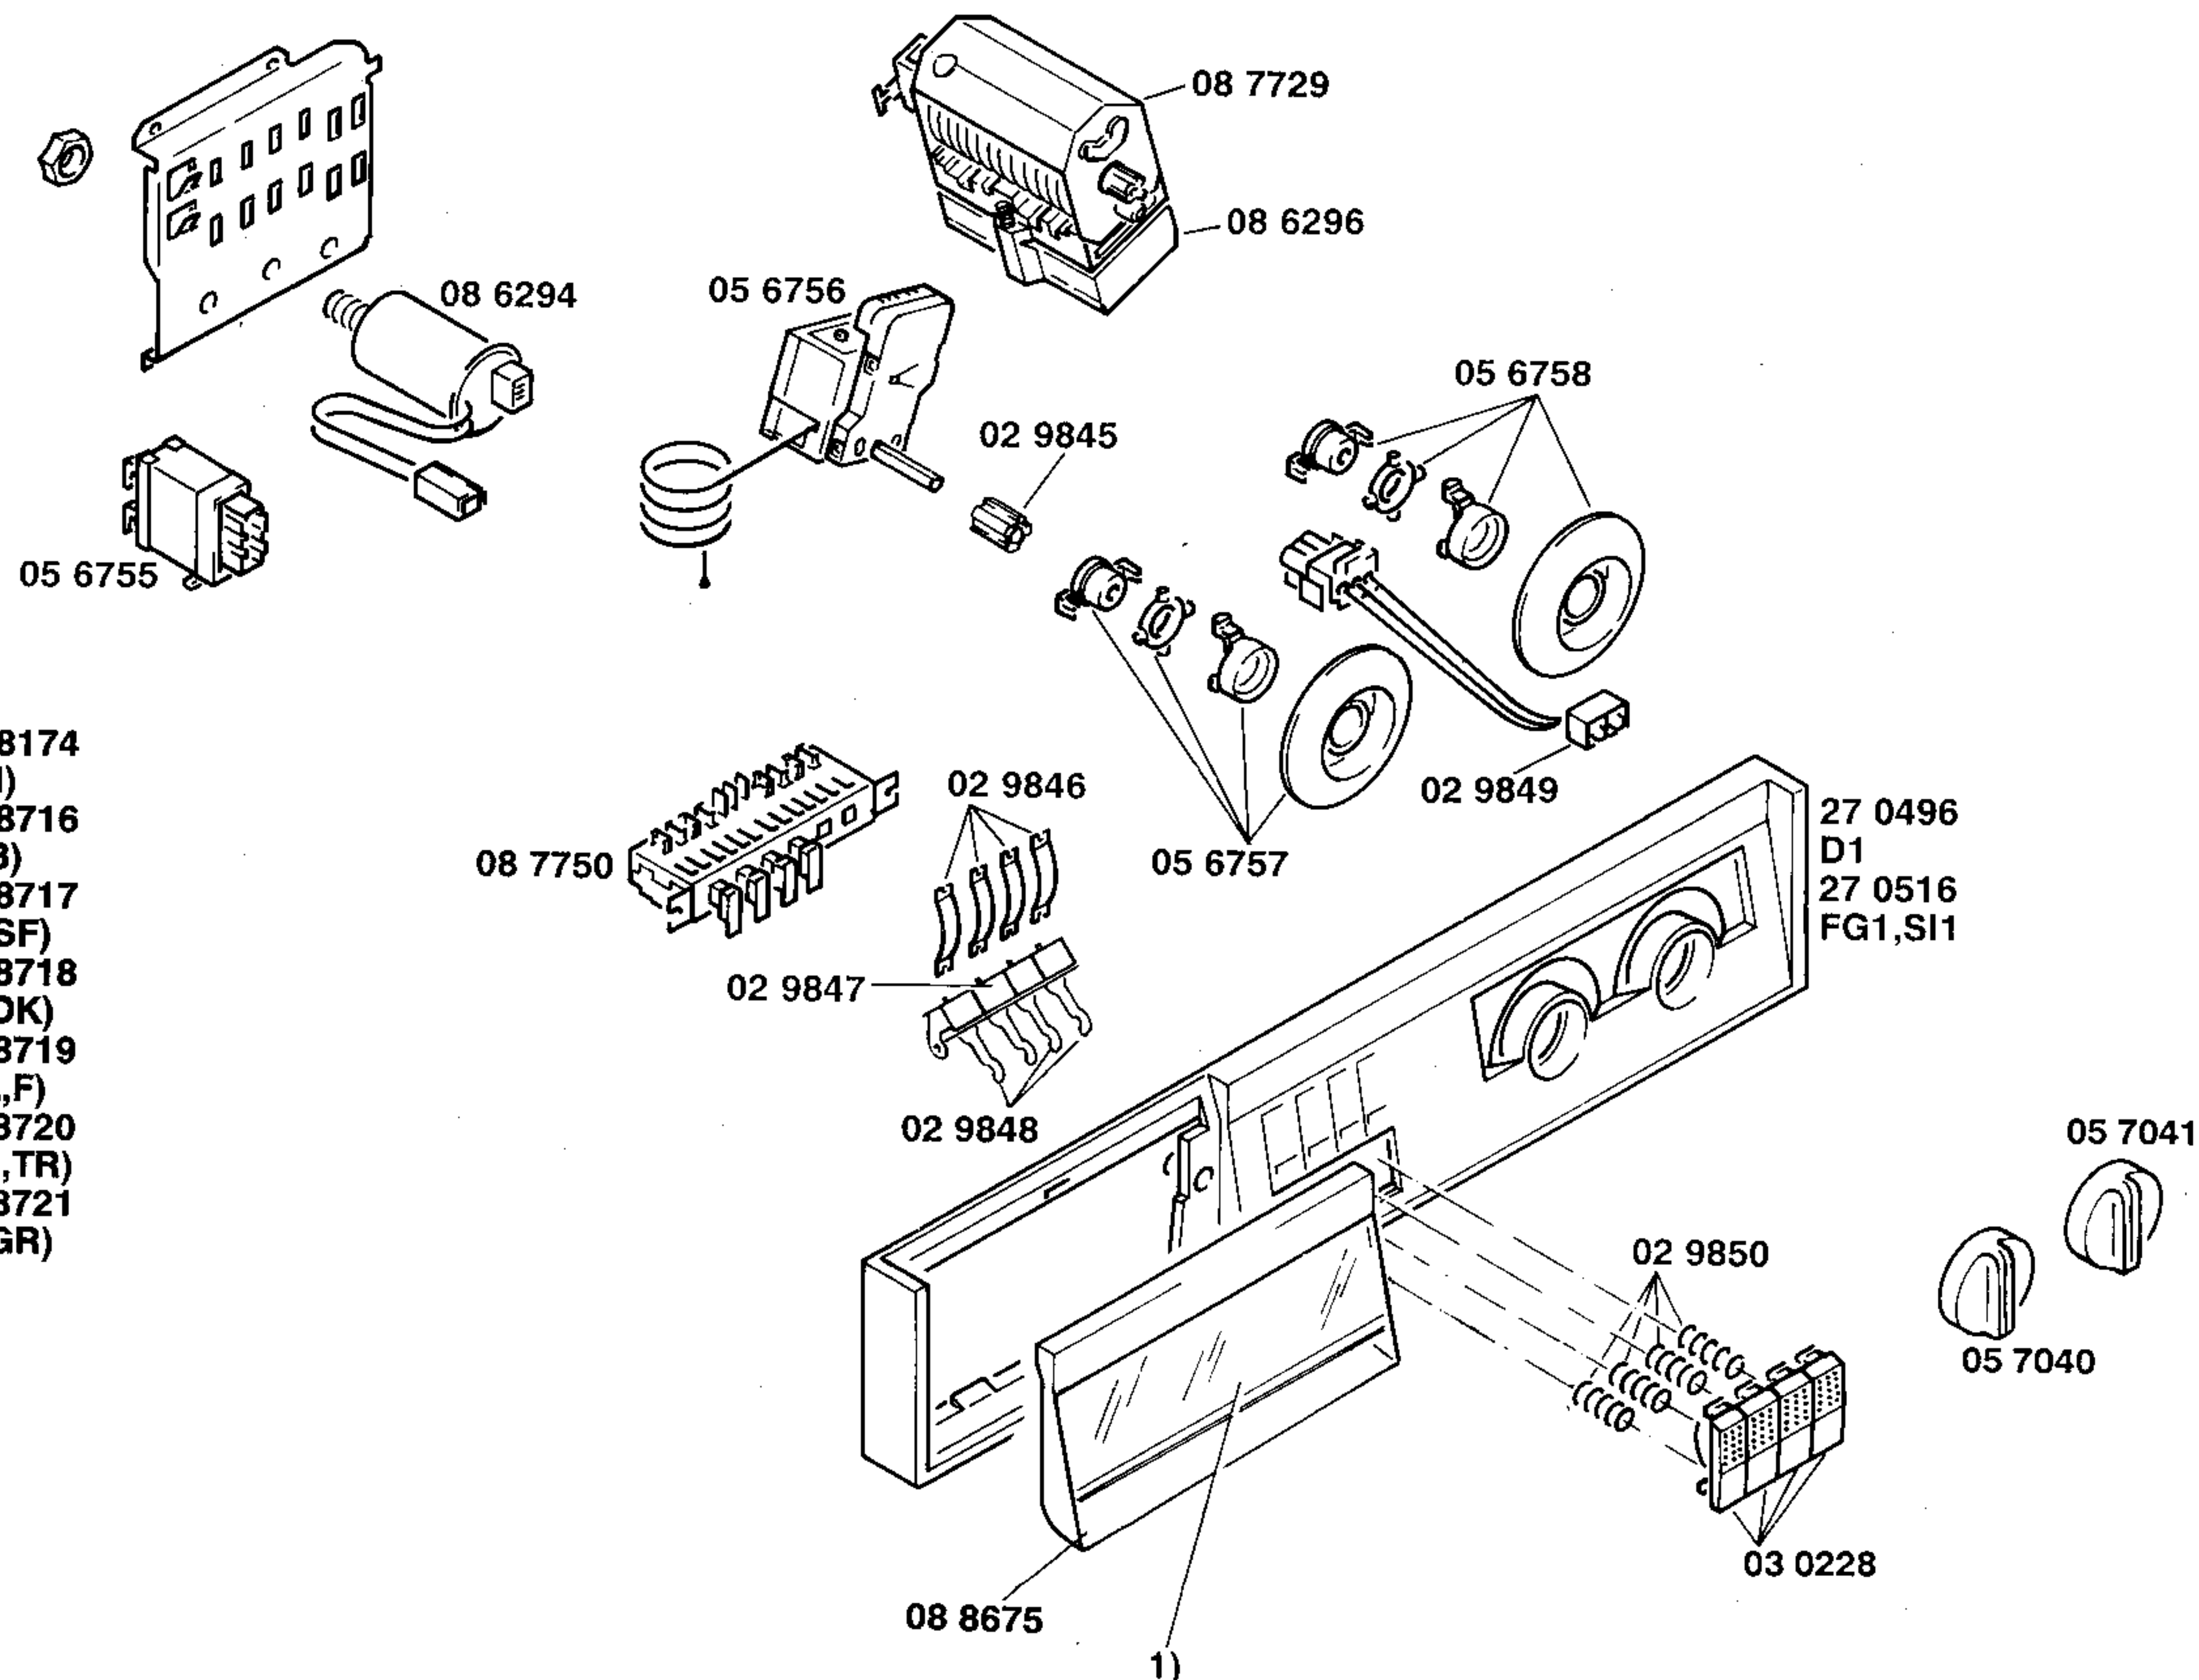

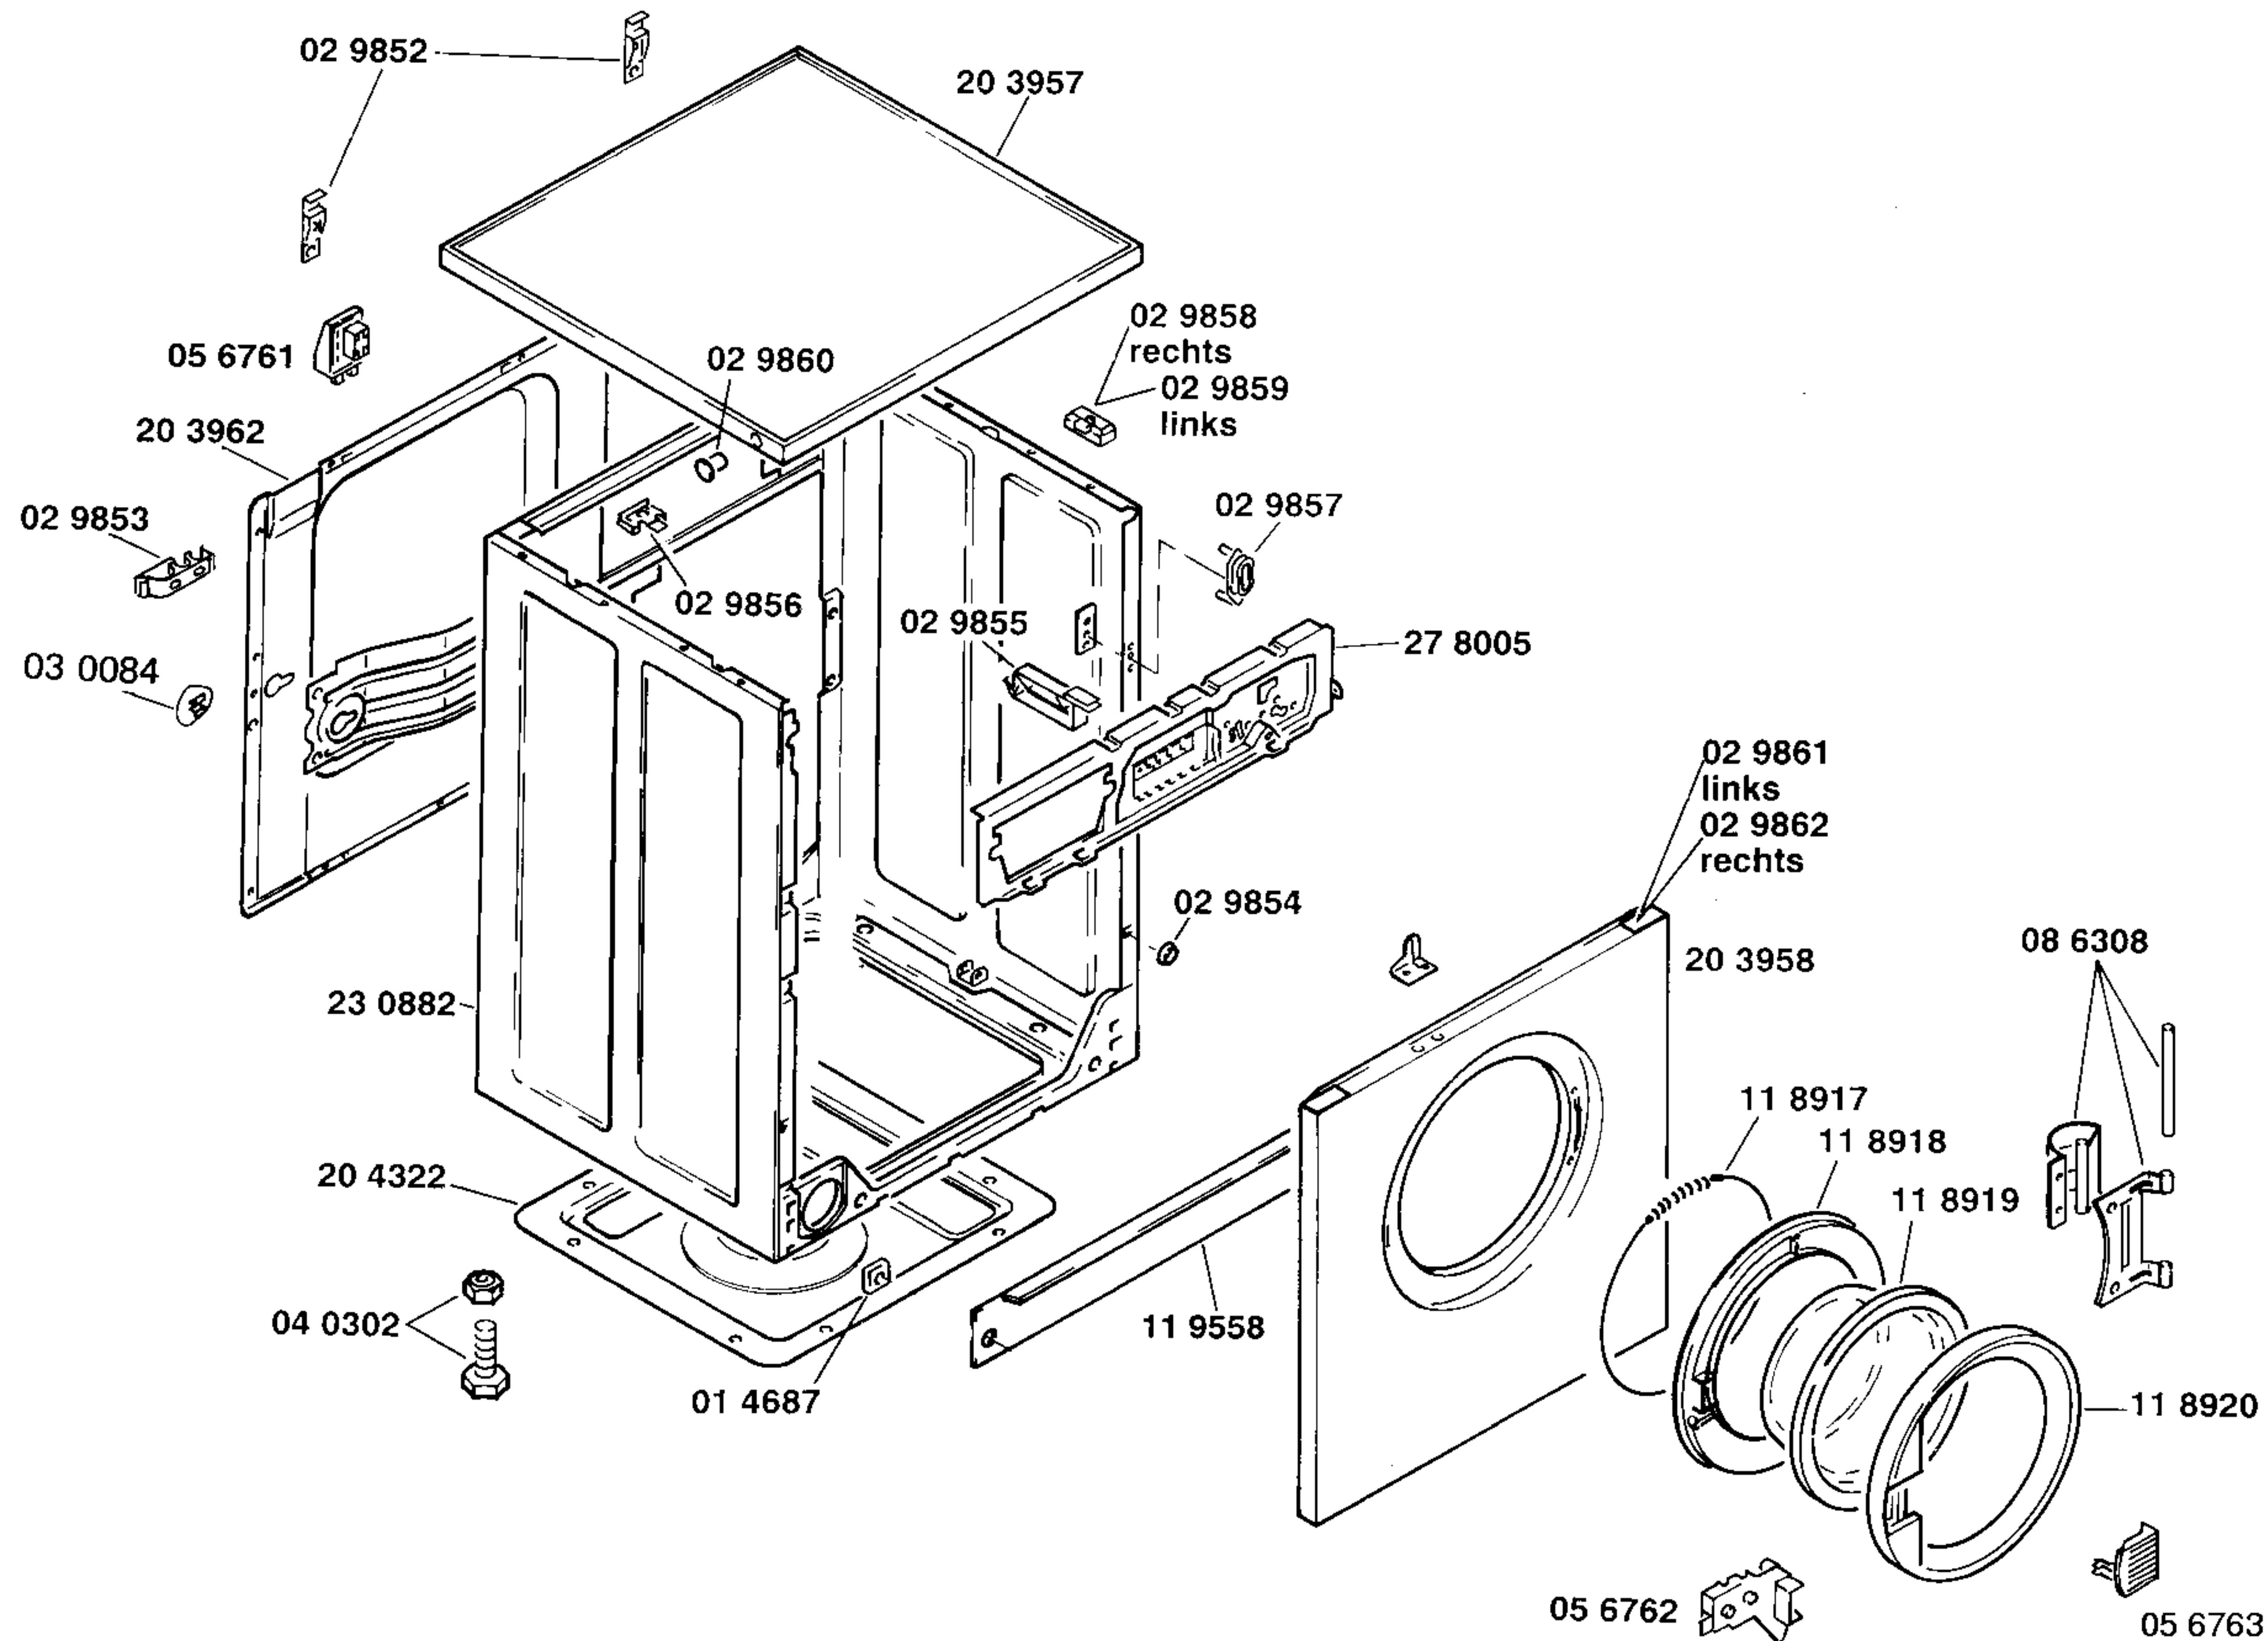

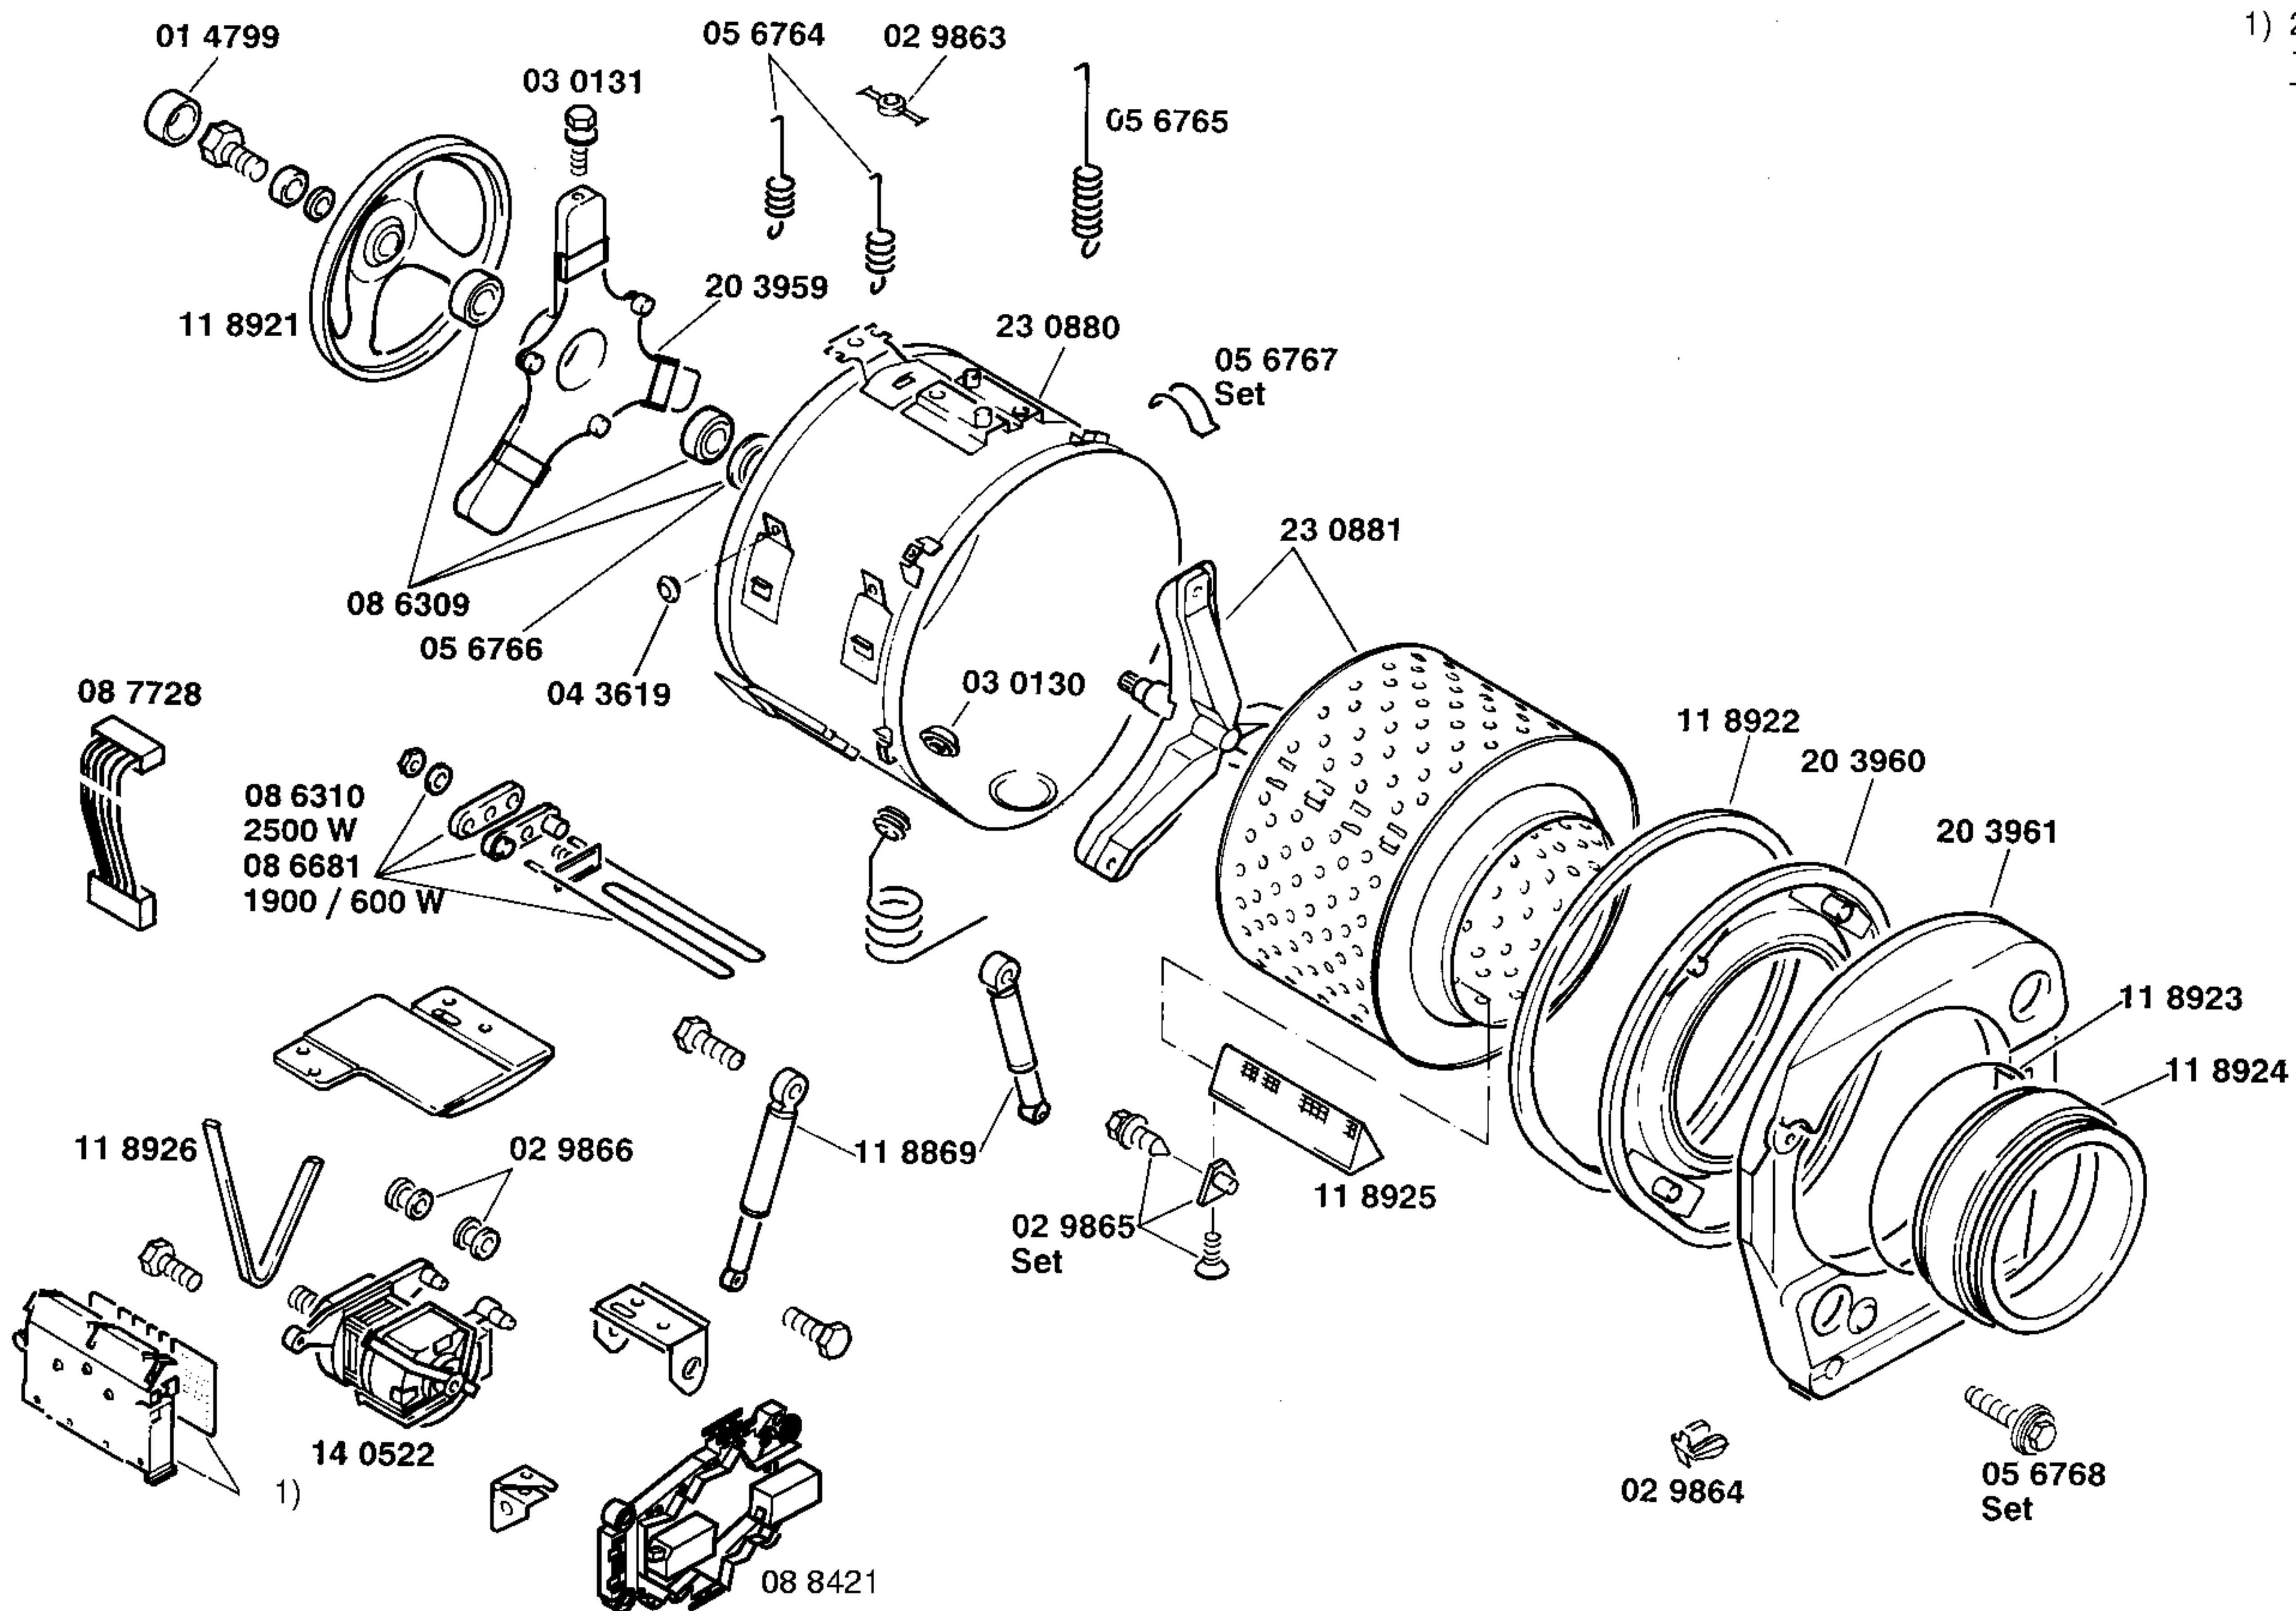

1) 27 1716
15 5272
Triac-Motorleistung

