


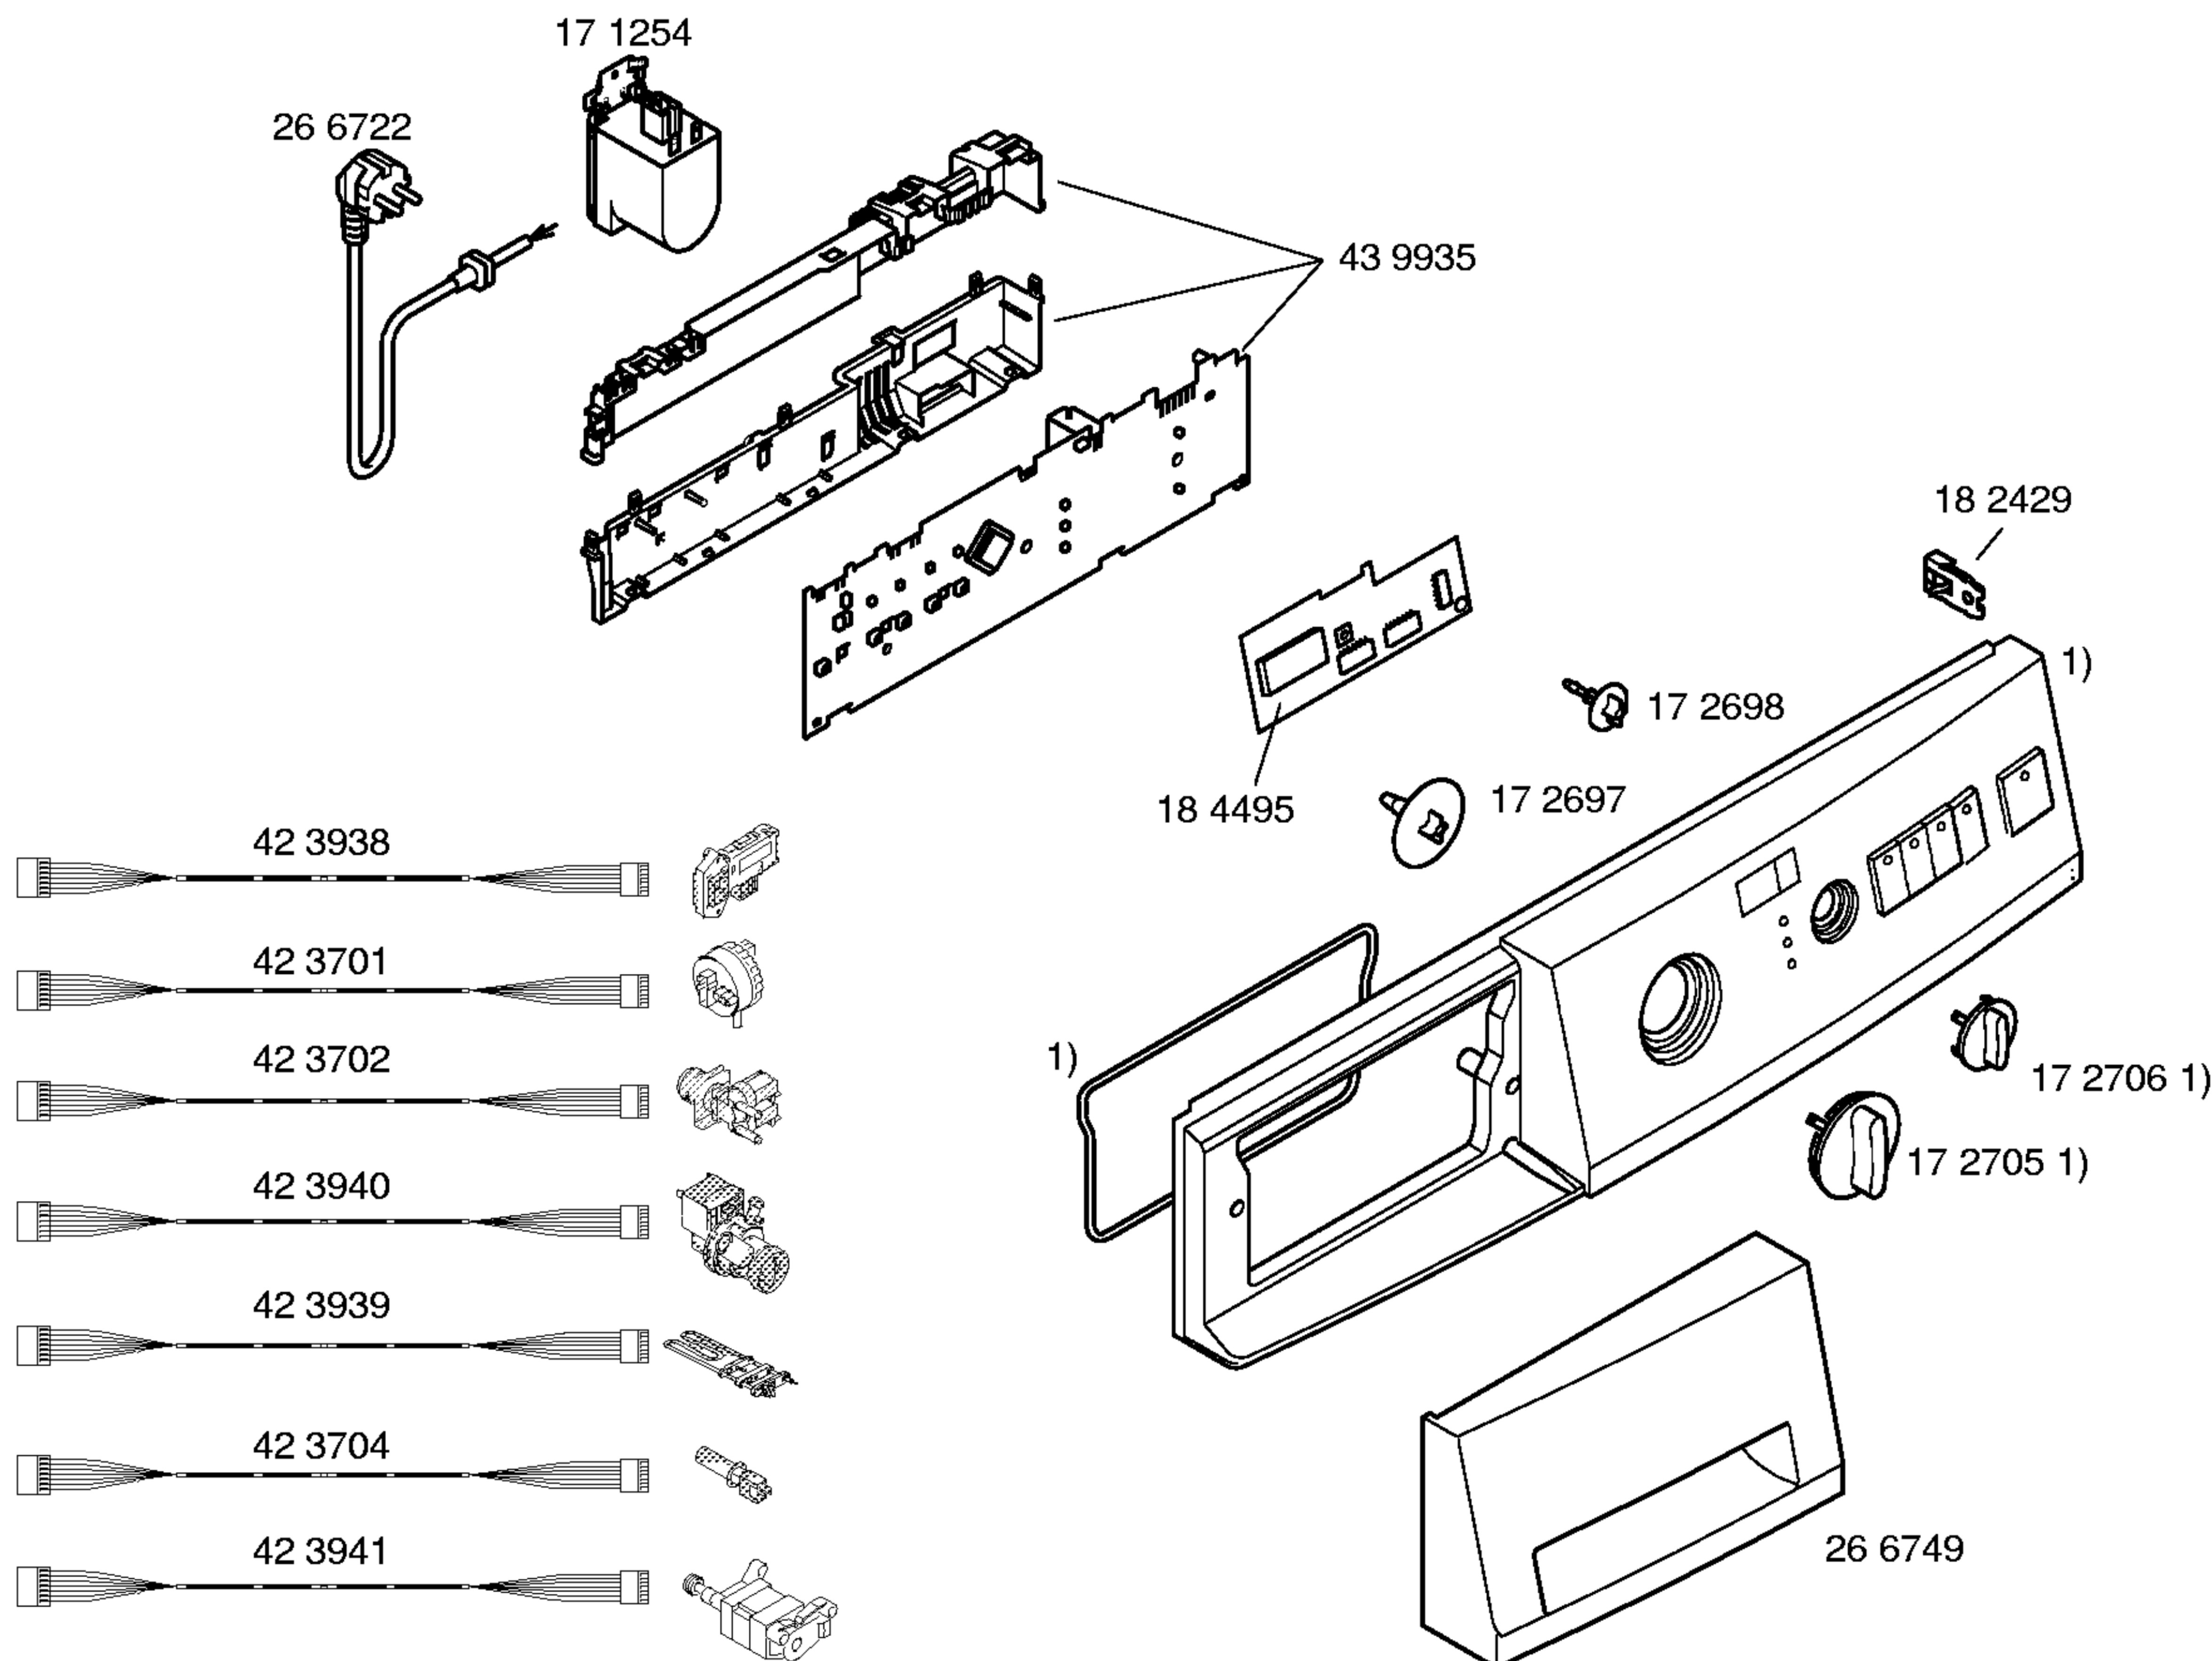

Gebrauchsanweisung

58 9666

es

58 9667

pt

Programmtabelle

58 9669

es

58 9670


pt


1) 43 8454

V01

43 9068

V02

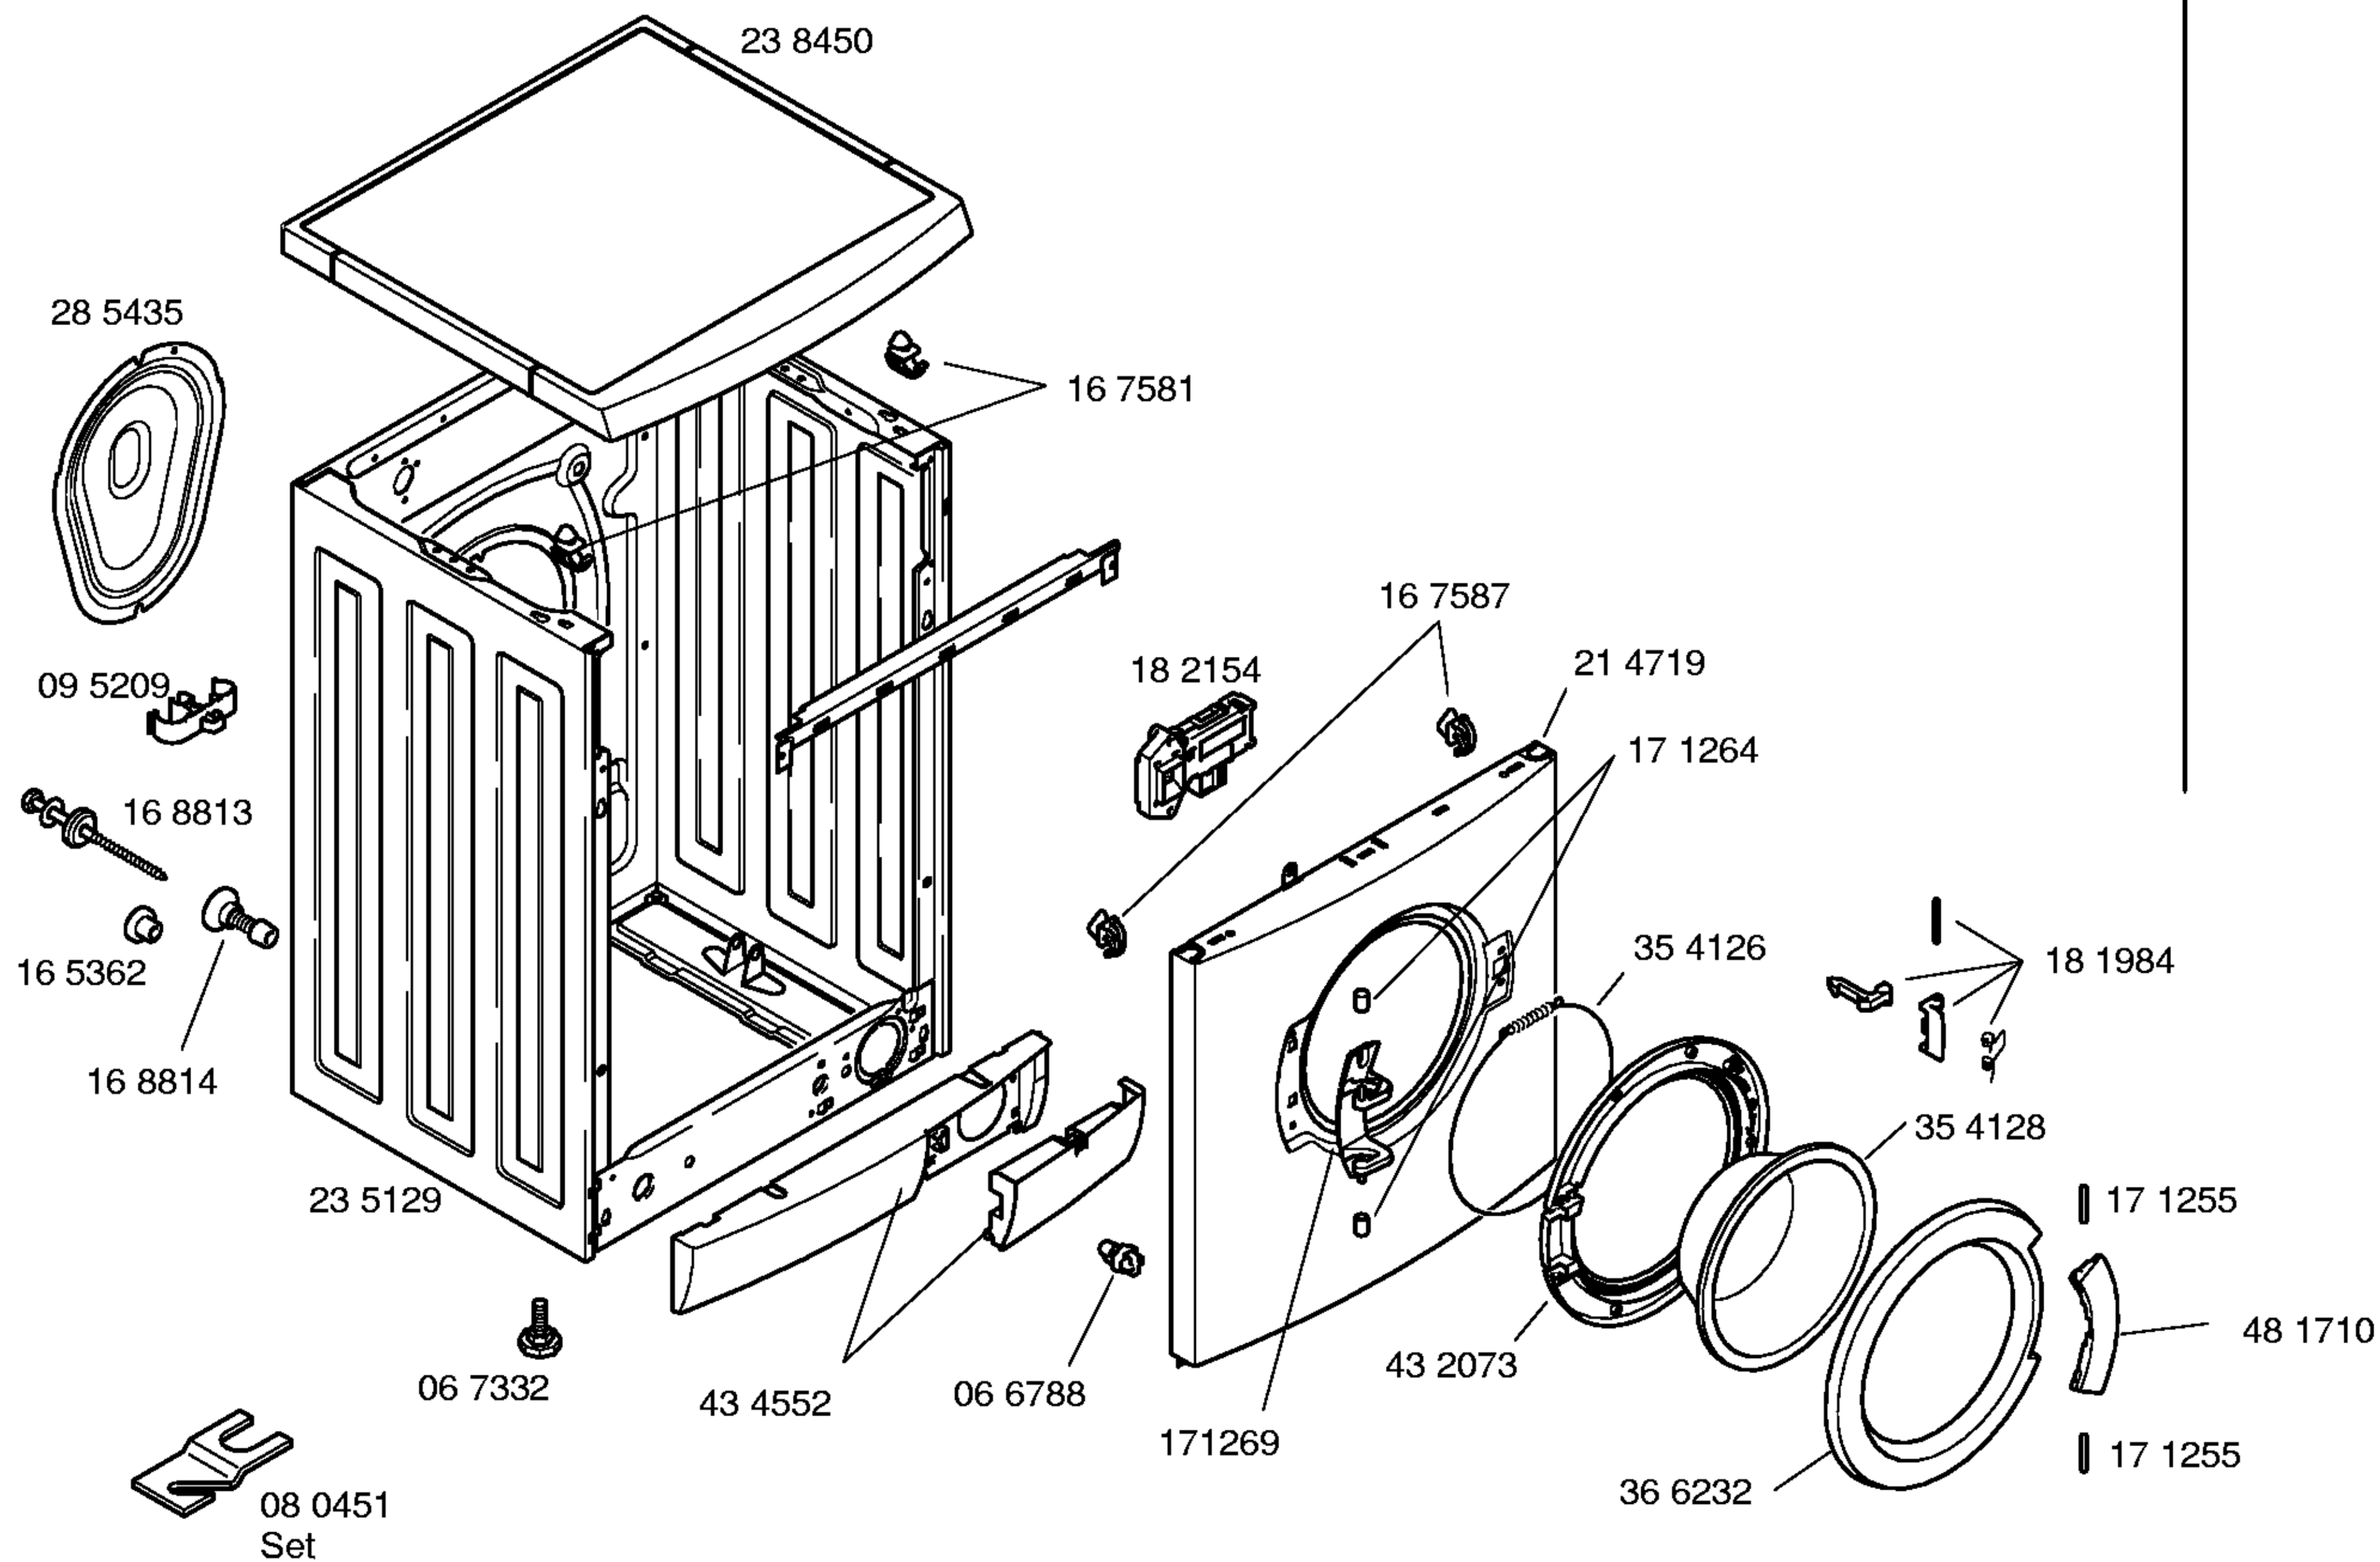

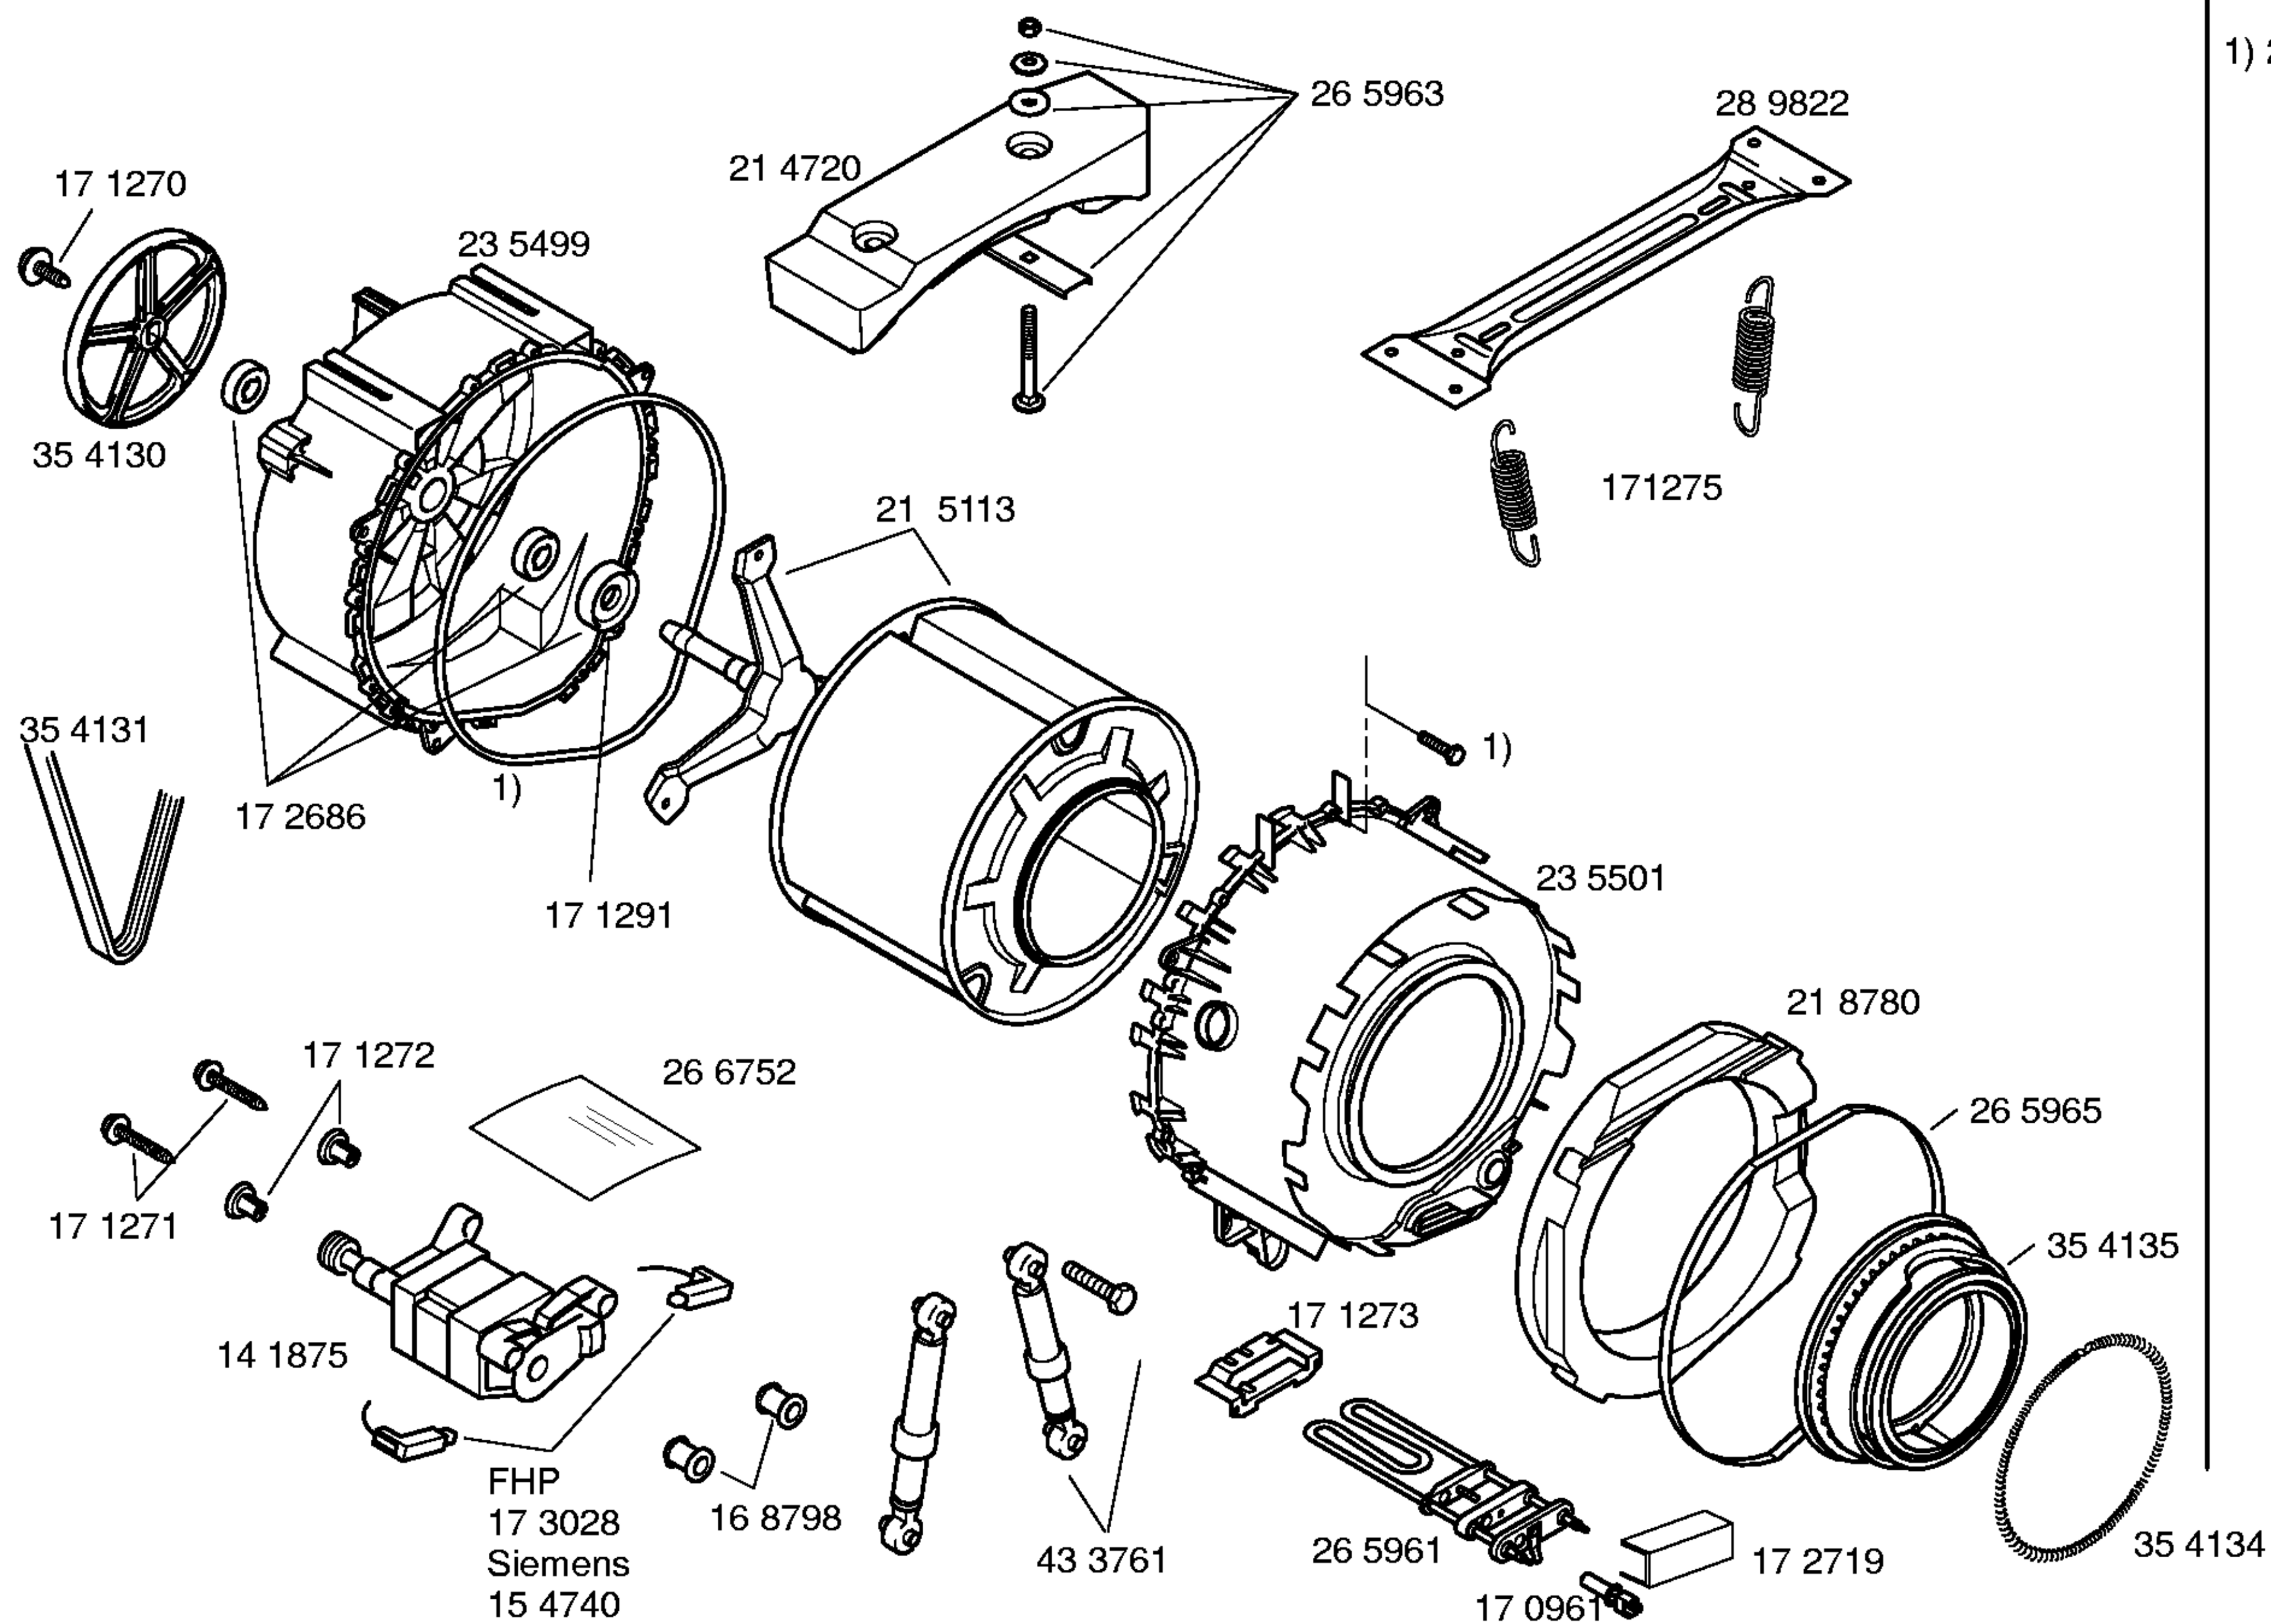

1) 26 5964

