


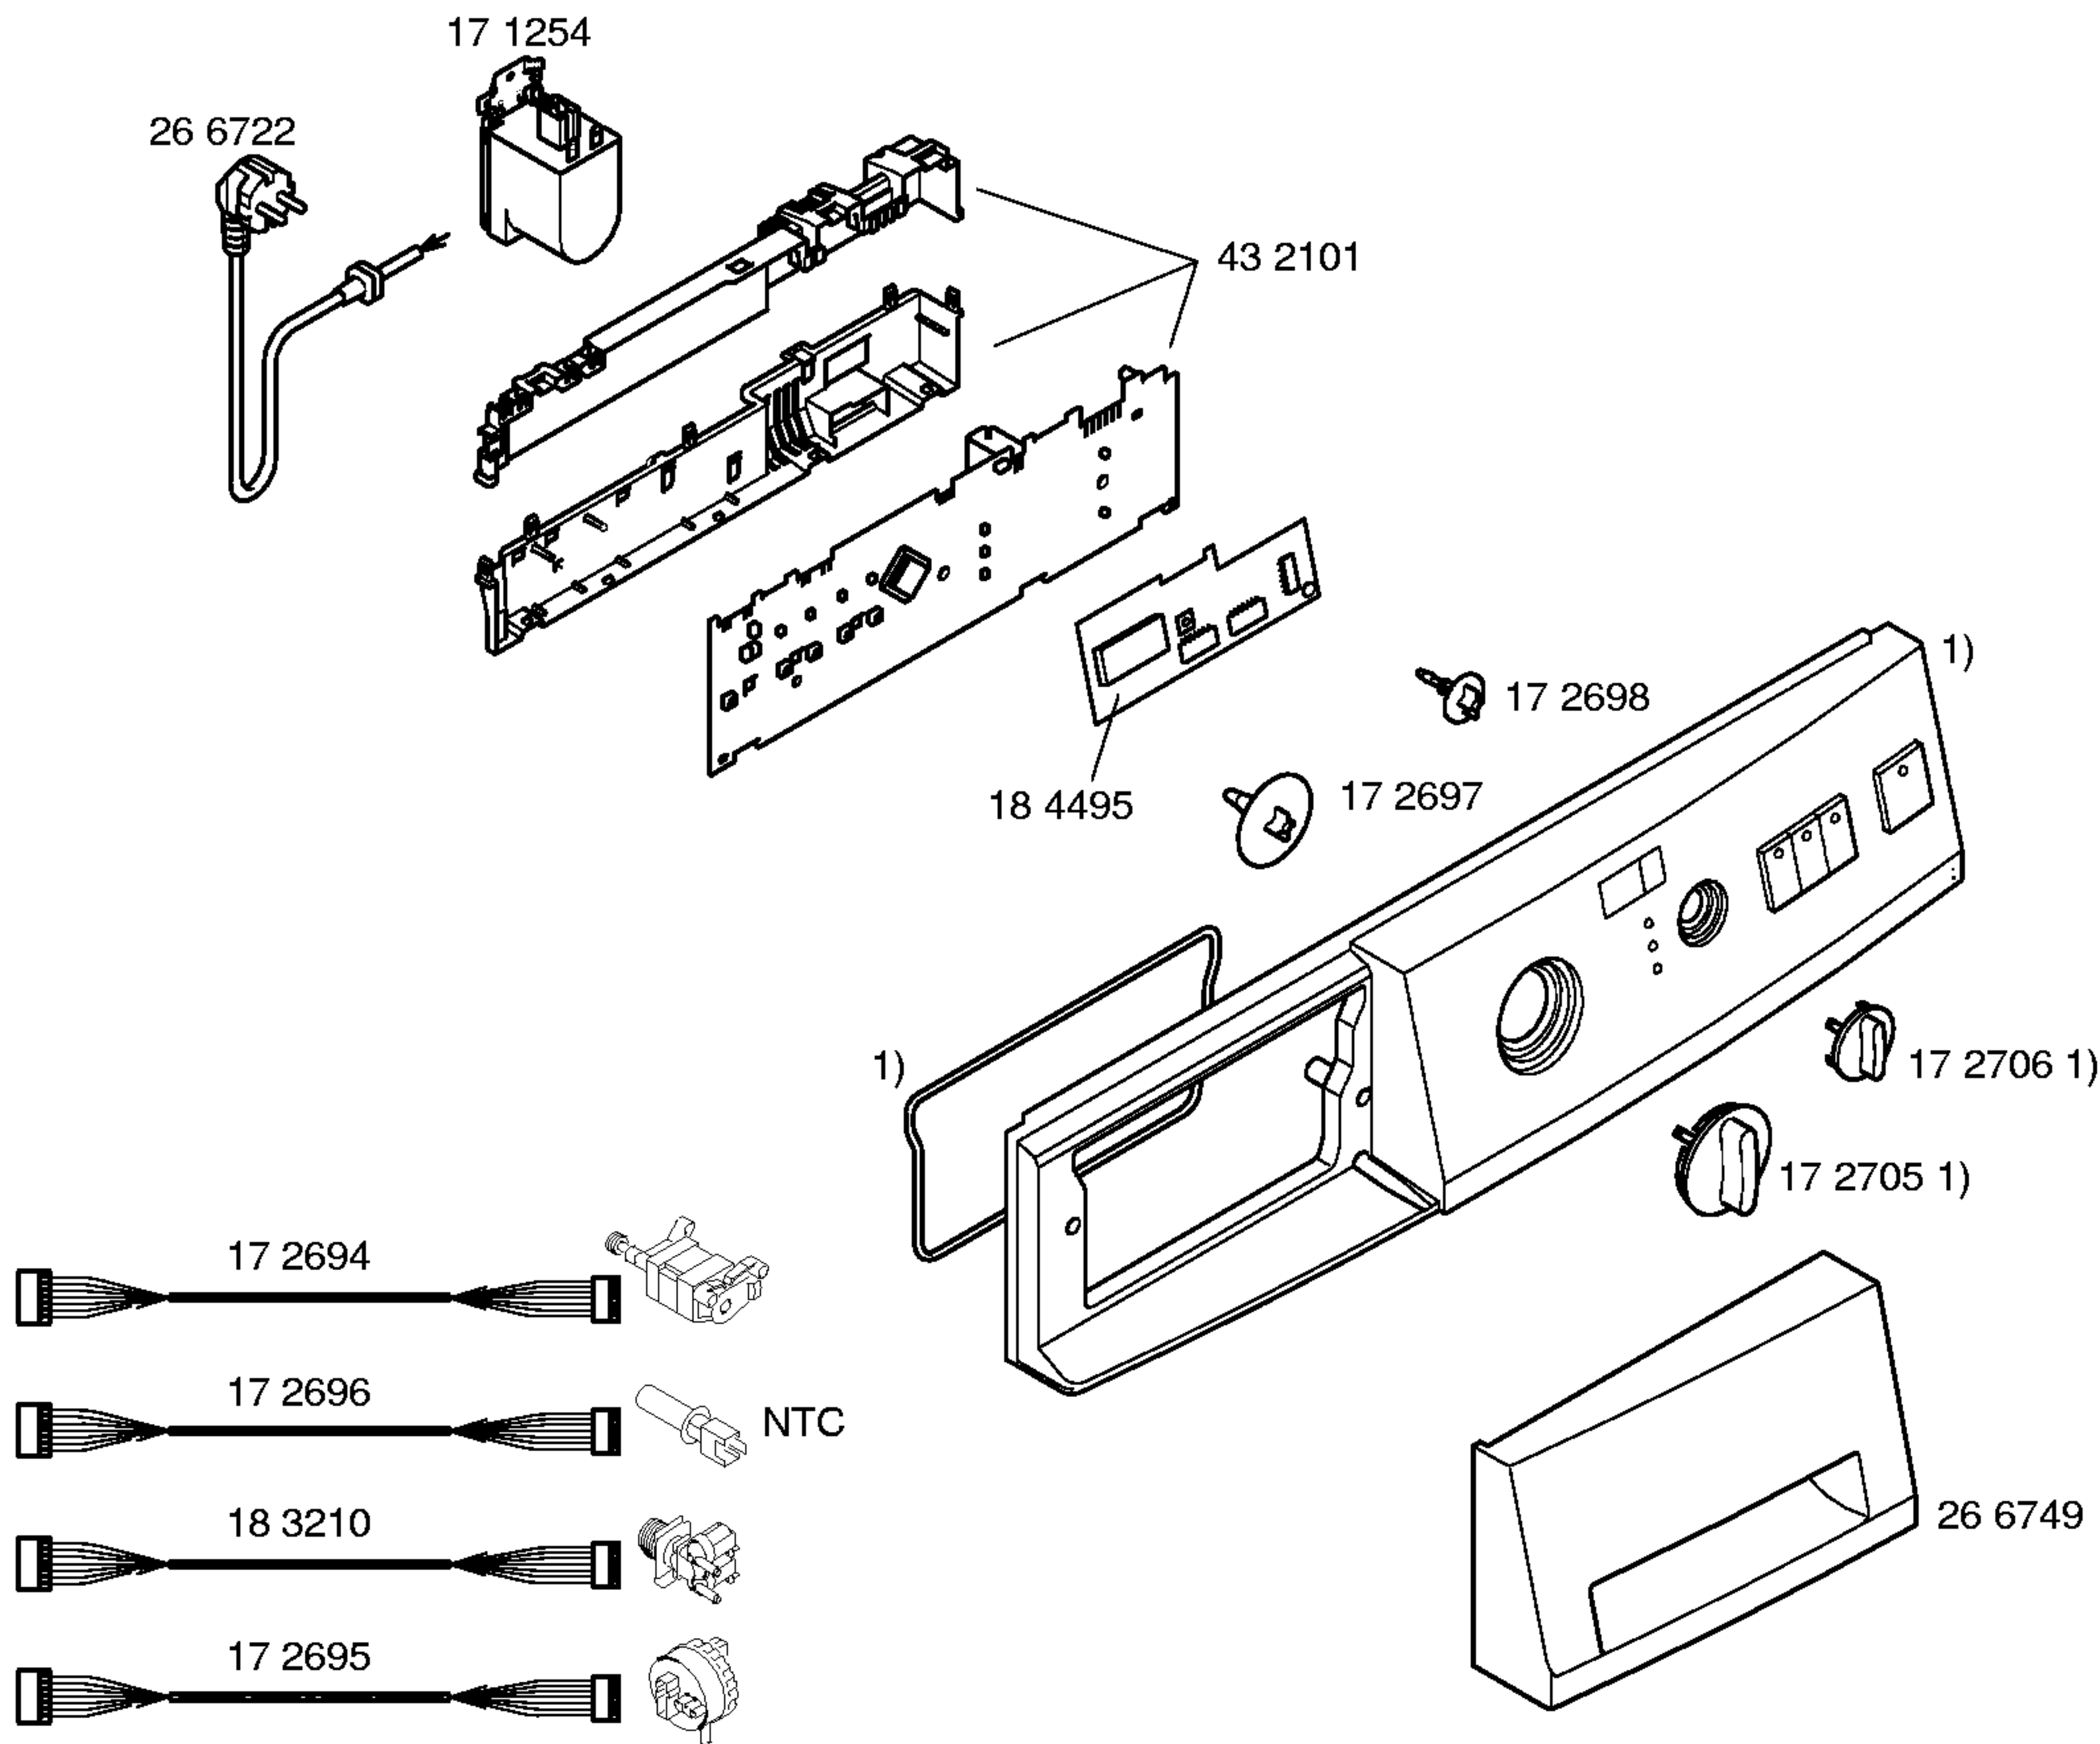

Gebrauchsanweisung
58 7050
es
58 7051
pt

Programmtabelle
42 1073
es
42 1074
pt

1) 43 5210

