


5-6. MECHANISM CHASSIS ASSEMBLY (1)

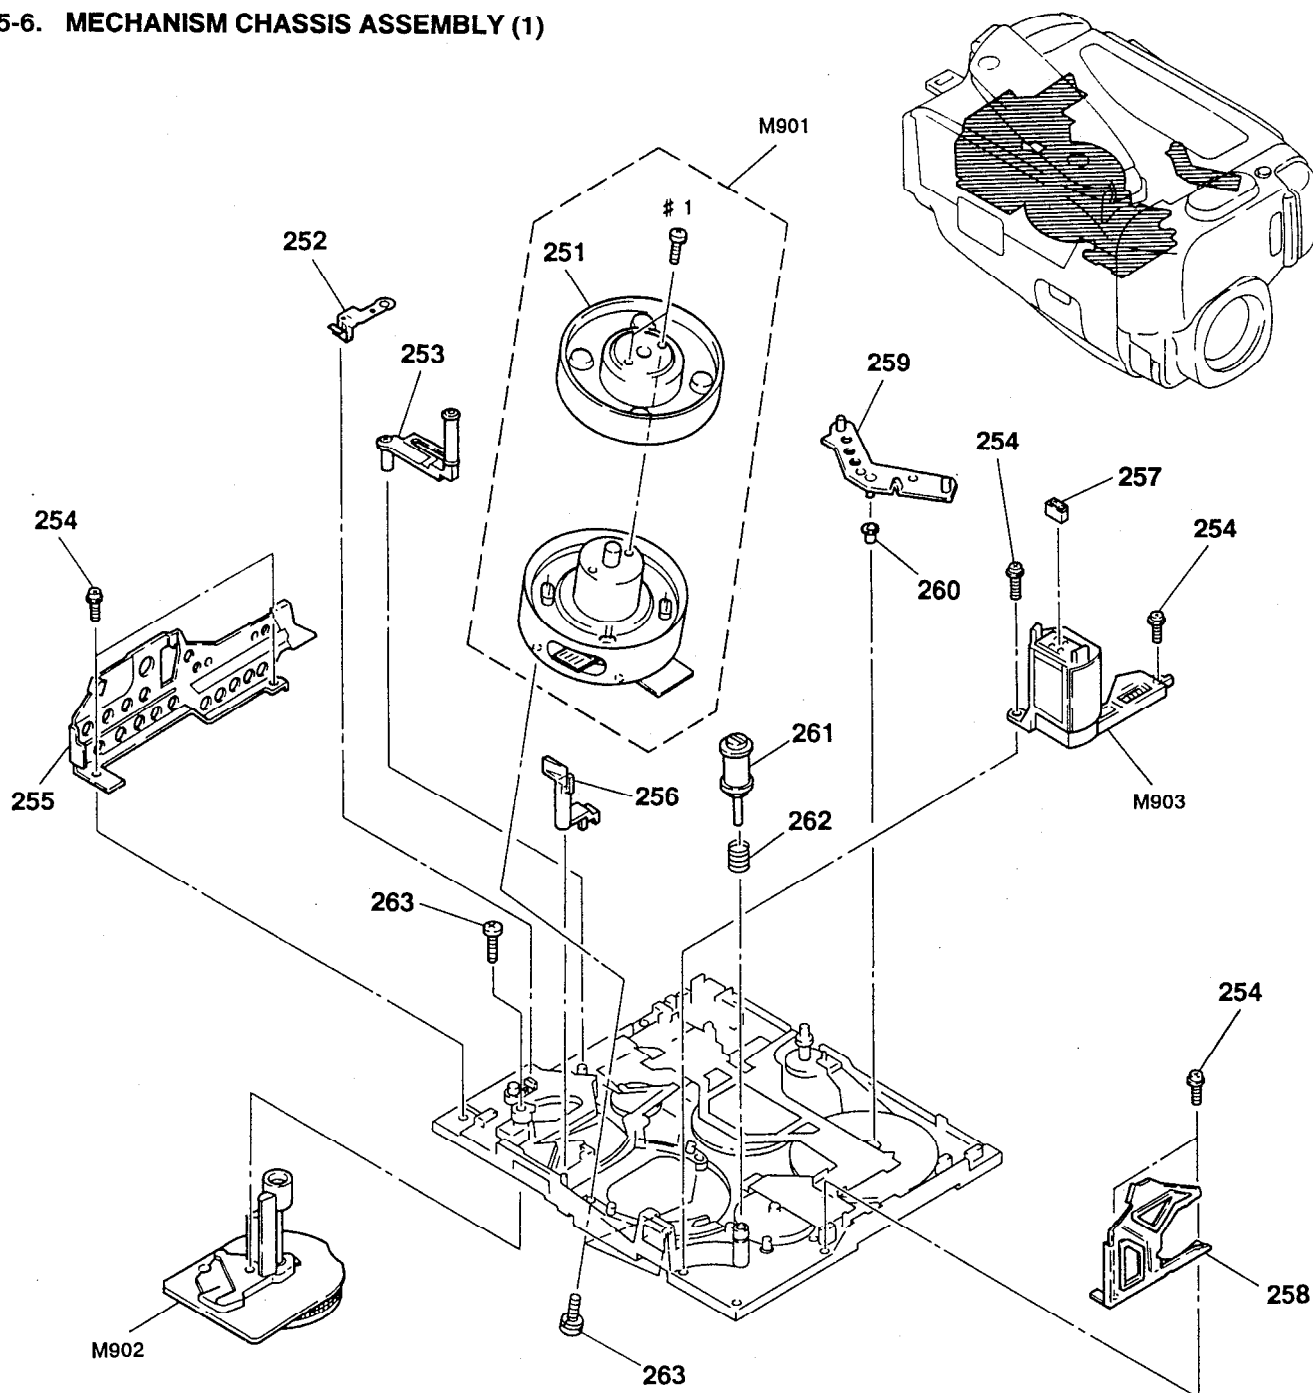

Ref. No.	Part No.	Description
----------	----------	-------------

251	A-7049-501-A	DRUM ASSY, UPPER (DGR-78-R)
252	3-945-822-01	SPRING, LEAF, TG7 ARM
253	A-7040-305-A	ARM BLOCK ASSY, TG7
254	3-947-503-01	SCREW (M1.4X2.5)
255	X-3941-255-1	PLATE (T) ASSY, SIDE
256	3-945-735-01	ARM, HC CONVERSION
257	1-568-323-11	CONNECTOR, BOARD TO BOARD 4P
258	3-945-691-01	PLATE (S), SIDE
259	3-945-701-01	ARM, LS


Remark

Ref. No.	Part No.	Description
----------	----------	-------------

260	3-945-702-01	ROLLER, LS
261	X-3941-262-1	ROLLER ASSY, TG2
262	3-956-651-01	SPRING, COMPRESSION
263	3-686-493-01	SCREW (M2X5), P1
M901	A-7048-564-A	DRUM ASSY (DGH-78A-R)
M902	8-835-477-01	MOTOR, DC SCE-0101A (CAPSTAN)
M903	A-7040-304-A	MOTOR BLOCK ASSY, LM (LOADING)

Remark

5-7. MECHANISM CHASSIS ASSEMBLY (2)

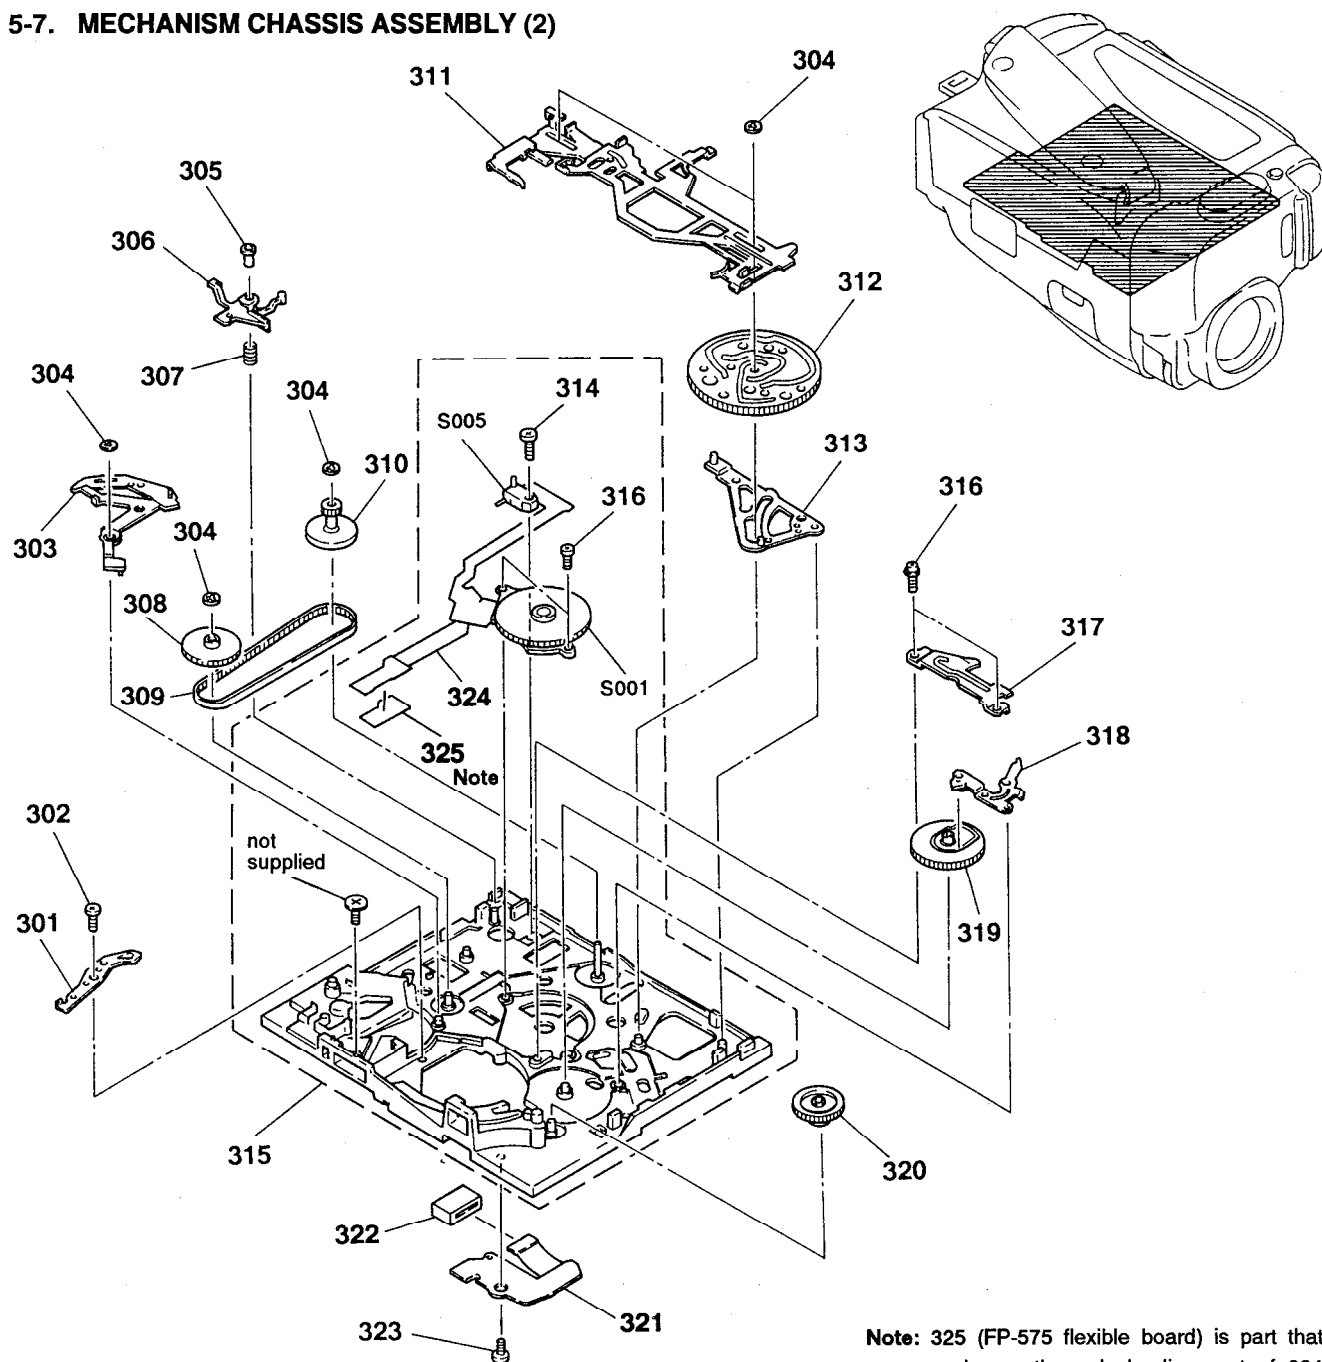

Note: 325 (FP-575 flexible board) is part that exchange the only leading part of 324 (FP-442 flexible board).

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
301	3-945-734-01	ARM, HC DRIVING		315	A-7040-303-A	CHASSIS ASSY, MECHANICAL	
302	3-728-103-11	SCREW (M1.4X1.6), SPECIAL HEAD		316	3-947-503-01	SCREW (M1.4X2.5)	
303	X-3941-259-1	ARM ASSY, PINCH PRESS		317	3-945-722-01	RETAINER, GEAR	
304	3-726-829-01	WASHER, STOPPER		318	X-3941-257-1	ARM ASSY, FF	
305	3-945-730-01	SLEEVE, EJECT		319	3-945-697-01	GEAR (B), L	
306	3-945-706-01	LEVER, EJECT		320	3-945-700-01	GEAR (A), L	
307	3-945-729-01	SPRING, COMPRESSION		321	1-641-643-12	FP-444 FLEXIBLE BOARD	
308	X-3941-256-1	GEAR ASSY, CHANGE		322	1-691-254-13	CONNECTOR, TRANSLATION 10P	
309	3-944-539-01	BELT, RELAY		323	3-945-756-01	SCREW (M1.4X3)	
310	3-945-695-01	PULLEY, RELAY		324	1-641-639-13	FP-442 FLEXIBLE BOARD	
311	X-3941-260-1	SLIDER ASSY, M		325	1-645-271-11	FP-575 FLEXIBLE BOARD	
312	3-945-696-02	CAM		S001	1-572-986-11	SWITCH, ROTARY (ENCODER)	
313	X-3941-258-3	ARM ASSY, GL		S005	1-570-771-21	SWITCH (C DOWN)	
314	3-713-786-71	SCREW (M2X5)					