

SECTION 3

DISASSEMBLY, EXPLODED VIEWS AND OTHER PARTS


Place the TV set on a stable, level surface before disassembly and assembly of parts.

- ▲ and shaded parts are critical for safety. Replace only with part number specified.
- Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced.

- (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
- Picture provided in this section might have slight difference from the actual sets.
- Lines that indicate parts are shown in blue in the illustration.
- The reference number besides the part description in the picture indicates the disassembly sequence.
- Remove screws before disassembly. Unplug connectors before disassembly

3-1. KDL- 32W*B

3-1-1. Disassembly, Exploded View

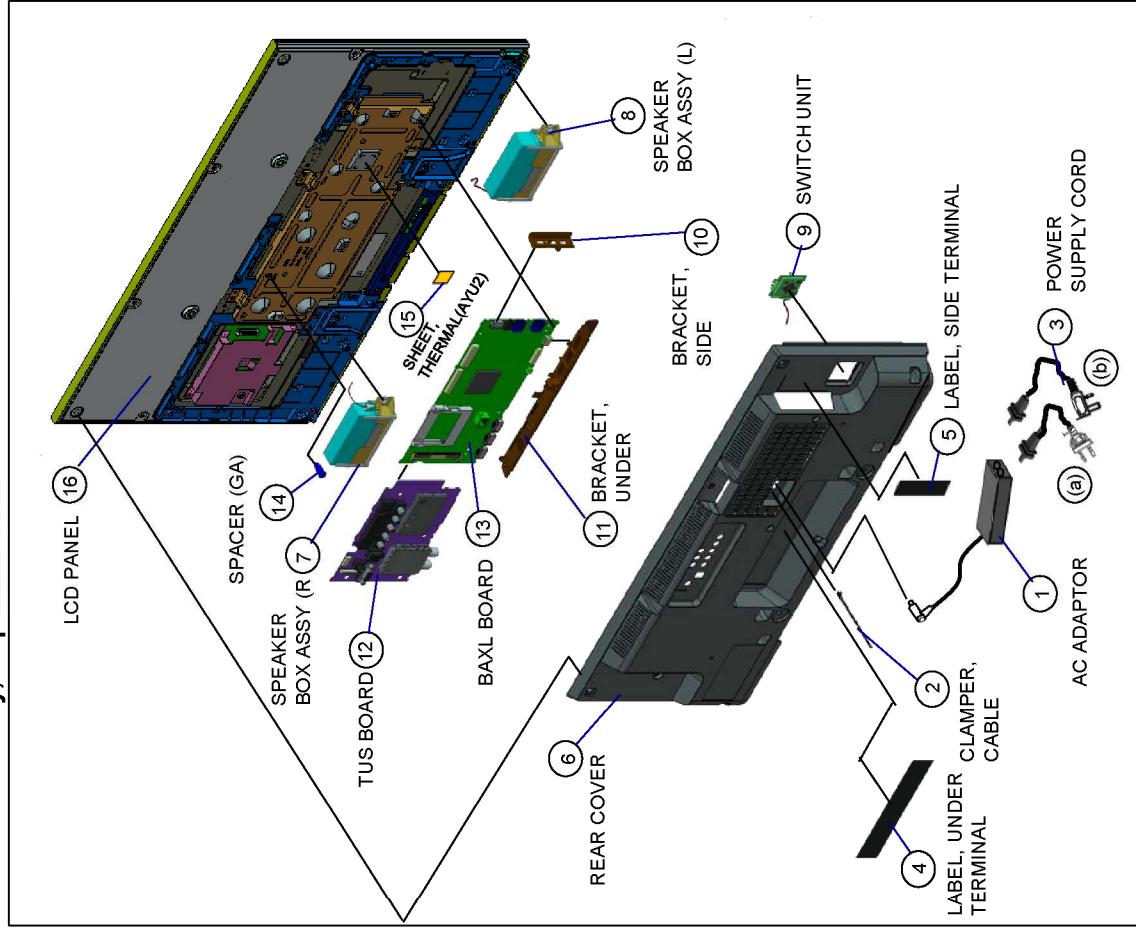

A. KDL- 32W*B (CEL, UKA)


REF.NO.	PART NO.	DESCRIPTION	REMARK
1	1-492-732-12	AC ADAPTOR (85W)	
2	4-262-708-04	CLAMPER, CABLE	
3	▲ 1-846-093-11 (a)	CORD SET, POWER-SUPPLY	(CEL, CEI)
3	▲ 1-846-094-11 (b)	CORD SET, POWER-SUPPLY	(UKA)
4	4-484-999-31	LABEL, UNDER TERMINAL	
5	4-484-997-31	LABEL, SIDE TERMINAL	
6	4-528-672-01	REAR COVER (32 CEB)A	
7	1-858-965-21	SPEAKER BOX ASSY (R)	
8	1-858-965-11	SPEAKER BOX ASSY (L)	
9	1-798-510-11	SWITCH UNIT (SM-VVV)	
10	4-487-940-02	BRACKET, SIDE (CEB)	
11	4-487-941-12	BRACKET, UNDER (CEB)	
12	A-1998-238-A	COMPL SVC TUS_L_AEP_2S2_1	(CEI, UKA)
13	▲ A-1998-277-A	COMPL SVC BAX_L_HE_AEP	(CEL)
13	▲ A-2046-638-A	COMPL SVC BAX_L_HE_AEP_EUB	
14	4-256-454-02	SPACER (G A)	
15	4-440-057-01	SHEET, THERMAL(AYU2)	
16	▲ 1-811-953-11	LCD PANEL (A32V4)	(W705B)
16	▲ 1-811-953-21	LCD PANEL (A32V4S)	(W706B)

B. KDL- 32W*B (RU3)

REF.NO.	PART NO.	DESCRIPTION	REMARK
1	1-492-734-11	AC ADAPTOR (85W)	
2	4-262-708-04	CLAMPER, CABLE	
3	▲ 1-837-427-11 (a)	POWER-SUPPLY CORD SET	
4	4-484-999-31	LABEL, UNDER TERMINAL	
5	4-484-997-31	LABEL, SIDE TERMINAL	
6	4-473-565-41	REAR COVER (32 CEB)A	
7	1-858-965-21	SPEAKER BOX ASSY (R)	
8	1-858-965-11	SPEAKER BOX ASSY (L)	
9	1-798-511-11	SWITCH UNIT (SM-VVV)	
10	4-474-895-01	BRACKET, SIDE (CEB)	
11	4-474-896-11	BRACKET, UNDER (CEB)	
12	A-1998-238-A	COMPL SVC TUS_L_AEP_2S2_1	
13	▲ A-1998-278-A	COMPL SVC BAX_L_HE_AEP_RU	
14	4-256-454-02	SPACER (G A)	
15	4-440-057-01	SHEET, THERMAL(AYU2)	
16	▲ 1-811-953-11	LCD PANEL (A32V4)	(W705B)
16	▲ 1-811-953-21	LCD PANEL (A32V4S)	(W706B)



3-1. KDL- 32W*B
3-1-1. Disassembly, Exploded View

SMART CORE BLOCK

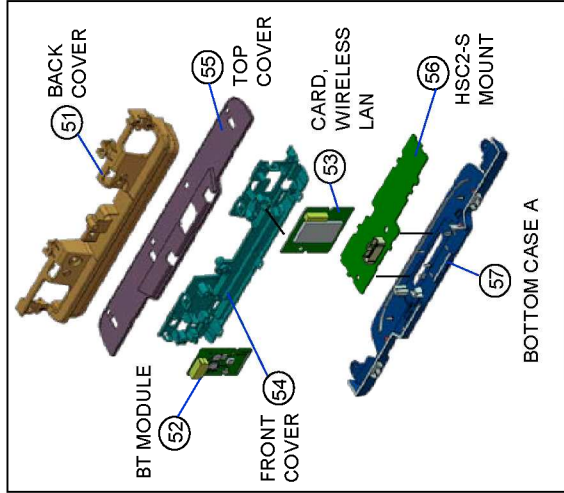

REF.NO.	PART NO.	DESCRIPTION	REMARK
51	4-474-894-01	BACK COVER	
52	1-492-760-12	BT MODULE	
53	1-458-723-11	CARD, WIRELESS LAN	
54	4-474-893-01	FRONT COVER	
55	4-474-892-01	TOP COVER	
56	A-1969-162-A	HSC2-S MOUNT	
57	4-474-888-02	BOTTOM CASE A	

**Stand exploded view below are for reference purpose.
(*** Child parts are UNSTOCKED except for Screw, +PSW M5X16. (For detail please refer to page 14 – Other Parts)

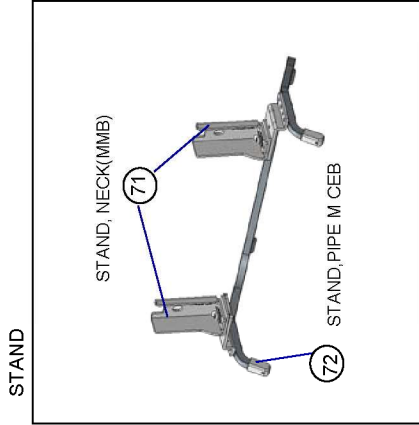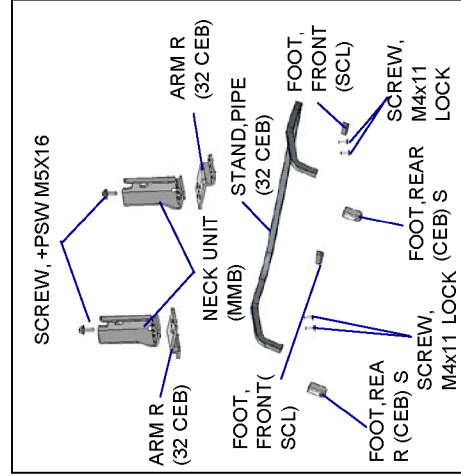

A. KDL- 32W*B (CEL, CEI, UKA)

REF.NO.	PART NO.	DESCRIPTION	REMARK
71	4-462-165-02	STAND, NECK(MMB)	(W706B)
72	4-485-109-01	STAND, PIPE M CEB	(W705B)
72	4-485-109-11	STAND, PIPE M CEB	

B. KDL- 32W*B (RU3)

REF.NO.	PART NO.	DESCRIPTION	REMARK
71	4-462-167-02	STAND, NECK(MMB)	(W706B)
72	4-480-012-01	STAND, PIPE M CEB	(W705B)
72	4-480-012-11	STAND, PIPE M CEB	