


EXPLODED VIEWS


5-1. KDL-32EX710/7111/713/715/716/717/719 5-1-1. CHASSIS-1

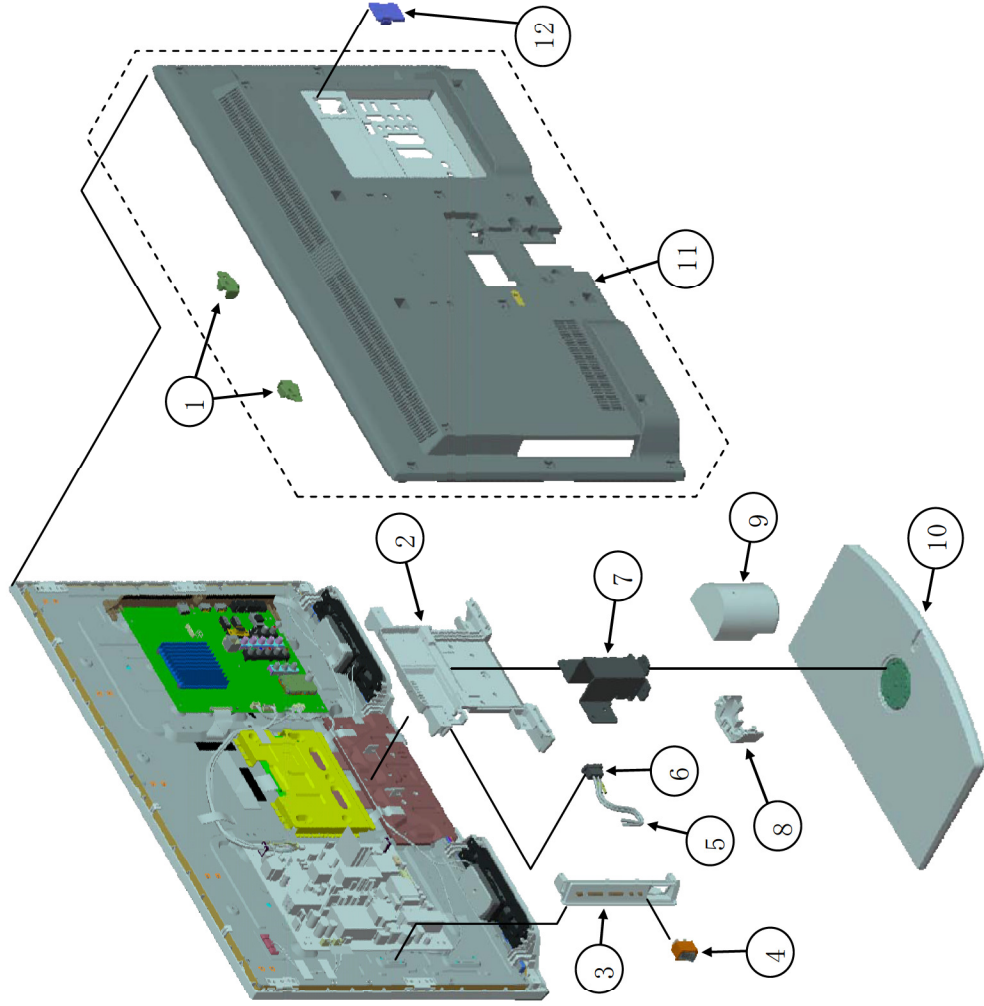

REF. No.	PART No.	DESCRIPTION	REMARK
1	4-164-279-01	BRACKET, VESA (S)	
2	4-176-838-31	COVER, UNDER (32)	
3	1-487-797-11	SWITCH UNIT	
4	1-798-309-11	POWER SWITCH	
5	1-837-642-12	POWER SUPPLY CORD	
	1-837-646-12	POWER SUPPLY CORD	EX713
6	1-842-031-11	AC INLET (2P)	
7	4-170-449-01	NECK (M3A)	
8	4-170-477-11	COVER, NECK (M3A FRONT)	EX719
9	4-171-883-11	COVER, NECK (M3A REAR)	EX719
	4-170-485-11	COVER, NECK (M3A REAR)	
	4-171-884-31	COVER, NECK (M3A REAR)	
10	X-2547-301-1	BASE (M3A) ASSY	EX719
	X-2547-506-2	BASE (M3A) ASSY (GM)	EX710,711,713
11	X-2547-860-3	REAR COVER (32) ASSY	EX715,716,717,719
	X-2547-886-4	REAR COVER (32) ASSY	
12	*3-106-546-51	COVER,ECS	

EXPLODED VIEWS


5-1. KDL-32EX710/7111/713/715/716/717/719 5-1-2. CHASSIS-2

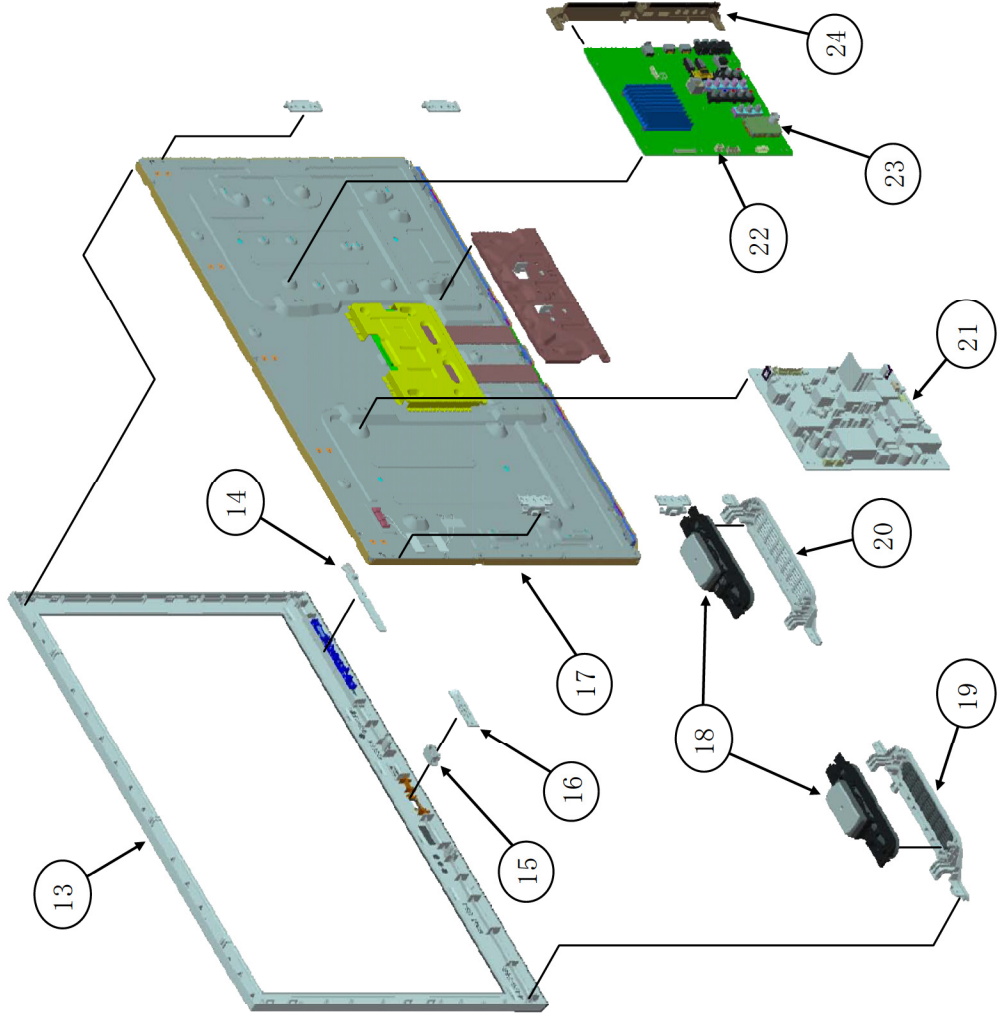

REF. No.	PART No.	DESCRIPTION	REMARK
13	X-2549-170-1	BEZEL (32) ASSY	EX710,713,715,719
	X-2549-172-1	BEZEL (32) ASSY	EX711,716
	X-2549-174-1	BEZEL (32) ASSY	EX717
14	A-1744-404-A	HLR MOUNT	
15	1-856-068-11	LENS	
	1-856-068-31	LENS	EX717
16	A-1736-860-A	HMS2 MOUNT	
17	1-811-231-11	LCD PANEL (A32V1)	
18	1-826-873-41	LOUDSPEAKER (3.4x17.5CM)	
19	4-176-758-11	BRACKET, SP R (32)	
20	4-176-757-11	BRACKET, SP L (32)	
21	1-474-250-11	STATIC CONVERTER (TV)-GE3C	
22	A-1763-466-A	BAL BOARD COMPLETE	EX710,711
	A-1763-467-A	BAL BOARD COMPLETE	EX715,716,717,719
	A-1763-468-A	BAL BOARD COMPLETE	EX713
23	8-597-719-00	UNIVERSAL SIL-TU SUT-AE101T	EX710,711
	8-597-717-00	UNIVERSAL SIL-TU SUT-VE101T	EX715,716,717,719
	8-597-733-00	UNIVERSAL SIL-TU SUT-HE111T	EX713
24	4-166-268-12	BRACKET, SIDE JACK	

EXPLODED VIEWS


5-2. KDL-40EX710/7111/713/715/716/717/718/719 5-2-1. CHASSIS-1

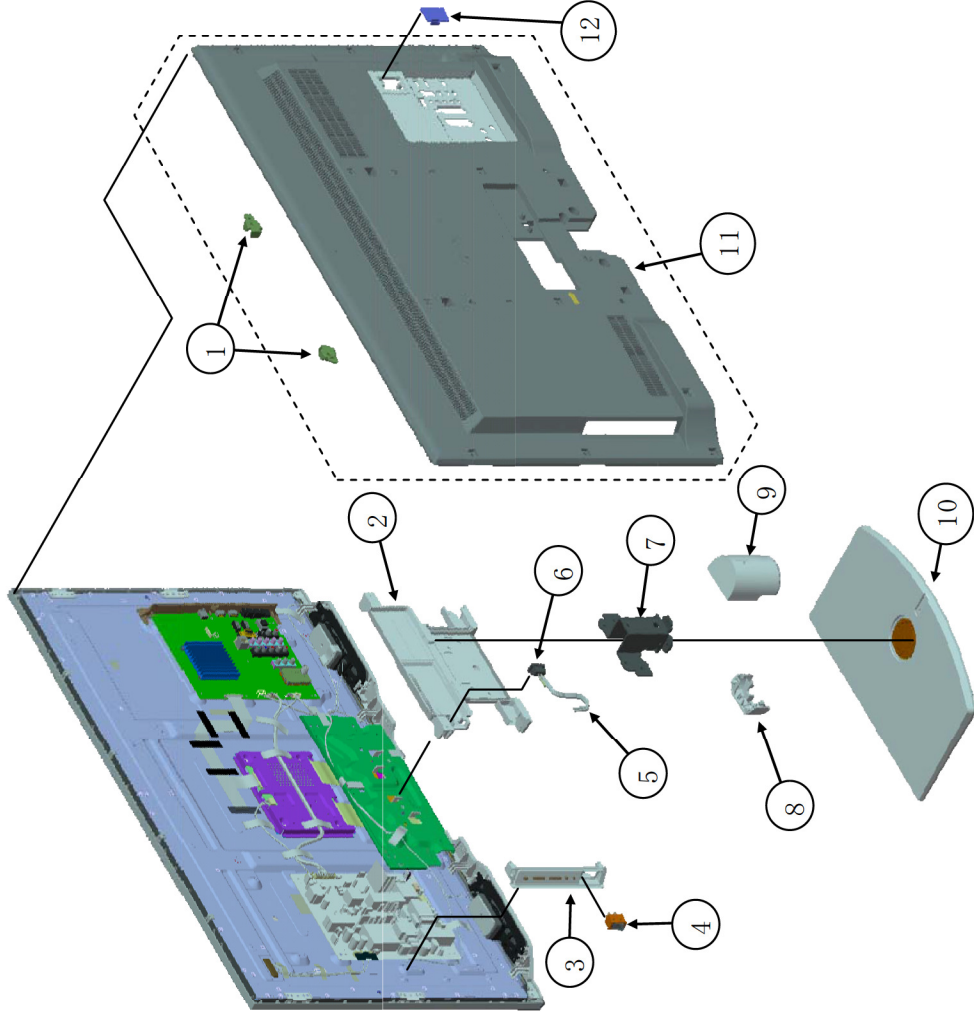

REF. No.	PART No.	DESCRIPTION	REMARK
1	4-164-279-01	BRACKET, VESA (S)	
2	4-177-911-11	COVER, UNDER (40)	
3	1-487-797-11	SWITCH UNIT	
4	1-798-309-11	POWER SWITCH	
5	1-837-642-12	POWER SUPPLY CORD	EX713
6	1-837-646-12	POWER SUPPLY CORD	
6	1-842-031-11	AC INLET (2P)	
7	4-170-450-01	NECK (ML3A)	
8	4-170-477-11	COVER, NECK (M3A FRONT)	EX719
9	4-171-883-11	COVER, NECK (M3A FRONT)	
9	4-170-485-11	COVER, NECK (M3A REAR)	EX719
9	4-171-884-31	COVER, NECK (M3A REAR)	
10	X-2547-301-1	BASE (M3A) ASSY	EX719
10	X-2547-506-2	BASE (M3A) ASSY (GM)	EX710,711,713
11	X-2547-862-2	REAR COVER (40) ASSY	EX715,716,717,719
11	X-2547-892-3	REAR COVER (40) ASSY	
12	*3-106-546-51	COVER,ECS	

EXPLODED VIEWS

5-2. KDL-40EX710/711/713/715/716/717/718/719 5-2-2. CHASSIS-2

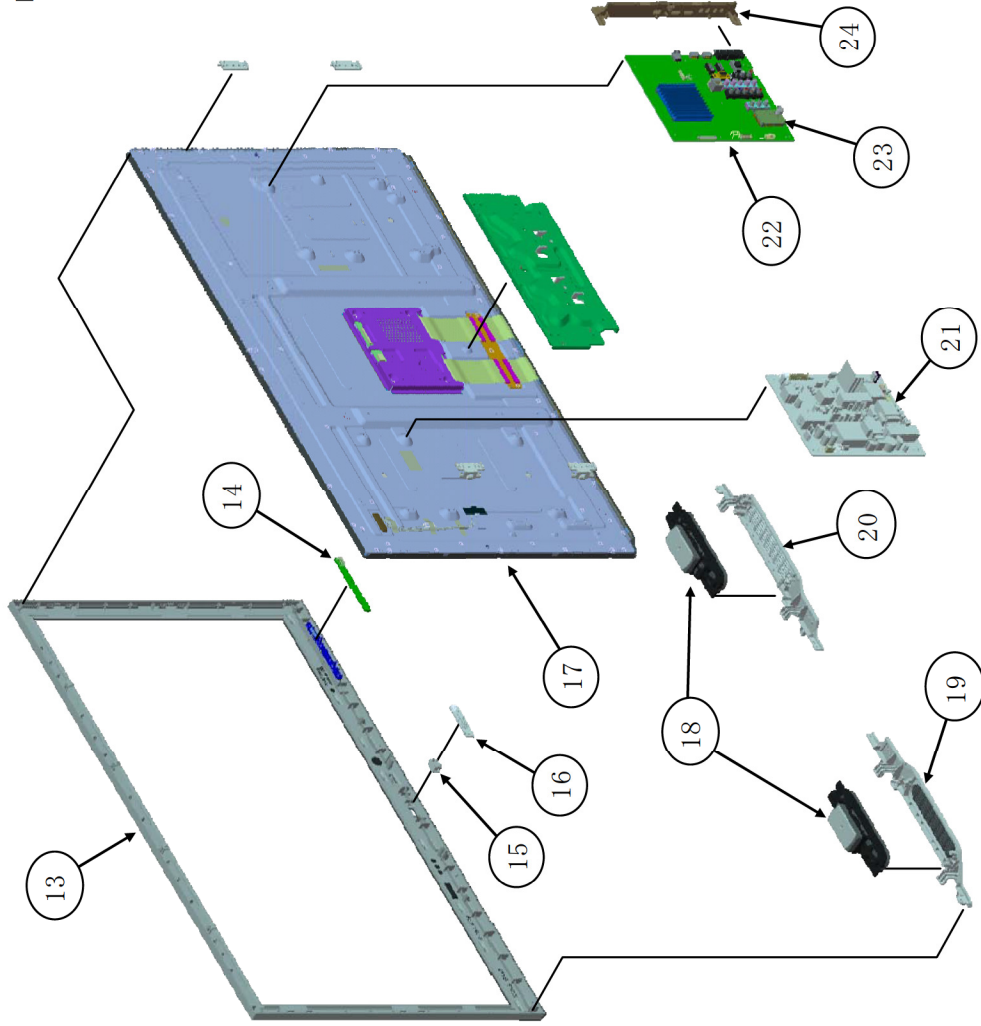

REF. No.	PART No.	DESCRIPTION	REMARK
13	X-2549-215-1	BEZEL (40) ASSY	EX710,713,715,719
	X-2549-216-1	BEZEL (40) ASSY	EX711,716,718
	X-2549-217-1	BEZEL (40) ASSY	EX717
14	A-1744-404-A	HLR MOUNT	
15	1-856-068-11	LENS	
	1-856-068-31	LENS	EX717
16	A-1736-860-A	HMS2 MOUNT	
17	1-811-229-11	LCD PANEL (S40TDL-N)	
18	1-826-873-41	LOUDSPEAKER (3.4x17.5CM)	
19	4-176-760-11	BRACKET, SP R (32)	
20	4-176-759-11	BRACKET, SP L (32)	
21	1-474-213-11	STATIC CONVERTER (TV)-GE3A	
22	A-1763-466-A	BAL BOARD COMPLETE	EX710,711
	A-1763-467-A	BAL BOARD COMPLETE	EX715,716,717,718,719
	A-1763-468-A	BAL BOARD COMPLETE	EX713
23	8-597-719-00	UNIVERSAL SIL-TU SUT-AE101T	EX710,711
	8-597-717-00	UNIVERSAL SIL-TU SUT-VE101T	EX715,716,717,718,719
	8-597-733-00	UNIVERSAL SIL-TU SUT-HE111T	EX713
24	4-166-268-12	BRACKET, SIDE JACK	