

SECTION 8

EXPLODED VIEWS

KP-48PS1/53PS1/61PS1
48PS1K/53PS1K/61PS1K

RM-892


NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark Δ are critical for safety. Replace only with part number specified.

8-1. SCREEN AND COVER BLOCK (KP-48)

- : 7-685-661-79 +BVTP 4X12
 ○ : 7-685-663-79 +BVTP 4X16

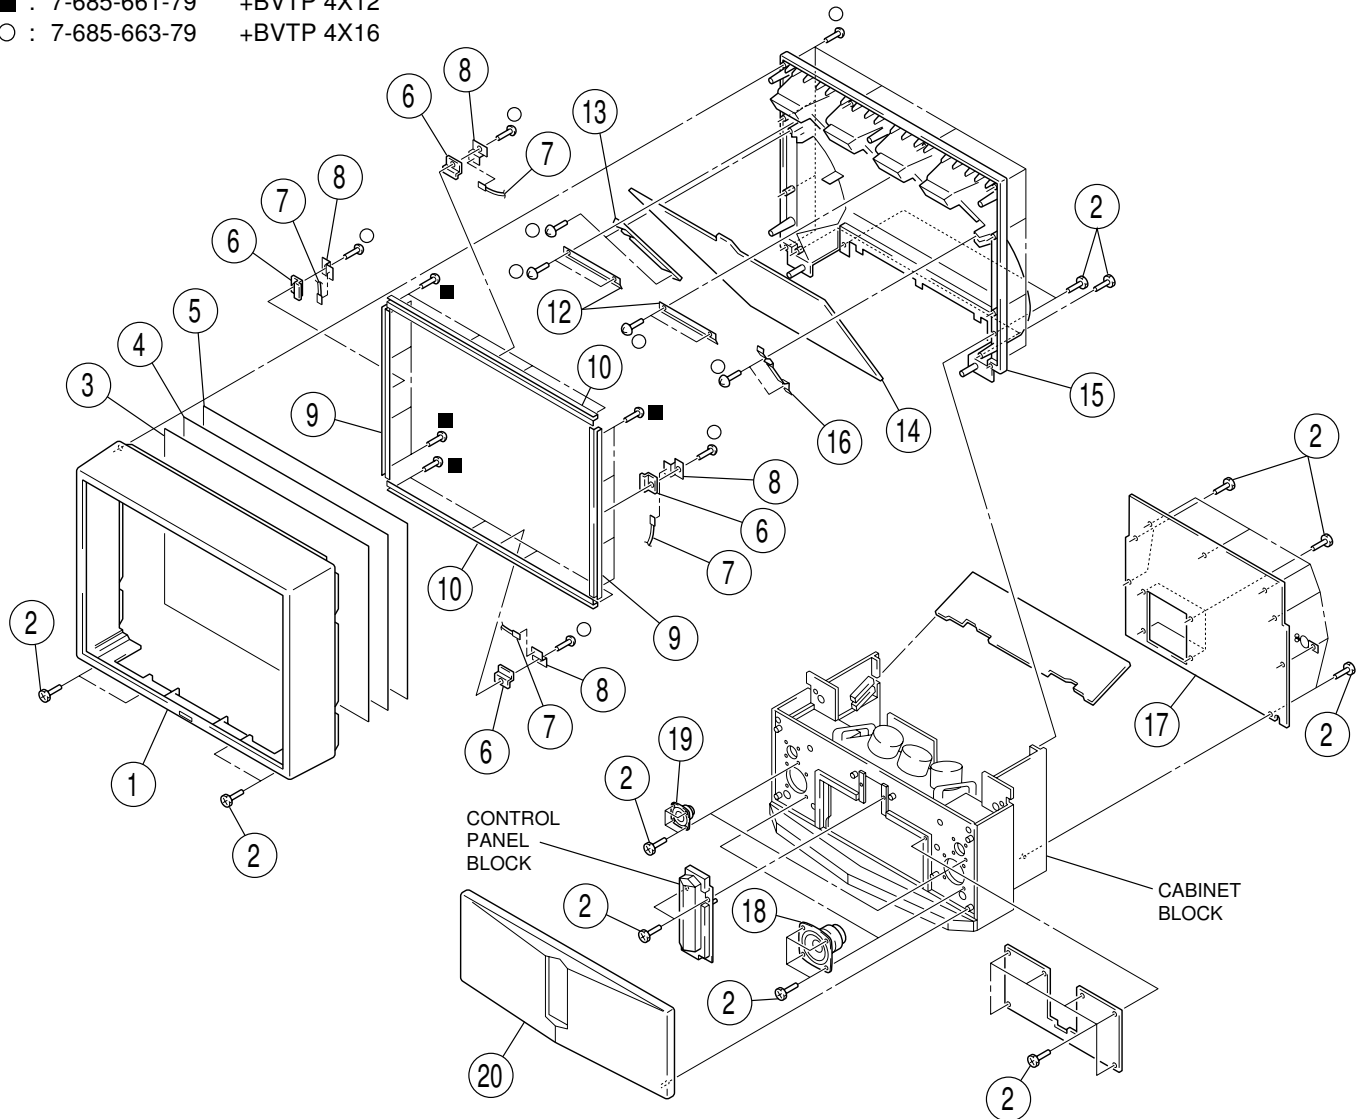


REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
1	X-4037-628-1	BEZNET ASSY		12	4-064-042-01	HOLDER, MIRROR	
2	4-378-522-31	SCREW, TAPPING, HEXAGON HEAD		13	*4-051-790-02	HOLDER, MIRSD (L)	
3	4-064-041-11	SCREEN (48), CONTRAST		14	*4-075-261-01	MIRROR (48)	
4	4-075-440-11	PLATE (48L), DIFFUSION		15	*4-057-610-01	COVER, MIRROR	
5	4-075-504-11	PLATE (48F), DIFFUSION		16	*4-051-789-02	HOLDER, MIRSD (R)	
6	*4-205-155-01	COVER, SENSOR		17	*4-075-258-01	BOARD (48), REAR	
7	1-528-864-11	BATTERY, SOLAR		18	1-529-405-11	SPEAKER (13 CM)	
8	*4-066-132-01	HOLDER, SENSOR		19	1-529-404-11	SPEAKER (5 CM)	
9	*4-064-051-01	HOLDER (V48), SCREEN		20	X-4037-629-1	GRILLE ASSY, SPEAKER	
10	*4-062-052-01	HOLDER (H), SCREEN					

8-2. CONTROL PANEL AND CABINET BLOCK (KP-48)

- ▲ : 7-685-534-19 +BVTP 2.6X8
△ : 7-685-648-79 +BVTP 3X12
● : 7-685-663-71 +BVTP 4X16

The components identified by shading and mark △ are critical for safety.
Replace only with part number specified.

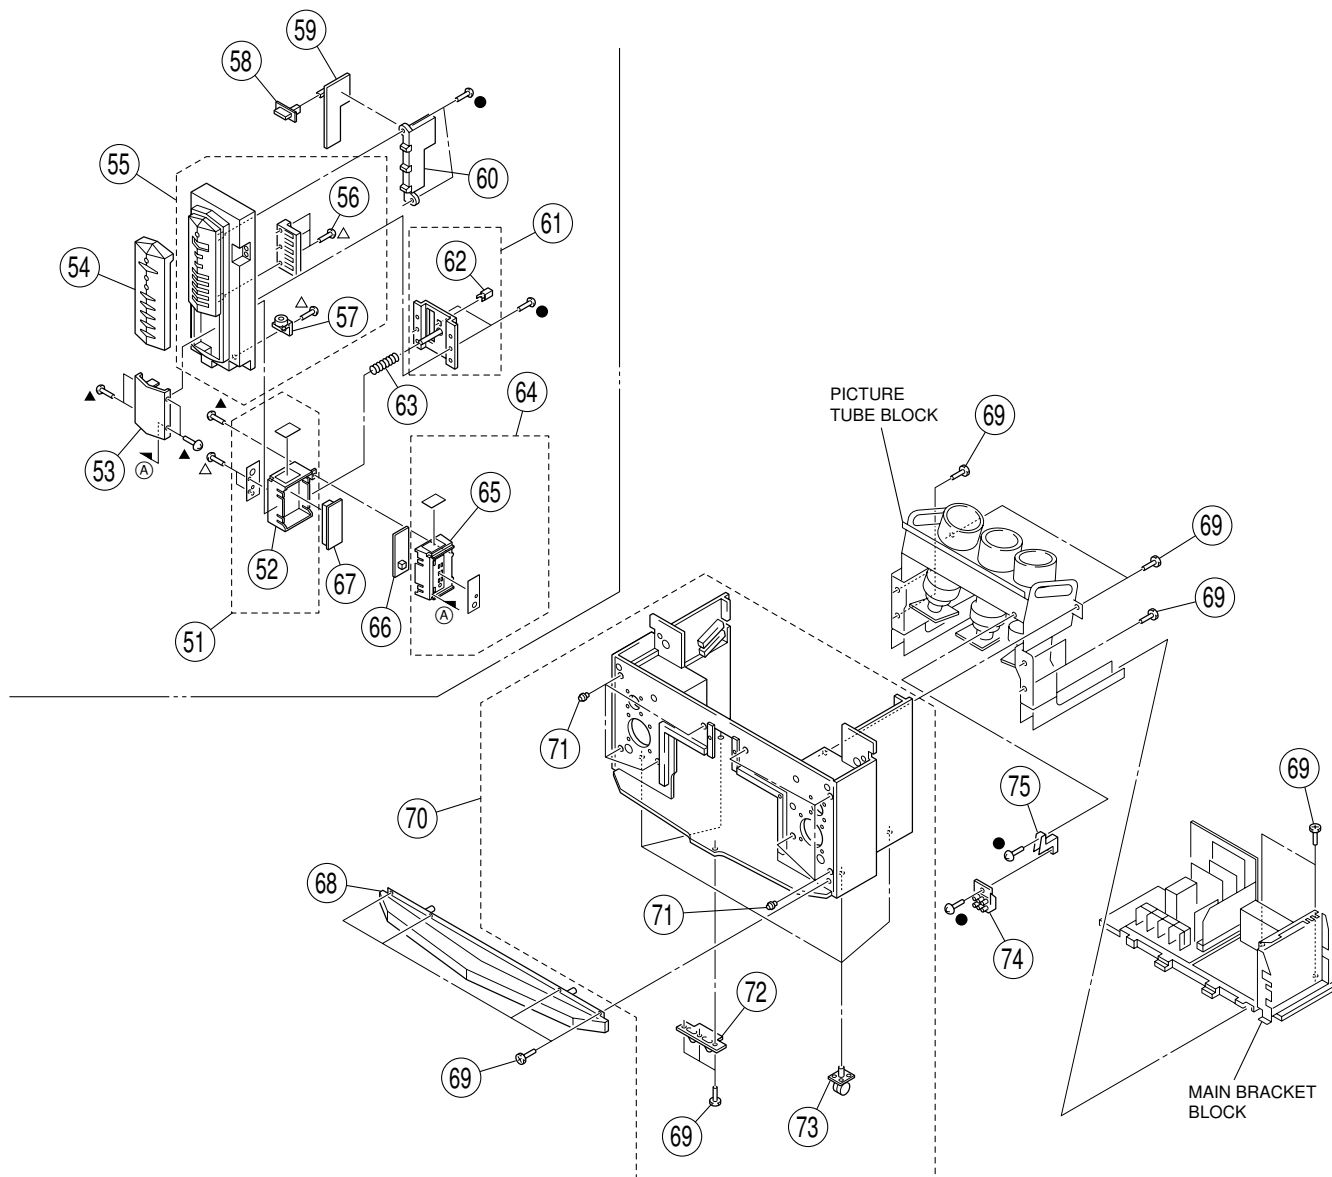


REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
51	X-4037-626-1	TRAY (L) ASSY		52	64	X-4037-625-1 TRAY (R) ASSY	65
52	4-072-001-02	TRAY (L)		53	65	4-072-000-11 TRAY (R)	
53	4-071-999-12	PANEL (T)		54	66	* A-1372-758-A H2 BOARD, COMPLETE	
54	4-072-007-11	PANEL (C)		55	67	* A-1372-759-A H3 BOARD, COMPLETE	
55	X-4037-024-2	PANEL ASSY, CONTROL	56, 57	56	68	* 4-075-256-01 SKIRT, FRONT	
56	4-071-997-01	BUTTON, MULTI		57	69	4-378-522-31 SCREW, TAPPING, HEXAGON HEAD	
57	4-919-393-01	DAMPER		58	70	* X-4037-627-2 CABINET (48) ASSY	69, 71-73
58	4-071-995-01	BUTTON, POWER		59	71	4-063-421-02 LATCH (K)	
59	* A-1372-757-A	H1 BOARD, COMPLETE		60	72	4-075-874-01 FOOT, PLASTIC	
60	* 4-071-998-01	BRACKET (HA)		61	73	4-075-244-01 CASTER (DIA. 30)	
61	X-4037-221-2	HOLDER ASSY, TRAY		62	74	△ 1-223-925-11 RESISTOR ASSY (HIGH-VOLTAGE)	(FOCUS PACK)
62	4-047-464-01	CATCHER, PUSH		63	75	* 4-054-825-01 BRACKET, FOCUS PACK	
63	4-075-242-01	SPRING (T)					

8-7. MAIN BRACKET BLOCK

- △ : 7-685-648-79 +BVTP 3X12
● : 7-685-663-71 +BVTP 4X16
○ : 7-685-663-79 +BVTP 4X16
□ : 7-685-872-09 +BVTT 3X8

The components identified by shading and mark △ are critical for safety.
Replace only with part number specified.

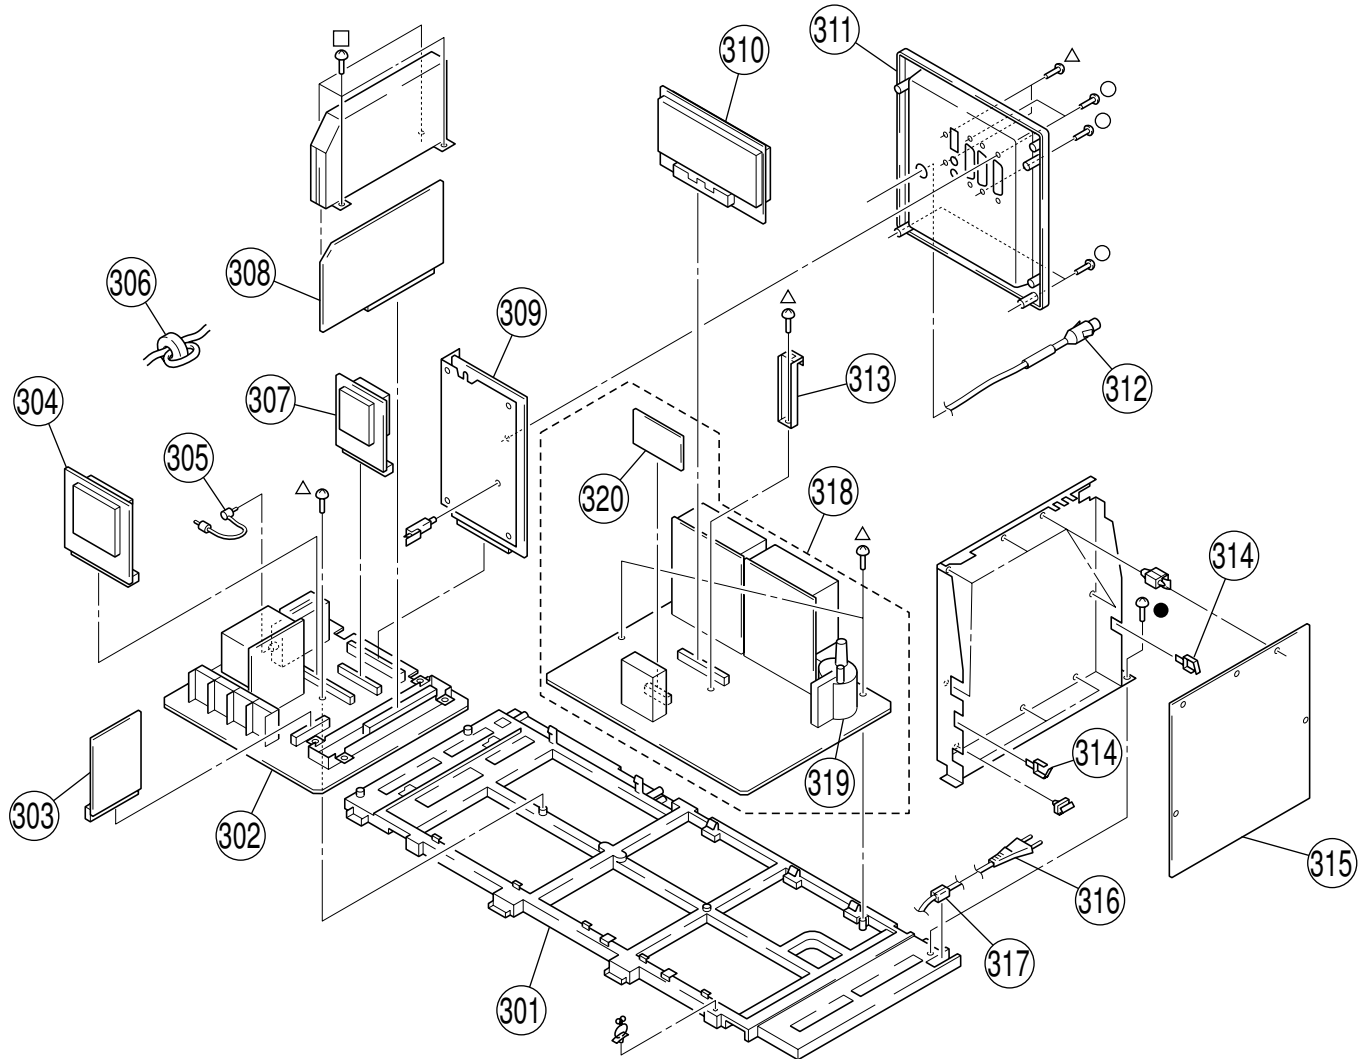


REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
301	* 4-062-537-01	BRACKET, MAIN		314	* 4-316-015-00	HOLDER, WIRE	
302	* A-1299-119-A	A BOARD, COMPLETE		315	* A-1316-512-A	G BOARD, COMPLETE	
303	* A-1346-906-A	E BOARD, COMPLETE		316	△ 1-765-286-11	CORD, POWER	
304	* A-1306-585-A	M BOARD, COMPLETE		317	4-389-201-11	HOLDER, AC CORD	
305	* 1-555-110-00	CABLE, PIN		318	* A-1346-907-A	D BOARD, COMPLETE	319, 320 (48PS1/48PS1K)
306	1-543-982-11	CORE, FERRITE		318	* A-1346-908-A	D BOARD, COMPLETE	319, 320 (53PS1/53PS1K)
307	* A-1394-969-A	S BOARD, COMPLETE		318	* A-1346-909-A	D BOARD, COMPLETE	319, 320 (61PS1/61PS1K)
308	* A-1136-076-A	B3 BOARD, COMPLETE		319	△ 1-453-335-11	TRANSFORMER ASSY, FLYBACK NX-4010//M3P4	
309	* A-1394-970-A	J BOARD, COMPLETE		320	* A-1343-788-A	DS BOARD, COMPLETE	
310	* A-1136-077-A	BD BOARD, COMPLETE					
311	4-075-243-01	TERMINAL BOARD					
312	1-790-082-11	CABLE, RF					
313	* 3-657-516-11	SUPPORT, PRINTED CIRCUIT BOARD					

8-8. PICTURE TUBE BLOCK

● : 7-685-663-71 +BVTP 4X16

The components identified by shading and mark Δ are critical for safety.
Replace only with part number specified.

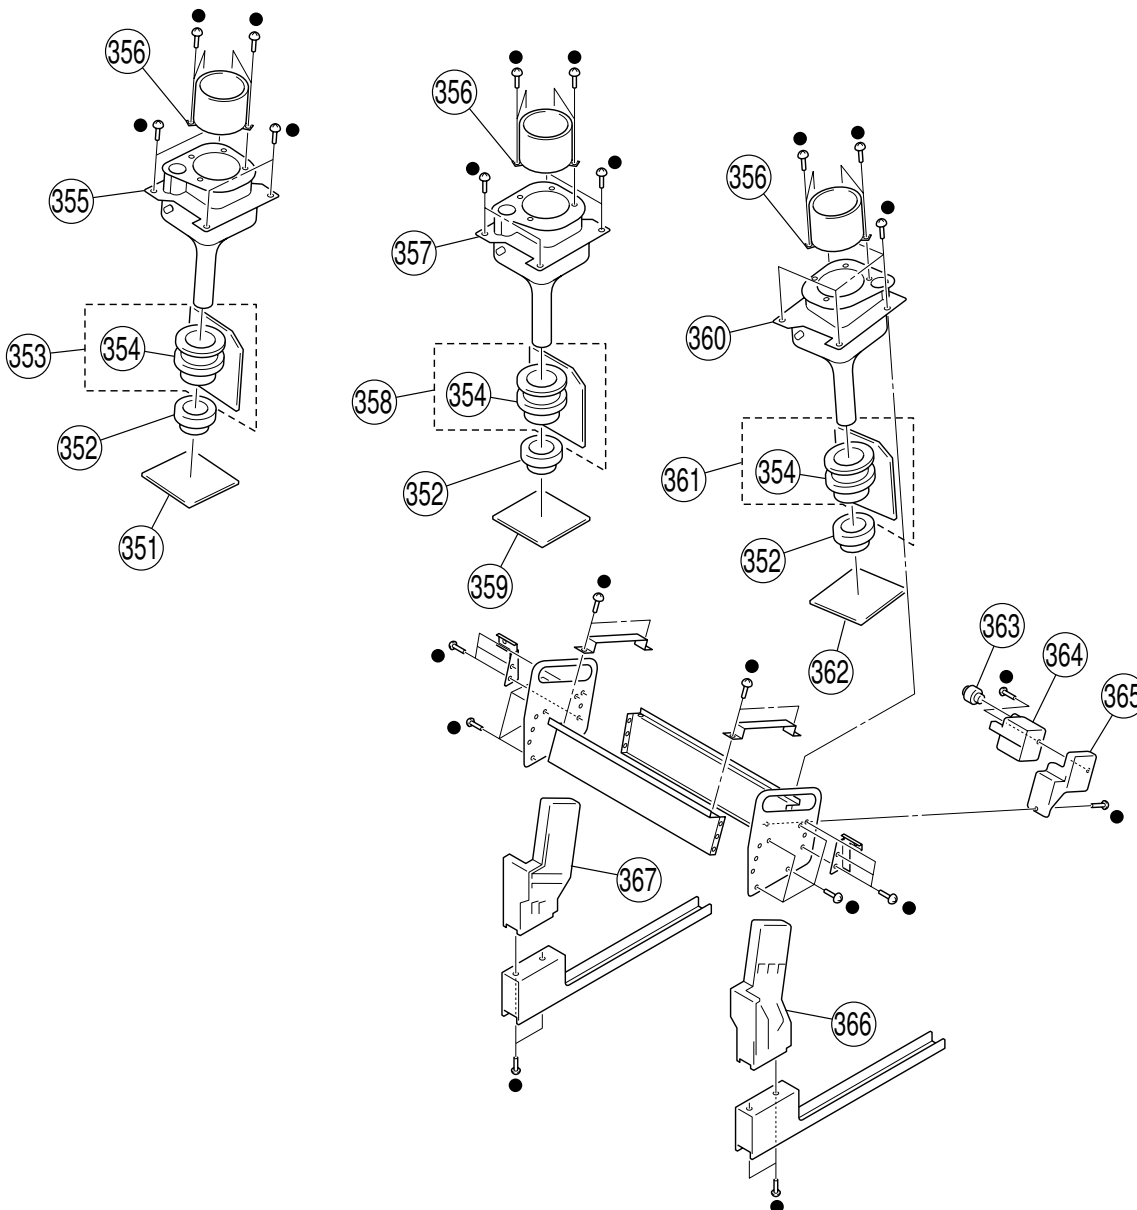

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
351	* A-1332-020-A	CR BOARD, COMPLETE		359	* A-1332-021-A	CG BOARD, COMPLETE	
352	Δ 1-452-790-21	NECK ASSY (NA-295)		360	Δ 8-733-575-15	PICTURE TUBE 07MXC3 (R) (HEATER)	
353	* A-1390-999-A	ZR BOARD, COMPLETE	354			(EXCEPT 61PS1/61PS1K)	
354	Δ 1-451-465-21	DEFLECTION YOKE		360	Δ 8-733-576-15	PICTURE TUBE 07MXC4 (R) (HEATER)	
355	Δ 8-733-572-15	PICTURE TUBE 07MXC3 (R) (HEATER)				(61PS1/61PS1K)	
		(EXCEPT 61PS1/61PS1K)		361	* A-1391-001-A	ZB BOARD, COMPLETE	354
355	Δ 8-733-573-15	PICTURE TUBE 07MXC4 (R) (HEATER)		362	* A-1332-022-A	CB BOARD, COMPLETE	
		(61PS1/61PS1K)		363	4-373-137-01	CAP (Z), RUBBER	
356	4-040-131-21	LENS (LINNIT POINT 6) (61PS1/61PS1K)		364	Δ 8-598-955-12	BLOCK ASSY, HIGH-VOLTAGE	
356	4-056-258-11	LENS (DELTA 78)		365	* 4-063-176-01	HOLDER, HVR	
		(EXCEPT 61PS1/61PS1K)		366	* 4-066-135-01	STAY (R), SIDE	
357	Δ A-1501-273-A	SEAL (G) ASSY, MECHANICAL		367	* 4-066-134-01	STAY (L), SIDE	
358	* A-1391-000-A	ZG BOARD, COMPLETE	354				