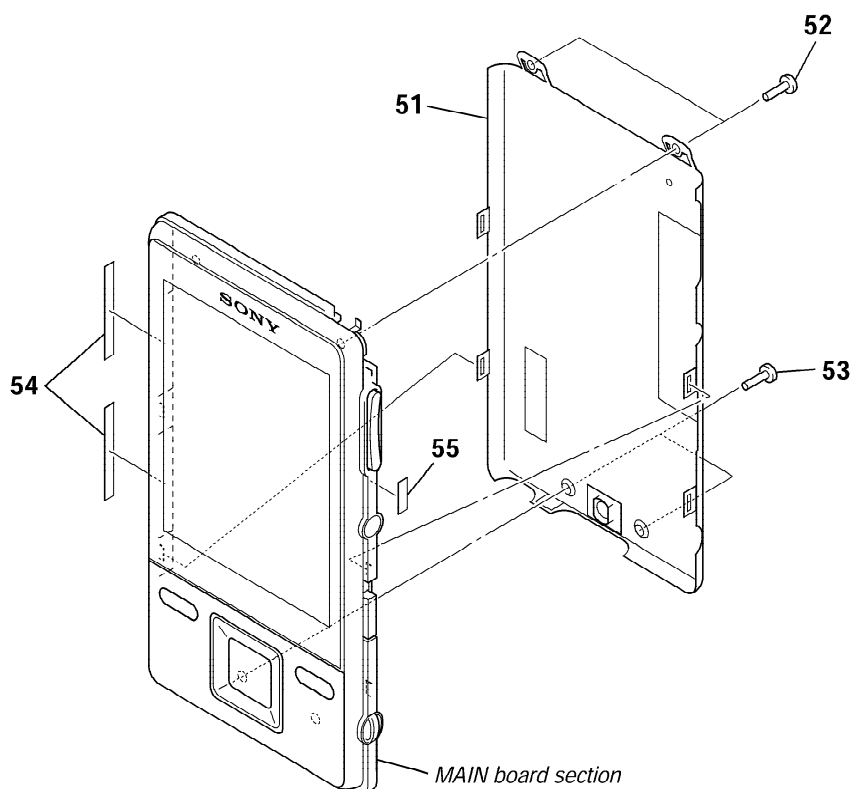


- Abbreviation
 - AUS : Australian model
 - CH : Chinese model
 - CND : Canadian model
 - EE : East European model
 - FR : French model
 - JE : Tourist model
 - MX : Mexican model


43

6-2. REAR ASSY SECTION




Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	X-2190-864-1	REAR ASSY (BLACK) (NWZ-A826: AEP, UK)		51	X-2190-893-1	REAR ASSY (PINK) (NWZ-A828: E)	
51	X-2190-865-1	REAR ASSY (SILVER) (NWZ-A826: AEP, UK)		51	X-2190-894-1	REAR ASSY (BLACK) (NWZ-A829: AEP, UK)	
51	X-2190-866-1	REAR ASSY (PINK) (NWZ-A826: AEP, UK)		51	X-2190-895-1	REAR ASSY (GOLD) (NWZ-A829: AEP, UK)	
51	X-2190-867-1	REAR ASSY (GOLD) (NWZ-A826: AEP, UK)		51	X-2190-896-1	REAR ASSY (BLACK) (NWZ-A829: FR)	
51	X-2190-868-1	REAR ASSY (BLACK) (NWZ-A826: FR)		51	X-2190-897-1	REAR ASSY (GOLD) (NWZ-A829: FR)	
51	X-2190-869-1	REAR ASSY (SILVER) (NWZ-A826: FR)		51	X-2190-898-1	REAR ASSY (BLACK) (NWZ-A829: EE)	
51	X-2190-870-1	REAR ASSY (PINK) (NWZ-A826: FR)		51	X-2190-899-1	REAR ASSY (GOLD) (NWZ-A829: EE)	
51	X-2190-871-1	REAR ASSY (GOLD) (NWZ-A826: FR)		51	X-2190-900-1	REAR ASSY (BLACK) (NWZ-A829: US)	
51	X-2190-872-1	REAR ASSY (BLACK) (NWZ-A826: EE)		51	X-2190-901-1	REAR ASSY (BLACK) (NWZ-A829: CND)	
51	X-2190-873-1	REAR ASSY (SILVER) (NWZ-A826: EE)		51	X-2190-902-1	REAR ASSY (BLACK) (NWZ-A829: E, JE)	
51	X-2190-874-1	REAR ASSY (PINK) (NWZ-A826: EE)		51	X-2190-903-1	REAR ASSY (BLACK) (NWZ-A829: MX)	
51	X-2190-875-1	REAR ASSY (GOLD) (NWZ-A826: EE)		51	X-2190-904-1	REAR ASSY (PINK) (NWZ-A829: MX)	
51	X-2190-876-1	REAR ASSY (BLACK) (NWZ-A826: CH)		51	X-2190-905-1	REAR ASSY (BLACK) (NWZ-A826K: UK)	
51	X-2190-877-1	REAR ASSY (WHITE) (NWZ-A826: CH)		51	X-2190-907-1	REAR ASSY (BLACK) (NWZ-A826K: EE)	
51	X-2190-878-1	REAR ASSY (BLACK) (NWZ-A826: E)		51	X-2190-908-1	REAR ASSY (BLACK) (NWZ-A826K: AEP)	
51	X-2190-879-1	REAR ASSY (BLACK) (NWZ-A828: AEP, UK)		51	X-2190-910-1	REAR ASSY (BLACK) (NWZ-A826K: CND)	
51	X-2190-880-1	REAR ASSY (SILVER) (NWZ-A828: AEP, UK)		51	X-2190-912-1	REAR ASSY (BLACK) (NWZ-A826K: E)	
51	X-2190-881-1	REAR ASSY (PINK) (NWZ-A828: AEP, UK)		51	X-2190-913-1	REAR ASSY (BLACK) (NWZ-A826K: AUS)	
51	X-2190-882-1	REAR ASSY (GOLD) (NWZ-A828: AEP, UK)		51	X-2190-914-1	REAR ASSY (BLACK) (NWZ-A828K: UK)	
51	X-2190-883-1	REAR ASSY (BLACK) (NWZ-A828: FR)		51	X-2190-917-1	REAR ASSY (BLACK) (NWZ-A828K: AEP)	
51	X-2190-884-1	REAR ASSY (SILVER) (NWZ-A828: FR)		51	X-2190-918-1	REAR ASSY (BLACK) (NWZ-A828K: US)	
51	X-2190-885-1	REAR ASSY (PINK) (NWZ-A828: FR)		51	X-2318-938-1	REAR ASSY (BLACK) (NWZ-A826: MX)	
51	X-2190-886-1	REAR ASSY (GOLD) (NWZ-A828: FR)		52	3-234-449-31	SCREW (M1.4)	
51	X-2190-887-1	REAR ASSY (BLACK) (NWZ-A828: EE)		53	3-279-359-01	SCREW, ORNAMENTAL (for BLACK, GOLD)	
51	X-2190-888-1	REAR ASSY (SILVER) (NWZ-A828: EE)		53	3-279-359-11	SCREW, ORNAMENTAL (for WHITE, PINK, SILVER)	
51	X-2190-889-1	REAR ASSY (PINK) (NWZ-A828: EE)		54	3-874-256-01	SHEET (OA), ADHESIVE	
51	X-2190-890-1	REAR ASSY (GOLD) (NWZ-A828: EE)		55	3-874-257-01	SHEET (OC), ADHESIVE	
51	X-2190-891-1	REAR ASSY (BLACK) (NWZ-A828: CH)					
51	X-2190-892-1	REAR ASSY (BLACK) (NWZ-A828: E)					

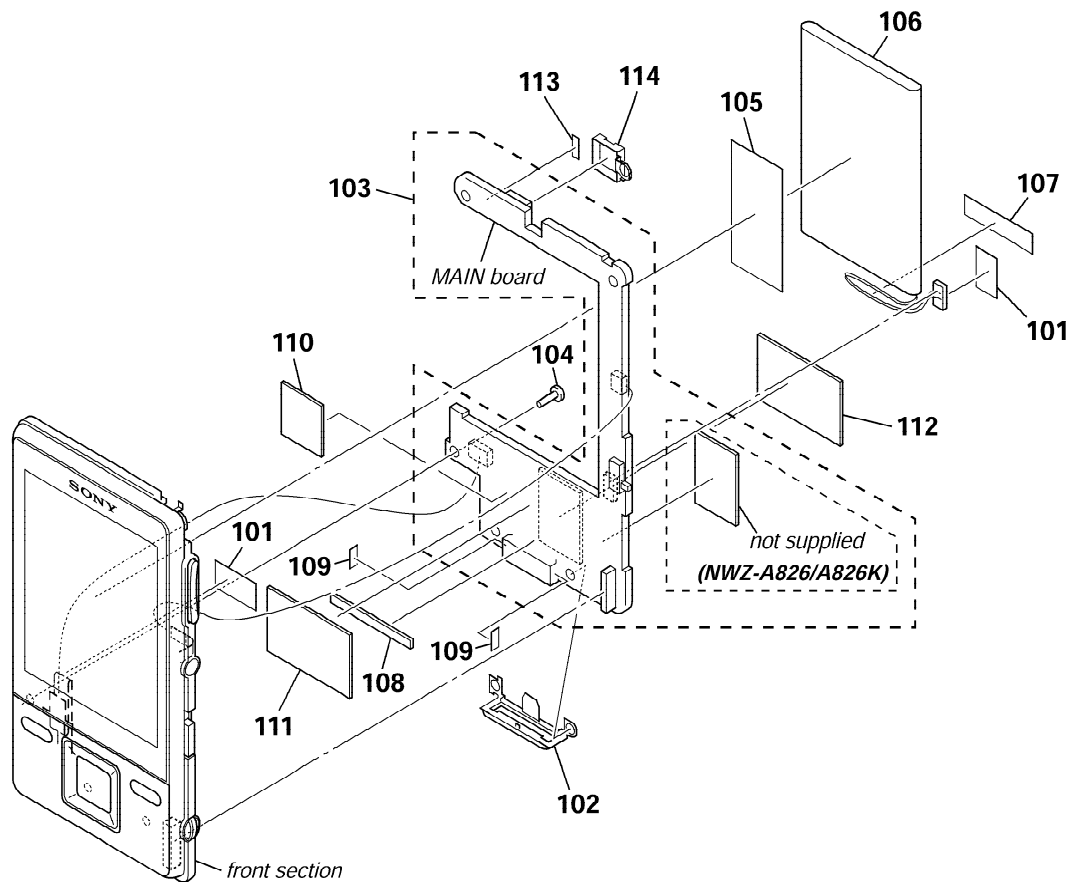6-3. MAIN BOARD SECTION



Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	3-242-558-01	SPACER (LINE IN)		103	X-2190-616-1	MAIN BOARD, COMPLETE (for SERVICE) (8G)	
102	3-279-346-01	ESCUTCHEON (CN) (for BLACK, GOLD)				(NWZ-A828: E)	
102	3-279-346-11	ESCUTCHEON (CN) (for WHITE, PINK, SILVER)		103	X-2190-617-1	MAIN BOARD, COMPLETE (for SERVICE) (16G)	
103	X-2190-606-1	MAIN BOARD, COMPLETE (for SERVICE) (4G)				(NWZ-A829: E, MX, JE)	
		(NWZ-A826K: CND)		103	X-2190-618-1	MAIN BOARD, COMPLETE (for SERVICE) (4G)	
103	X-2190-607-1	MAIN BOARD, COMPLETE (for SERVICE) (8G)				(NWZ-A826: CH)	
		(NWZ-A828K: US)		103	X-2190-619-1	MAIN BOARD, COMPLETE (for SERVICE) (8G)	
						(NWZ-A828: CH)	
103	X-2190-608-1	MAIN BOARD, COMPLETE (for SERVICE) (16G)		104	3-254-136-01	SCREW (B1.4)	
		(NWZ-A829: US, CND)		105	3-279-352-01	SHEET (BATT), ADHESIVE	
103	X-2190-609-1	MAIN BOARD, COMPLETE (for SERVICE) (4G)		106	1-756-702-11	BATTERY, LITHIUM ION STORAGE	
		(NWZ-A826: FR)				(E, MX, AUS, CH, JE)	
103	X-2190-610-1	MAIN BOARD, COMPLETE (for SERVICE) (8G)		106	X-2190-605-1	BATTERY ASSY (US, CND, AEP, UK, FR, EE)	
		(NWZ-A828: FR)		107	3-275-663-01	SHEET, BATT WIRE	
103	X-2190-611-1	MAIN BOARD, COMPLETE (for SERVICE) (16G)		108	3-874-253-01	CUSHION (WM-P)	
		(NWZ-A829: FR)		109	3-874-254-01	SHEET (WM-P)	
103	X-2190-612-1	MAIN BOARD, COMPLETE (for SERVICE) (4G)		110	3-295-077-01	SPACER (PWB-S)	
		(NWZ-A826: AEP, UK, EE/A826K: AEP, UK, EE)		111	3-295-078-01	CUSHION (PWB)	
103	X-2190-613-1	MAIN BOARD, COMPLETE (for SERVICE) (8G)		112	3-295-078-11	CUSHION (PWB)	
		(NWZ-A828: AEP, UK, EE/A828K: AEP, UK)		113	3-873-663-01	SPACER (BT-P)	
103	X-2190-614-1	MAIN BOARD, COMPLETE (for SERVICE) (16G)		114	3-700-202-02	PLATE, SHIELD	
		(NWZ-A829: AEP, UK, EE)					
103	X-2190-615-1	MAIN BOARD, COMPLETE (for SERVICE) (4G)					
		(NWZ-A826: E, MX/A826K: E, AUS)					

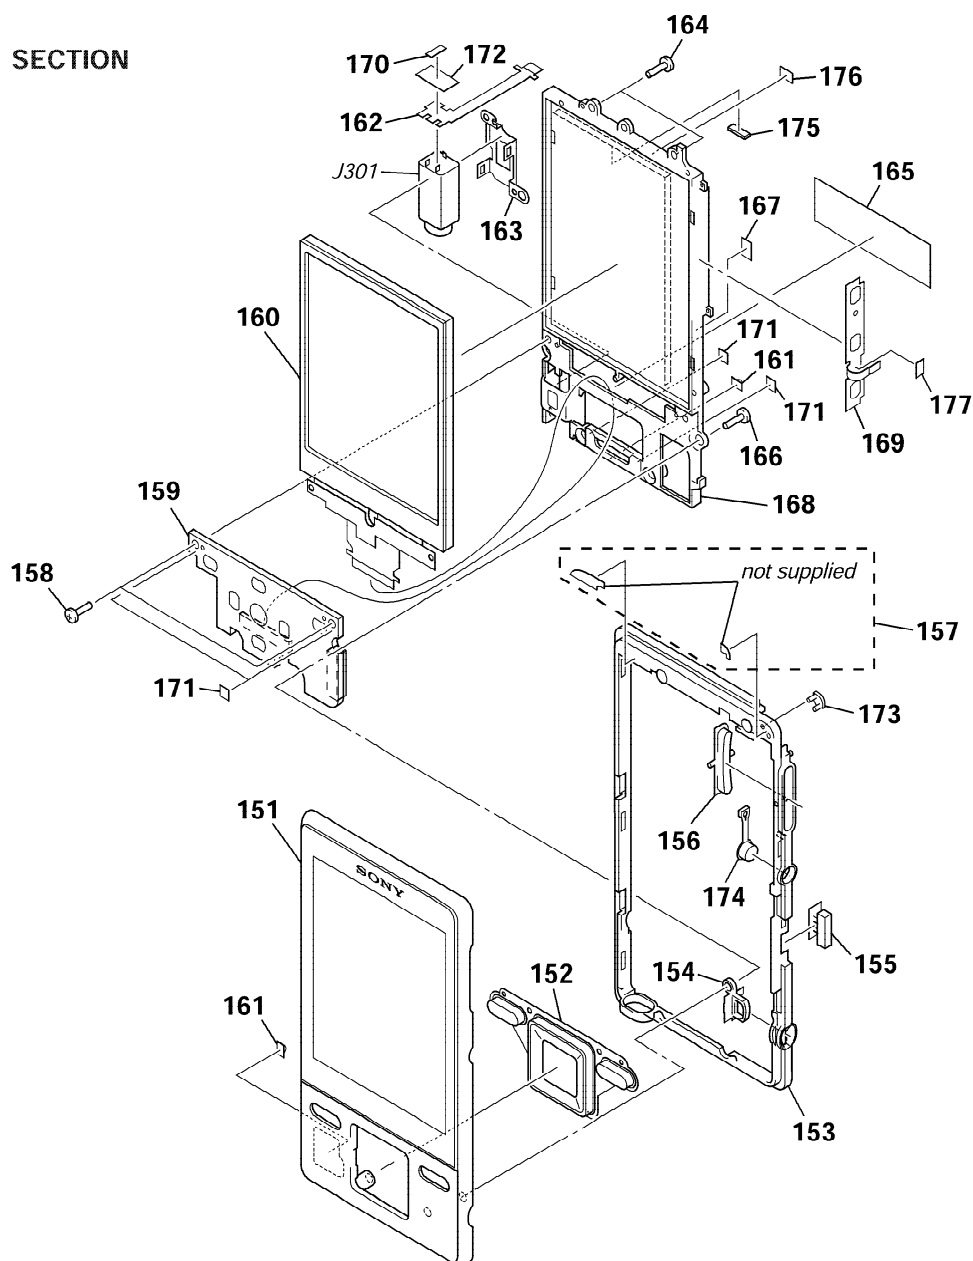6-4. FRONT SECTION



Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	X-2190-680-1	FRONT ASSY (B) (for BLACK)		162	1-875-533-11	HP FLEXIBLE PRINT BOARD	
151	X-2190-681-1	FRONT ASSY (P) (for PINK)		163	3-279-342-02	PLATE (HP), FIXED	
151	X-2190-682-1	FRONT ASSY (N) (for GOLD)		164	3-254-135-01	SCREW (B1.4)	
151	X-2190-696-1	FRONT ASSY (W/S) (for WHITE, SILVER)		165	3-398-056-01	SHEET (LCD-B)	
152	3-279-338-01	BUTTON, FRONT (for BLACK) (BACK, ▲▶▼◀, ▶■, OPTION)		166	3-254-136-01	SCREW (B1.4)	
152	3-279-338-11	BUTTON, FRONT (for WHITE, SILVER) (BACK, ▲▶▼◀, ▶■, OPTION)		167	3-874-255-01	SHEET (WR)	
152	3-279-338-21	BUTTON, FRONT (for PINK) (BACK, ▲▶▼◀, ▶■, OPTION)		168	3-279-340-01	CHASSIS, MAIN	
152	3-279-338-31	BUTTON, FRONT (for GOLD) (BACK, ▲▶▼◀, ▶■, OPTION)		169	1-798-110-11	KEY, SHEET	
153	3-279-332-11	BELT, ORNAMENTAL		170	3-289-896-01	SPACER (HP)	
154	3-279-339-01	BRACKET, STRAP		171	3-874-258-01	SPACER (WM-P)	
155	3-279-336-01	KNOB (HOLD)		172	3-874-838-01	SHEET (COVER HP)	
156	3-279-334-01	BUTTON (VOL) (- VOL +)		173	3-279-333-01	LIGHT, GUIDE	
157	3-398-061-01	SHEET (OB), ADHESIVE		174	3-279-335-02	BUTTON (BT) (for BLACK)	
158	3-234-449-27	SCREW (M1.4)		174	3-279-335-12	BUTTON (BT) (for WHITE, SILVER)	
159	A-1506-857-A	SW BOARD, COMPLETE		174	3-279-335-22	BUTTON (BT) (for PINK)	
160	X-2190-604-1	LCD ASSY		174	3-279-335-32	BUTTON (BT) (for GOLD)	
161	3-279-351-01	CONNECTOR (A), RUBBER		175	3-873-664-01	SPACER (BT-C)	
				176	3-876-067-01	LEAF (CHASSIS), COPPER	
				177	3-279-354-01	SHEET (ORNAMENT), ADHESIVE	
				J301	1-821-708-11	JACK, WATERPROOF (⌂)	

SECTION 7 ELECTRICAL PARTS LIST

MAIN

Note:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service.
Some delay should be anticipated when ordering these items.
- CAPACITORS
uF: μ F
- COILS
uH: μ H

- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- SEMICONDUCTORS
In each case, u: μ , for example:
uA. . . : μ A. . . , uPA. . . , μ PA. . . ,
uPB. . . : μ PB. . . , uPC. . . , μ PC. . . ,
uPD. . . : μ PD. . .
- Abbreviation
AUS : Australian model
CH : Chinese model
CND : Canadian model
EE : East European model

- FR : French model
JE : Tourist model
MX : Mexican model

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	X-2190-606-1	MAIN BOARD, COMPLETE (for SERVICE) (4G) (NWZ-A826K: CND)		C310	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V
	X-2190-607-1	MAIN BOARD, COMPLETE (for SERVICE) (8G) (NWZ-A828K: US)		C311	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V
	X-2190-608-1	MAIN BOARD, COMPLETE (for SERVICE) (16G) (NWZ-A829: US, CND)		C312	1-100-611-91	CERAMIC CHIP 22uF 20%	6.3V
	X-2190-609-1	MAIN BOARD, COMPLETE (for SERVICE) (4G) (NWZ-A826: FR)		C313	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V
				C314	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V
				C315	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V
	X-2190-610-1	MAIN BOARD, COMPLETE (for SERVICE) (8G) (NWZ-A828: FR)		C316	1-100-786-91	TANTAL. CHIP 22uF 20%	6.3V
	X-2190-611-1	MAIN BOARD, COMPLETE (for SERVICE) (16G) (NWZ-A829: FR)		C319	1-100-507-91	CERAMIC CHIP 4.7uF 20%	6.3V
	X-2190-612-1	MAIN BOARD, COMPLETE (for SERVICE) (4G) (NWZ-A826: AEP, UK, EE/A826K: AEP, UK, EE)		C321	1-107-819-11	CERAMIC CHIP 0.022uF 10%	16V
	X-2190-613-1	MAIN BOARD, COMPLETE (for SERVICE) (8G) (NWZ-A828: AEP, UK, EE/A828K: UK)		C326	1-100-415-91	CERAMIC CHIP 0.47uF 10%	6.3V
	X-2190-614-1	MAIN BOARD, COMPLETE (for SERVICE) (16G) (NWZ-A829: AEP, UK, EE)		C327	1-218-990-81	SHORT CHIP 0	
				C328	1-218-990-81	SHORT CHIP 0	
	X-2190-615-1	MAIN BOARD, COMPLETE (for SERVICE) (4G) (NWZ-A826: E, MX/A826K: E, AUS)		C329	1-218-990-81	SHORT CHIP 0	
	X-2190-616-1	MAIN BOARD, COMPLETE (for SERVICE) (8G) (NWZ-A828: E)		C330	1-218-990-81	SHORT CHIP 0	
	X-2190-617-1	MAIN BOARD, COMPLETE (for SERVICE) (16G) (NWZ-A829: E, MX, JE)		C451	1-125-777-11	CERAMIC CHIP 0.1uF 10%	10V
	X-2190-618-1	MAIN BOARD, COMPLETE (for SERVICE) (4G) (NWZ-A826: CH)		C453	1-114-821-21	CERAMIC CHIP 1.8PF 0.1PF	50V
	X-2190-619-1	MAIN BOARD, COMPLETE (for SERVICE) (8G) (NWZ-A828: CH)		C455	1-164-943-81	CERAMIC CHIP 0.01uF 10%	16V
		*****		C456	1-125-777-11	CERAMIC CHIP 0.1uF 10%	10V
		< ANTENNA >		C457	1-100-742-91	CERAMIC CHIP 2.2uF 20%	10V
ANT451	1-754-380-11	HELICAL ANTENNA		C458	1-165-884-11	CERAMIC CHIP 2.2uF 10%	6.3V
		< CAPACITOR >		C459	1-164-931-11	CERAMIC CHIP 100PF 10%	50V
				C501	1-164-856-81	CERAMIC CHIP 18PF 5%	50V
C107	1-137-987-81	CERAMIC CHIP 0.068uF 10%	10V	C502	1-164-854-11	CERAMIC CHIP 15PF 5%	50V
C110	1-165-887-91	CERAMIC CHIP 0.22uF 10%	6.3V	C503	1-100-352-91	CERAMIC CHIP 1uF 20%	16V
C116	1-128-630-91	CERAMIC CHIP 0.0047uF 10%	6.3V	C504	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V
C207	1-137-987-81	CERAMIC CHIP 0.068uF 10%	10V	C505	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V
C208	1-125-777-11	CERAMIC CHIP 0.1uF 10%	10V				
				C506	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V
C210	1-165-887-91	CERAMIC CHIP 0.22uF 10%	6.3V	C507	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V
C216	1-128-630-91	CERAMIC CHIP 0.0047uF 10%	6.3V	C508	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V
C301	1-128-627-91	CERAMIC CHIP 0.001uF 10%	16V	C509	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V
C302	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V	C510	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V
C303	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V				
				C511	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V
C305	1-112-815-91	CERAMIC CHIP 10uF 20%	6.3V	C512	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V
C306	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V	C516	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V
C307	1-112-815-91	CERAMIC CHIP 10uF 20%	6.3V	C517	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V
C308	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V	C518	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V
				C601	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V
				C602	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V
				C603	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V
				C604	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V
				C606	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V
				C607	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V
				C608	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V
				C609	1-119-923-11	CERAMIC CHIP 0.047uF 10%	10V
				C610	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V

MAIN

Ref. No.	Part No.	Description	Remark		
C611	1-128-627-91	CERAMIC CHIP 0.001uF 10%	16V		
C612	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C613	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C616	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C619	1-164-943-81	CERAMIC CHIP 0.01uF 10%	16V		
C620	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C625	1-117-748-81	CERAMIC CHIP 10PF 0.1PF	16V		
C626	1-117-748-81	CERAMIC CHIP 10PF 0.1PF	16V		
C629	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V		
C632	1-100-352-91	CERAMIC CHIP 1uF 20%	16V		
C633	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C634	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C638	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V		
C640	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V		
C641	1-100-611-91	CERAMIC CHIP 22uF 20%	6.3V		
C643	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V		
C644	1-100-611-91	CERAMIC CHIP 22uF 20%	6.3V		
C645	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C646	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C648	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C651	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C652	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C654	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C656	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C661	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C662	1-164-937-11	CERAMIC CHIP 0.001uF 10%	50V		
C664	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C666	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C668	1-117-743-81	CERAMIC CHIP 5PF 0.1PF	16V		
C669	1-117-743-81	CERAMIC CHIP 5PF 0.1PF	16V		
C673	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C674	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C675	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C679	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C681	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C683	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C690	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C691	1-128-632-91	CERAMIC CHIP 0.01uF 10%	6.3V		
C698	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C699	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C701	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C703	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C705	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C707	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C709	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C711	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C713	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C752	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C753	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C754	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C755	1-112-716-11	CERAMIC CHIP 0.1uF 10%	6.3V		
C853	1-128-622-91	CERAMIC CHIP 100PF 10%	16V		
C854	1-164-943-81	CERAMIC CHIP 0.01uF 10%	16V		
C855	1-164-935-11	CERAMIC CHIP 470PF 10%	50V		
C856	1-100-415-91	CERAMIC CHIP 0.47uF 10%	6.3V		
C902	1-100-670-11	CERAMIC CHIP 4.7uF 20%	16V		
C903	1-112-746-11	CERAMIC CHIP 4.7uF 10%	6.3V		
C904	1-112-815-91	CERAMIC CHIP 10uF 20%	6.3V		

Ref. No.	Part No.	Description	Remark		
C905	1-112-815-91	CERAMIC CHIP 10uF 20%	6.3V		
C908	1-100-966-91	CERAMIC CHIP 10uF 20%	10V		
C909	1-100-611-91	CERAMIC CHIP 22uF 20%	6.3V		
C910	1-100-611-91	CERAMIC CHIP 22uF 20%	6.3V		
C912	1-100-611-91	CERAMIC CHIP 22uF 20%	6.3V		
C913	1-164-943-81	CERAMIC CHIP 0.01uF 10%	16V		
C914	1-114-172-91	CERAMIC CHIP 2.2uF 20%	4V		
C916	1-100-506-91	CERAMIC CHIP 1uF 20%	6.3V		
C917	1-125-777-11	CERAMIC CHIP 0.1uF 10%	10V		
C918	1-125-777-11	CERAMIC CHIP 0.1uF 10%	10V		
C919	1-112-746-11	CERAMIC CHIP 4.7uF 10%	6.3V		
C920	1-112-815-91	CERAMIC CHIP 10uF 20%	6.3V		
C921	1-112-815-91	CERAMIC CHIP 10uF 20%	6.3V		
C922	1-125-777-11	CERAMIC CHIP 0.1uF 10%	10V		
C923	1-112-717-91	CERAMIC CHIP 1uF 10%	6.3V		
C924	1-164-937-11	CERAMIC CHIP 0.001uF 10%	50V		
C925	1-112-815-91	CERAMIC CHIP 10uF 20%	6.3V		
< CONNECTOR >					
CN301	1-820-770-21	CONNECTOR, FFC/FPC (ZIF) 11P			
CN601	(Not supplied)	CONNECTOR, BOARD TO BOARD 20P			
CN602	(Not supplied)	CONNECTOR, FPC (ZIF) 4P			
CN851	1-820-771-31	MULTIPLE, CONNECTOR			
CN901	1-820-726-21	RECEPTACLE, CONNECTOR			
< DIODE >					
D101	8-719-083-04	DIODE RSB6.8STE61			
D201	8-719-083-04	DIODE RSB6.8STE61			
D301	6-500-776-01	DIODE MAZW068H0LS0			
D451	8-719-069-29	DIODE RB520S-30FJTE61			
D452	6-502-375-01	LED SMLA13BDTT86ST (BLUETOOTH)			
D851	6-501-877-01	DIODE RB060M-30TR			
< FERRITE BEAD/JUMPER RESISTOR >					
FB101	1-400-851-11	EMI, FERRITE (SMD) (1005)			
FB201	1-400-851-11	EMI, FERRITE (SMD) (1005)			
FB301	1-400-915-21	INDUCTOR (EMI FERRITE) (2012)			
FB451	1-218-990-81	SHORT CHIP 0			
FB601	1-218-990-81	SHORT CHIP 0			
FB608	1-481-258-21	SMD EMI FERRITE			
FB609	1-400-829-11	BEAD, FERRITE (1005)			
FB851	1-218-990-81	SHORT CHIP 0			
FB852	1-218-990-81	SHORT CHIP 0			
FB854	1-218-990-81	SHORT CHIP 0			
FB855	1-218-990-81	SHORT CHIP 0			
FB857	1-218-990-81	SHORT CHIP 0			
FB858	1-400-392-21	INDUCTOR, FERRITE BEAD (1608)			
< FILTER >					
FL501	1-234-939-21	FILTER, EMI REMOVAL (SMD)			
FL601	1-234-939-21	FILTER, EMI REMOVAL (SMD)			
FL701	1-234-939-21	FILTER, EMI REMOVAL (SMD)			

Note: CN601 and CN602 on the MAIN board cannot exchange with single. When CN601 and CN602 on the MAIN board are damaged, exchange the entire mounted board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< IC >				R206	1-220-166-81	RES-CHIP 43 5% 1/16W (NWZ-A826: FR/A828: FR/A829: FR)	
IC301	(Not supplied)	IC XC6401FF58DR		R208	1-218-949-11	RES-CHIP 470 5% 1/16W	
IC302	(Not supplied)	IC CS43L21-CNZR		R209	1-218-949-11	RES-CHIP 470 5% 1/16W	
IC305	(Not supplied)	IC MAX4745ELB+TG069		R210	1-244-161-81	RES-CHIP 2.2 5% 1/16W	
IC451	6-705-673-01	IC TC7PA53FU (TE85LF)		R220	1-240-691-91	METAL CHIP 470 5% 1/20W	
IC452	6-705-673-01	IC TC7PA53FU (TE85LF)					
IC453	(Not supplied)	IC UGNZ4-GA5A		R223	1-218-990-81	SHORT CHIP 0	
IC454	8-759-257-96	IC TC7S14FU (TE85R)		R252	1-240-718-91	METAL CHIP 100K 5% 1/20W	
IC501	(Not supplied)	IC S1R72V27B05E10B		R256	1-240-726-91	METAL CHIP 470K 5% 1/20W	
IC502	6-708-511-01	IC TC7SG08AFS		R302	1-218-990-81	SHORT CHIP 0	
IC503	(Not supplied)	IC TK63731AB1G0B		R304	1-240-720-91	METAL CHIP 150K 5% 1/20W	
IC504	6-711-031-01	IC TK63718HCL-G		R305	1-240-722-91	METAL CHIP 220K 5% 1/20W	
IC508	(Not supplied)	IC TC7SG04AFS		R307	1-240-695-91	METAL CHIP 1K 5% 1/20W	
IC509	(Not supplied)	IC SN74AVC1T45YZPR		R310	1-218-990-81	SHORT CHIP 0	
IC601	(Not supplied)	IC MC-10051BF1-FAE-A		R312	1-218-990-81	SHORT CHIP 0	
IC602	(Not supplied)	IC TK63731AB1G0B		R313	1-240-695-91	METAL CHIP 1K 5% 1/20W	
IC701	(Not supplied)	IC K4M56323PI-HG75T		R314	1-218-990-81	SHORT CHIP 0	
IC751	(Not supplied)	IC TH58NVG6D1DTG20 (NWZ-A829)		R315	1-240-687-91	METAL CHIP 220 5% 1/20W	
IC751	(Not supplied)	IC TH58NVG5D1DTG00 (NWZ-A826/A826K/A828/A828K)		R456	1-218-990-81	SHORT CHIP 0	
IC752	(Not supplied)	IC TH58NVG6D1DTG20 (NWZ-A829)		R457	1-218-990-81	SHORT CHIP 0	
IC752	(Not supplied)	IC TH58NVG5D1DTG00 (NWZ-A828/A828K)		R459	1-220-804-11	RES-CHIP 2.2M 5% 1/16W	
IC901	(Not supplied)	IC MAX8671CETL+TG069		R460	1-218-973-11	RES-CHIP 47K 5% 1/16W	
IC902	(Not supplied)	IC XC61GN3102HR		R461	1-218-965-11	RES-CHIP 10K 5% 1/16W	
IC903	(Not supplied)	IC TK63118BCB-G		R462	1-218-985-11	RES-CHIP 470K 5% 1/16W	
< COIL >				R463	1-218-943-11	RES-CHIP 150 5% 1/16W	
L451	1-414-836-21	INDUCTOR 4.7nH		R464	1-218-943-11	RES-CHIP 150 5% 1/16W	
L601	1-457-412-11	INDUCTOR 10uH		R465	1-218-985-11	RES-CHIP 470K 5% 1/16W	
L602	1-457-412-11	INDUCTOR 10uH		R467	1-218-990-81	SHORT CHIP 0	
L901	1-481-097-11	INDUCTOR 4.7uH		R468	1-218-985-11	RES-CHIP 470K 5% 1/16W	
L902	1-481-097-11	INDUCTOR 4.7uH		R469	1-218-990-81	SHORT CHIP 0	
LF851	1-456-984-11	COIL,COMMONMODECHOKE (SMD1210)		R470	1-218-990-81	SHORT CHIP 0	
< TRANSISTOR >				R471	1-218-985-11	RES-CHIP 470K 5% 1/16W	
Q301	6-550-282-01	TRANSISTOR UNR31A600LS0		R474	1-218-953-11	RES-CHIP 1K 5% 1/16W	
Q302	6-551-186-01	TRANSISTOR EMX18		R502	1-218-990-81	SHORT CHIP 0	
Q303	6-551-186-01	TRANSISTOR EMX18		R503	1-240-718-91	METAL CHIP 100K 5% 1/20W	
Q304	6-550-282-01	TRANSISTOR UNR31A600LS0		R504	1-240-718-91	METAL CHIP 100K 5% 1/20W	
Q451	6-550-789-01	FET SSM3K15FV (TL3SONYZ)		R505	1-240-718-91	METAL CHIP 100K 5% 1/20W	
Q452	6-550-789-01	FET SSM3K15FV (TL3SONYZ)		R506	1-208-906-81	METAL CHIP 6.2K 0.5% 1/16W	
Q454	6-550-791-01	FET SSM3J15FV (TL3SONYZ)		R507	1-218-953-11	RES-CHIP 1K 5% 1/16W	
Q603	6-550-747-01	FET 3LP01S-K-TL-E		R510	1-218-933-11	RES-CHIP 22 5% 1/16W	
Q901	6-550-789-01	FET SSM3K15FV (TL3SONYZ)		R511	1-218-981-91	RES-CHIP 220K 5% 1/16W	
Q903	6-550-791-01	FET SSM3J15FV (TL3SONYZ)		R519	1-218-981-91	RES-CHIP 220K 5% 1/16W	
< RESISTOR >				R520	1-218-977-11	RES-CHIP 100K 5% 1/16W	
R105	1-240-679-91	METAL CHIP 47 5% 1/20W		R521	1-218-990-81	SHORT CHIP 0	
R106	1-208-455-11	RES-CHIP 5.6 5% 1/16W (EXCEPT NWZ-A826: FR/A828: FR/A829: FR)		R522	1-218-990-81	SHORT CHIP 0	
R106	1-220-166-81	RES-CHIP 43 5% 1/16W (NWZ-A826: FR/A828: FR/A829: FR)		R527	1-218-990-81	SHORT CHIP 0	
R108	1-218-949-11	RES-CHIP 470 5% 1/16W		R528	1-218-990-81	SHORT CHIP 0	
R109	1-218-949-11	RES-CHIP 470 5% 1/16W		R601	1-208-911-11	METAL CHIP 10K 0.5% 1/16W	
R110	1-244-161-81	RES-CHIP 2.2 5% 1/16W		R602	1-218-990-81	SHORT CHIP 0	
R120	1-240-691-91	METAL CHIP 470 5% 1/20W		R603	1-218-965-11	RES-CHIP 10K 5% 1/16W	
R123	1-218-990-81	SHORT CHIP 0		R604	1-218-990-81	SHORT CHIP 0	
R205	1-240-679-91	METAL CHIP 47 5% 1/20W		R605	1-218-990-81	SHORT CHIP 0	
R206	1-208-455-11	RES-CHIP 5.6 5% 1/16W (EXCEPT NWZ-A826: FR/A828: FR/A829: FR)		R606	1-208-911-11	METAL CHIP 10K 0.5% 1/16W	
				R607	1-218-985-11	RES-CHIP 470K 5% 1/16W	
				R608	1-218-953-11	RES-CHIP 1K 5% 1/16W	
				R611	1-218-990-81	SHORT CHIP 0	
				R615	1-218-953-11	RES-CHIP 1K 5% 1/16W	
				R616	1-245-684-21	RES-CHIP 0.22 5% 1/8W	
				R617	1-245-684-21	RES-CHIP 0.22 5% 1/8W	
				R618	1-218-990-81	SHORT CHIP 0	
				R619	1-218-990-81	SHORT CHIP 0	

Note: IC301, IC302, IC305, IC453, IC501, IC503, IC508, IC509, IC601, IC602, IC701, IC751, IC752, IC901 and IC902 on the MAIN board cannot exchange with single. When IC301, IC302, IC305, IC453, IC501, IC503, IC508, IC509, IC601, IC602, IC701, IC751, IC752, IC901 and IC902 on the MAIN board are damaged, exchange the entire mounted board.

MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R620	1-218-990-81	SHORT CHIP	0			R765	1-240-718-91	METAL CHIP	100K	5%	1/20W
R621	1-218-990-81	SHORT CHIP	0			R767	1-240-718-91	METAL CHIP	100K	5%	1/20W
R622	1-218-990-81	SHORT CHIP	0			R769	1-240-695-91	METAL CHIP	1K	5%	1/20W
R623	1-218-990-81	SHORT CHIP	0			R774	1-240-714-91	METAL CHIP	47K	5%	1/20W
R624	1-218-990-81	SHORT CHIP	0			R775	1-240-714-91	METAL CHIP	47K	5%	1/20W
R625	1-240-718-91	METAL CHIP	100K	5%	1/20W	R776	1-240-714-91	METAL CHIP	47K	5%	1/20W
R626	1-240-718-91	METAL CHIP	100K	5%	1/20W	R777	1-240-714-91	METAL CHIP	47K	5%	1/20W
R627	1-240-695-91	METAL CHIP	1K	5%	1/20W	R778	1-240-714-91	METAL CHIP	47K	5%	1/20W
R628	1-218-985-11	RES-CHIP	470K	5%	1/16W	R779	1-240-714-91	METAL CHIP	47K	5%	1/20W
R629	1-218-985-11	RES-CHIP	470K	5%	1/16W	R780	1-240-714-91	METAL CHIP	47K	5%	1/20W
R630	1-218-941-81	RES-CHIP	100	5%	1/16W	R781	1-240-714-91	METAL CHIP	47K	5%	1/20W
R633	1-218-990-81	SHORT CHIP	0			R851	1-218-953-11	RES-CHIP	1K	5%	1/16W
R634	1-218-989-11	RES-CHIP	1M	5%	1/16W	R853	1-218-953-11	RES-CHIP	1K	5%	1/16W
R636	1-240-714-91	METAL CHIP	47K	5%	1/20W	R855	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R637	1-240-714-91	METAL CHIP	47K	5%	1/20W	R857	1-240-726-91	METAL CHIP	470K	5%	1/20W
R638	1-240-714-91	METAL CHIP	47K	5%	1/20W	R858	1-240-707-91	METAL CHIP	10K	5%	1/20W
R639	1-240-714-91	METAL CHIP	47K	5%	1/20W	R859	1-218-953-11	RES-CHIP	1K	5%	1/16W
R640	1-240-714-91	METAL CHIP	47K	5%	1/20W	R862	1-218-965-11	RES-CHIP	10K	5%	1/16W
R641	1-218-953-11	RES-CHIP	1K	5%	1/16W	R901	1-218-990-81	SHORT CHIP	0		
R643	1-218-990-81	SHORT CHIP	0			R904	1-216-864-11	SHORT CHIP	0		
R644	1-218-990-81	SHORT CHIP	0			R906	1-218-990-81	SHORT CHIP	0		
R646	1-218-985-11	RES-CHIP	470K	5%	1/16W	R907	1-218-990-81	SHORT CHIP	0		
R647	1-218-985-11	RES-CHIP	470K	5%	1/16W	R908	1-218-981-91	RES-CHIP	220K	5%	1/16W
R648	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R909	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R649	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R910	1-218-981-91	RES-CHIP	220K	5%	1/16W
R651	1-218-985-11	RES-CHIP	470K	5%	1/16W	R911	1-218-985-11	RES-CHIP	470K	5%	1/16W
R655	1-240-718-91	METAL CHIP	100K	5%	1/20W	R912	1-218-990-81	SHORT CHIP	0		
R656	1-240-718-91	METAL CHIP	100K	5%	1/20W	R913	1-218-985-11	RES-CHIP	470K	5%	1/16W
R657	1-240-718-91	METAL CHIP	100K	5%	1/20W	R914	1-218-985-11	RES-CHIP	470K	5%	1/16W
R658	1-240-718-91	METAL CHIP	100K	5%	1/20W	R916	1-218-985-11	RES-CHIP	470K	5%	1/16W
R660	1-240-714-91	METAL CHIP	47K	5%	1/20W	R918	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R662	1-218-953-11	RES-CHIP	1K	5%	1/16W	R919	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R664	1-218-990-81	SHORT CHIP	0			R920	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R666	1-218-985-11	RES-CHIP	470K	5%	1/16W	R922	1-208-939-11	METAL CHIP	150K	0.5%	1/16W
R667	1-218-977-11	RES-CHIP	100K	5%	1/16W	R923	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R669	1-208-715-11	METAL CHIP	22K	0.5%	1/16W	R926	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R671	1-218-990-81	SHORT CHIP	0			R927	1-208-931-11	METAL CHIP	68K	0.5%	1/16W
R672	1-218-990-81	SHORT CHIP	0			R928	1-218-990-81	SHORT CHIP	0		
R674	1-218-941-81	RES-CHIP	100	5%	1/16W	R929	1-216-864-11	SHORT CHIP	0		
R675	1-218-941-81	RES-CHIP	100	5%	1/16W	R930	1-218-990-81	SHORT CHIP	0		
R676	1-240-707-91	METAL CHIP	10K	5%	1/20W	R931	1-218-990-81	SHORT CHIP	0		
R678	1-240-707-91	METAL CHIP	10K	5%	1/20W	R932	1-218-985-11	RES-CHIP	470K	5%	1/16W
R679	1-240-707-91	METAL CHIP	10K	5%	1/20W	R933	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R681	1-240-718-91	METAL CHIP	100K	5%	1/20W	R935	1-218-990-81	SHORT CHIP	0		
R683	1-240-722-91	METAL CHIP	220K	5%	1/20W	< SWITCH >					
R684	1-240-722-91	METAL CHIP	220K	5%	1/20W	S601	1-572-938-21	SWITCH, TACTIL (RESET)			
R702	1-240-718-91	METAL CHIP	100K	5%	1/20W	S602	1-771-449-11	SWITCH, SLIDE (HOLD)			
R751	1-218-990-81	SHORT CHIP	0			< TERMINAL >					
R753	1-240-726-91	METAL CHIP	470K	5%	1/20W	TB301	1-780-112-11	TERMINAL, CONTACT			
R754	1-240-726-91	METAL CHIP	470K	5%	1/20W	TB451	1-780-434-11	TERMINAL, GROUND (ON BOARD CON			
R755	1-240-718-91	METAL CHIP	100K	5%	1/20W	TB851	1-780-112-11	TERMINAL, CONTACT			
R756	1-240-718-91	METAL CHIP	100K	5%	1/20W	TB901	1-780-112-11	TERMINAL, CONTACT			
R757	1-218-990-81	SHORT CHIP	0 (NWZ-A829)			< THERMISTOR >					
R758	1-218-990-81	SHORT CHIP	0 (NWZ-A829)			TH901	1-802-599-21	THERMISTOR			
R759	1-240-726-91	METAL CHIP	470K	5%	1/20W						
R760	1-218-990-81	SHORT CHIP	0 (NWZ-A828/A828K)								
R761	1-218-990-81	SHORT CHIP	0 (NWZ-A829)								
R762	1-218-990-81	SHORT CHIP	0 (NWZ-A829)								
R763	1-218-990-81	SHORT CHIP	0 (NWZ-A828/A828K)								
R764	1-240-726-91	METAL CHIP	470K	5%	1/20W						

MAIN

SW

Ref. No.	Part No.	Description	Remark		
< VARISTOR >					
VDR851	1-805-774-21	VARISTOR, CHIP			
VDR852	1-805-774-21	VARISTOR, CHIP			
< VIBRATOR >					
X501	1-813-877-11	VIBRATOR, CRYSTAL (12MHz)			
X602	1-813-206-11	VIBRATOR, CRYSTAL (32.768kHz)			
X603	1-795-758-21	VIBRATOR, CRYSTAL (11.2896MHz)			

	A-1506-857-A	SW BOARD, COMPLETE			

< CAPACITOR >					
C801	1-165-887-91	CERAMIC CHIP	0.22uF	10%	6.3V
C803	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C804	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
C805	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
C806	1-100-352-91	CERAMIC CHIP	1uF	20%	16V
C807	1-112-717-91	CERAMIC CHIP	1uF	10%	6.3V
C808	1-112-717-91	CERAMIC CHIP	1uF	10%	6.3V
C881	1-119-923-11	CERAMIC CHIP	0.047uF	10%	10V
C882	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
< CONNECTOR >					
CN801	(Not supplied)	CONNECTOR, FFC/FPC (ZIF) 39PIN			
CN881	(Not supplied)	CONNECTOR, BOARD TO BOARD 42P			
< FERRITE BEAD >					
FB802	1-481-258-21	SMD EMI FERRITE			
FB803	1-481-258-21	SMD EMI FERRITE			
FB804	1-481-258-21	SMD EMI FERRITE			
FB805	1-481-258-21	SMD EMI FERRITE			
FB806	1-481-258-21	SMD EMI FERRITE			
FB807	1-481-258-21	SMD EMI FERRITE			
FB808	1-481-258-21	SMD EMI FERRITE			
FB809	1-481-258-21	SMD EMI FERRITE			
FB810	1-481-258-21	SMD EMI FERRITE			
FB811	1-481-258-21	SMD EMI FERRITE			
FB812	1-481-258-21	SMD EMI FERRITE			
FB813	1-481-258-21	SMD EMI FERRITE			
FB814	1-481-258-21	SMD EMI FERRITE			
FB815	1-481-258-21	SMD EMI FERRITE			
FB816	1-481-258-21	SMD EMI FERRITE			
FB817	1-481-258-21	SMD EMI FERRITE			
FB818	1-481-258-21	SMD EMI FERRITE			
FB819	1-481-258-21	SMD EMI FERRITE			
< FILTER >					
FL801	1-234-939-21	FILTER, EMI REMOVAL (SMD)			
< IC >					
IC801	(Not supplied)	IC TPS60231RGTR			
< FET >					
Q801	6-550-789-01	FET	SSM3K15FV	(TL3SONYZ)	
< RESISTOR >					
R801	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W

Note1 : CN801 and CN881 on the SW board cannot exchange with single. When CN801 and CN881 on the SW board are damaged, exchange the entire mounted board.

Ref. No.	Part No.	Description	Remark		
R803	1-218-990-81	SHORT CHIP	0		
R804	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R808	1-218-990-81	SHORT CHIP	0		
R809	1-218-990-81	SHORT CHIP	0		
R810	1-218-990-81	SHORT CHIP	0		
R829	1-218-977-11	RES-CHIP	100K	5%	1/16W
R830	1-218-977-11	RES-CHIP	100K	5%	1/16W
R831	1-218-990-81	SHORT CHIP	0		
R881	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R882	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R883	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R884	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R887	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R888	1-218-941-11	RES-CHIP	100	5%	1/16W





MISCELLANEOUS					

106	1-756-702-11	BATTERY, LITHIUM ION STORAGE			
		(E, MX, AUS, CH, JE)			
106	X-2190-605-1	BATTERY ASSY (US, CND, AEP, UK, FR, EE)			
160	X-2190-604-1	LCD ASSY			
162	1-875-533-11	HP FLEXIBLE PRINT BOARD			
169	1-798-110-11	KEY, SHEET			
J301	1-821-708-11	JACK, WATERPROOF (C)			

Note 2: IC801 on the SW board cannot exchange with single. When IC801 on the SW board is damaged, exchange the entire mounted board.

NWZ-A826/A826K/A828/A828K/A829

    Ver. 1.1

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		ACCESSORIES *****					
△	1-478-846-12	ADAPTOR, AC (AC-ES3010K2) (NWZ-A826K: CND/NWZ-A828K: US)		3-289-810-51	MANUAL (QSG), INSTRUCTION (Quick Start Guide) (ITALIAN) (NWZ-A826: AEP, UK/NWZ-A826K: AEP/ NWZ-A828: AEP, UK/NWZ-A828K: AEP/ NWZ-A829: AEP, UK)		
△	1-478-848-13	ADAPTOR, AC (AC-ES3010K2) (NWZ-A826K: AEP, E, EE/NWZ-A828K: AEP)		3-289-810-61	MANUAL (QSG), INSTRUCTION (Quick Start Guide) (RUSSIAN) (NWZ-A826: EE/NWZ-A826K: EE/ NWZ-A828: EE/NWZ-A829: EE)		
△	1-478-849-12	ADAPTOR, AC (AC-ES3010K2) (NWZ-A826K: UK/NWZ-A828K: UK)		3-289-810-71	MANUAL (QSG), INSTRUCTION (Quick Start Guide) (SIMPLIFIED CHINESE) (NWZ-A826: E, CH/NWZ-A826K: E/ NWZ-A828: E, CH/NWZ-A829: E, JE)		
△	1-478-850-12	ADAPTOR, AC (AC-ES3010K2) (NWZ-A826K: AUS)		3-289-810-81	MANUAL (QSG), INSTRUCTION (Quick Start Guide) (TRADITIONAL CHINESE) (NWZ-A826: E/NWZ-A828: E/NWZ-A829: E, JE)		
	1-833-490-12	CORD, PC CONNECTION (USB cable)		3-289-810-91	MANUAL (QSG), INSTRUCTION (Quick Start Guide) (KOREAN) (NWZ-A826: E/NWZ-A828: E/NWZ-A829: E, JE)		
	3-095-524-11	MANUAL, INSTRUCTION (ENGLISH) (for DR-BT21G) (NWZ-A826K: AEP, UK, EE/ NWZ-A828K: AEP, UK)		3-289-811-11	MANUAL (QSG), INSTRUCTION (Quick Start Guide) (UKRAINIAN) (NWZ-A826: EE/NWZ-A828: EE/NWZ-A829: EE)		
	3-095-524-21	MANUAL, INSTRUCTION (FRENCH, GERMAN, SPANISH) (for DR-BT21G) (NWZ-A826K: AEP/ NWZ-A828K: AEP)		3-289-811-21	MANUAL (QSG), INSTRUCTION (Quick Start Guide) (PORTUGUESE) (NWZ-A826: MX/NWZ-A829: MX)		
	3-095-524-32	MANUAL, INSTRUCTION (DUTCH, ITALIAN, PORTUGUESE, RUSSIAN) (for DR-BT21G) (NWZ-A826K: AEP, EE/NWZ-A828K: AEP)		3-289-811-31	MANUAL (QSG), INSTRUCTION (Quick Start Guide) (TURKISH) (NWZ-A826: EE/NWZ-A828: EE/NWZ-A829: EE)		
	3-095-524-51	MANUAL, INSTRUCTION (ENGLISH, SPANISH) (for DR-BT21G) (NWZ-A828K: US)		8-912-781-90	RECEIVER (MDREX082LPB9 SET) (Headphones) (for BLACK, GOLD)		
	3-095-524-61	MANUAL, INSTRUCTION (ENGLISH, FRENCH) (for DR-BT21G) (NWZ-A826K: CND)		8-912-782-90	RECEIVER (MDREX082LPW9 SET) (Headphones) (for WHITE, PINK, SILVER)		
	3-095-524-71	MANUAL, INSTRUCTION (ENGLISH) (for DR-BT21G) (NWZ-A826K: E, AUS)		X-2189-179-1	SOFT APPLICATION ASSY (CD-ROM: MP3 Con version Tool, Media Manager for WALKMAN, Windows Media Player 11, Operation Guide (PDF file)) (US)		
	3-106-351-11	MANUAL, INSTRUCTION (SIMPLIFIED CHINESE) (for DR-BT21G) (NWZ-A826K: E)		X-2189-182-1	SOFT APPLICATION ASSY (CD-ROM: MP3 Conversion Tool, Media Manager for WALKMAN, Windows Media Player 11, Operation Guide (PDF file)) (EXCEPT US)		
	3-272-845-11	PIECE (S), EAR (GRAY) (size S) (Ear bud for Headphones) (for WHITE, PINK, SILVER models)		501	3-279-909-01	ATTACHMENT (AS) (Use when connecting the player to the optional cradle, etc.)	
	3-272-845-21	PIECE (S), EAR (CLEAR BLACK) (size S) (Ear bud for Headphones) (for BLACK, GOLD models)		502	X-2189-220-2	STAND (B/N) ASSY (for BLACK, GOLD)	
	3-272-846-11	PIECE (M), EAR (GRAY) (size M) (Ear bud for Headphones) (for WHITE, PINK, SILVER models)		502	X-2189-221-2	STAND (P/W) ASSY (for WHITE, PINK, SILVER)	
	3-272-846-21	PIECE (M), EAR (CLEAR BLACK) (size M) (Ear bud for Headphones) (for BLACK, GOLD models)		501  ATTACHMENT (AS) × 1 502  STAND ASSY × 1			
	3-272-847-11	PIECE (L), EAR (GRAY) (size L) (Ear bud for Headphones) (for WHITE, PINK, SILVER models)					
	3-272-847-21	PIECE (L), EAR (CLEAR BLACK) (size L) (Ear bud for Headphones) (for BLACK, GOLD models)		501  ATTACHMENT (AS) × 1 502  STAND ASSY × 1			
	3-289-810-11	MANUAL (QSG), INSTRUCTION (Quick Start Guide) (ENGLISH)					
	3-289-810-21	MANUAL (QSG), INSTRUCTION (Quick Start Guide) (FRENCH) (NWZ-A826: AEP, UK, FR/NWZ-A826K: CND, AEP/ NWZ-A828: AEP, UK, FR/NWZ-A828K: AEP/ NWZ-A829: CND, AEP, UK, FR)		501  ATTACHMENT (AS) × 1 502  STAND ASSY × 1			
	3-289-810-31	MANUAL (QSG), INSTRUCTION (Quick Start Guide) (GERMAN) (NWZ-A826: AEP, UK/NWZ-A826K: AEP/ NWZ-A828: AEP, UK/NWZ-A828K: AEP/ NWZ-A829: AEP, UK)					
	3-289-810-43	MANUAL (QSG), INSTRUCTION (Quick Start Guide) (SPANISH) (NWZ-A826: AEP, UK, MX/NWZ-A826K: AEP/ NWZ-A828: AEP, UK/NWZ-A828K: AEP/ NWZ-A829: AEP, UK, MX)		501  ATTACHMENT (AS) × 1 502  STAND ASSY × 1			

- NWZ-A826K/A828K, Wireless stereo headset (DR-BT21G), it attaches.
About DR-BT21G, refer to the following service manual.
US, Canadian, E, Australian models: 9-887-599-□□
AEP, UK models: 9-887-601-□□

MEMO

REVISION HISTORY

Checking the version allows you to jump to the revised page.

Also, clicking the version at the top of the revised page allows you to jump to the next revised page.

[illegible]