

SECTION 4

EXPLODED VIEWS

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked "★" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- Due to standardization, parts with part number suffix -XX and -X may be different from the parts specified in the components used on the set.

- Color Indication of Appearance Parts
Example:


(RED) ... KNOB, BALANCE (WHITE)

↑
Cabinet's Color

↑
Parts Color


The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.

4-1.

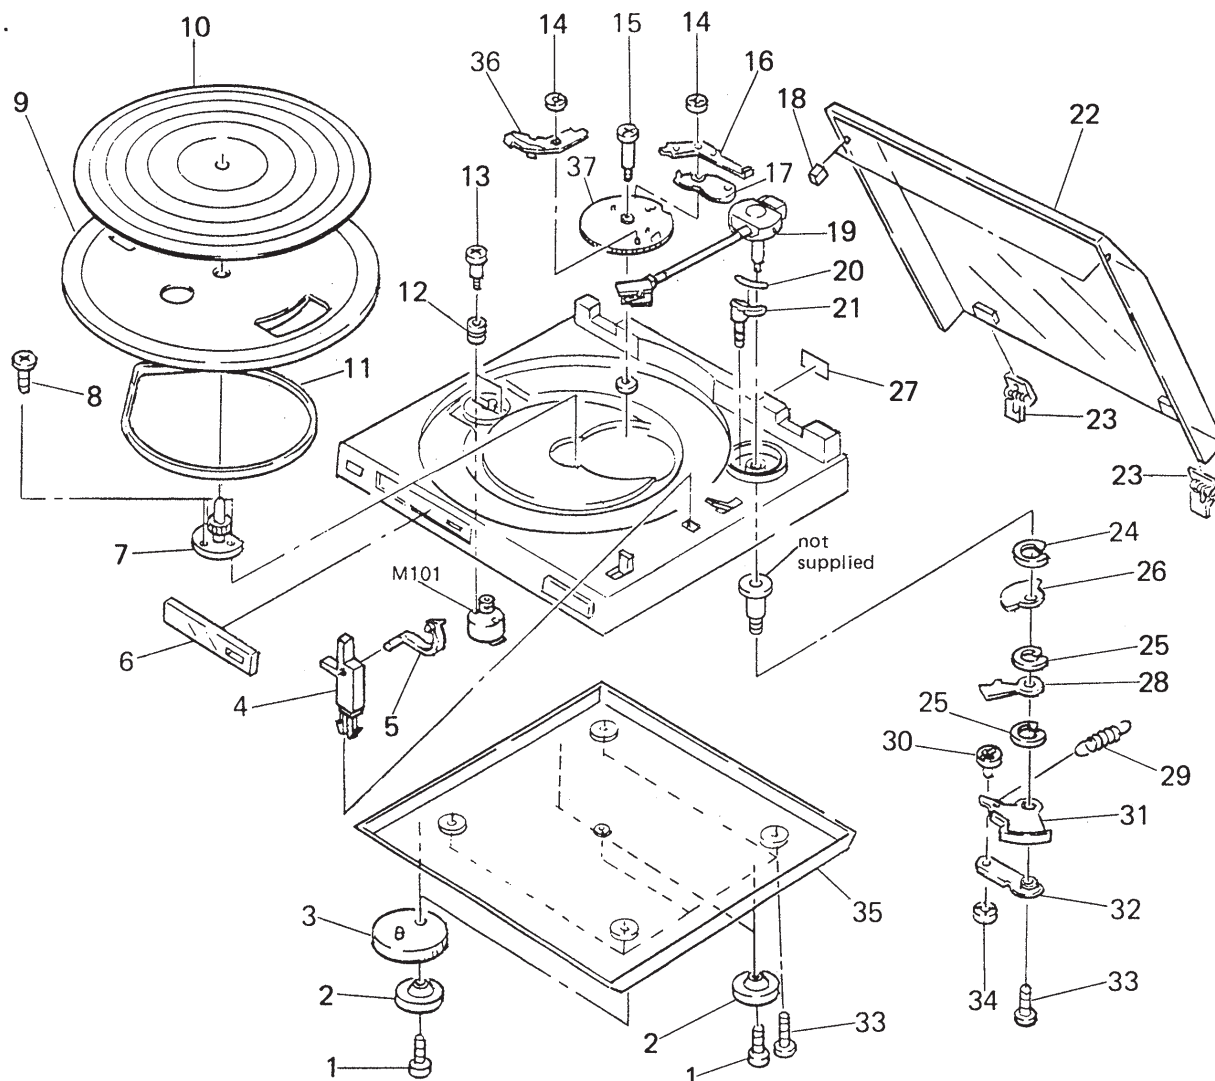

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
1	7-685-536-19	SCREW (+PTPW) (2.6X12)		23	4-913-591-01	HINGE	
2	4-913-588-01	INSULATOR		24	7-624-133-74	STOP RING 12, TYPE-CE	
3	4-928-232-01	COVER (INSULATOR)		25	7-624-133-64	STOP RING 11, TYPE-CE	
4	4-928-213-01	REST, ARM		26	X-4913-528-1	LEVER (INDEX G) ASSY	
5	4-913-578-01	HOOK, REST		27	*4-928-250-01	(AEP).....LABEL, MODEL NUMBER (AEP1)	
6	4-928-233-01	WINDOW (SPEED)			*4-928-251-01	(UK).....LABEL, MODEL NUMBER (UK)	
7	A-4633-116-A	BEARING ASSY			*4-928-252-01	(E,Saudi Arabia)...LABEL, MODEL NUMBER(E)	
8	7-685-134-19	SCREW +BTP 2.6X8 TYPE2 N-S		28	*X-4913-522-1	LEVER (INDEX F) ASSY	
9	4-928-230-01	TURNTABLE		29	3-548-124-00	SPRING, TENSION	
10	4-928-226-01	SHEET (T,T)		30	4-928-208-01	CAM.(DP)	
11	4-880-655-01	BELT		31	4-928-220-01	LEVER (ARM DRIVING A)	
12	4-909-061-11	CUSHION, MOTOR		32	4-928-221-01	LEVER (ARM DRIVING B)	
13	4-909-062-01	SCREW, MOTOR		33	7-685-647-79	SCREW, TAPPING	
14	7-624-190-81	STOP RING 2, TYPE-CS		34	7-624-190-61	STOP RING 2.4, TYPE-CS	
15	4-913-595-01	SCREW (STEP 2.6 TP)		35	*4-928-228-01	PLATE, BOTTOM	
16	4-874-254-00	CLUTCH (S)		36	4-874-279-00	CLUTCH (L)	
17	4-874-232-00	CLUTCH (R)		37	4-880-524-00	GEAR (S), DRIVE	
18	4-913-592-01	CUSHION (DUST)					
19	A-4604-166-A	ARM ASSY		M101	A-4604-213-A	(UK).....MOTOR ASSY	
20	*4-928-258-01	SHEET (UP AND DOWN) (B)		M101	A-4608-363-A	(AEP,E,Saudi Arabia)...MOTOR ASSY	
21	*4-913-581-01	HOLDER (UP AND DOWN)					
22	4-928-229-01	COVER, DUST					

4-2.

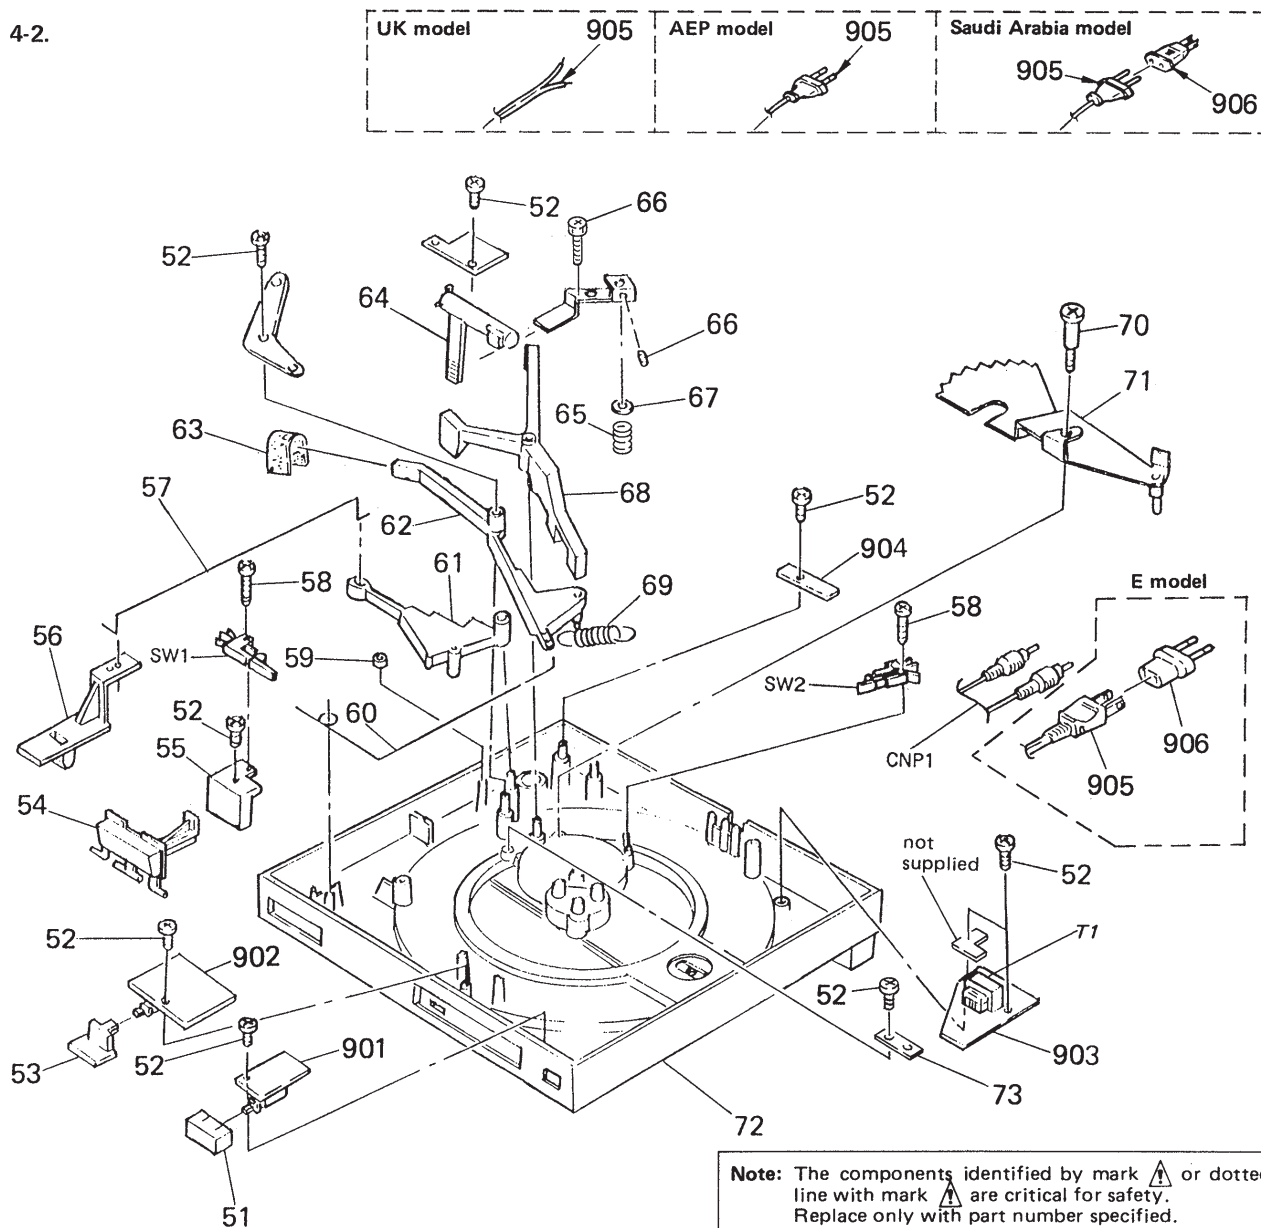

No.	Part No.	Description	Remarks	No.	Part No.	Description	Remarks
51	4-922-903-01	BUTTON (PW)		70	4-913-596-01	SCREW (STEP 3 TP)	
52	7-685-134-19	SCREW +BTP 2.6X8 TYPE2 N-S		71	*X-4913-523-1	LEVER (MAIN) ASSY	
53	3-332-457-01	BUTTON (1/3), DUBBING		72	4-928-234-11	CABINET (PS-B)	
54	4-928-217-01	BUTTON (START)		73	*4-928-245-01	HOLDER (RESET)	
55	*4-913-583-01	HOLDER (START)		901	*1-628-892-11	PC BOARD, POWER SW	
56	4-913-579-01	KNOB (SIZE)		902	*1-628-895-11	PC BOARD, SPEED CONTROL	
57	*4-913-589-01	JOINT (SIZE)		903	*1-628-893-11	PC BOARD, POWER	
58	7-621-255-75	SCREW +P 2X12 TYPE2 NON-SLIT		904	*1-628-894-11	PC BOARD, PHONO	
59	*4-903-453-01	CUSHION (C)		905	⚠.1-551-188-XX (E).....CORD, POWER		
60	*4-913-593-01	JOINT (START)			⚠.1-555-795-00 (AEP,Saudi Arabia)		
61	*4-928-215-01	LEVER (SIZE)			CORD, POWER, EULO PLUG		
62	*4-913-580-01	LEVER (RESET)			⚠.1-556-562-00 (UK).....CORD, POWER		
63	*4-913-597-01	SHEET (BRAKE)		906	⚠.1-506-401-00 (Saudi Arabia)....ADAPTOR, CONVERSION		
64	4-928-214-01	LEVER (LIFTER)			⚠.1-526-565-00 (E).....AC PLUG ADAPTOR		
65	4-928-240-01	SPRING (LIFTER B), COMPRESSION		CNP1	1-551-294-00	CORD (WITH PLUG)	
66	7-683-413-05	SCREW (HEXAGON HOLE) (2.6X8)		SW1	1-570-072-11	SWITCH (START/STOP)	
67	4-928-244-01	WASHER		SW2	1-570-072-11	SWITCH (ARM RESET)	
68	*4-928-216-01	LEVER (CLUTCH)		T1	⚠.1-449-756-11 (AEP,UK).....TRANSFORMER, POWER		
69	4-928-235-01	SPRING (RESET), TENSION		T1	⚠.1-449-757-11 (E,Saudi Arabia)....TRANSFORMER, POWER		