


Libro de instrucciones  
52 2191  
(E, P, GB, F, NL, GR)

1) 06 7746

2) 03 3058

3) 28 7842  
V01  
35 3297  
V02



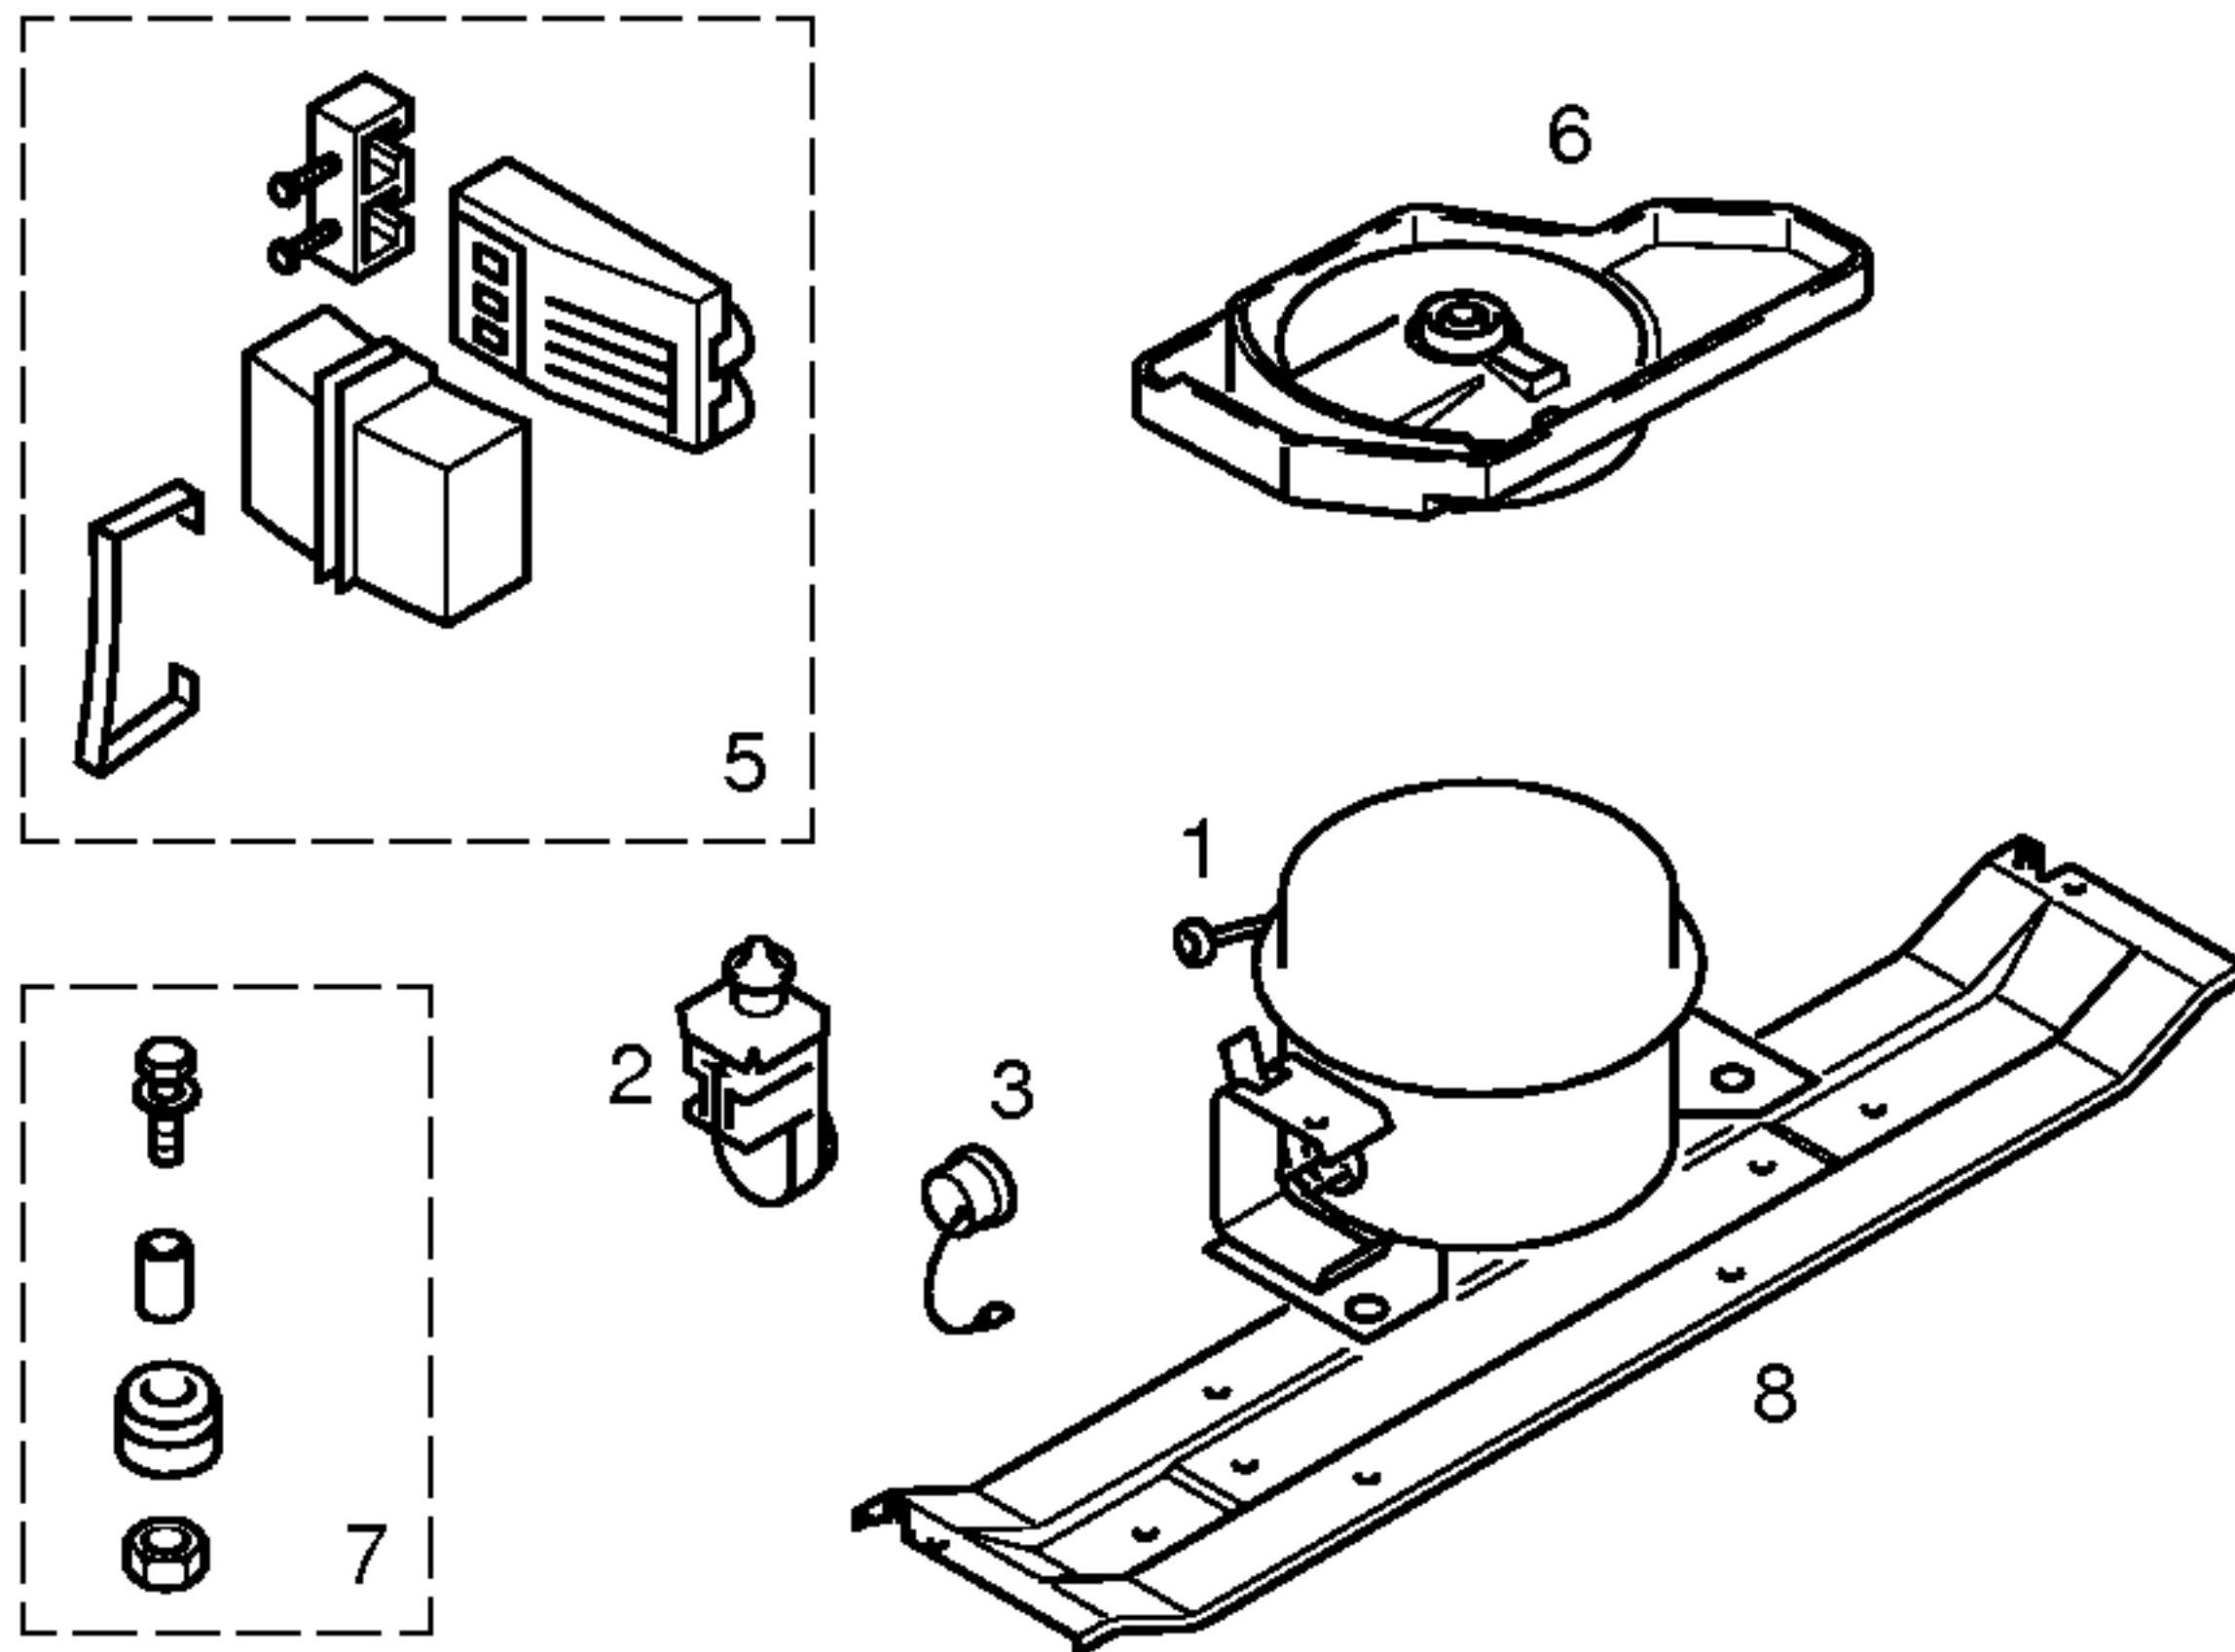

Pos.	****			
	Aspera BMP1084Y	Aspera BMP1110Y		
1	14 1723	14 1605		
2	15 4315	15 4315		
3	16 7769	16 5230		
4				
5				
6	26 4123			
7	05 0166	05 0166		
8	28 0162	28 0162		
9				
10				
11				
12				
13				

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS				
		****		
Verdichter/Compressor/Compresseur/Compresor	Aspera	Aspera		
Typ/Type/Tipo	BMP1084Y	BMP1110Y		
Förderleistung/Delivery/Debit/Aspiración l/h				
Anlaufstromm/Starting current/Cour.démarrage/Int.arranq. A	3,60			
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm	29,60	24,70		
Hi/aux.	38,50	37,65		
Temp.Reyler/Thermostat/Termostato	Ranco	Ranco		
Typ/Type/Tipo	K59-L6050	K54-L1941		
Reglerstellung/Position/Conexión	MIN. MAX.	MIN. MAX.		
Schaltwerte/Switching values/	..ein/conex. °C	+6° -14° -22°		
Valeurs de commutation/Desconex.	..aus"/descon.	-11° -28°		
(..abtaven' od)	..alarm'	-20° -28°		
		-10° -18°		
Füllmenge/Fill. quantity/Charge/Carga R600a	g	*	*	
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W	71	86	
Heizung/Heater/Chauflage/Resistenc.descong.				
Widerstand/Resistance/Resistencia	Ohm			
Leistung/Power/Puissance/Potencia	W			
Ventilador/Blower/Ventilateur/Ventilador				
Widerstand/Resistance/Resistencia	Ohm			
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula				
Widerstand/Resistance/Resistencia	Ohm			
Spannung/Voltage/Tension/Tensión	V			
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador				

\* Siehe Typenschild / See identification plate / Voir plaquette de caractéristiques / Ver plaqueta de características