

■ Loading Unit Parts Location

The parts enclosed in the dotted boxes are supplied as a block assembly. Therefore, they are not supplied separately except parts indicated with Ref. No. .

Note: When changing loading mechanism parts, apply the specified grease to the areas marked "××" as shown in the drawing.

Ref.no.	Part No.
①	RFKXEM30L

