

# ■ Loading Unit Parts Location

**Note:**  
 When changing mechanism parts, apply the specified grease to areas marked "xx" as shown in the drawing.

Ref No.	Parts No.
①	RFKXEM30L

