 


PC Board (key)
(U002)



Top Cover
(A100)

PC Board (wireless)
(U008)

Main Board
(U001)

Power Unit (main)
(P800)

Thermostat SW
(P100)

Fan (DMD)
(Z102)

Fan (power)
(Z100)

Lamp

Lamp Cover
(A210)

Fan (lamp)
(Z101)

Speaker
(P200)

Optical Engine
(E200)

Bottom Chasis
(B100)

Power Unit (Lamp)
(P850)

PC Board (sensor)
(U003)

Lens Cap
(A220)

PC Board (Door SW)
(U004)

PC Board (remote control)
(U005)