



Service-Information

Frontlader Waschen

AWG 343

8537 343 18000

Letzte Änderung: 07.06.2008

Anlagedatum: 07.06.2008

Ersatzteilliste	2
Explosionszeichnung	5
Anschlußplan	6
Stromlaufplan	7
Schließschema	8

Die vorliegenden Serviceunterlagen sind ausschließlich für technisch qualifizierte Fachkräfte bestimmt, welche mit den entsprechenden einschlägigen Sicherheitsvorschriften vertraut sind.

Änderungen vorbehalten


Ersatzteilliste

Pos-Nr.	12NC	Beschreibung
001 0	4819 440 19837	Gehaeuse
013 0	4819 462 58273	Fuss
030 0	4819 440 19838	Arbeitsplatte
040 0	4819 417 19367	Scharnier
041 0	4819 417 19546	Scharnier
053 0	4819 440 19627	Sockelblende
061 0	4819 466 89406	Gegengewicht hinter
061 1	4819 466 99114	Gegengewicht
080 0	4819 529 18113	Stosssdaempfer
084 0	4819 466 99083	Halterung f. Feder
086 0	4819 466 89369	Befestigungskl.
103 0	4819 440 19839	Klappe Tuer
110 0	4819 417 58129	Schnapper Tuer
110 1	4819 498 69888	Handgriff
131 0	4819 417 58146	Haken
132 0	4819 417 58145	Verschluss
132 1	4819 404 79328	Halter
132 2	4819 532 68819	Distanzstueck
141 0	4819 468 18277	Manschette
143 0	4819 440 19832	Fenster
190 0	4819 440 19803	Ring
190 1	4819 401 18723	Spannband
190 2	4819 532 88043	Ring
200 0	4819 418 18347	Bottich
200 1	4819 404 79326	Halterung
200 2	4819 466 89367	Ring Bottich
200 3	4819 417 58144	Klemmstueck
210 0	4819 404 79327	Lagerkreuz
220 0	4819 418 18351	Trommel
220 1	4819 418 18349	Bottich kpl.
228 0	4819 535 78157	Trommelkreuz
271 0	4819 358 18148	Riemen
272 0	4819 528 88116	Riemenscheibe
292 0	4819 468 18225	Dichtung
301 0	4819 453 19891	Schalterleiste
303 0	4819 498 78241	Griff
321 0	4819 460 78545	Einlage
321 1	4819 460 78516	Einlage
331 0	4819 412 58609	Knopf Temperatur
331 1	4819 535 18131	Drehstift
331 2	4819 535 18132	Drehstift
331 3	4819 535 18133	Drehstift
332 0	4819 410 28923	Taste
335 0	4819 412 58616	Knopf Timer
337 0	4819 412 58618	Knopf Potent.
341 0	4819 532 28279	Programmscheibe
401 0	4819 361 58258	Motor
401 1	4819 362 48011	Kohlebuerste Motor Ceset
401 1	4819 362 48012	Kohlebuerste Motor Sole
421 0	4819 121 18269	Entstoerfilter

Pos-Nr.	12NC	Beschreibung
430 0	4819 360 18252	Laugenpumpe
451 0	4819 259 28902	Heizelement
481 0	4819 320 58335	Kabel
490 0	4819 321 18284	Kabel
491 0	4819 290 68395	Klemmkasten
501 0	4819 282 18729	Timer
501 1	4819 404 79312	Halter
501 2	4819 214 78589	Tachogenerator Ceset
501 2	4819 214 78591	Tachogenerator Sole
511 0	4819 101 48147	Drehschalter
521 0	4819 214 78592	Elektronik
551 4	4819 282 48265	Thermostat
554 0	4819 271 28972	Thermostat
571 0	4819 281 28267	Magnetventil
583 0	4819 271 28012	Niveauschalter
620 0	4819 410 28636	Drucktastensch.
620 1	4819 410 28922	Drucktastensch.
621 0	4819 276 18262	Drucktastensch. Ein/Aus
630 0	4819 690 18139	Tuerverriegel.
701 0	4819 530 28882	Zulaufschlauch
702 0	4819 530 29015	Zulaufschlauch
707 0	4819 360 69626	Sprueharm
708 1	4819 529 18197	Schlauch
711 0	4819 418 79484	Behaelter
711 1	4819 462 38831	Schiene
711 2	4819 535 98608	Haltenase
711 3	4819 535 98607	Haltenase
711 4	4819 418 79485	Abdeckung
712 0	4819 418 79486	Waschmittelbeh. kpl.
713 0	4819 440 19804	Blende
717 2	4819 535 98625	Stab links
717 2	4819 535 98627	Stab rechts
717 3	4819 466 99086	Aktivator
717 5	4819 528 38448	Nocken
718 1	4819 462 79935	Abdeckung
754 0	4819 529 18119	Ablaufbalg kpl.
754 1	4819 529 28196	Schlauch
760 0	4819 480 58138	Filter
781 0	4819 530 28982	Rohr,Entleerung
783 0	4819 530 29016	Schlauch
787 0	4819 529 18116	Schlauch
794 7	4822 480 50121	Dichtung u. Filter
901 2	4819 401 18804	Schelle
904 0	4819 462 48468	Stopfen
910 0	4819 502 18446	Schraube M10x26
910 1	4819 502 18447	Schraube M8x25
910 5	4819 502 18448	Schraube
931 0	4819 492 38145	Tragfeder
931 1	4819 492 38142	Spanndraht
941 0	4819 520 28032	Lager


Pos-Nr.	12NC	Beschreibung
941 1	4819 520 28033	Lager
952 0	4819 532 68716	Wellendichtring Thermstate
953 0	4819 532 68802	Wellendichtring
962 2	4819 466 89368	Traeger

Explosionszeichnung

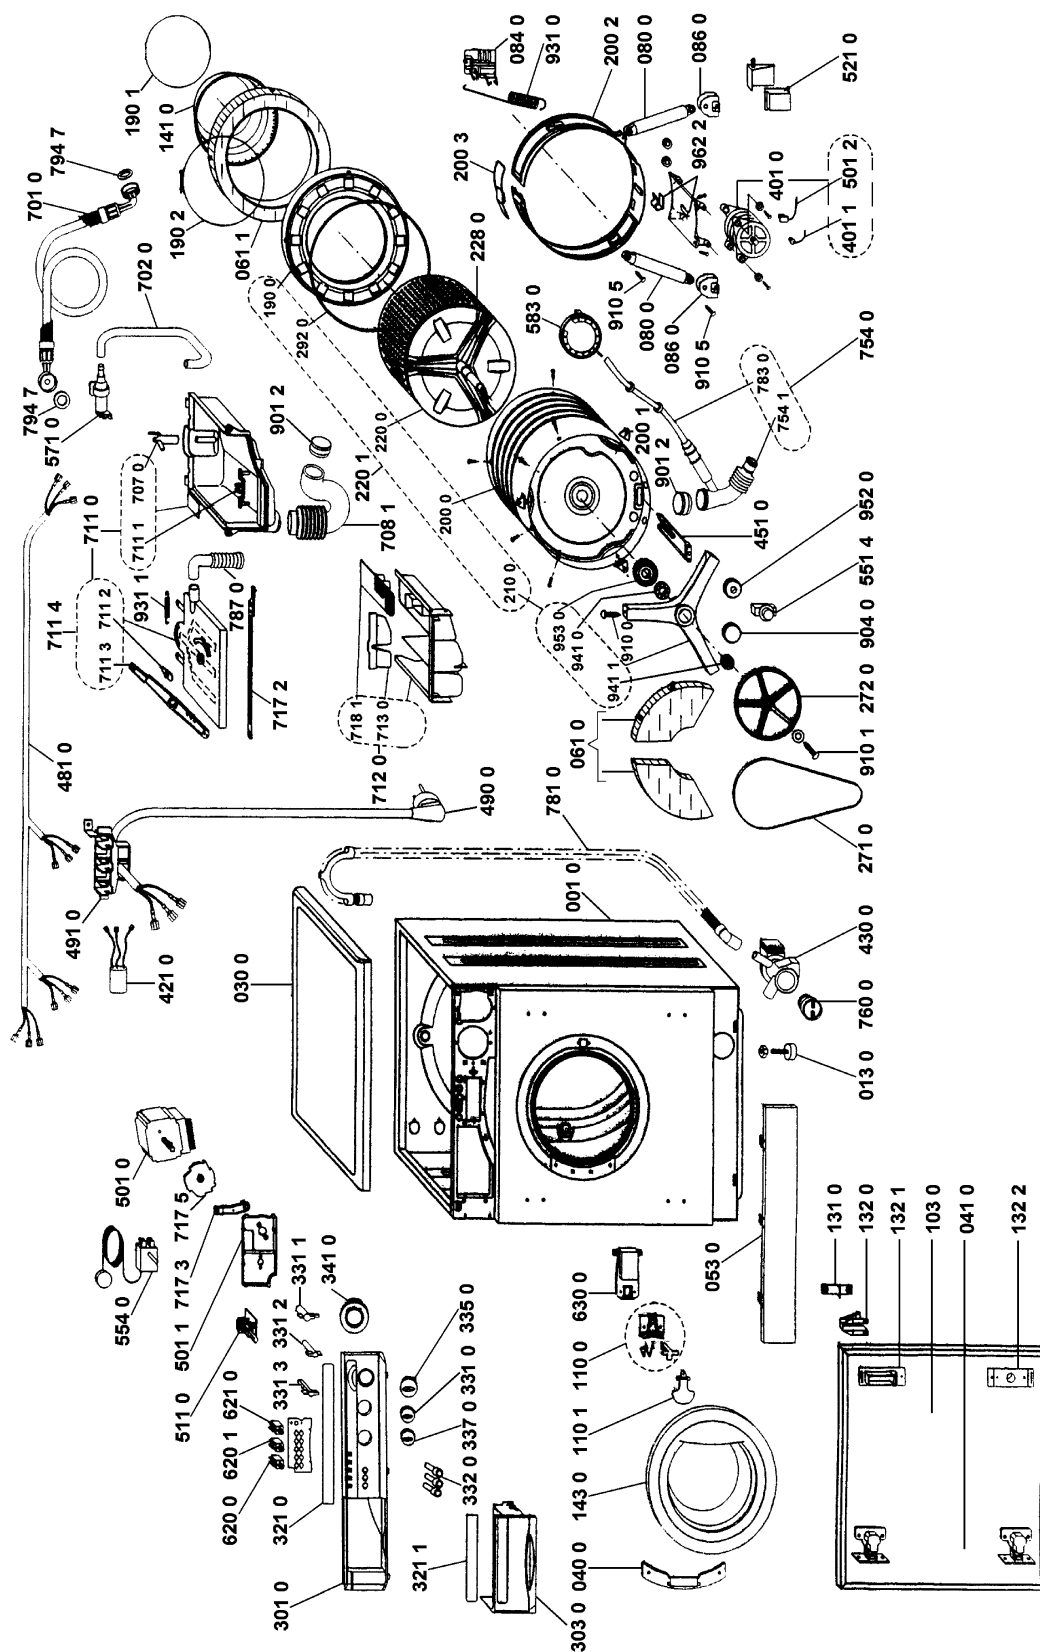

02000299


Anschlußplan

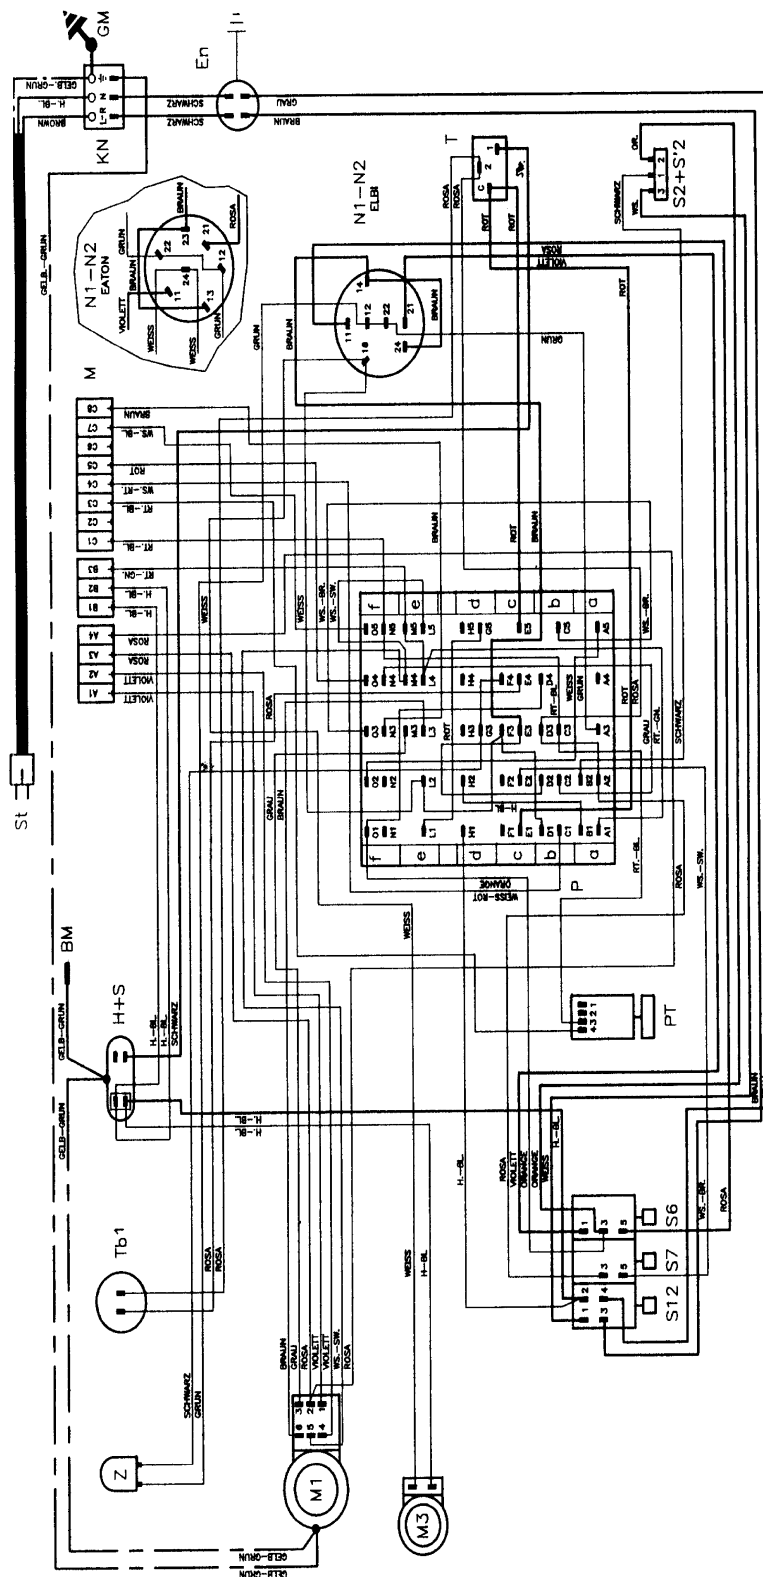

CONNETTOR a	=	WHITE	BRAUN	=	BROWN
CONNETTOR b	=	BLACK	GELB-GRÜN	=	YELLOW-GREEN
CONNETTOR c	=	RED	GRAU	=	GREY
CONNETTOR d	=	GREEN	GRÜN	=	GREEN
CONNETTOR e	=	YELLOW	H-BL	=	BLUE
CONNETTOR f	=	BLUE	ORANGE	=	ORANGE
			ROSA	=	PINK
			ROT	=	RED
			SCHWARZ	=	BLACK
			VIOLETT	=	WHITE
			WEISS	=	WHITE


62582

Stromlaufplan

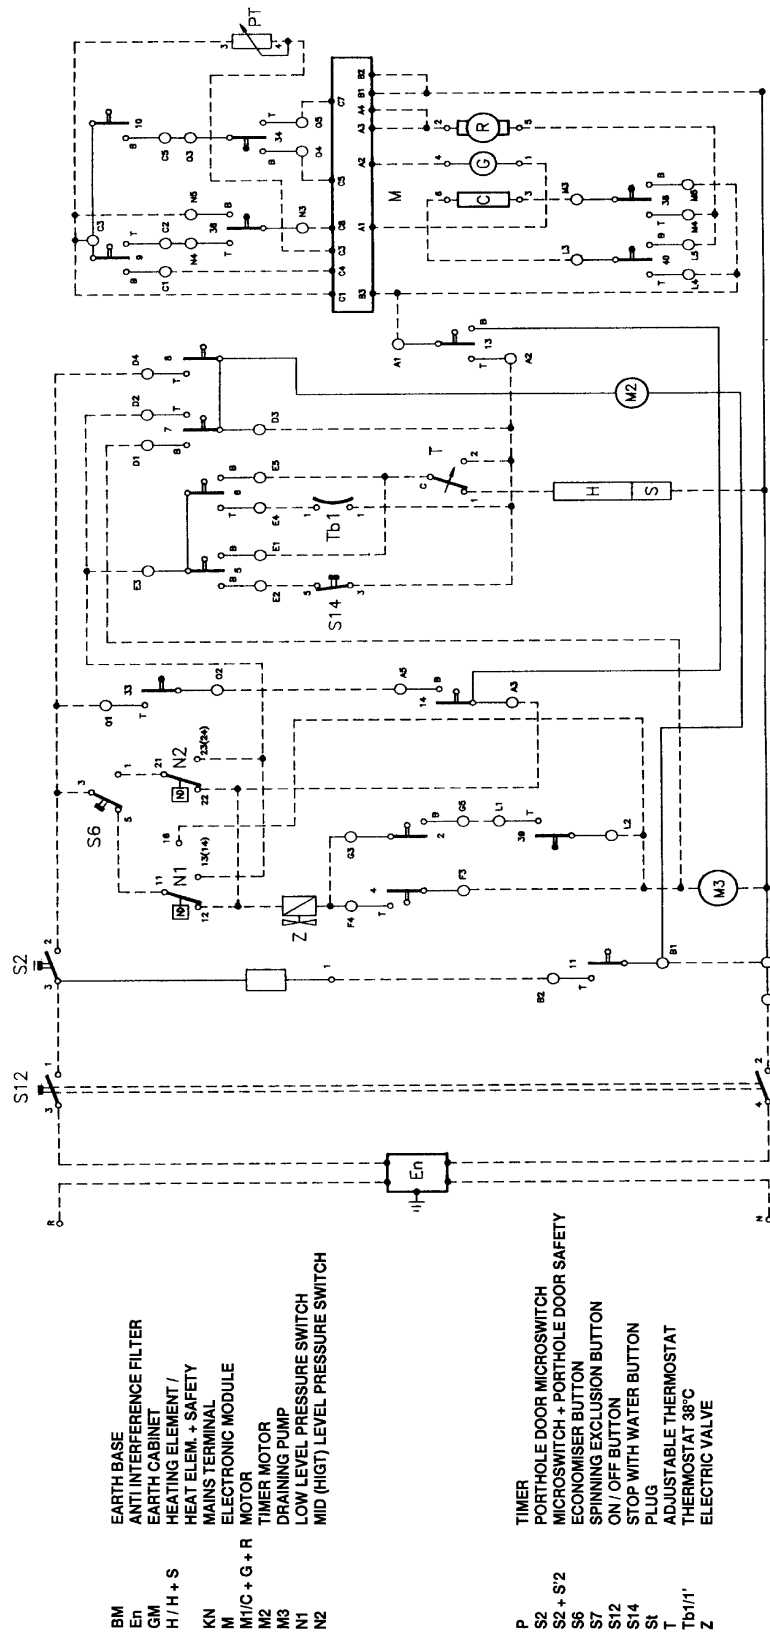

62581

Schließschema

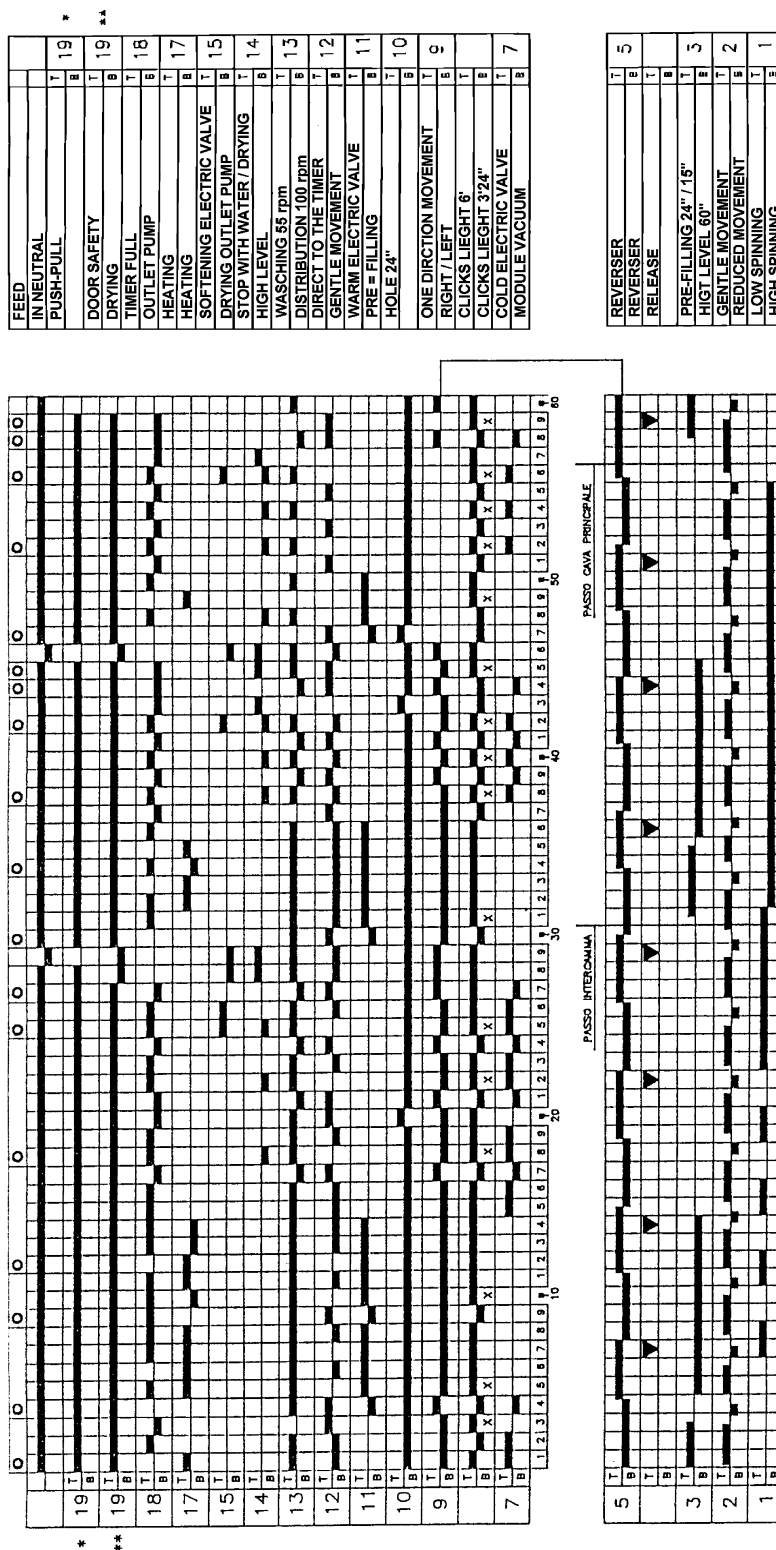

58702

* The cam no. 19 is valid for timer with push-pull 974

** The cam no. 19 is valid for timer without push-pull 981

X In these steps the time releases are 2'36"