



Service-Information

Kondensation Wäschetrockner AWZ 651

8575 651 01000

Letzte Änderung: 07.06.2008

Anlagedatum: 07.06.2008

Ersatzteilliste	2
Explosionszeichnung	4
Anschlußplan	6
Stromlaufplan	7
Schließschema	8

Die vorliegenden Serviceunterlagen sind ausschließlich für technisch qualifizierte Fachkräfte bestimmt, welche mit den entsprechenden einschlägigen Sicherheitsvorschriften vertraut sind.


Änderungen vorbehalten

Ersatzteilliste

Pos-Nr.	12NC	Beschreibung
004 0	4812 440 19718	Boden
011 0	4812 500 18054	Fuss
012 0	4812 528 78033	Rolle
012 1	4812 528 98003	Drehstift vorn + Rolle
012 2	4812 520 28068	Drehstift hinten
021 0	4812 440 69045	Frontblende Farbe
022 0	4812 440 19445	Seitenplatte
024 0	4812 440 19708	Rueckwand
030 0	4812 440 19712	Arbeitsplatte R2 VBL
033 0	4812 310 18582	Kit Abdeckung
034 0	4812 417 78015	Befestigung Arbeitsplatte
053 0	4812 440 88926	Klappe komplett
053 2	4812 417 28061	Schliesshebel Sockelleiste
053 3	4812 417 28062	Verschluss Sockelleiste
053 4	4812 440 88925	Sockelblende f. Beh. Boden
065 4	4812 325 18008	Isolation Verkleidung
100 0	4812 440 19711	Tuer R2 VBL
131 1	4812 271 38354	Tuerverriegel. System+Kindersicherung
133 0	4812 417 28039	Haken
133 2	4812 417 28056	Verschluss Taschensieb
191 0	4812 466 68607	Tuerdichtung
220 0	4812 418 18177	Trommel kpl. SS
223 0	4812 418 88027	Mitnehmer
271 0	4812 358 18164	Riemen, Antrieb H7 CD RO
273 0	4812 358 18055	Spannrolle
275 0	4812 492 68129	Feder
291 0	4812 466 68561	Dichtung vorn
291 2	4812 466 68562	Dichtung hinten
301 0	4812 452 10554	Schalterleiste AWZ 651
331 0	4812 414 58102	Knopf Timer WH,CD,TS
332 0	4812 276 18311	Drucktaste
339 0	4812 413 48305	Adapter f. Knopf
344 0	4812 464 48116	Halter
351 0	4812 134 48227	Signallampe
355 0	4812 280 18023	Summer
401 0	4812 361 18291	Motor inkl. Luefterrad
401 1	4812 401 18421	Klemme Motor
401 2	4812 401 18229	Klemme Motor
420 0	4812 121 18144	Kondensator 10 mF
421 0	4812 121 18161	Entstoerfilter
443 0	4812 361 18292	Geblaese Rad
443 1	4812 361 18293	Luefterrad Geblaese
443 2	4812 290 88066	Klemme Luefterrad
456 0	4812 310 18585	Heizelement Kit 1900W
490 0	4812 321 18087	Netzkabel
490 1	4812 321 28367	Zugentlastung
492 1	4812 401 18195	Klammer f.Erdung
500 0	4812 328 18175	Timer EC 4795 M2(IRCA)
557 0	4812 282 08008	Thermostat Auslauf
557 1	4812 282 98005	Dichtung Thermostat


Pos-Nr.	12NC	Beschreibung
564 0	4812 259 28681	Thermostat Kit
620 0	4812 276 18277	Schalter "Summer"
621 0	4812 278 18003	Schalter Start reset
621 2	4812 276 18278	Schalter Schonen
631 0	4812 271 38396	Mikroschalter f. Pumpe/Riemen
631 2	4812 360 18475	Kugel
631 3	4812 271 18013	Schwimmer System kpl. 6 kg, weiss
631 4	4812 223 18431	Hebel
631 5	4812 429 38039	Feder f. Hebel
633 0	4812 276 18248	Schalter Start
633 1	4812 276 18271	Stift Start Reset
653 1	4812 047 28001	Lichtleiter WH VBL
692 0	4812 210 58006	Halterung Sensor
740 0	4812 511 48226	Waermetauscher H3
741 0	4812 440 08003	Geblaese Kaltluft
741 1	4812 530 48244	Abdeckung Gebläsegehaeuse
743 0	4812 530 48242	Luftfuehrung ohne Loch
743 1	4812 530 48254	Heizkanal SS
743 3	4812 530 48239	Abdeckung Geblaese
743 4	4812 464 48122	Abdeckplatte
743 8	4812 466 88519	Dichtung f. Geblaese
750 0	4812 418 18262	Wasserbehaelter Boden blau 5kg
761 0	4812 480 58081	Filter Tasche
794 0	4812 466 88523	Dichtung Abluft, unten
794 1	4812 466 28108	Dichtung Heizungskanal
794 2	4812 466 98935	Dichtmanschette Heizungshalterung
794 3	4812 466 98937	Dichtmanschette
794 4	4812 466 88521	Dichtung Filter
902 2	4812 256 38004	Halter Heizung
903 0	4812 532 28028	Clip Kabel
903 1	4812 401 18228	Befestigung
910 1	4812 502 48347	Blechschrabe 3,5x14
910 5	4819 502 38265	Schraube VAB 4,5x20
910 8	4812 502 48348	Schraube ST 4,2x11
912 3	4812 502 18369	Schraube A2F M4x6
912 4	4812 502 48015	Schraube 4,0x16-TORX
922 0	4812 532 58005	Sicherungsring
922 1	4812 532 58007	Sicherungsring
932 0	4812 492 98019	Feder Wassertank
950 1	4812 466 88517	Dichtung Wassertank
952 3	4812 466 88522	Dichtung Sensor
962 0	4812 466 38012	Schutz Motor

Explosionszeichnung

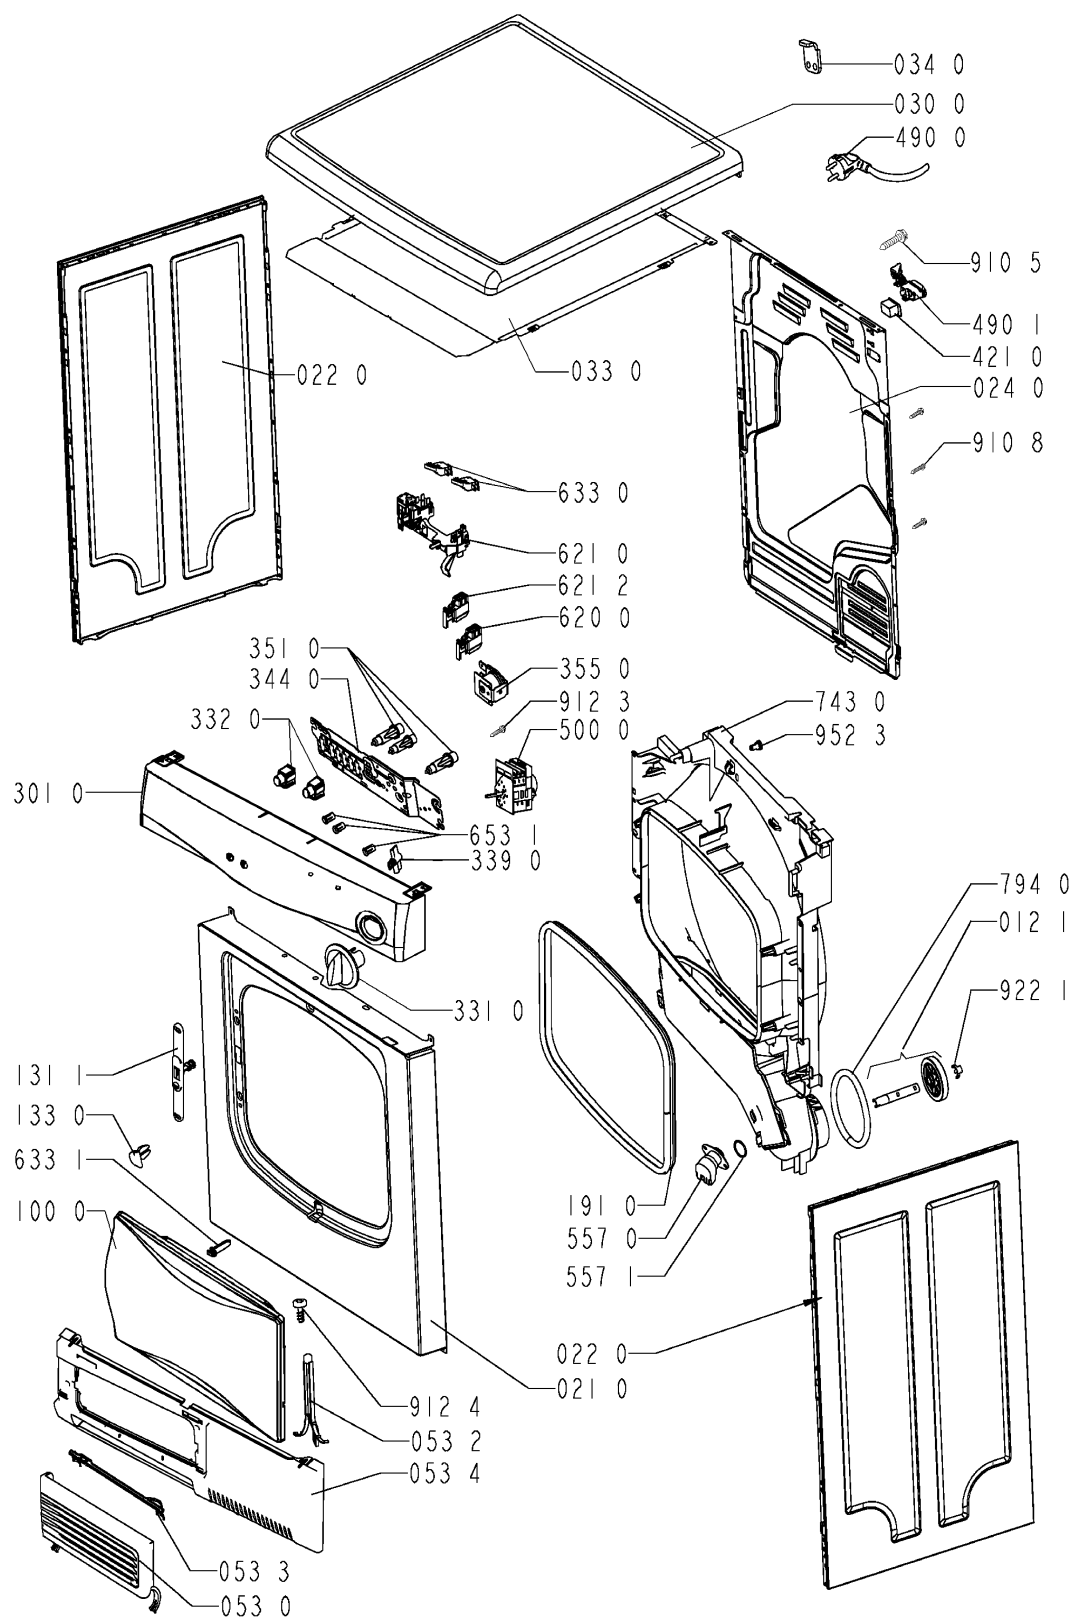


8575 651 01000

Explosionszeichnung

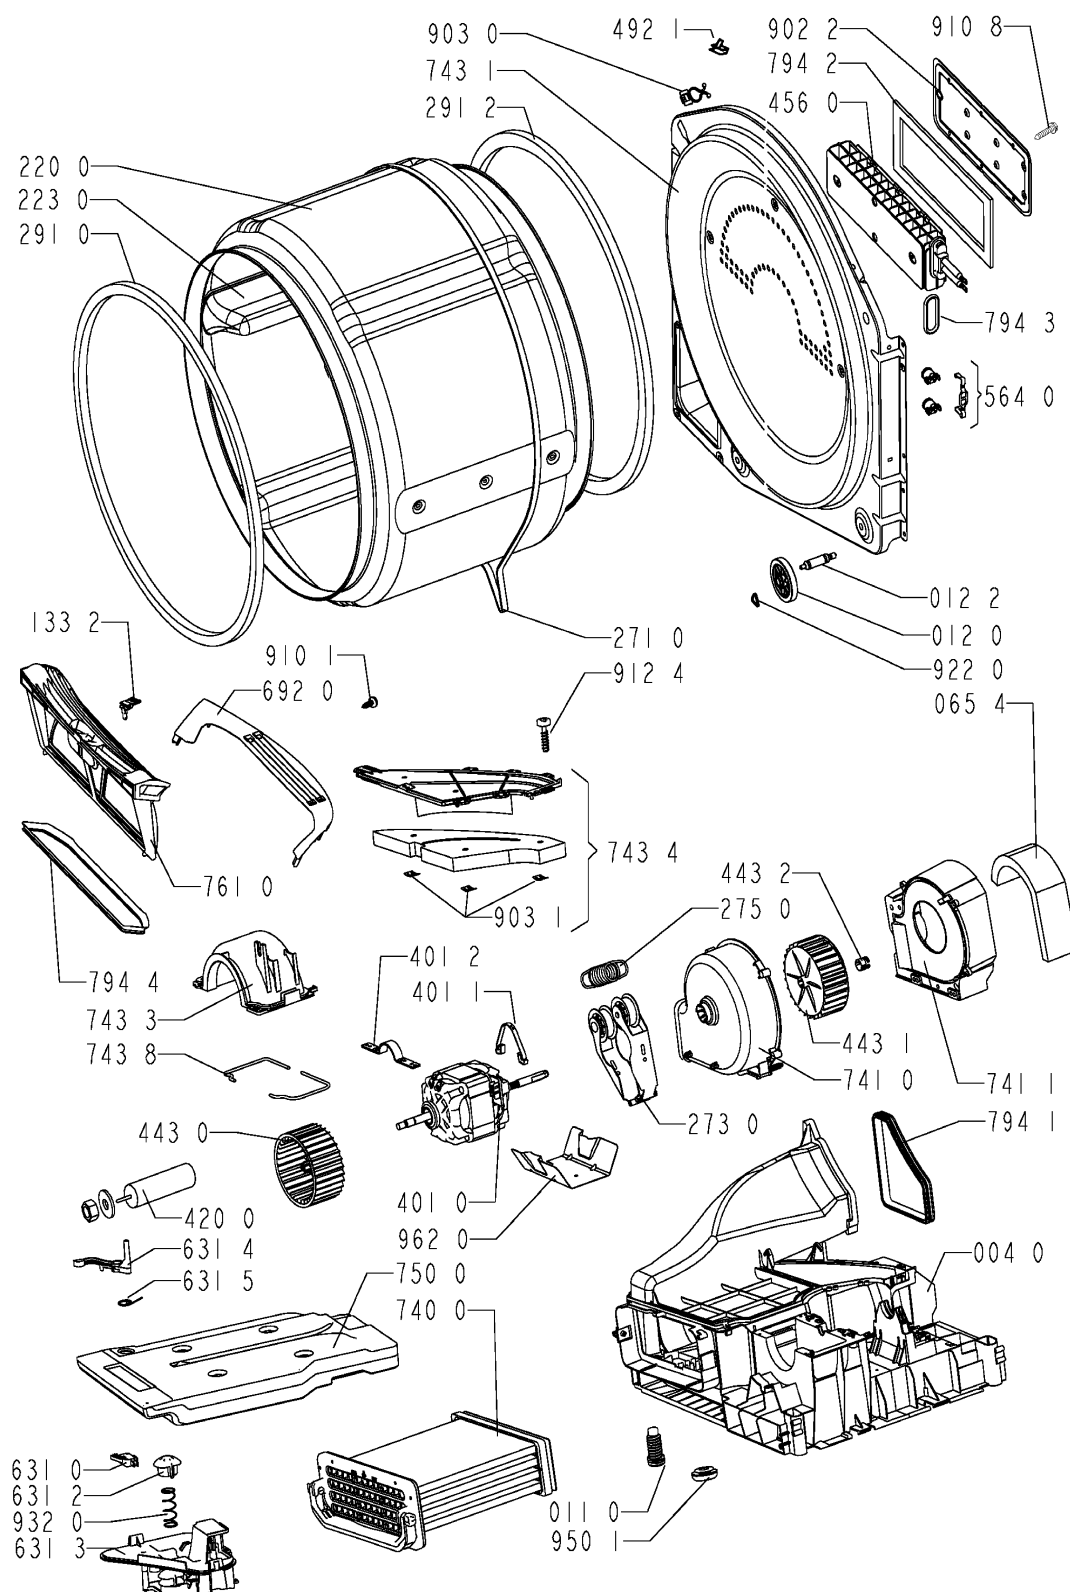

8575 651 01000

Anschlußplan

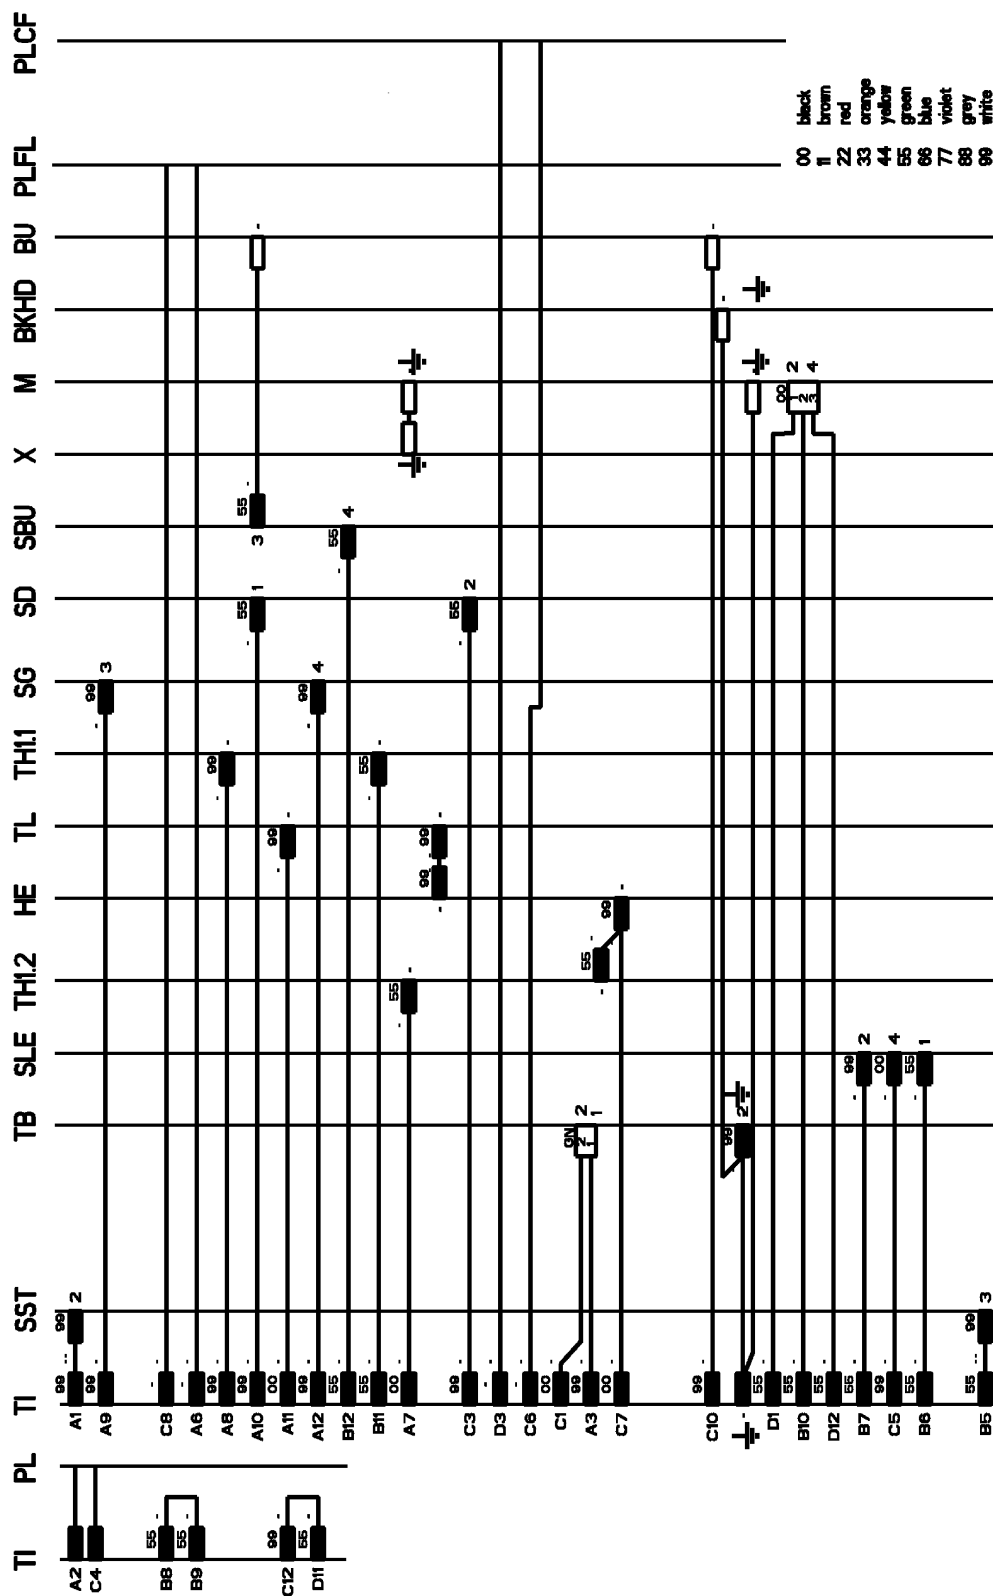


4619 732 01361

Stromlaufplan

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38

- BKHD bulkhead
- BU buzzer
- C capacitor
- HE heating element
- IC interference capacitor
- M motor drive
- PL pilot lamp
- PLCF pilot lamp, water indication
- PLFL pilot lamp, fluff (lint indication)
- SBU switch, buzzer
- SD switch, door
- SG switch, gentle
- SLE switch, level
- SST switch, start
- TB terminal block
- THL1 thermostat fix (drum outlet)
- THL2 thermostat fix (fluff filter)
- TI timer
- TIM timer motor
- TL temp. limiter

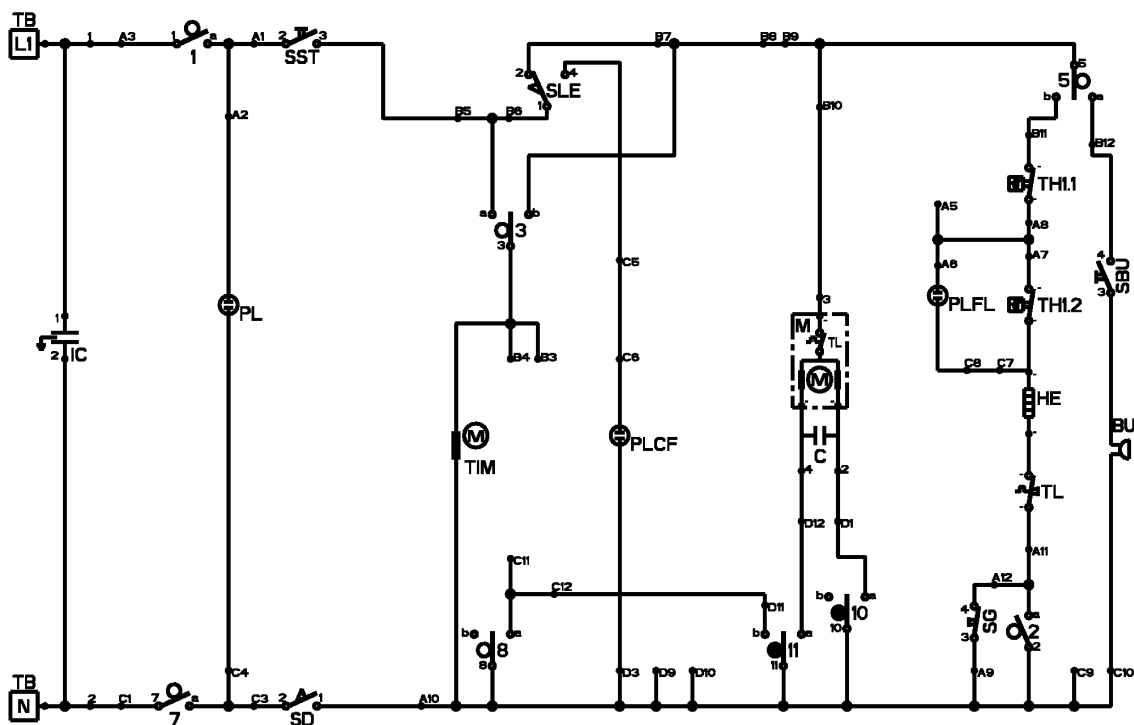

4619 732 01361

Schließschema

[illegible]TUTTO VALORE $\pm 1''$