




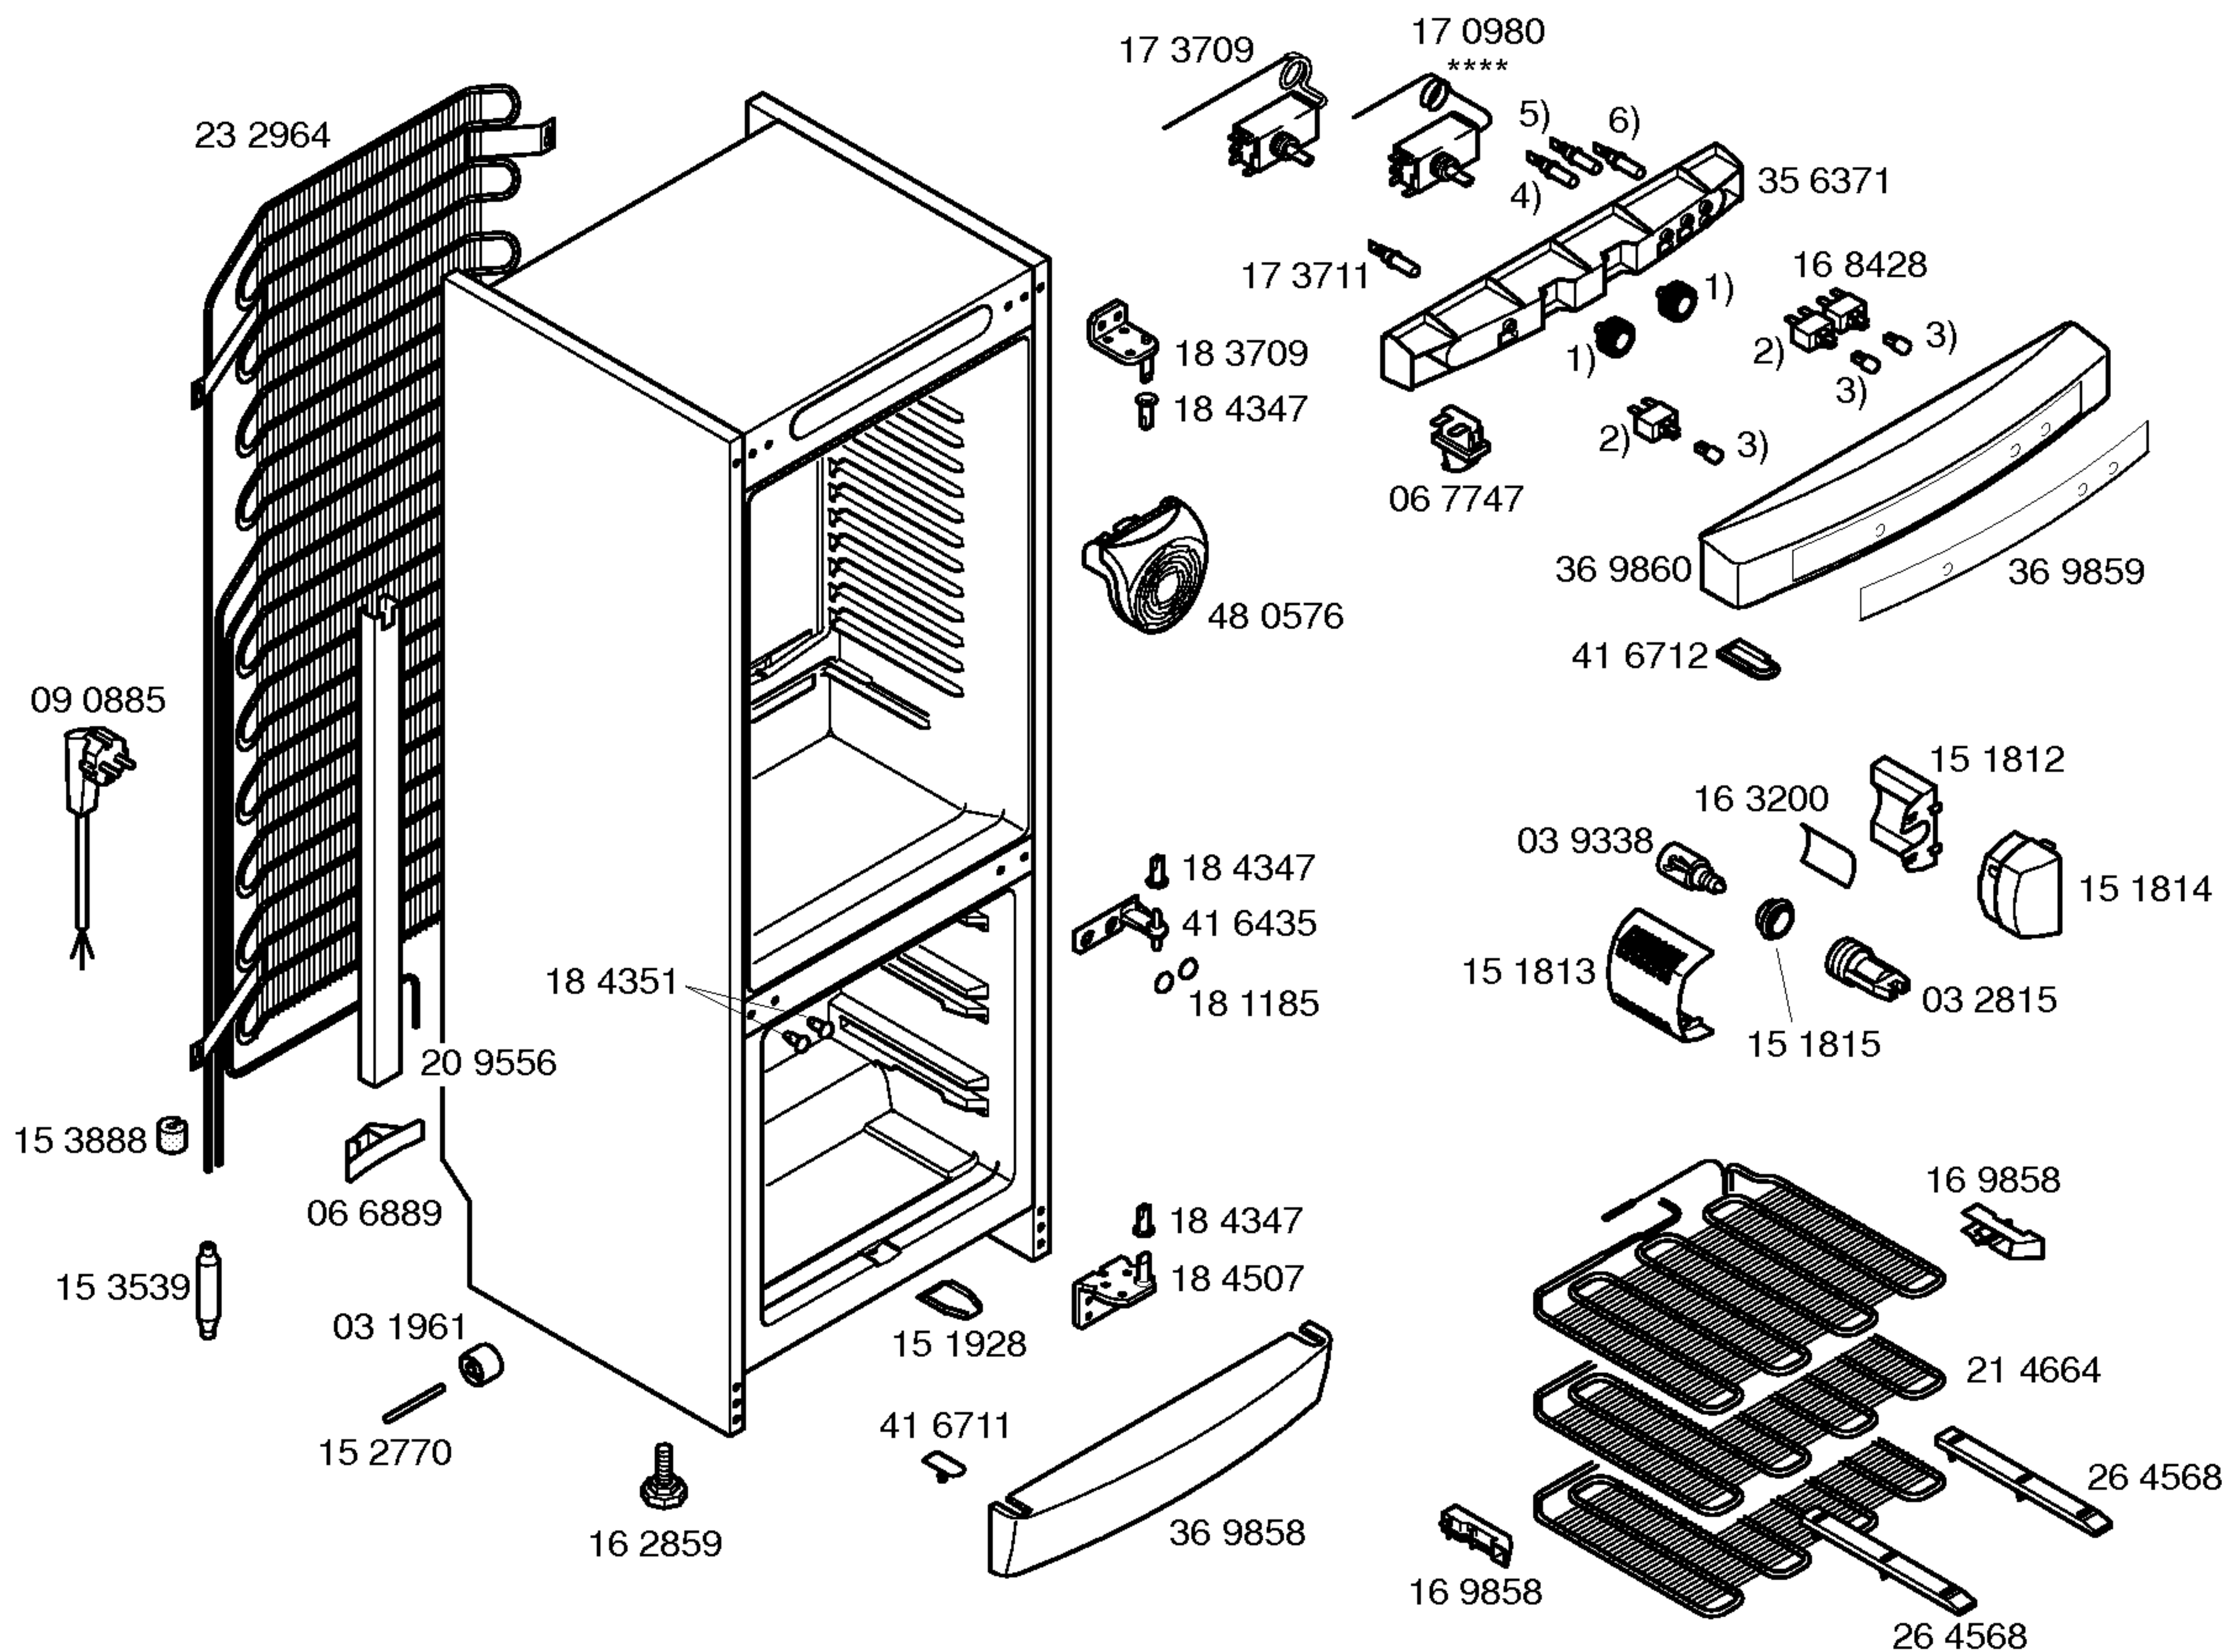

Libro de instrucciones  
52 9563  
(de,en,fr,es,pt)

- 1) 17 4918  
V01  
16 5458  
V02
- 2) 16 8427
- 3) 17 3715  
V01  
17 4468  
V02
- 4) 17 3711  
Verde
- 5) 17 3712  
Ambar
- 6) 17 3713  
Rojo

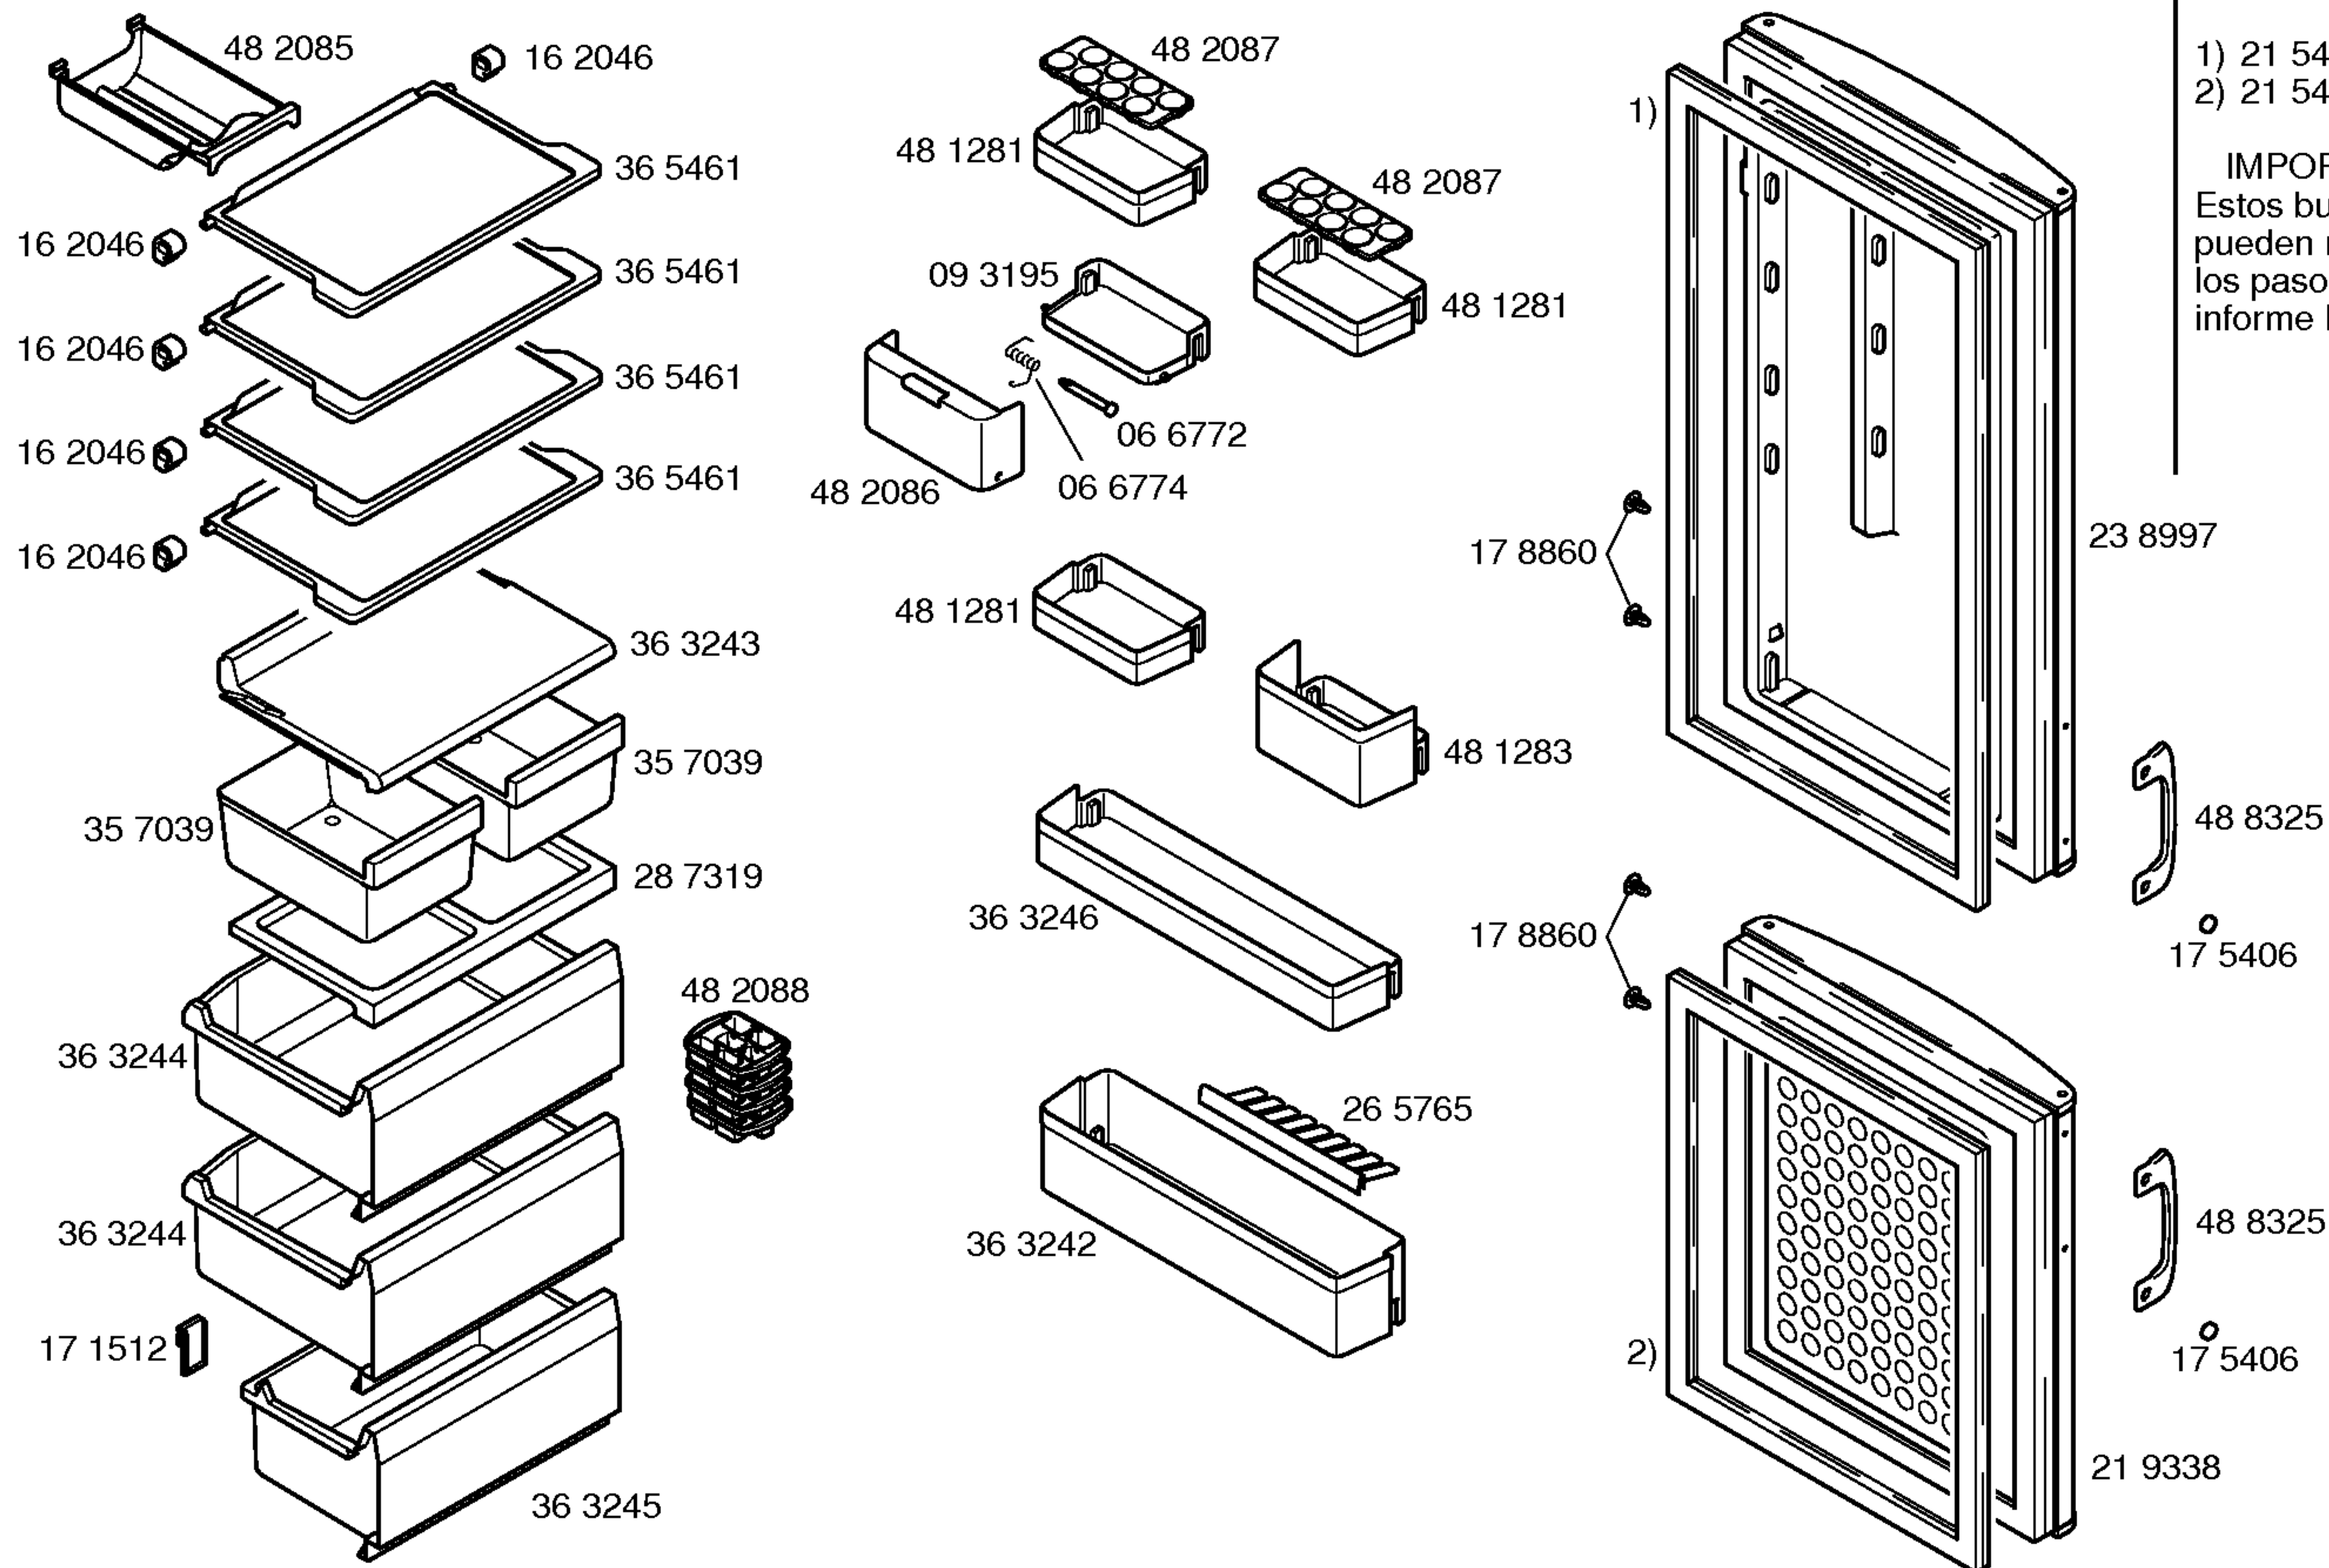

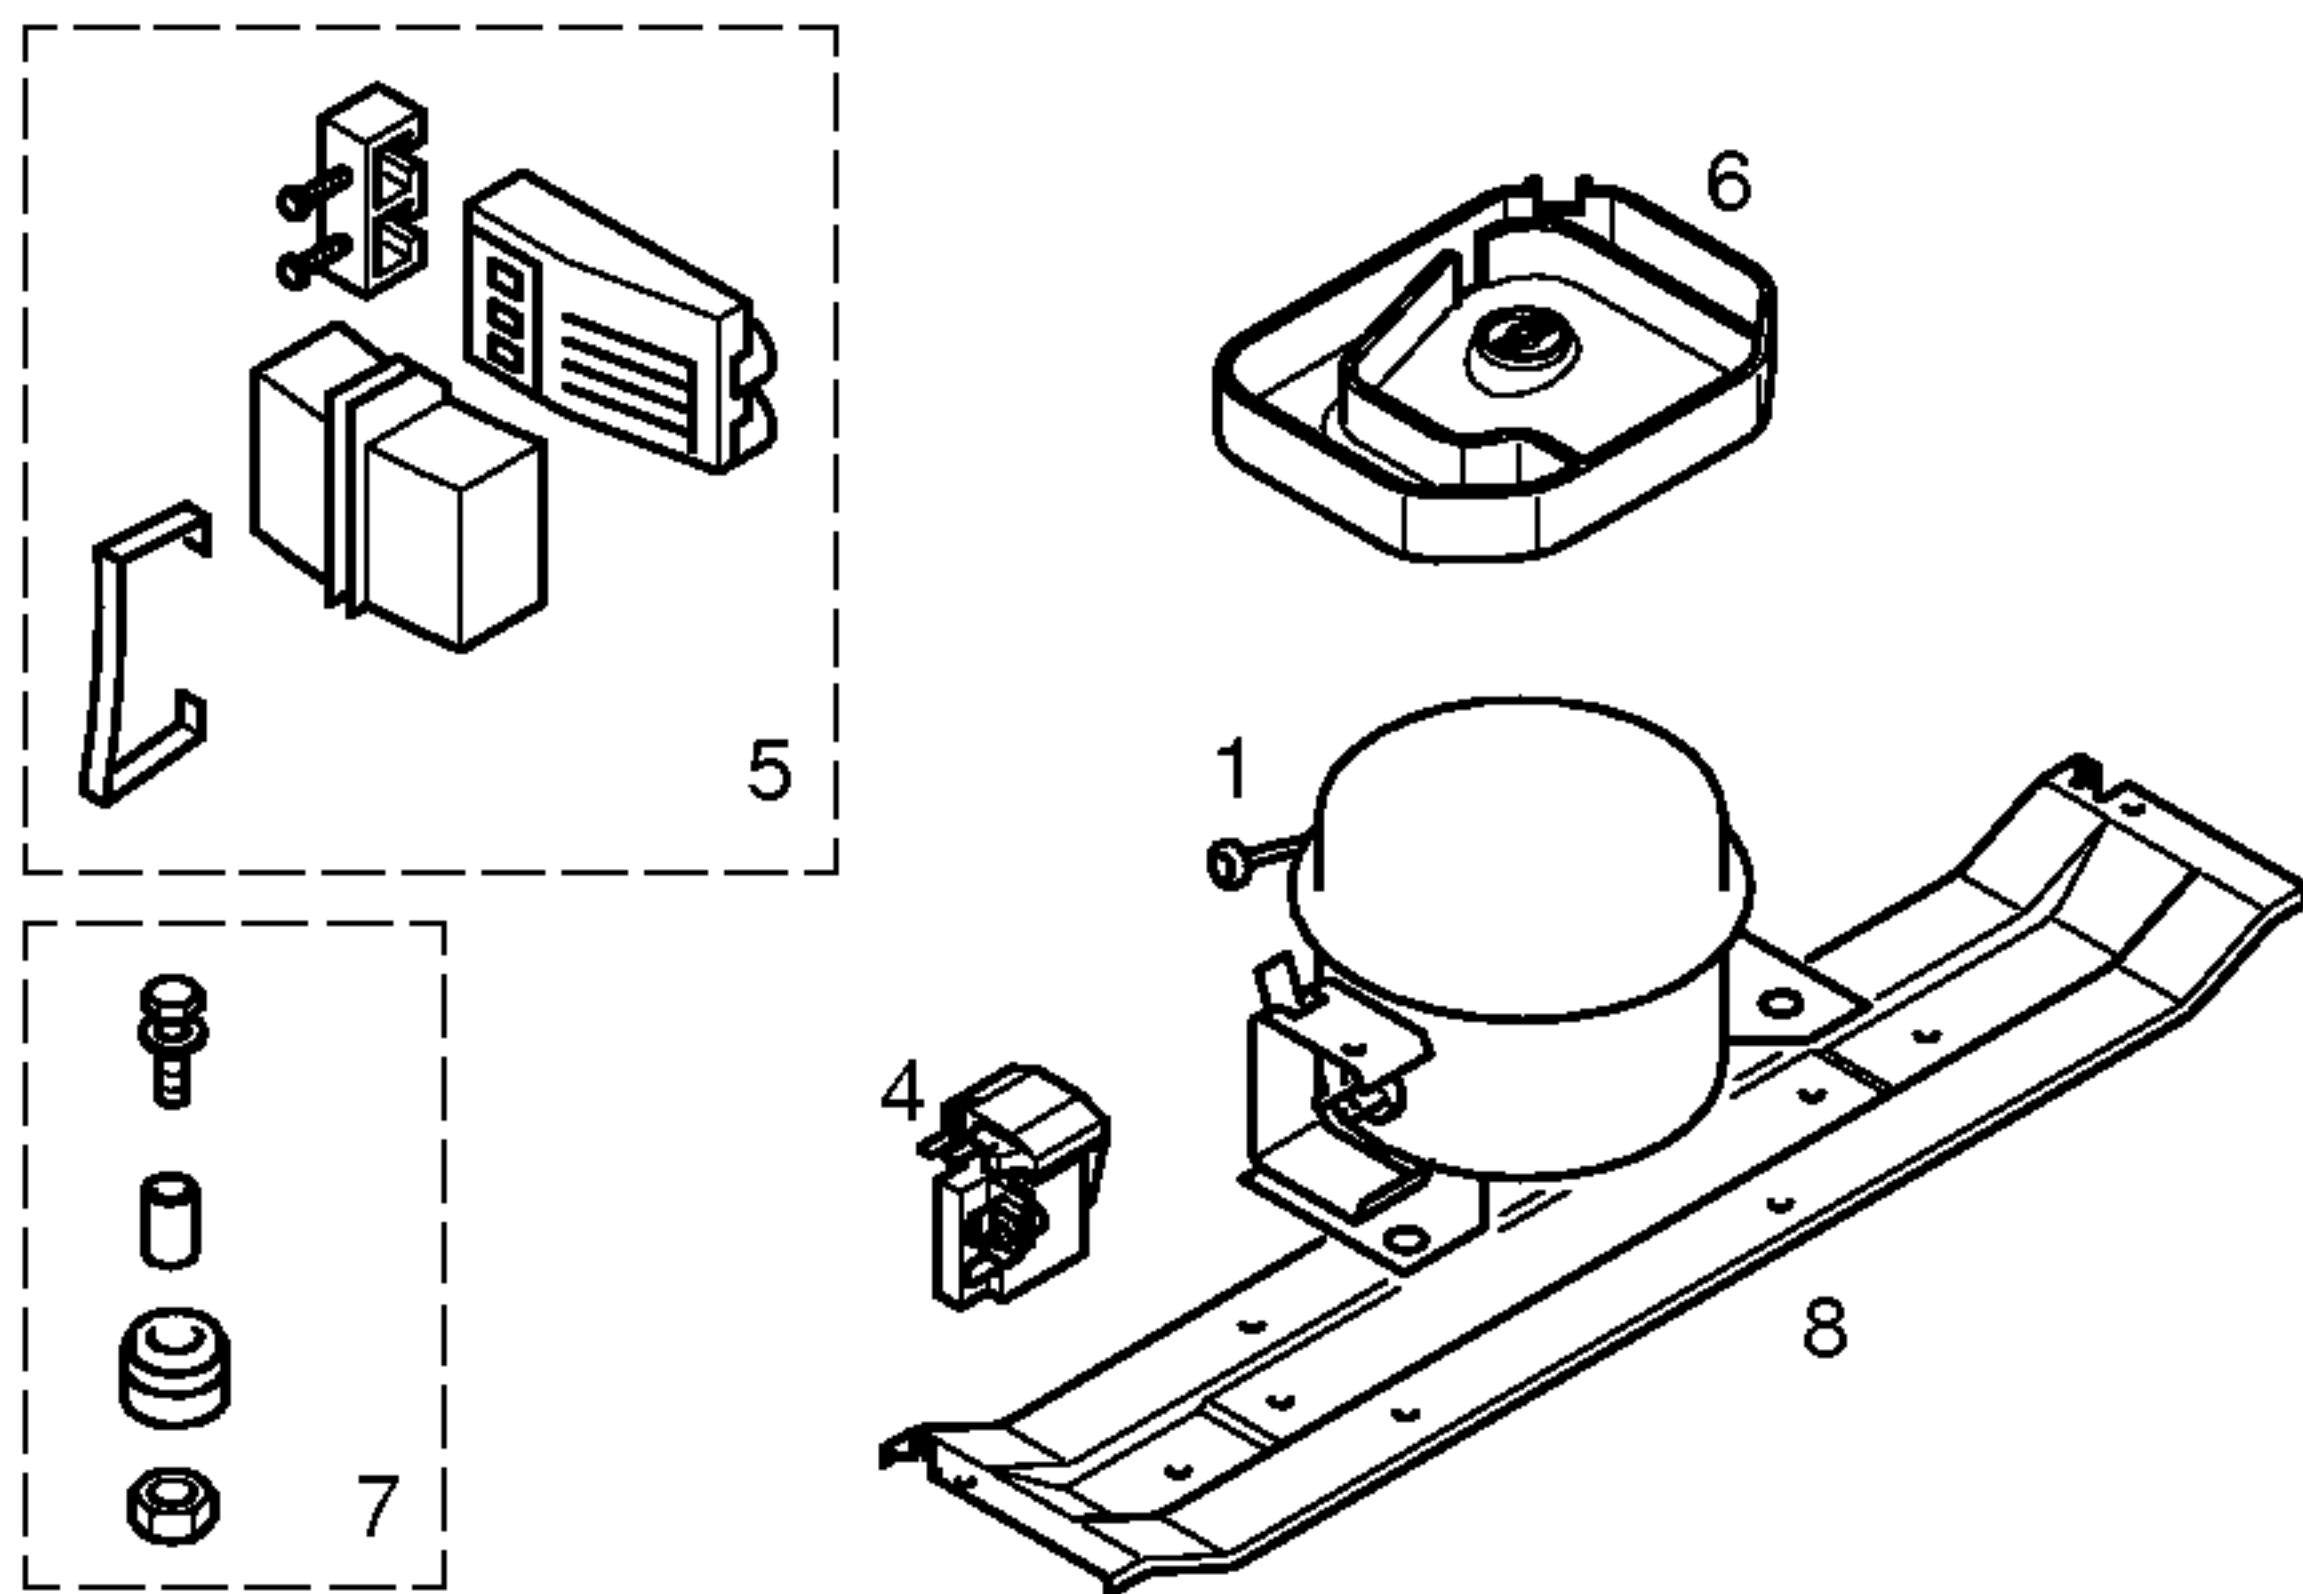

| Pos. | *****     |           |           |
|------|-----------|-----------|-----------|
|      |           | V01       | V02       |
|      | LG        | LG        | Aspera    |
|      | NDA62NAEG | NDA69NAEG | EMT40-CLP |
| 1    | 14 2000   | 14 2001   | 14 2001   |
| 2    |           |           |           |
| 3    |           |           |           |
| 4    | 17 1011   | 17 1011   | 41 6671   |
| 5    |           |           |           |
| 6    | 48 4330   |           |           |
| 7    | 05 0166   | 05 0166   | 05 0166   |
| 8    | 28 8253   | 28 8253   | 28 8253   |
| 9    |           |           |           |
| 10   |           |           |           |
| 11   |           |           |           |
| 12   |           |           |           |
| 13   |           |           |           |

| TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES / DATOS TECNICOS                          |                     |                    |                     |
|--------------------------------------------------------------------------------------------------|---------------------|--------------------|---------------------|
|                                                                                                  |                     | V01                | V02                 |
| Verdichter/Compressor/Compresseur/Compresor<br>Typ/Type/Tipo                                     | LG<br>NDA62NAEG     | LG<br>NDA69NAEG    | Aspera<br>EMT40-CLP |
| Förderleistung/Delivery/Debit/Aspiración l/h                                                     | 0,48                | 0,50               | 0,63                |
| Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A                                       | 35,21               | 35,21              | 32,05               |
| Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm                                             | 21,49               | 21,49              | 26,59               |
| Hi/aux. Ohm                                                                                      |                     |                    |                     |
| Temp.Reyler/Thermostat/Termostato<br>Typ/Type/Tipo                                               | Danfoss<br>077B6181 | Ranco<br>K54-L2006 |                     |
| Reglerstellung/Position/Conexión                                                                 | MIN. MAX.           | MIN. MAX.          | MIN. MAX.           |
| Schaltwerte/Switching values/ ..ein/conex. °C                                                    | +6°                 | -14°               | -22°                |
| Valeurs de commutation/Desconex. ..aus"/descon. °C                                               | -11° -28°           | -20°               | -28°                |
| (..abtaven' od) ..alarm' °C                                                                      |                     | -10°               | -18°                |
| Füllmenge/Fill. quantily/Charge/Carga R600a.                                                     | g                   | *                  | *                   |
| Anschlusswert/Comm. load/Puiss. Connect./Potenc.                                                 | W                   | 71                 | 83                  |
| Heizung/Heater/Chauflage/Resistenc.descong.<br>Widerstand/Resistance/Resistencia Ohm             |                     |                    |                     |
| Leistung/Power/Puissance/Potencia W                                                              |                     |                    |                     |
| Ventilador/Blower/Ventilateur/Ventilador<br>Widerstand/Resistance/Resistencia Ohm                |                     |                    |                     |
| Magnetventil/Magnetic valve/Electrovanne/Electrovalvula<br>Widerstand/Resistance/Resistencia Ohm |                     |                    |                     |
| Spannung/Voltage/Tension/Tensión V                                                               |                     |                    |                     |
| Temp.Reyler/Thermostat/Termostato ambiente para<br>ventilador refrigerador                       |                     |                    |                     |

\* Siehe Typenschild / See identification plate / Voir plaque de caractéristiques / Ver plaqueta de características