



Libro de instrucciones
51 7464
(E,P,GB,,F,NL,GR)


Instrucciones R600a
51 9240
(D,GB,F,I,NL,DK,N,
S,SF,P,GR,E,TR)

Instrucciones de montaje
51 9729
(D,GB,F,I,NL,E,P,GR)

1) 067746
2) 03 3055

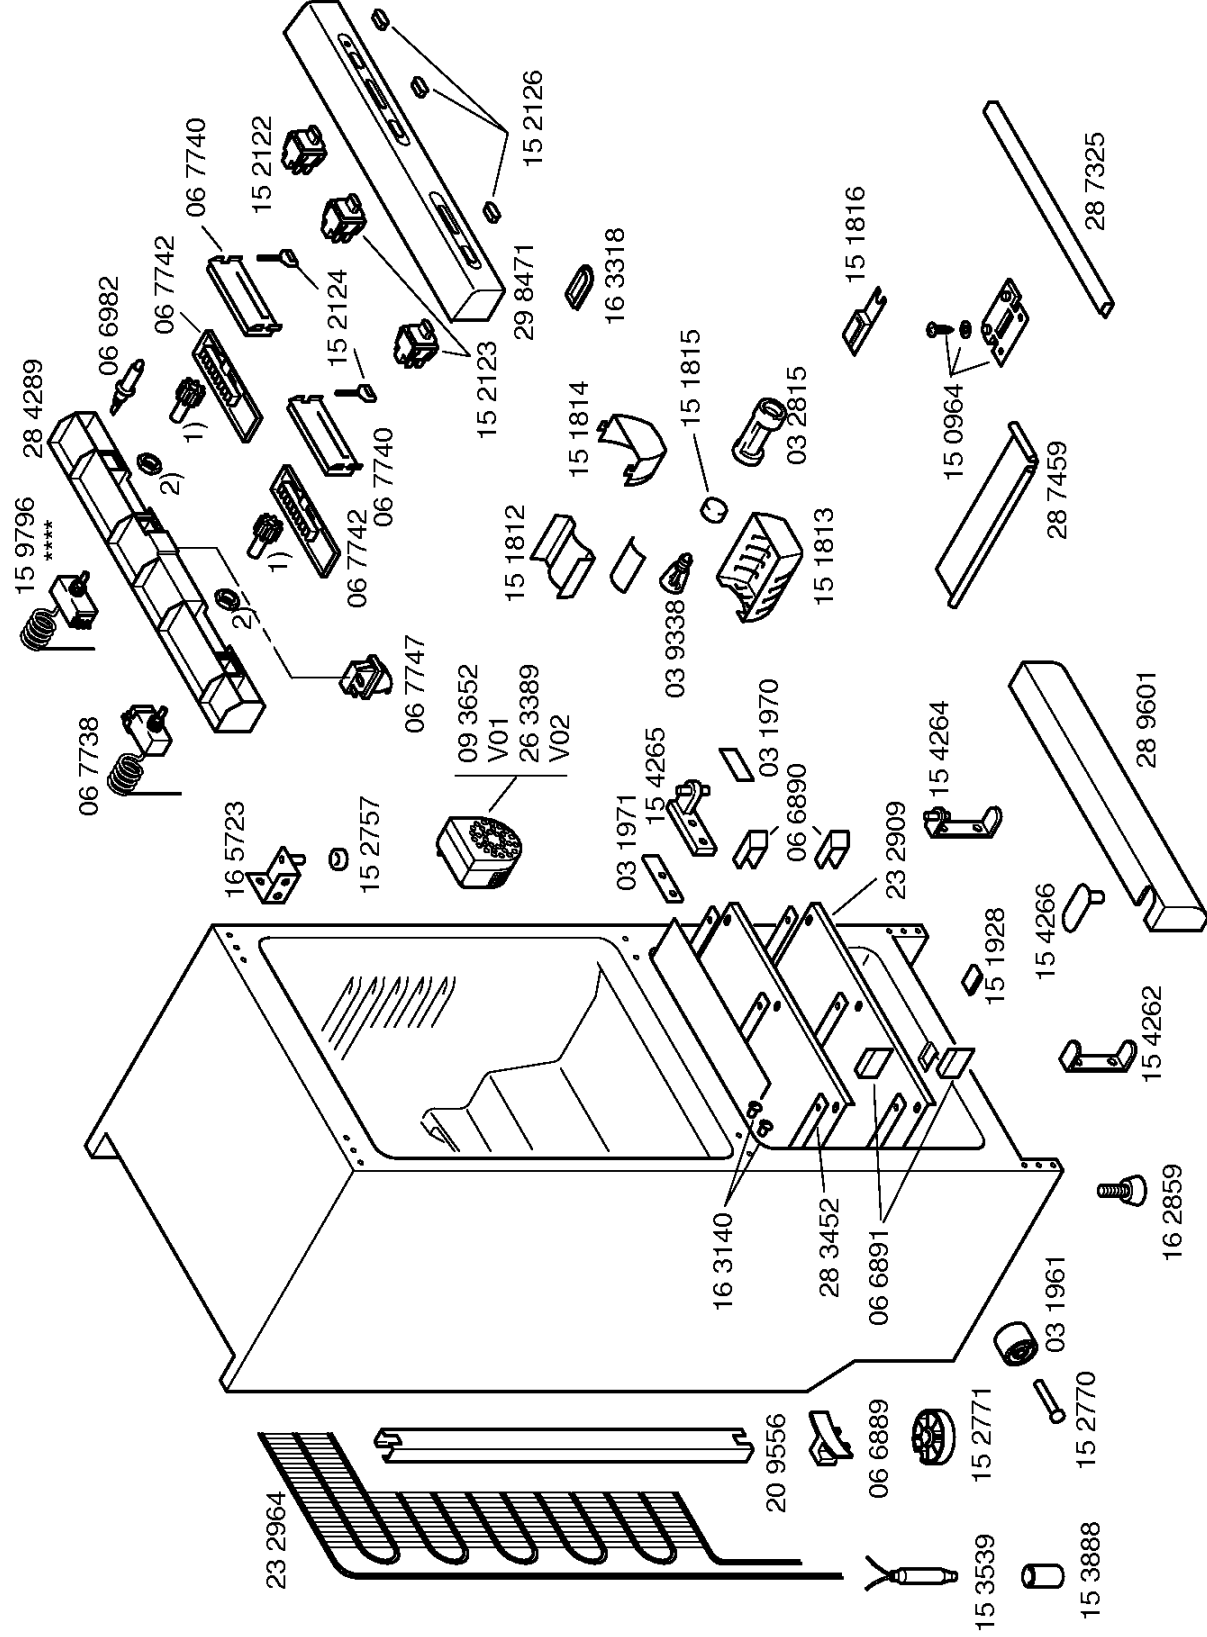

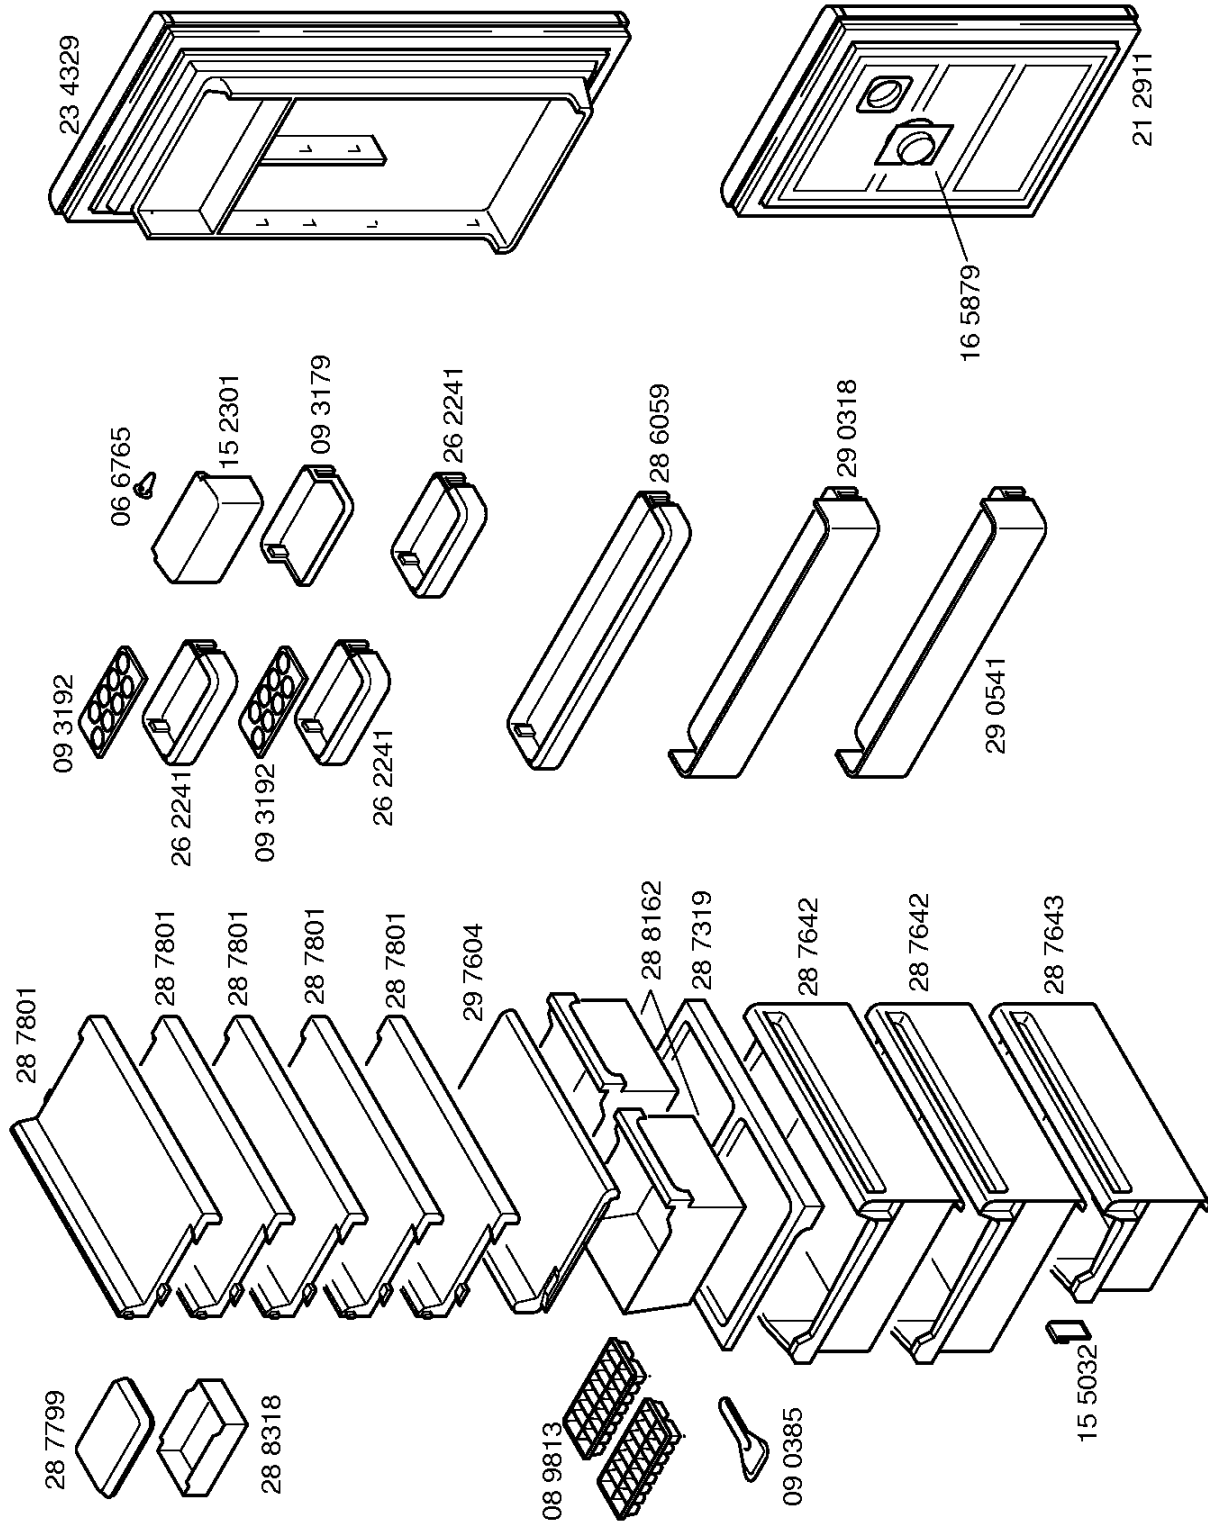

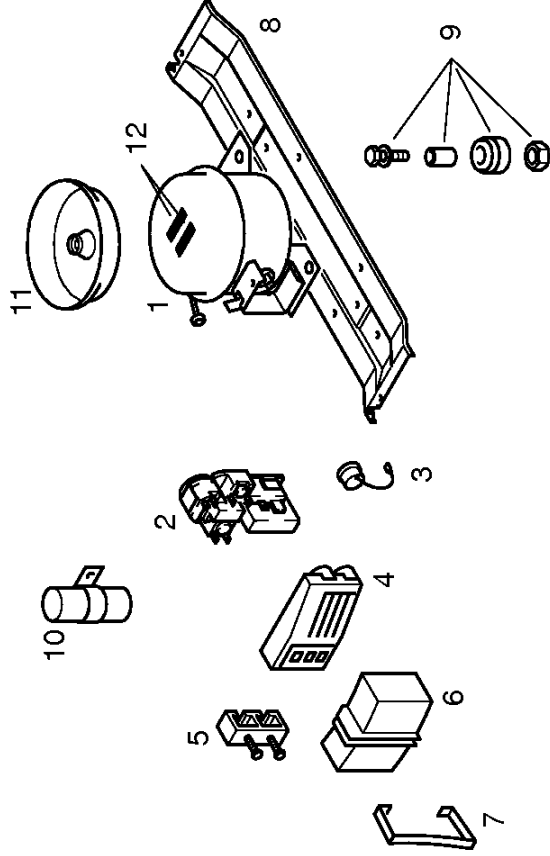

Pos.	Matsushita	Aspera
	SD65E67WAY5	BPM1110Y
1	14 1590	14 1605
2	16 5229	15 4315
3		16 5230
4		
5		
6		
7		
8	28 0162	28 0162
9	05 0166	05 0166
10		
11	09 5320	
12		
13		

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Typo	Matsushita SD65E	Aspera BPM1110Y	
Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. H./main/prin. Ohm H./aux.	29,80 31,80	24,70 37,65	
Temp. Reyley/Thermostat/Termostato Typ/Type/Typo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ Valeurs de commutation/Desconex. (..abtaffen' od)	Danfoss 077B62 MIN. MAX +6° -13° -28°	Ranco K54-L1924 MIN. MAX -14° -24° -21° -31° -15°	
Füllmenge/Fill. quantily/Charge/Carga R600a	g	*	*
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W	89	86
Heizung/Heater/Chaufrage/Resistenc. descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	Ohm W		
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	Ohm		
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Voltage/Tension/Tensión	Ohm V		
Temp. Reyley/Thermostat/Termostato ambiente para ventilador refrigerador			

* Siehe Typenschild/Ver. plaqueta de características