



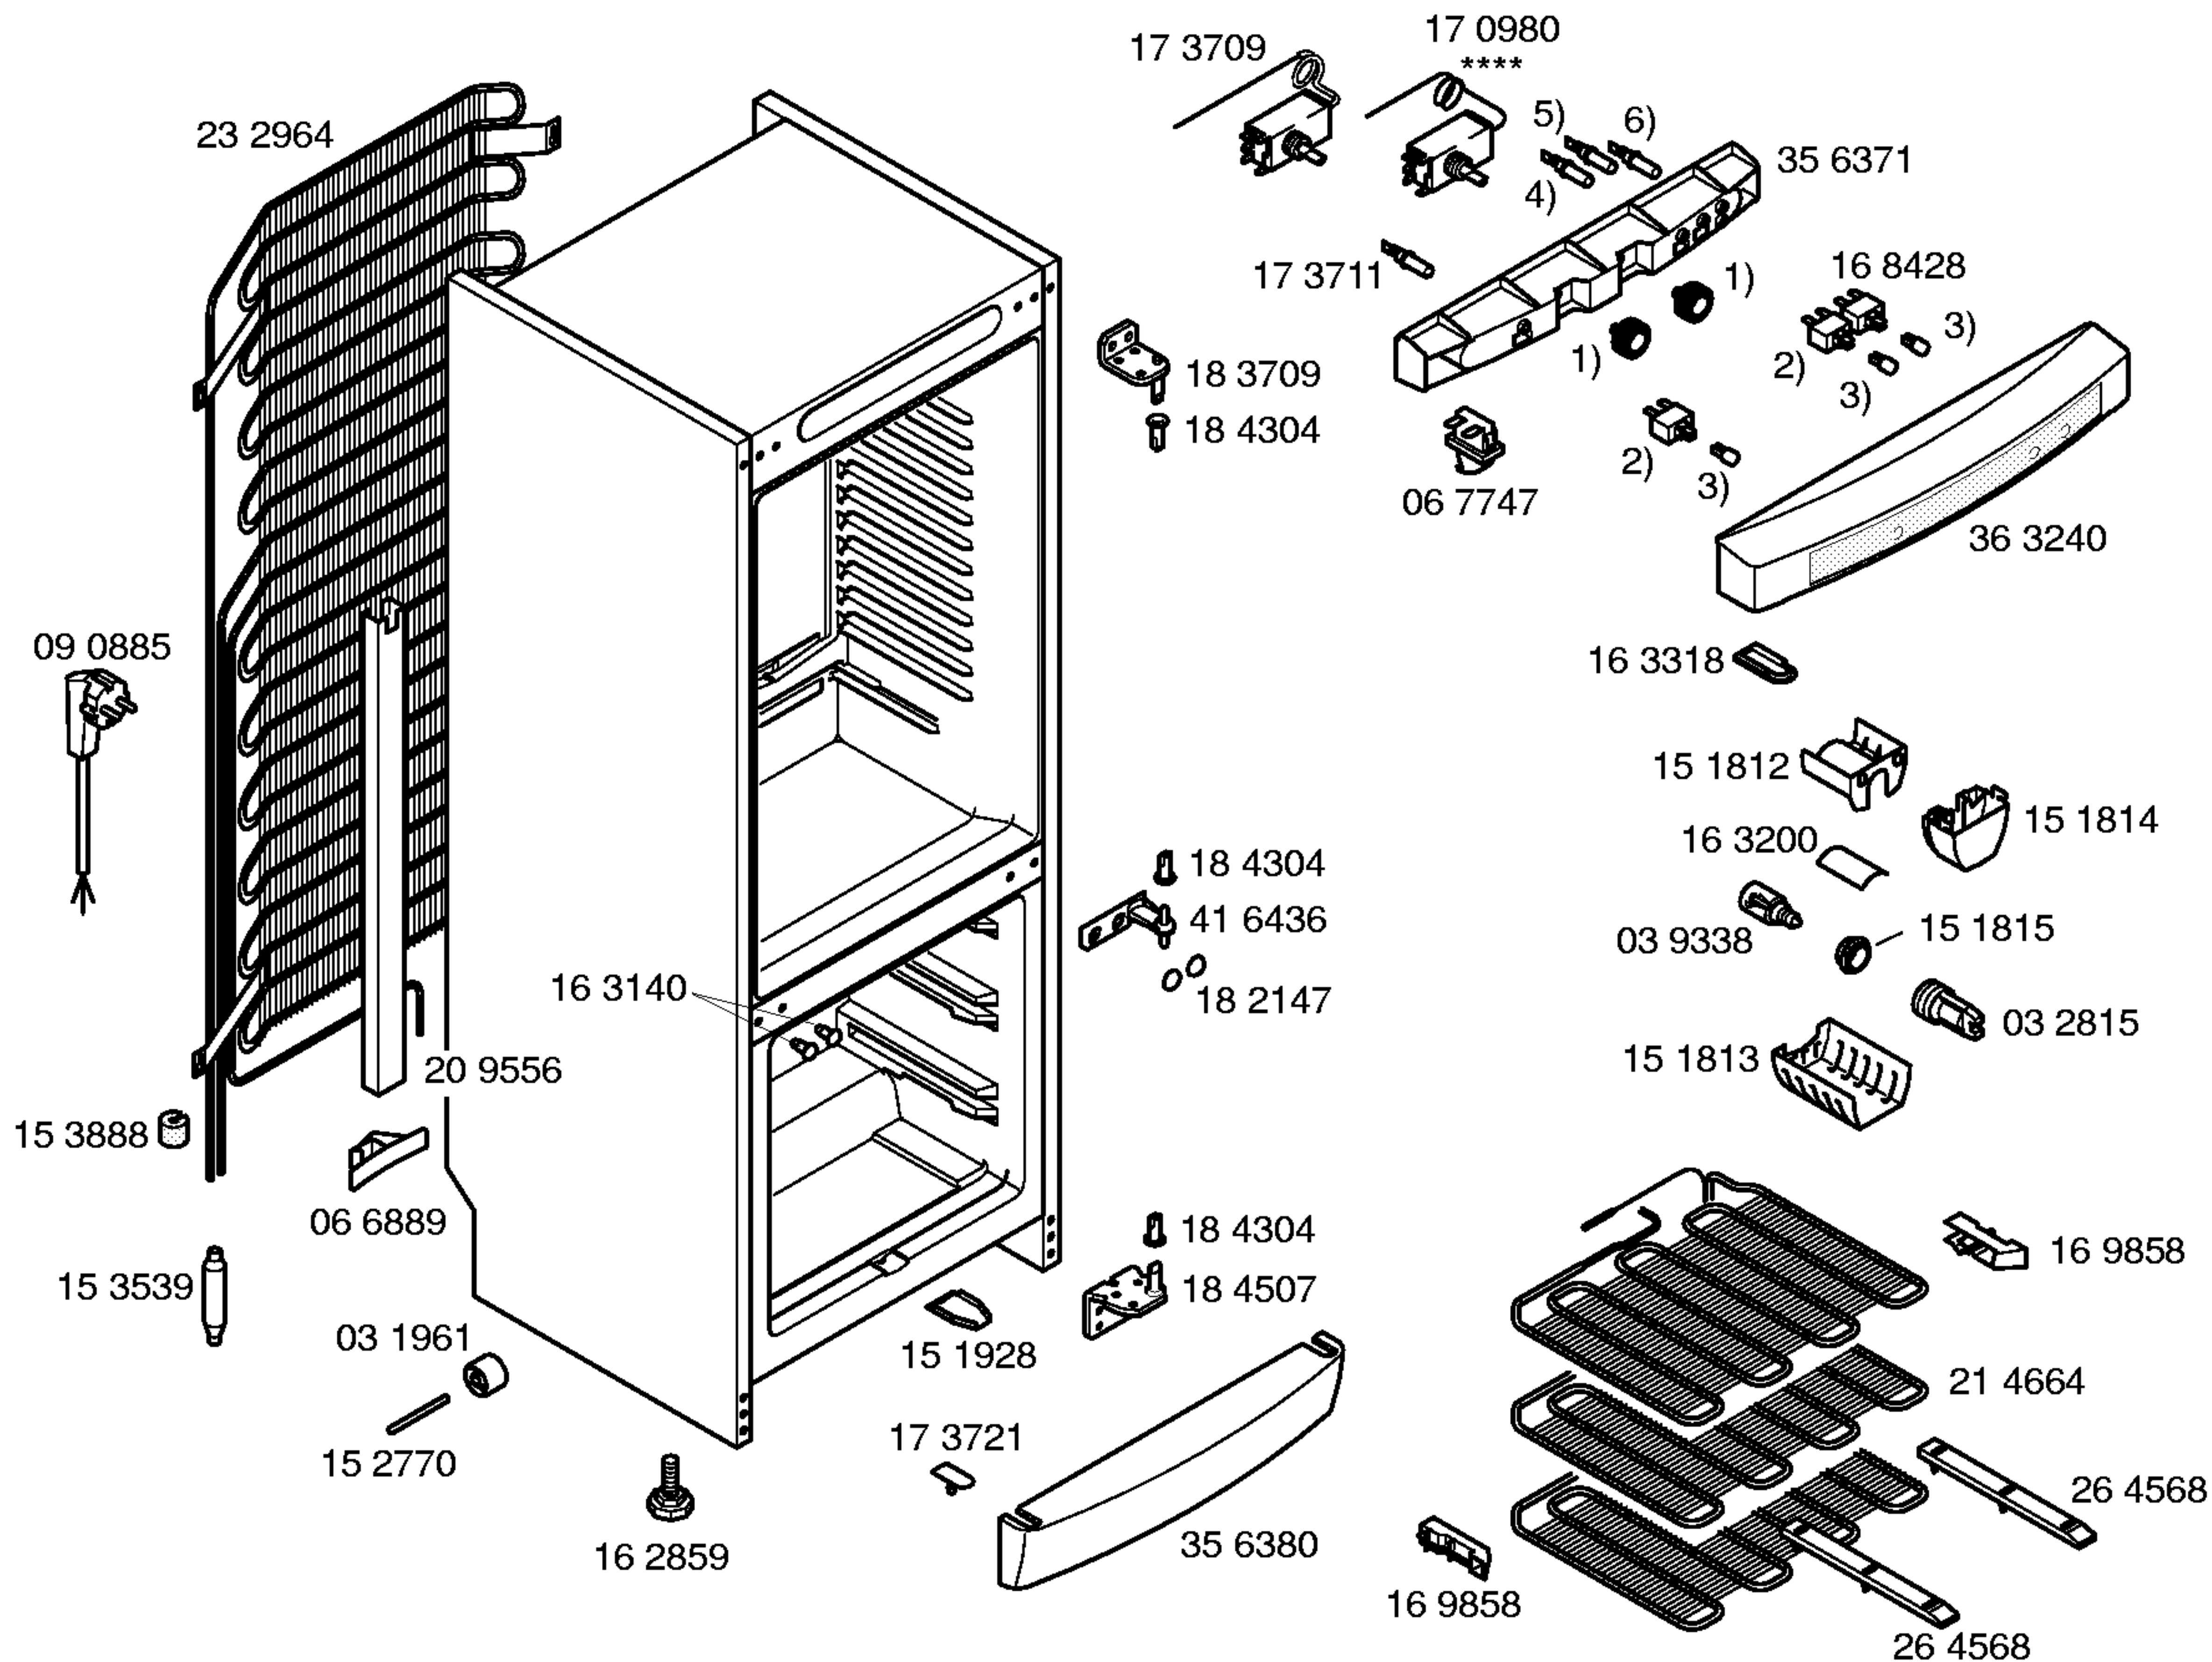


Libro de instrucciones
52 9563
(de,en,fr,es,pt)

- 1) 16 5458
- 2) 16 8427
- 3) 17 4468
- 4) 17 3711 Verde
- 5) 17 3712 Ambar
- 6) 17 3713 Rojo

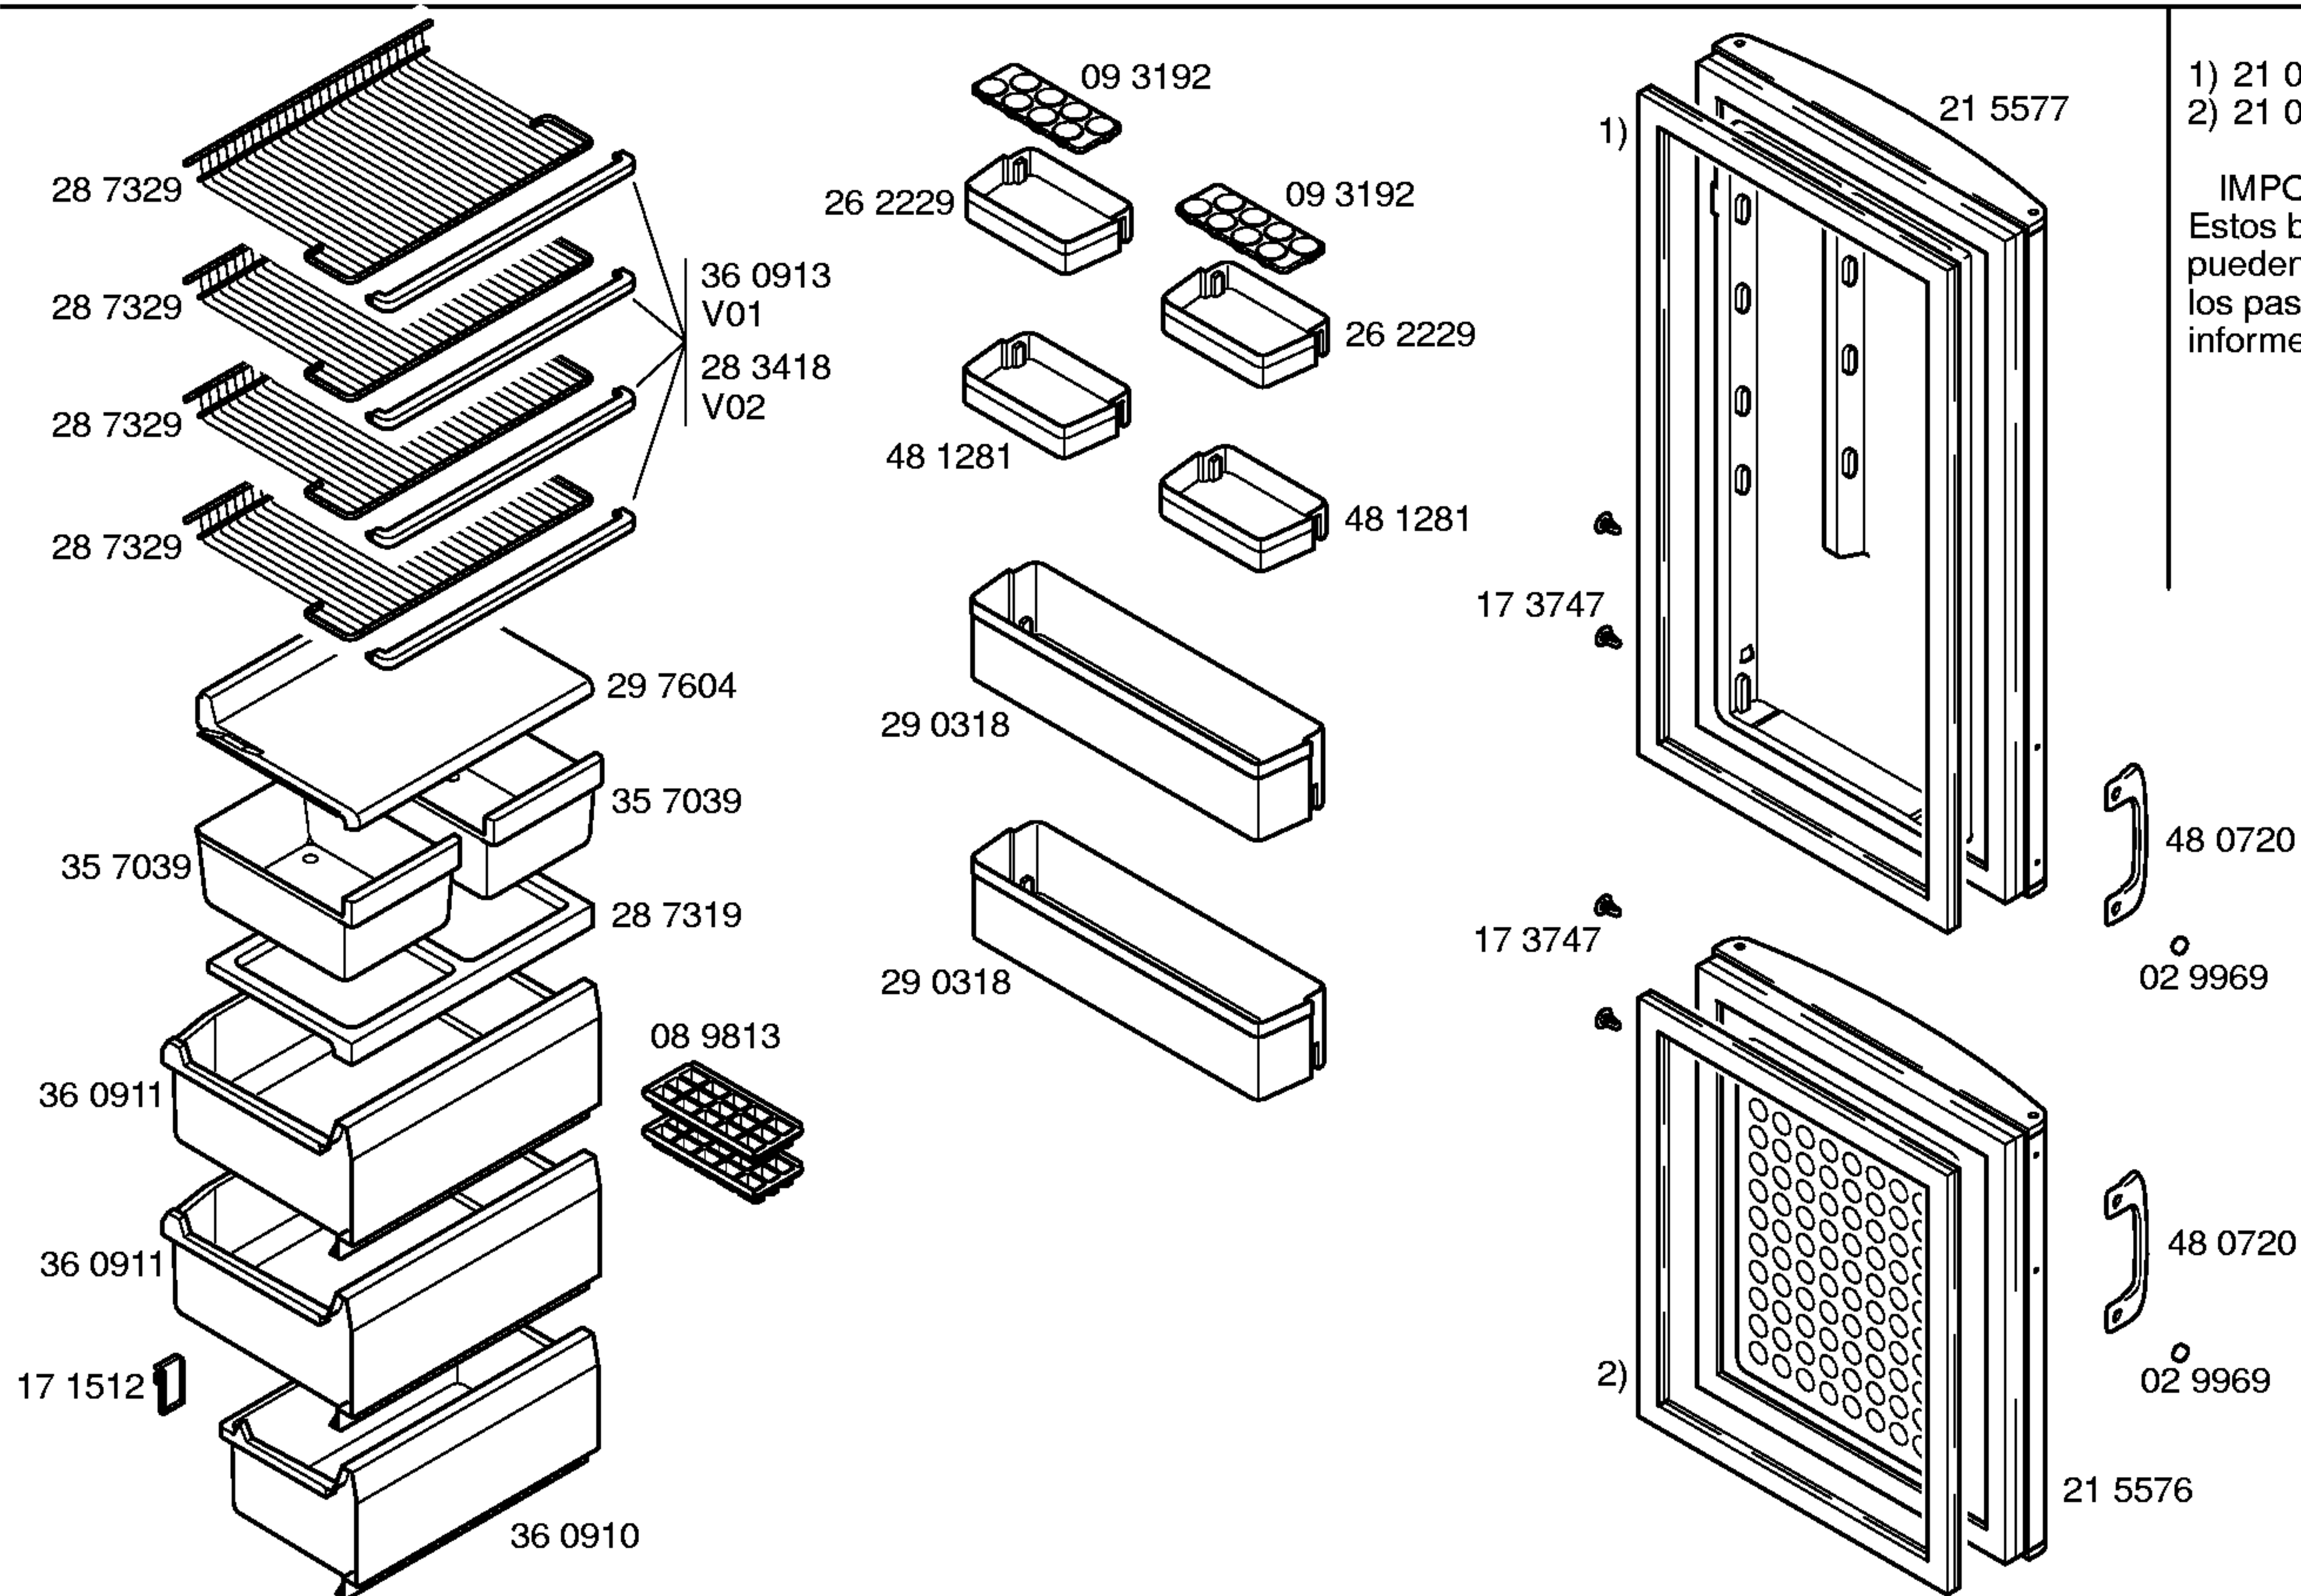

IMPORTANTE
Estos burletes sólo se pueden montar siguiendo los pasos indicados en el informe KX50113

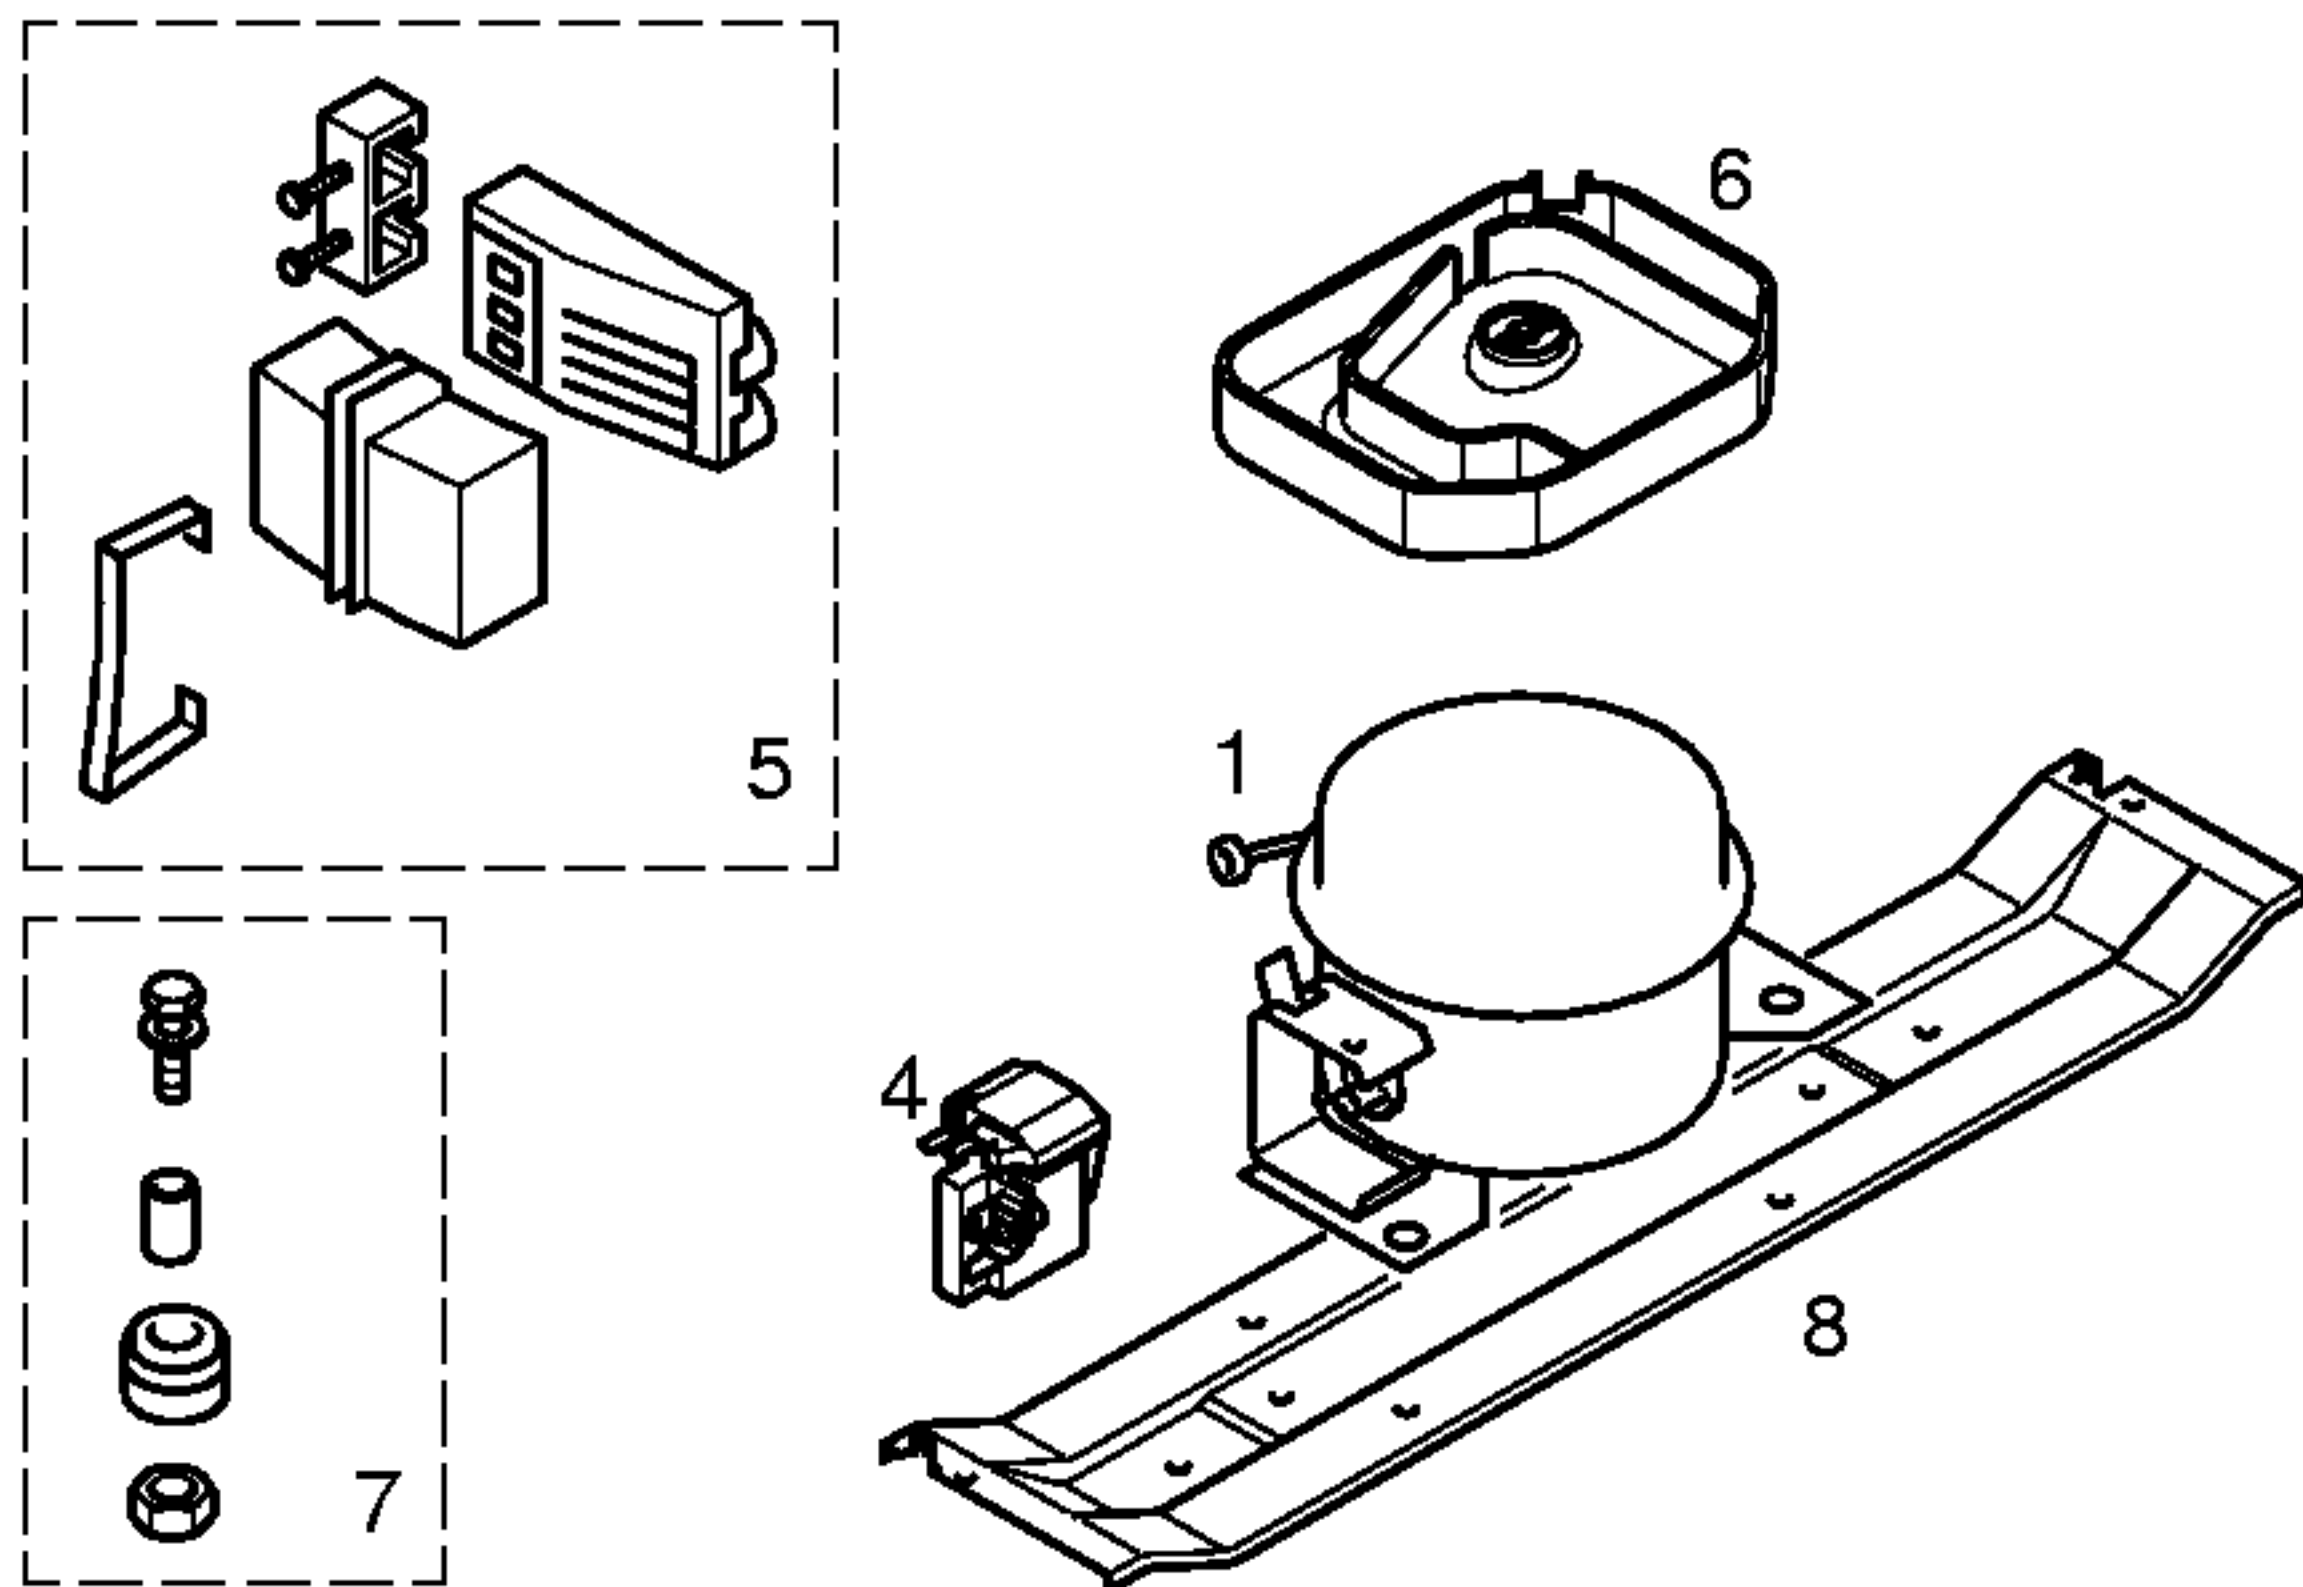

Pos.	*****		
		V01	V02
	LG	LG	Aspera
	NDA62NAEG	NDA69NAEG	EMT40-CLP
1	14 2000	14 2001	14 2001
2			
3			
4	17 1011	17 1011	41 6671
5			
6	48 4330		
7	05 0166	05 0166	05 0166
8	28 8253	28 8253	28 8253
9			
10			
11			
12			
13			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES / DATOS TECNICOS

		V01	V02	
Verdichter/Compressor/Compresseur/Compresor		LG	LG	Aspera
Typ/Type/Tipo		NDA62NAEG	NDA69NAEG	EMT40-CLP
Förderleistung/Delivery/Debit/Aspiración l/h				
Anlaufstrom/Startling current/Cour.démarrage/Int.arranque A		0,48	0,50	0,63
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm		35,21	35,21	32,05
	Hi/aux. Ohm	21,49	21,49	26,59
Temp.Reyler/Thermostat/Termostato		Danfoss	Ranco	
Typ/Type/Tipo		077B6181	K54-L2006	
Reglerstellung/Position/Conexión		MIN. MAX.	MIN. MAX.	
Schaltwerte/Switching values/ ..ein/conex. °C		+6°	-14°	-22°
Valeurs de commutation/Desconex. ..aus"/descon. °C		-11° -28°	-20°	-28°
(..abtaven' od) ..alarm' °C			-10°	-18°
Füllmenge/Fill. quantily/Charge/Carga R600a.	g	*	*	*
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W	71	83	90
Heizung/Heater/Chauflage/Resistenc.descong.				
Widerstand/Resistance/Resistencia	Ohm			
Leistung/Power/Puissance/Potencia	W			
Ventilador/Blower/Ventilateur/Ventilador				
Widerstand/Resistance/Resistencia	Ohm			
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula				
Widerstand/Resistance/Resistencia	Ohm			
Spannung/Voltage/Tension/Tensión	V			
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador				

* Siehe Typenschild / See identification plate / Voir plaque de caractéristiques / Ver plaqueta de características