




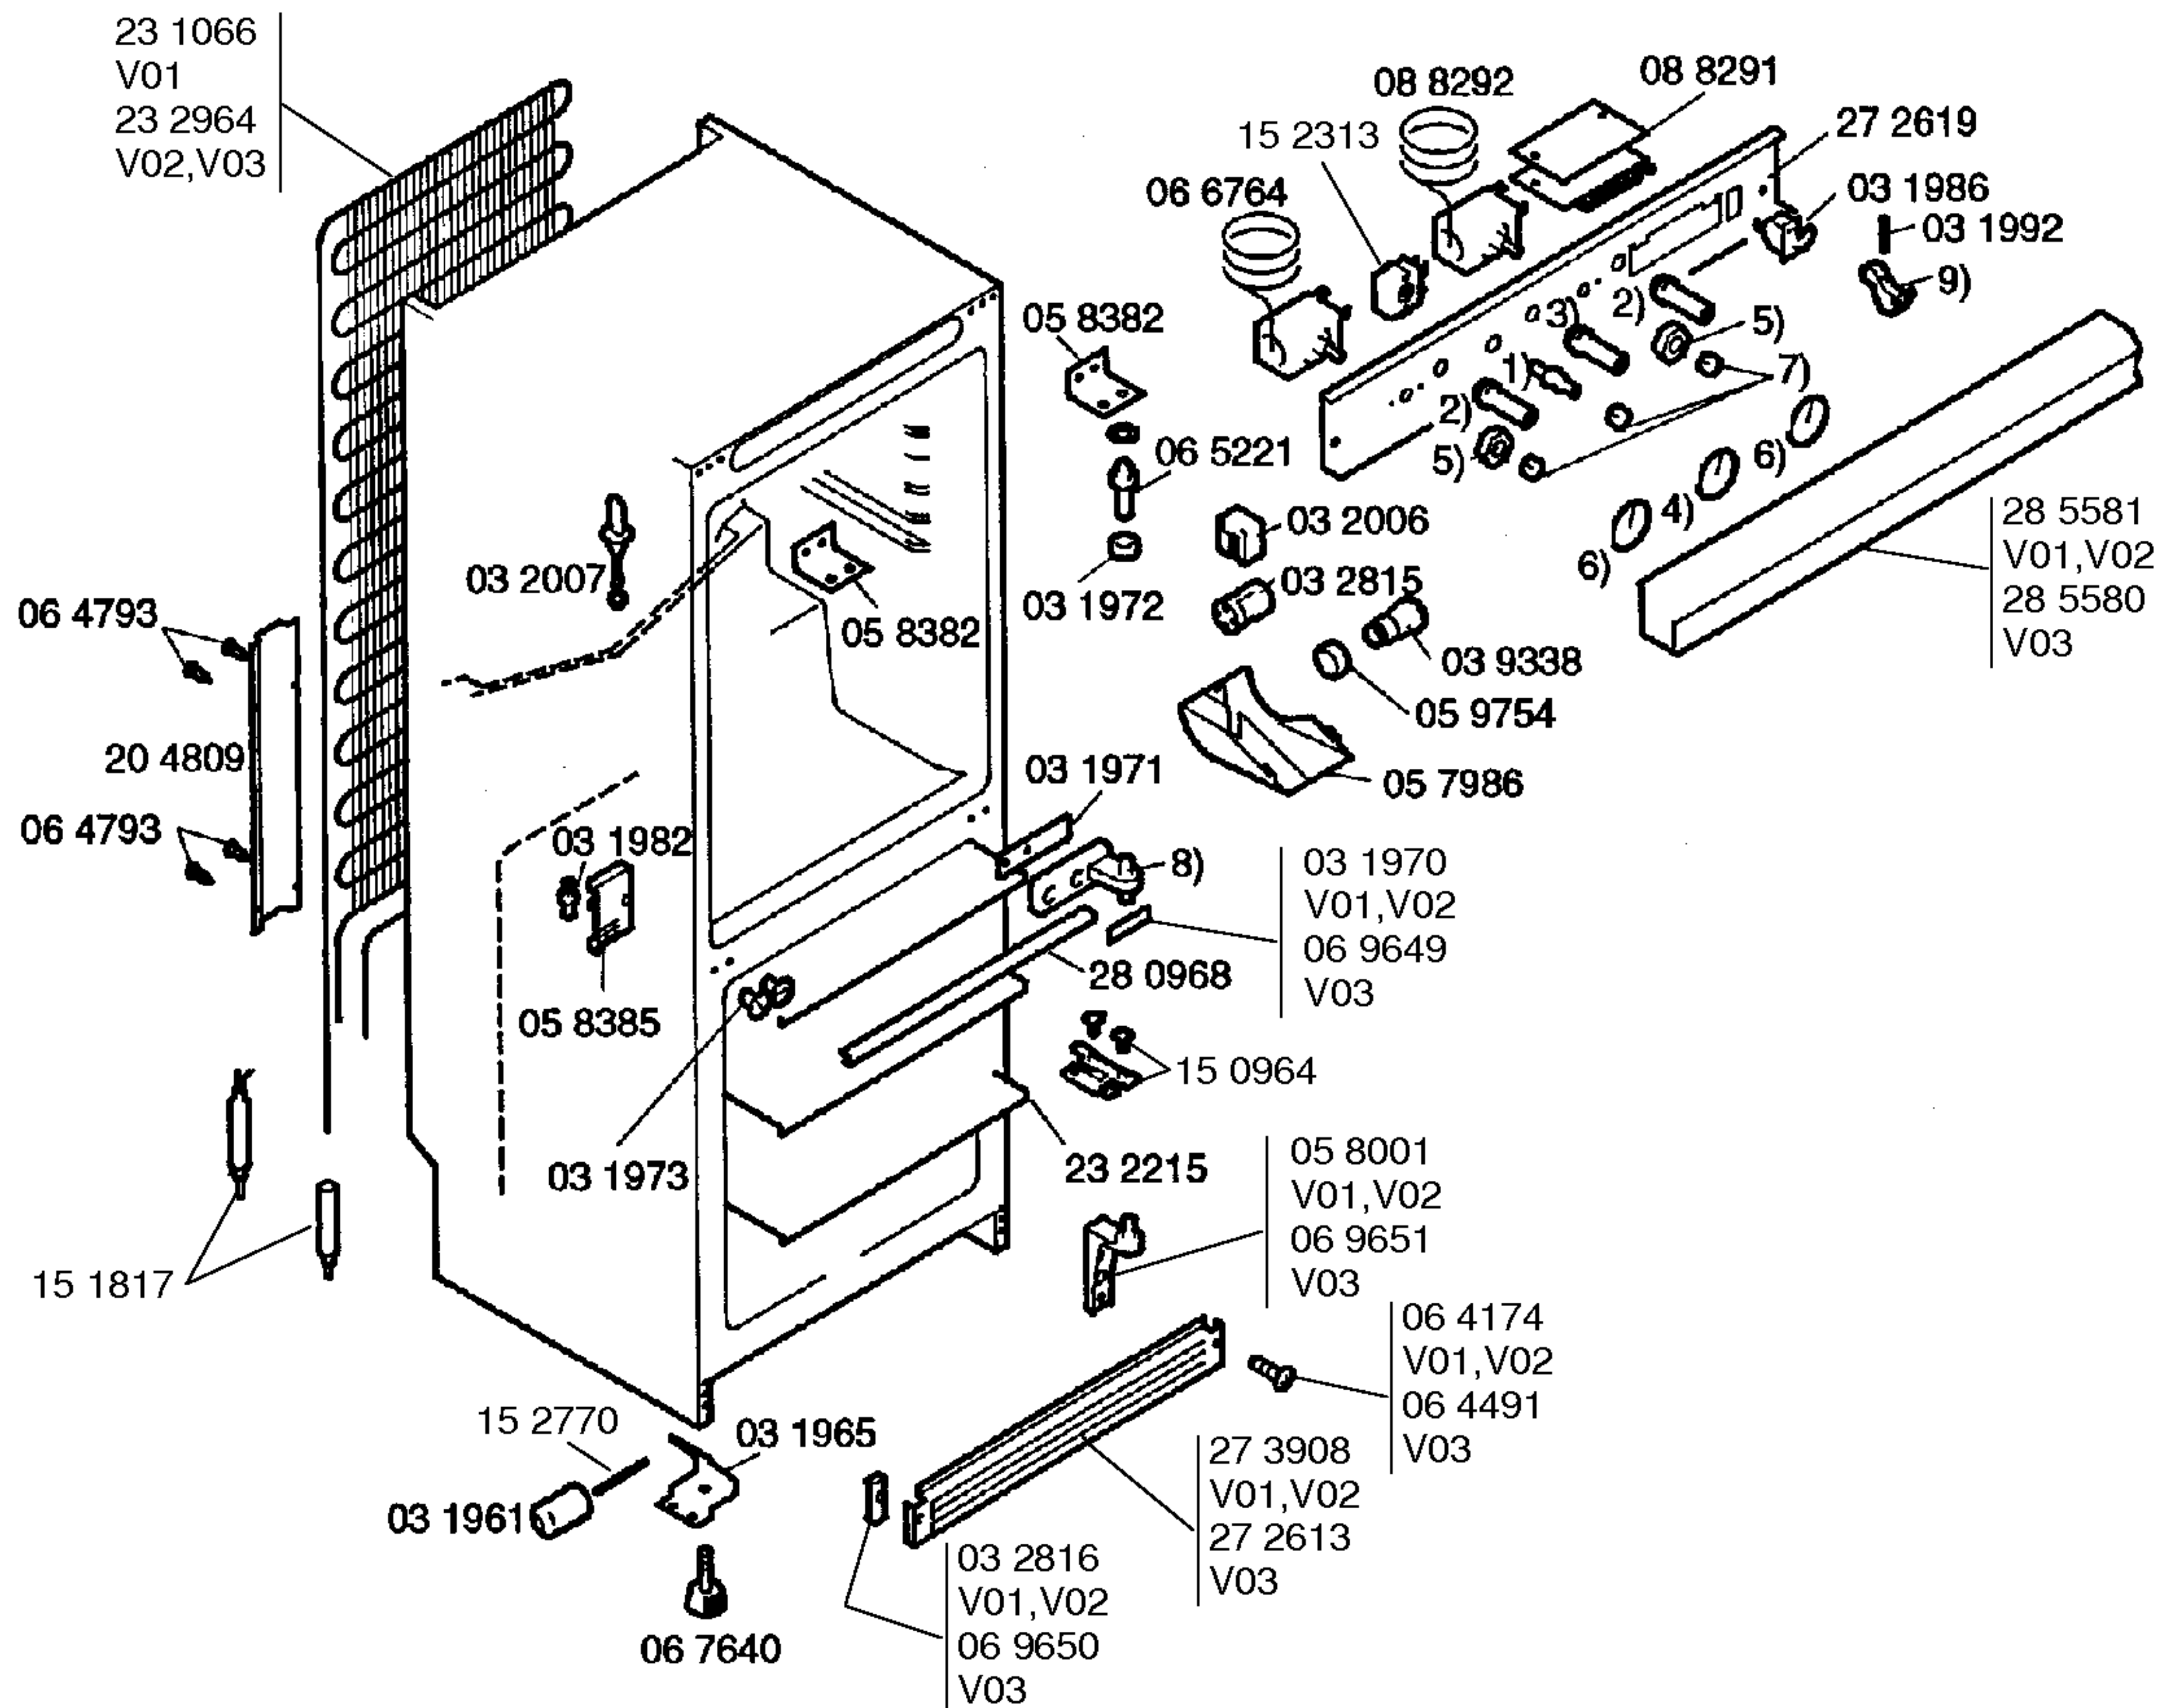

Libro de instrucciones
51 6723
(E, P, GB, F, NL, GR).

- 1) 03 1989
- 2) 03 1987
- 3) 03 1988
- 4) 06 9654
V03
06 9656
V01,V02
- 5) 03 3055
- 6) 06 9653
V03
06 9655
V01,V02
- 7) 03 5731
- 8) 06 9648
V03
05 8381
V01,V02
- 9) 06 9652
V03
03 1993
V01,V02

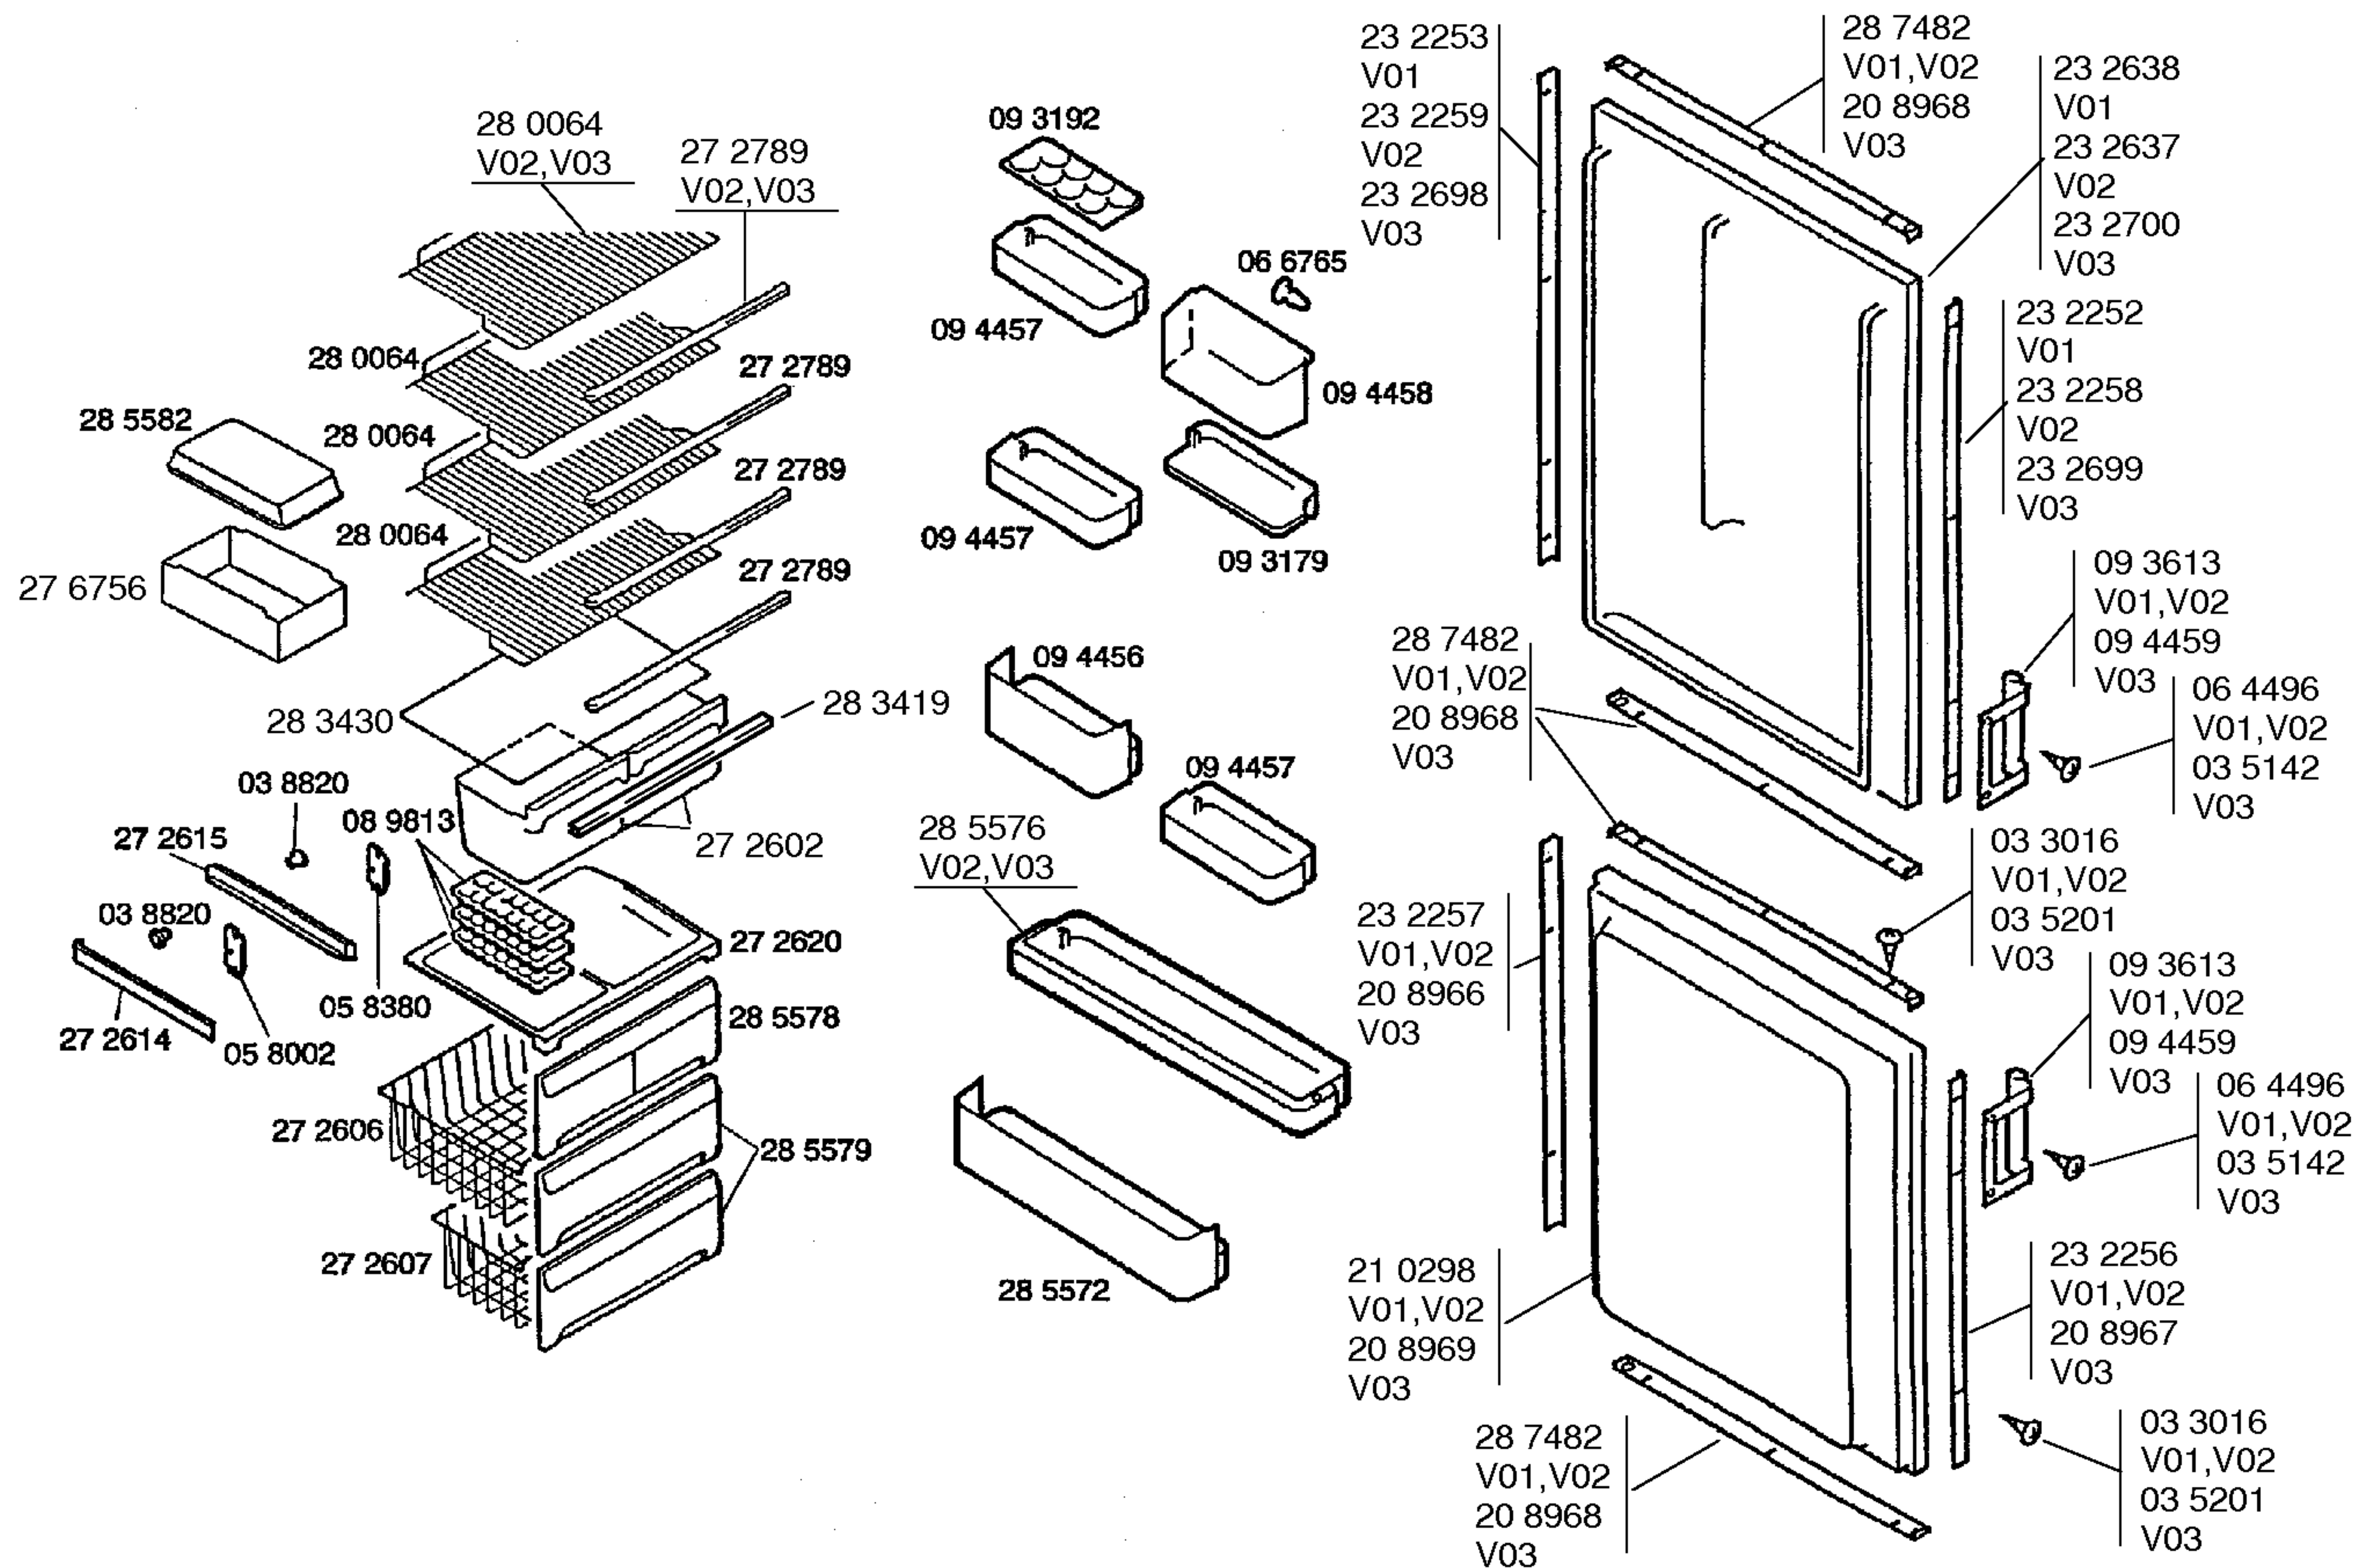

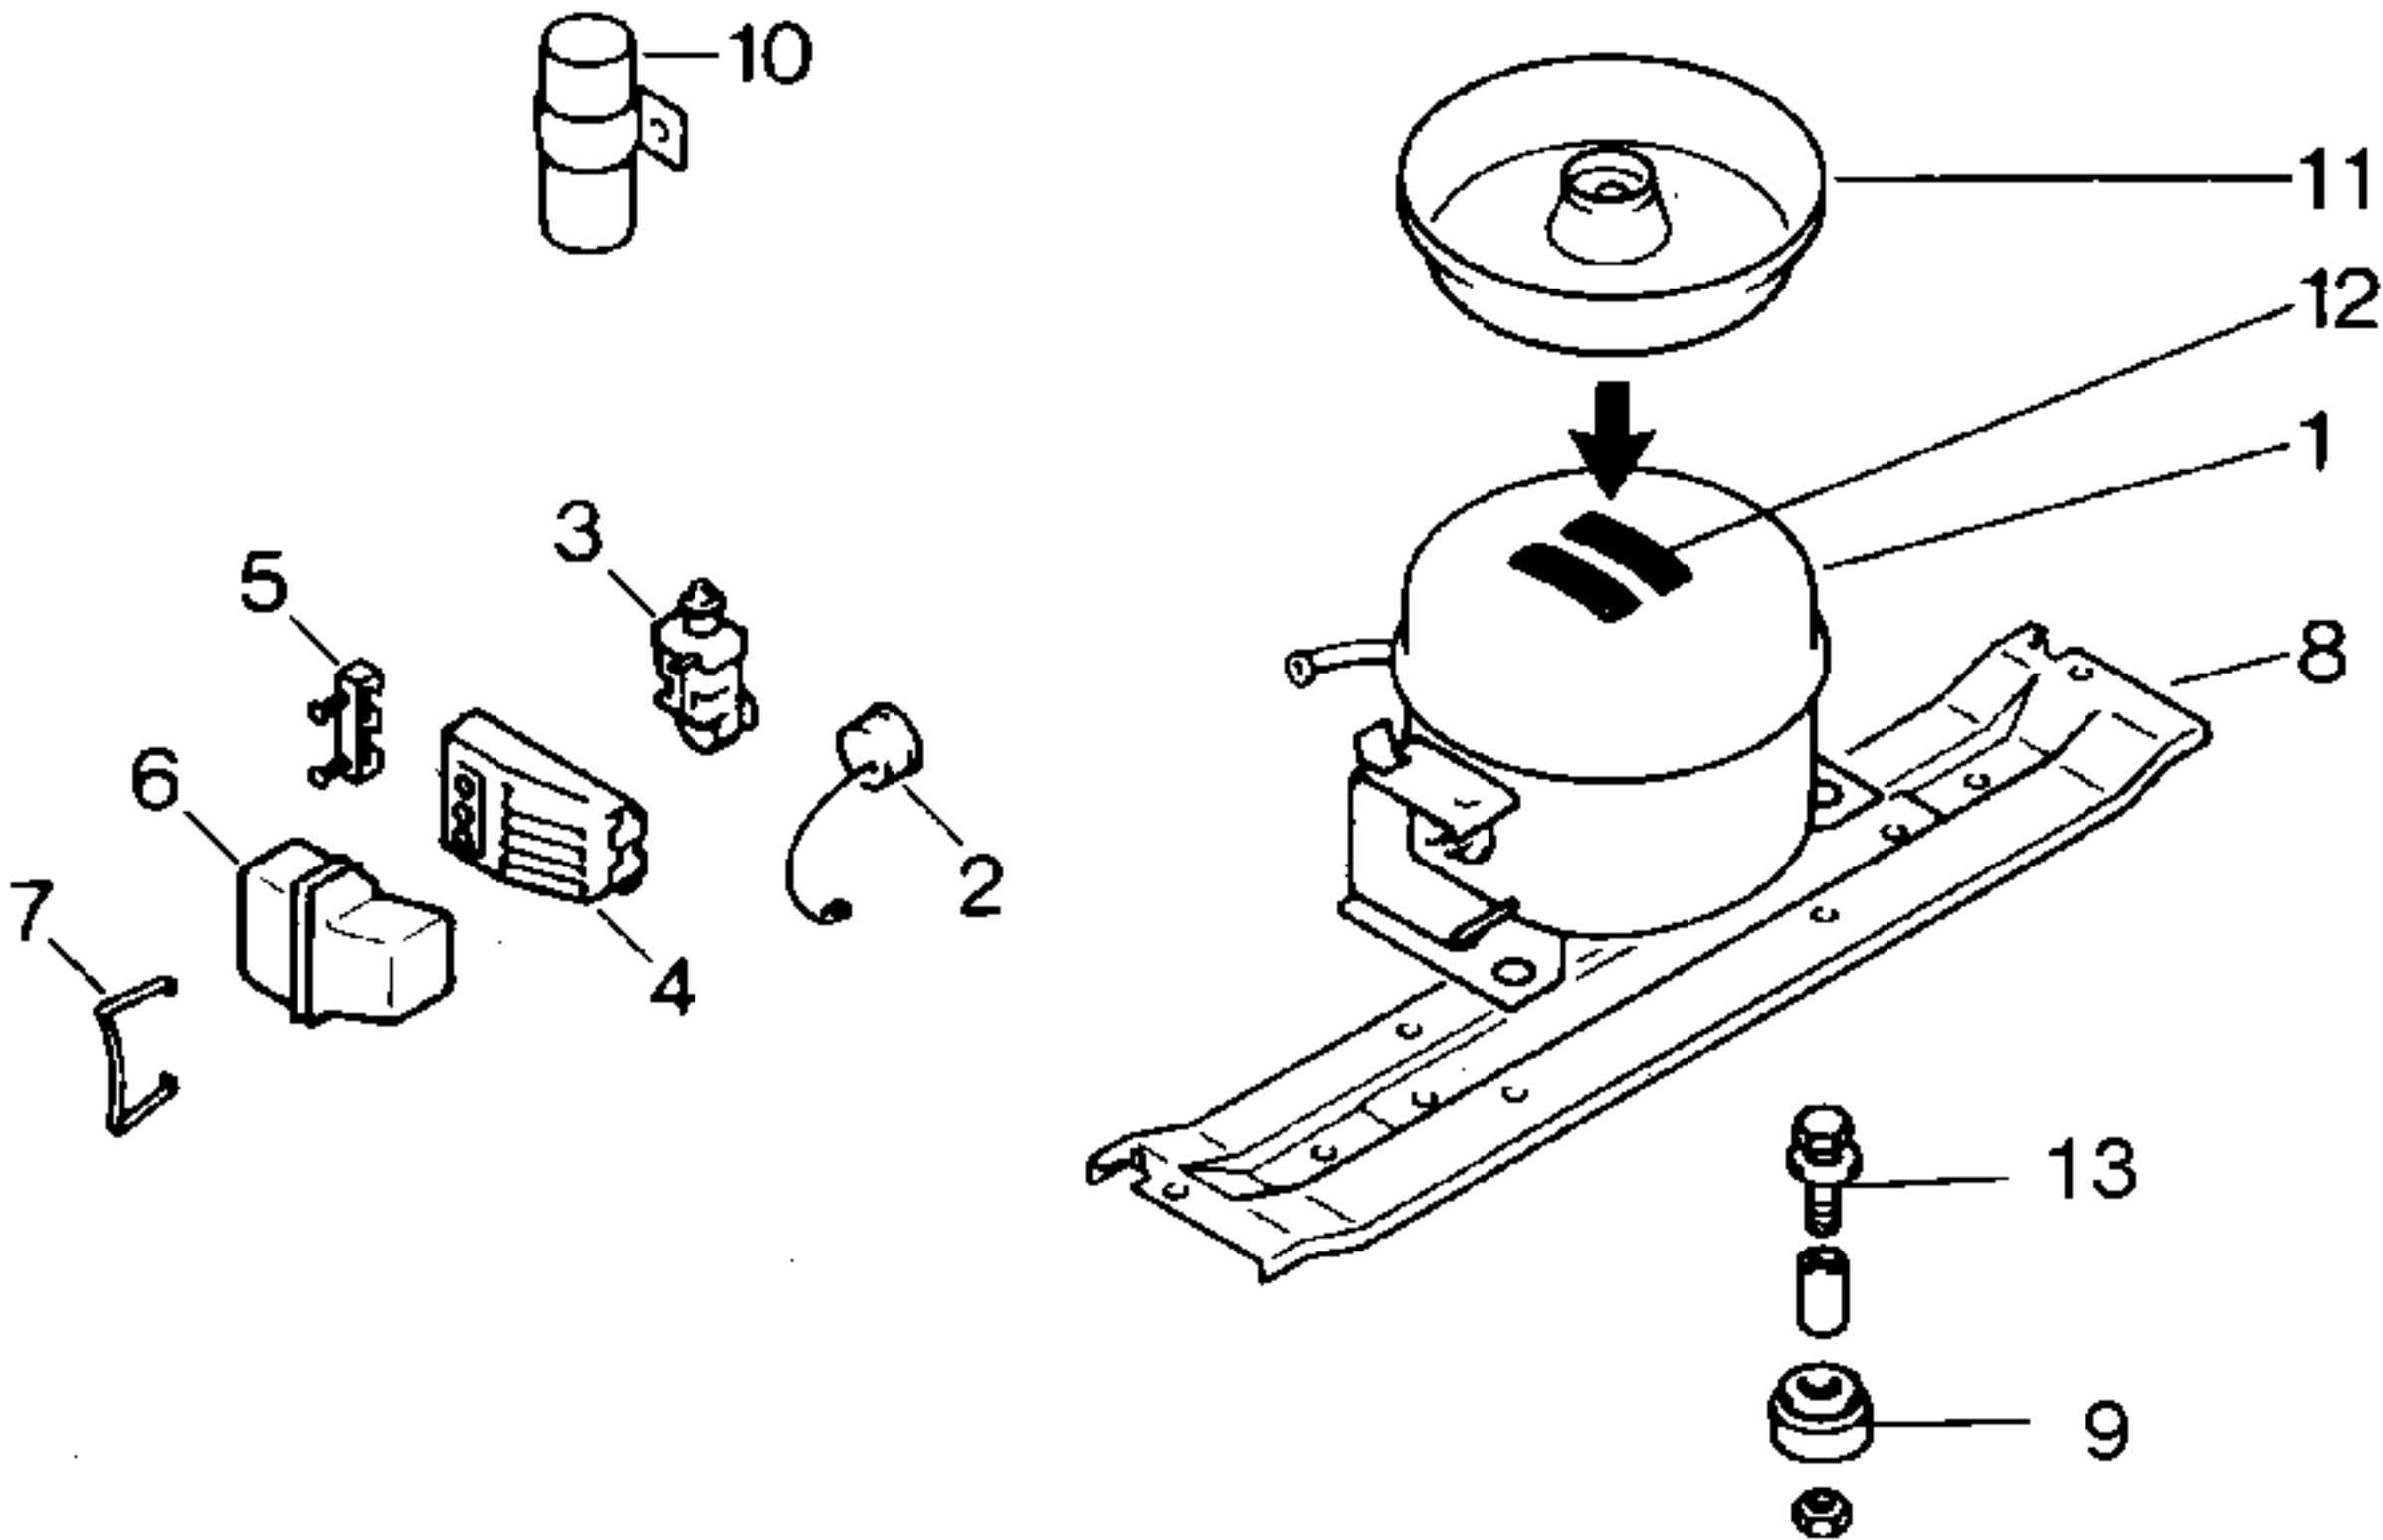

Pos.	MATSUSHITA	MATSUSHITA
	SO75LKAA	SO75LKAA
1	14 0582	14 0582
2		
3	06 4055	06 4055
4		
5		
6		
7		
8	28 0162	
9	06 4260	06 4260
10		
11	08 8868	
12		
13	06 4259	06 4259

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS

Verdichter/Compressor/Compresseur/Compresor	MATSUSH. SO75LKAA	MATSUSH. SO75LKAA
Typ/Type/Tipo		
Förderleistung/Delivery/Debit/Aspiración l/h	641	641
Anlaufsiromm/Starling current/Cour.démarrage/Int.arranque A	5,69	5,69
Widestand/Resistance/Resistencia. Ha/main/prin. Ohm	24,4	24,4
Hi/aux.	39,8	39,8

Temp.Reyler/Thermostat/Termostato	ATEA	ATEA
Typ/Type/Tipo	MANUAL	MANUAL
Reglerstellung/Position/Conexión	+6°	-19°
Schaltwerte/Switching values/ ..ein/conex.°C	-13°	-25°
Valeurs de commutation/Desconex. ..aus"/descon.	-28°	-35°
(..abtaven' od) ..alarm'		

Füllmenge/Fill. quantily/Charge/Carga R12	g	70	145
---	---	----	-----

AnschluBwert/Comm. load/puiss. Connect./Potenc.	W	91	91
---	---	----	----

Heizung/Heater/Chauflage/Resistenc.descong.			
Widerstand/Resistance/Resistencia	Ohm		
Leistung/Power/Puissance/Potencia	W		

Ventilador/Blower/Ventilateur/Ventilador			
Widerstand/Resistance/Resistencia	Ohm		

Magnetventil/Magnetic valve/Electrovanne/Electrovalvula			
Widerstand/Resistance/Resistencia	Ohm		
Spannung/Volare/Tension/Tensión	V		

Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			
---	--	--	--