


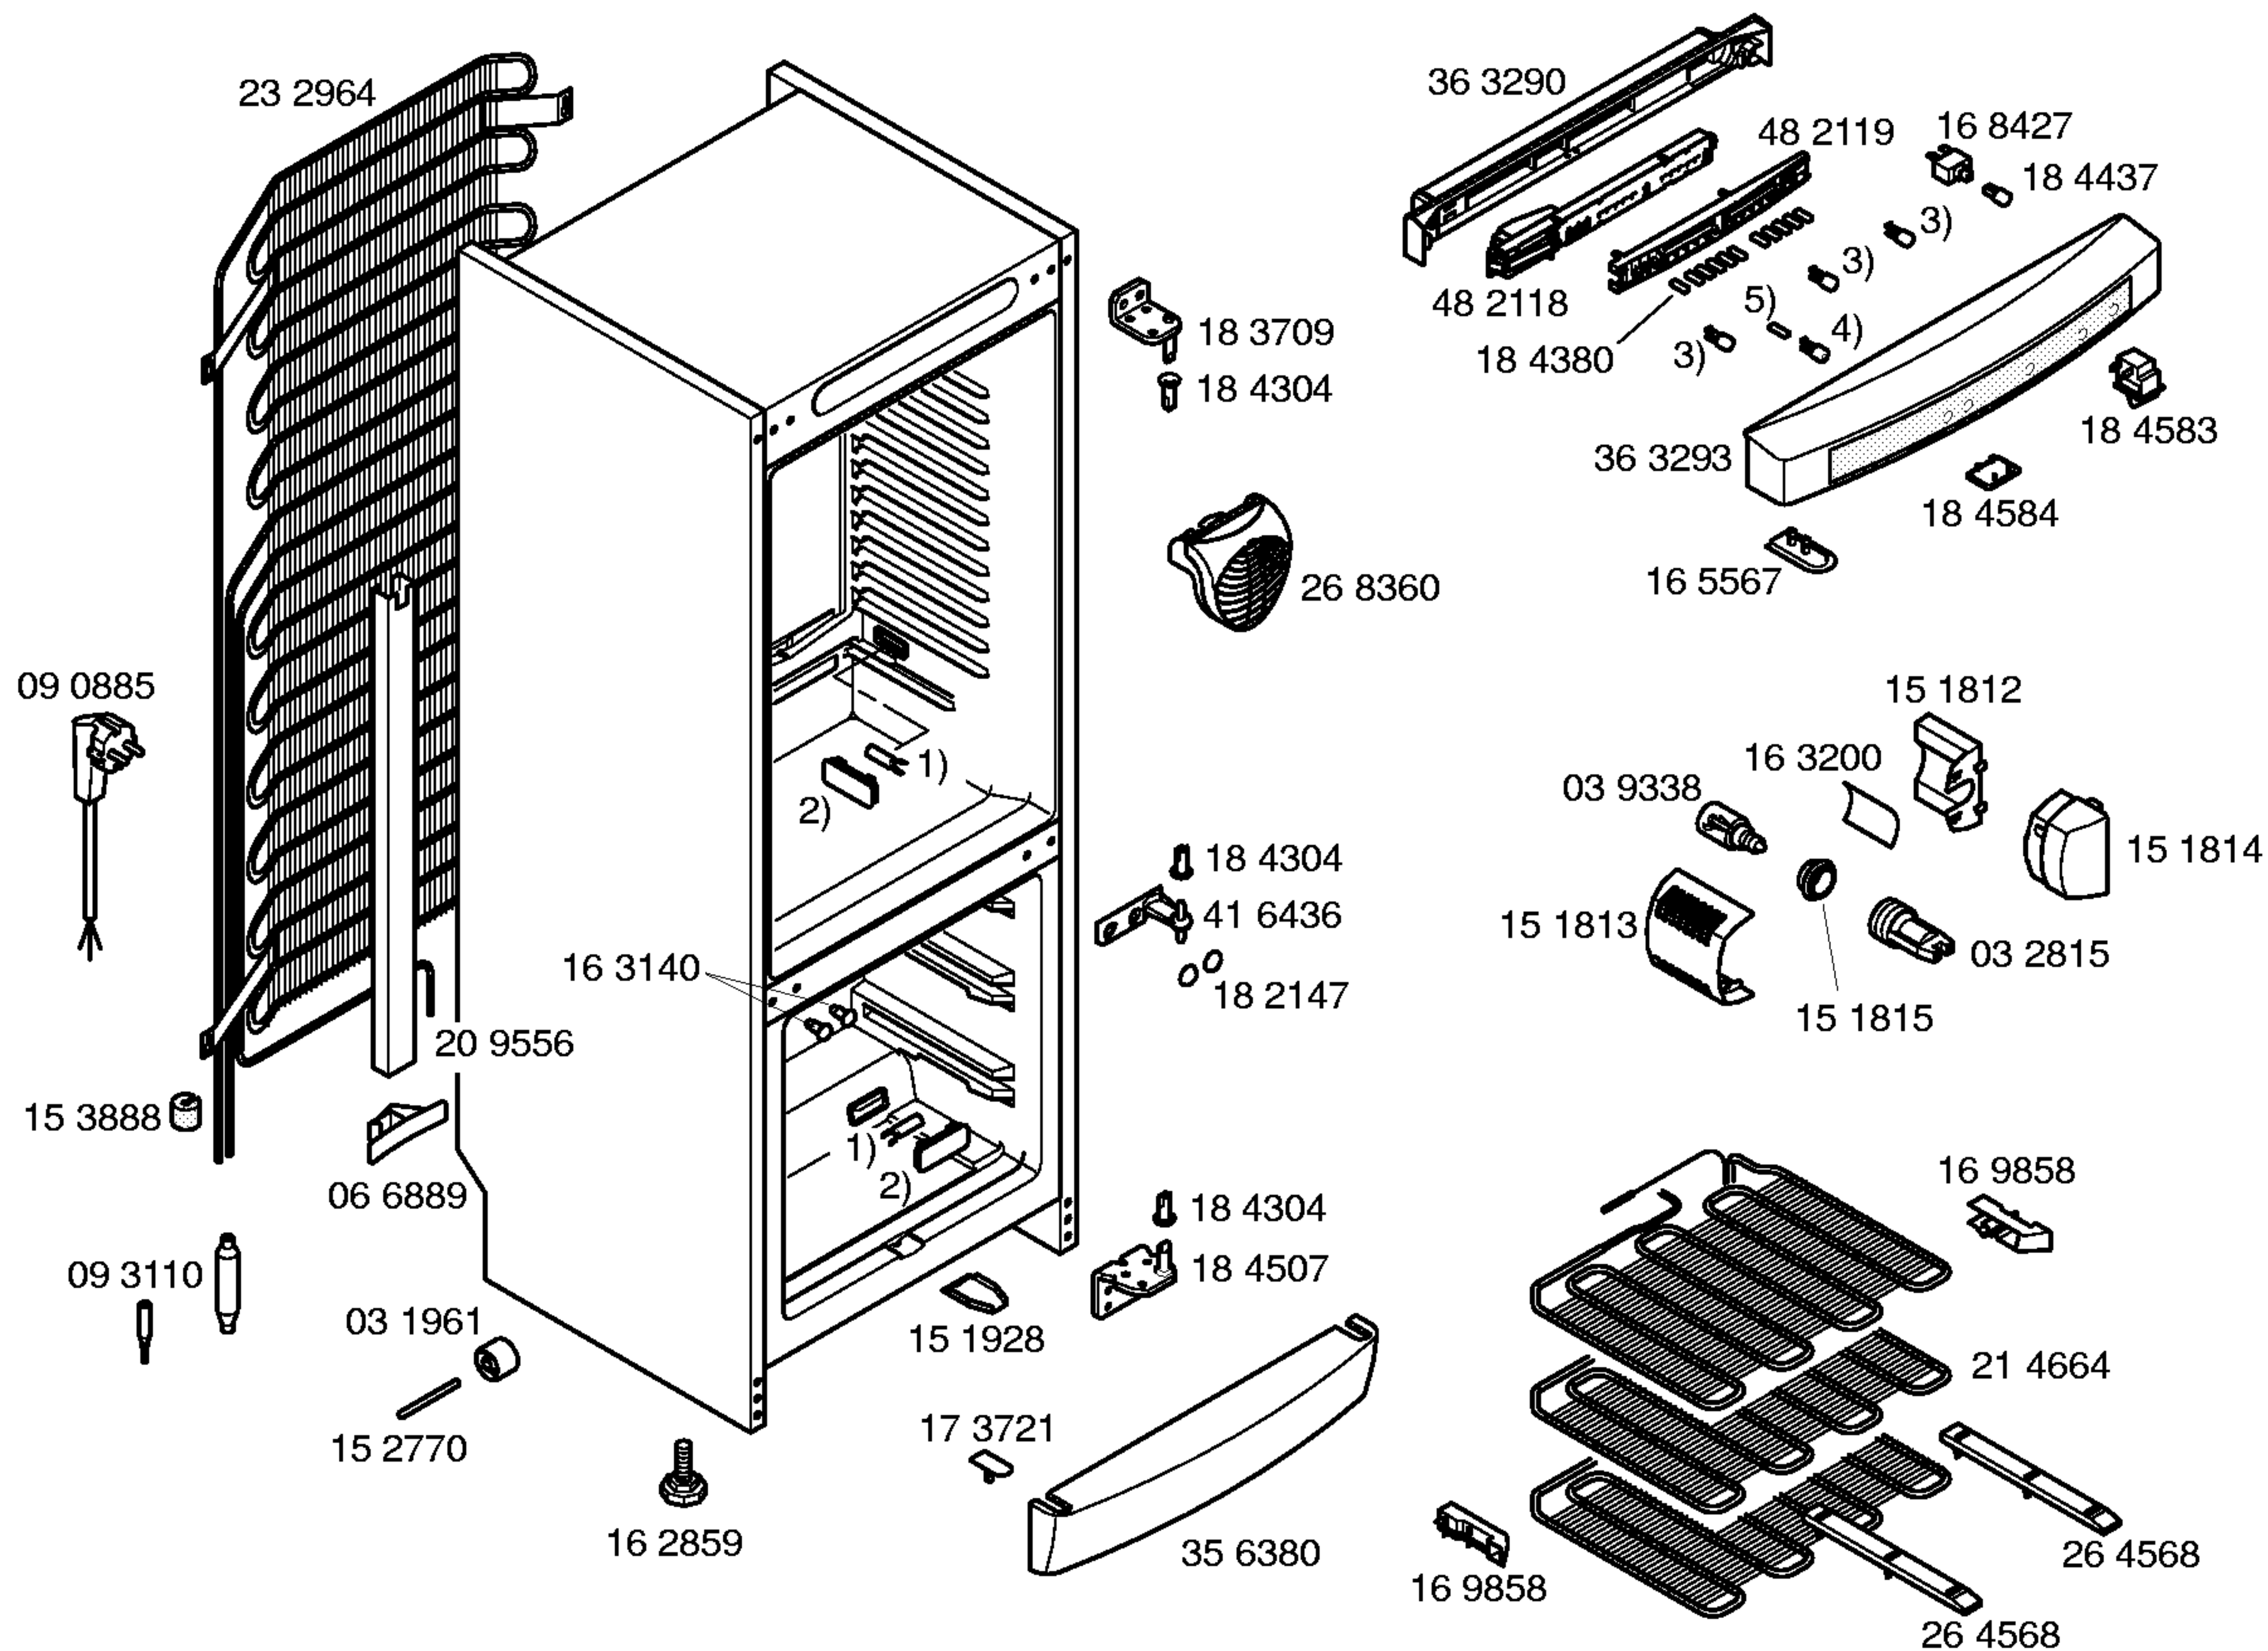

Ident – Nummern – Konstante	
3740	

Gebrauchsanweisung

52 9594

(de,en,fr,es,it,pt,el)

52 9595

(sv,no,fi,da)

52 9596

 (ru, ro)

Montageanweisung

52 4888

(de,en,fr,nl,es,it,pt,el,pl,

sv,no,fi,da,ru)

1) 16 8766


Rep. Satz

2) 16 9176


3) 18 4425

4) 18 4427

5) 18 4433

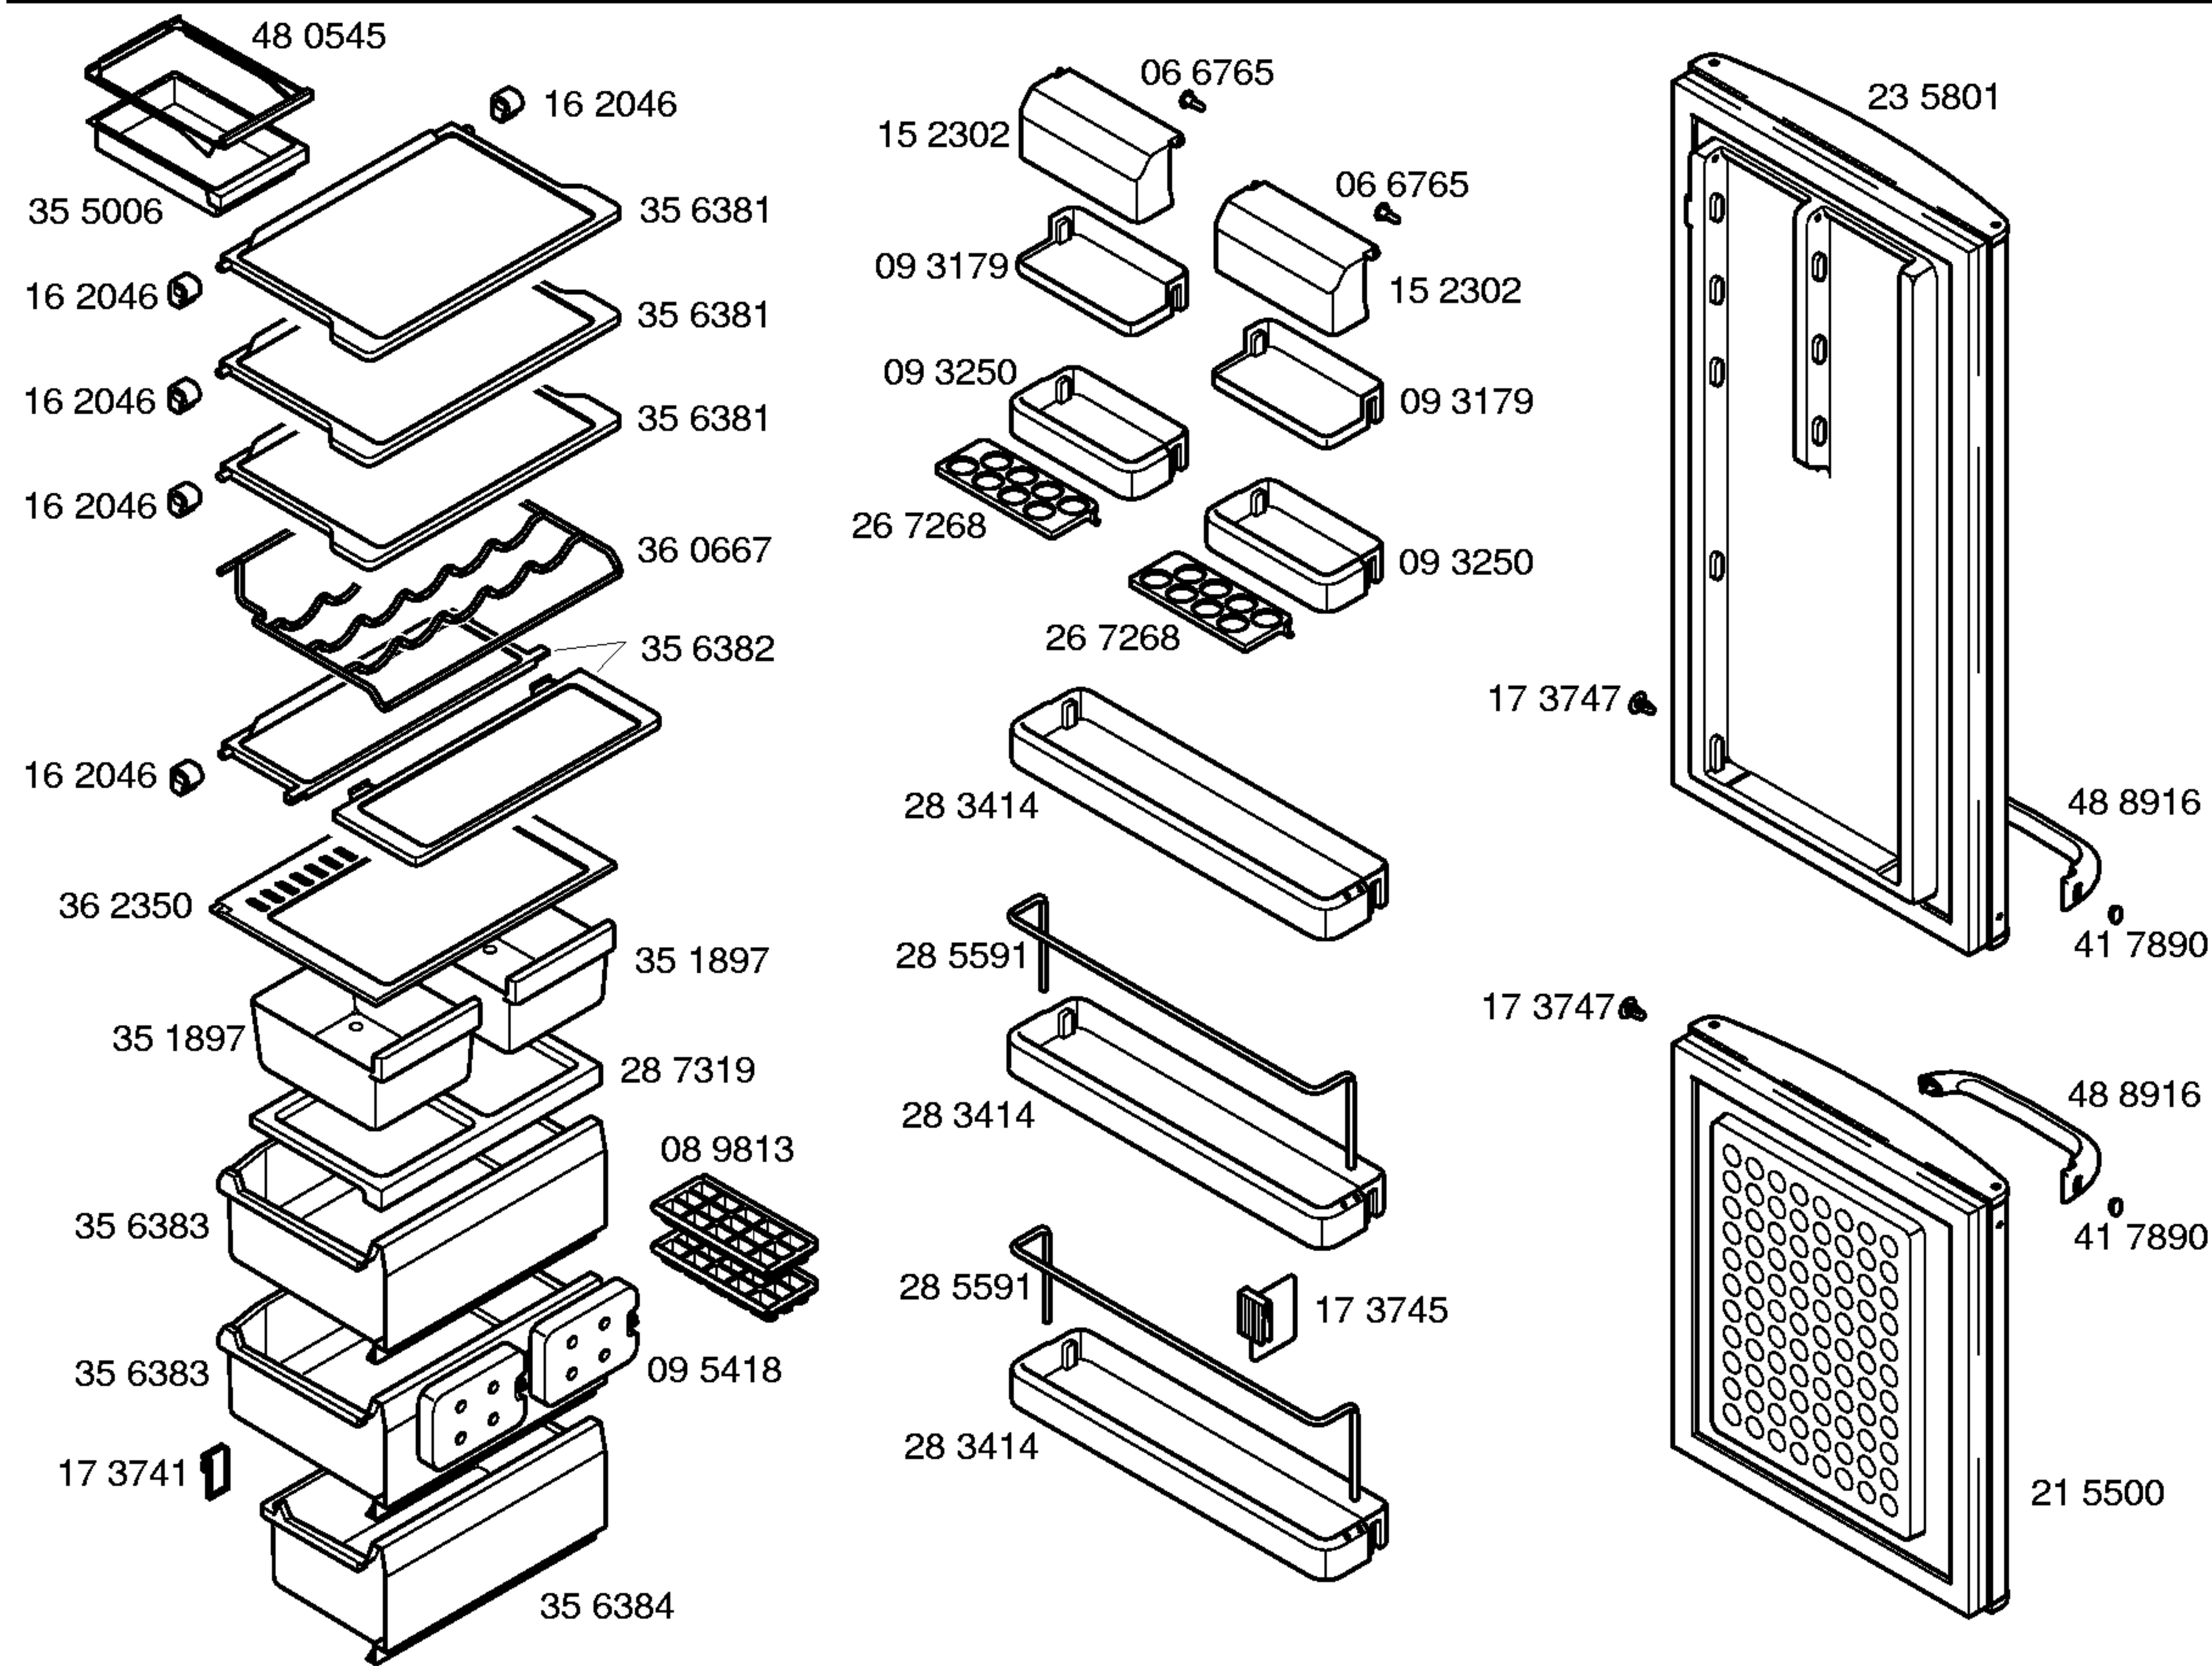

Ident – Nummern – Konstante
3740

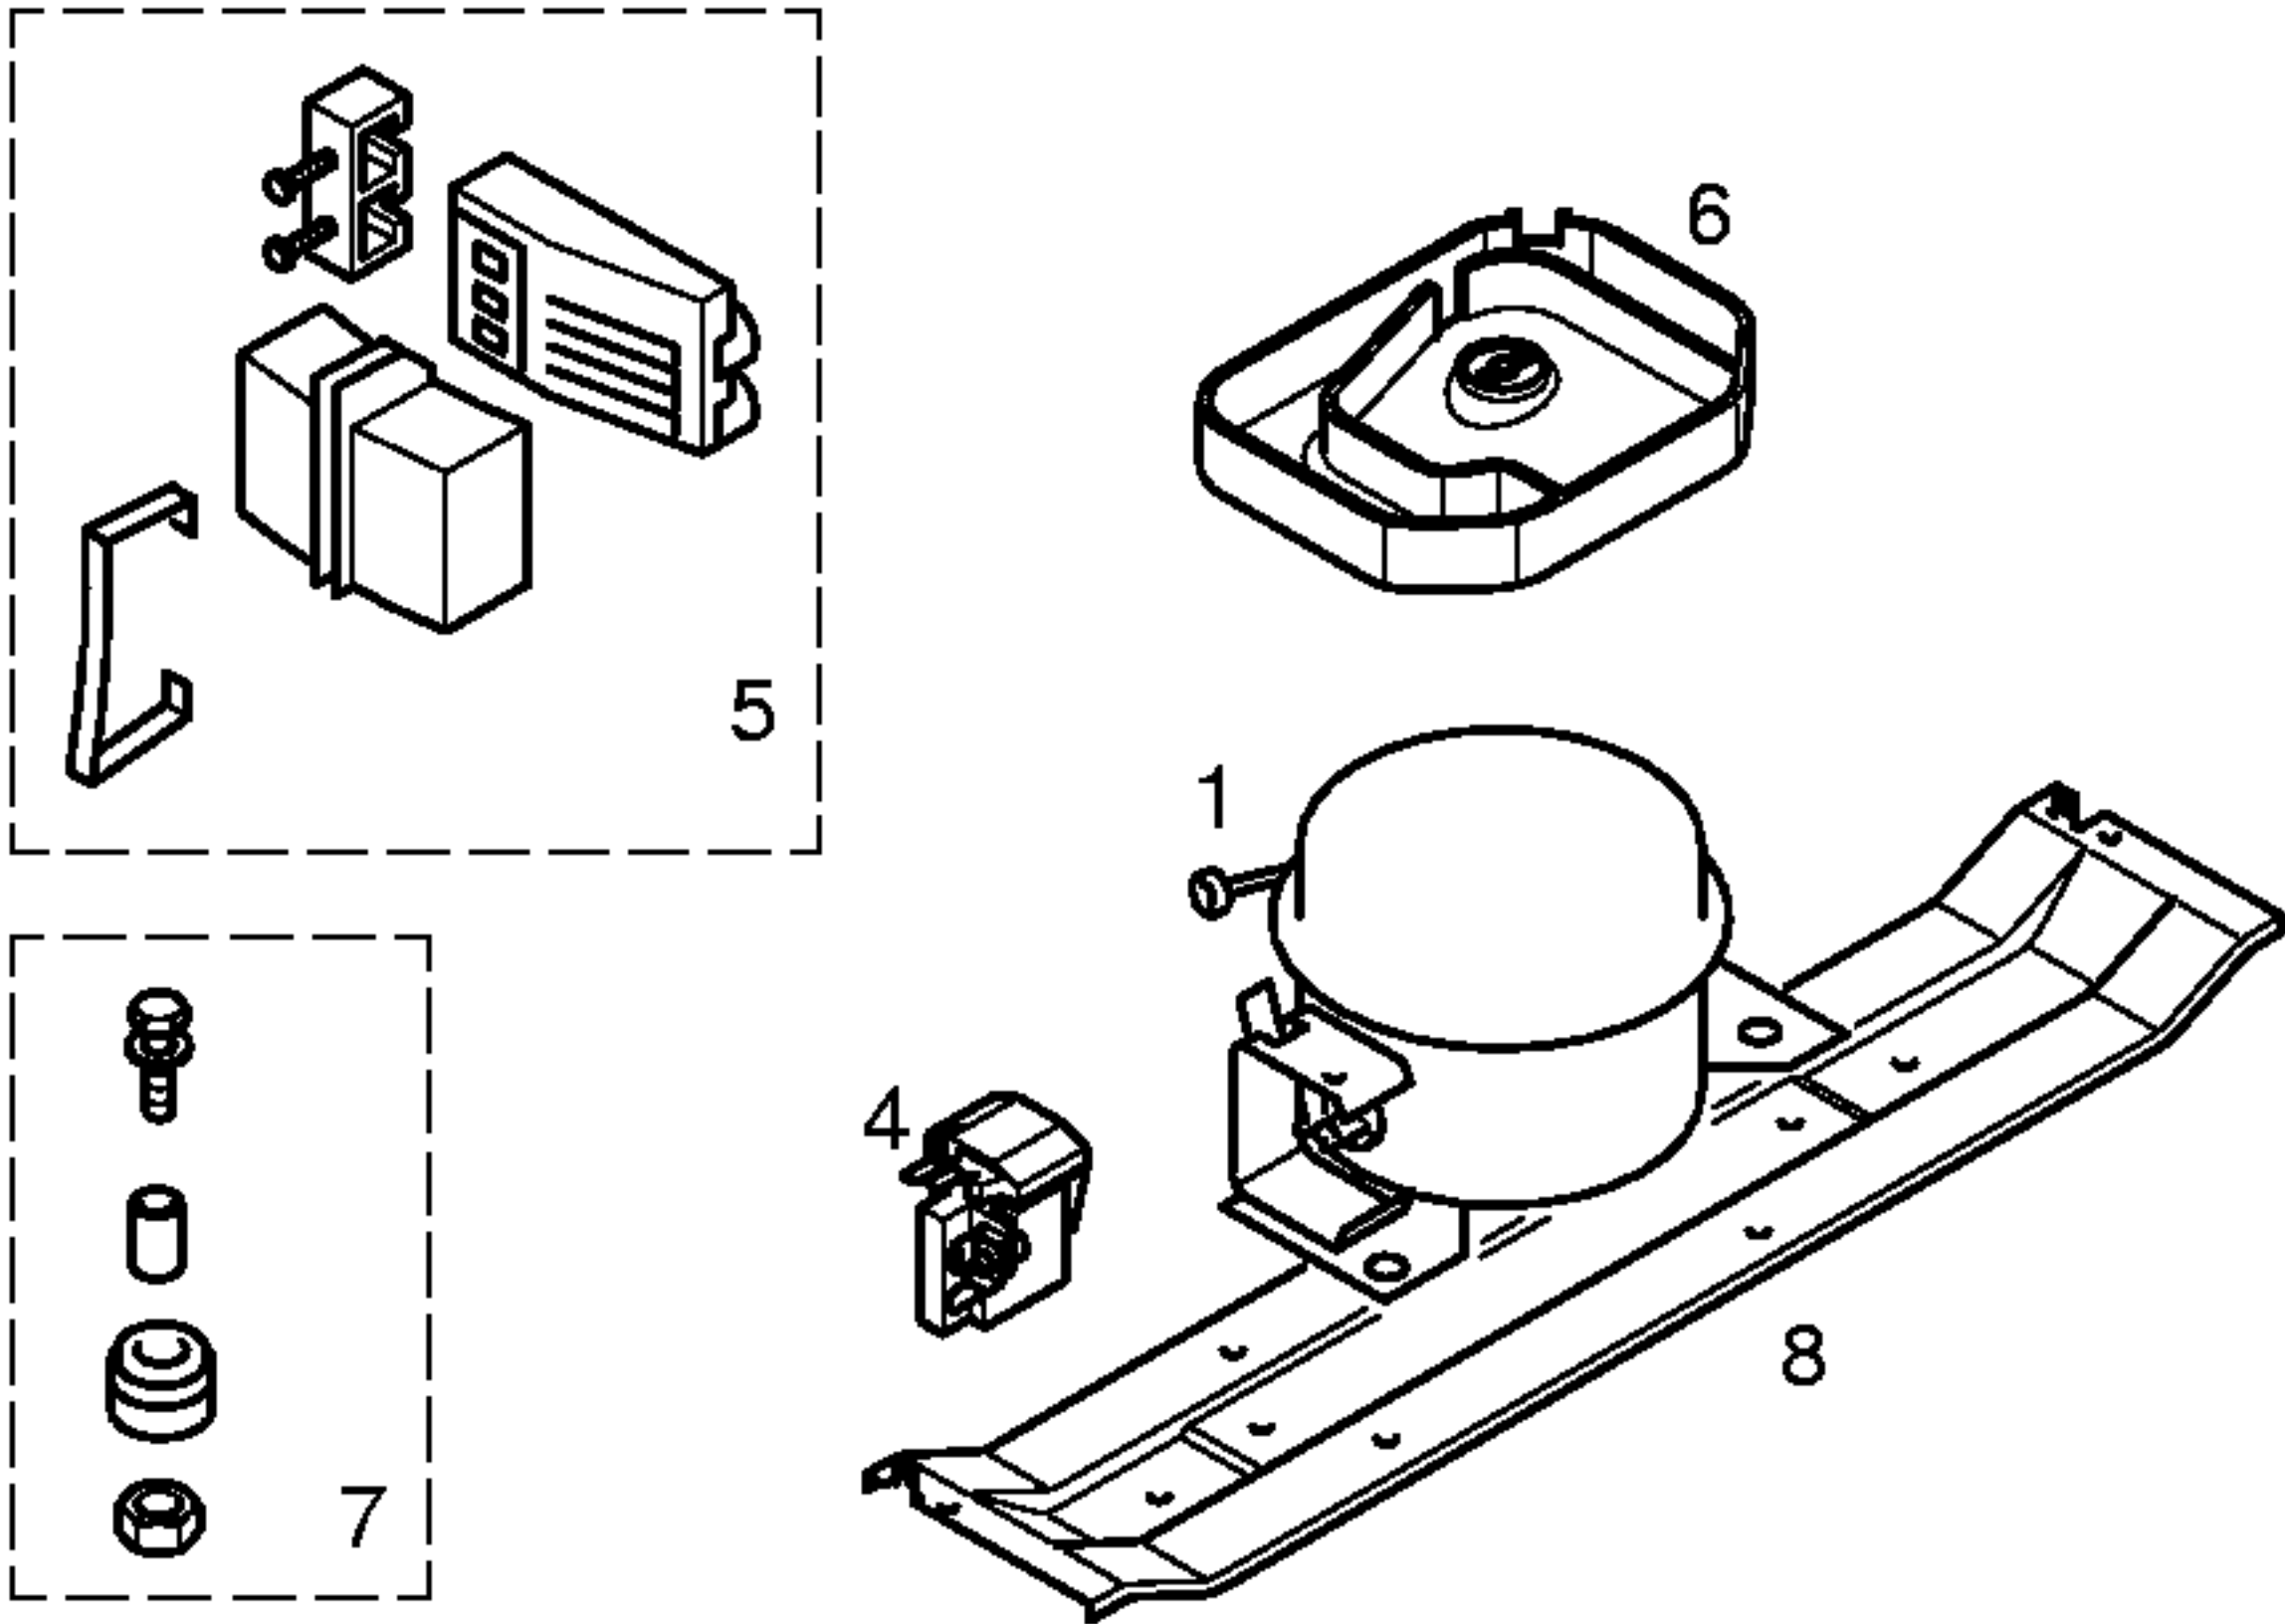

Pos.	****			
	LG	Aspera		
	NDA69NAEG	EMT40-CLP		
1	14 2001	14 2001		
2				
3				
4	17 1011	41 6671		
5				
6	48 4330			
7	05 0166	05 0166		
8	28 8253	28 8253		
9				
10				
11				
12				
13				

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES / DATOS TECNICOS		

Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux. Ohm	LG NDA69NAEG 0,50 35,21 21,49	Aspera EMT40-CLP 0,63 32,05 26,59
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon.°C (..abtaven' od) ..alarm' °C Verdampfersensor/Evaporator sensor/Sonda evaporador Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon.°C	Electronic. KS E2000 Komfort MIN. MAX. 11 1 10 0 4 4 — —	Electronic. GS E2000 Komfort MIN. MAX. -12,5 -24'5 -14 -26
Füllmenge/Fill. quantily/Charge/Carga R600a. g	*	*
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	83	90
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W		
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm		
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V		
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador		

* Siehe Typenschild / See identification plate / Voir plaque de caractéristiques / Ver plaqueta de características