


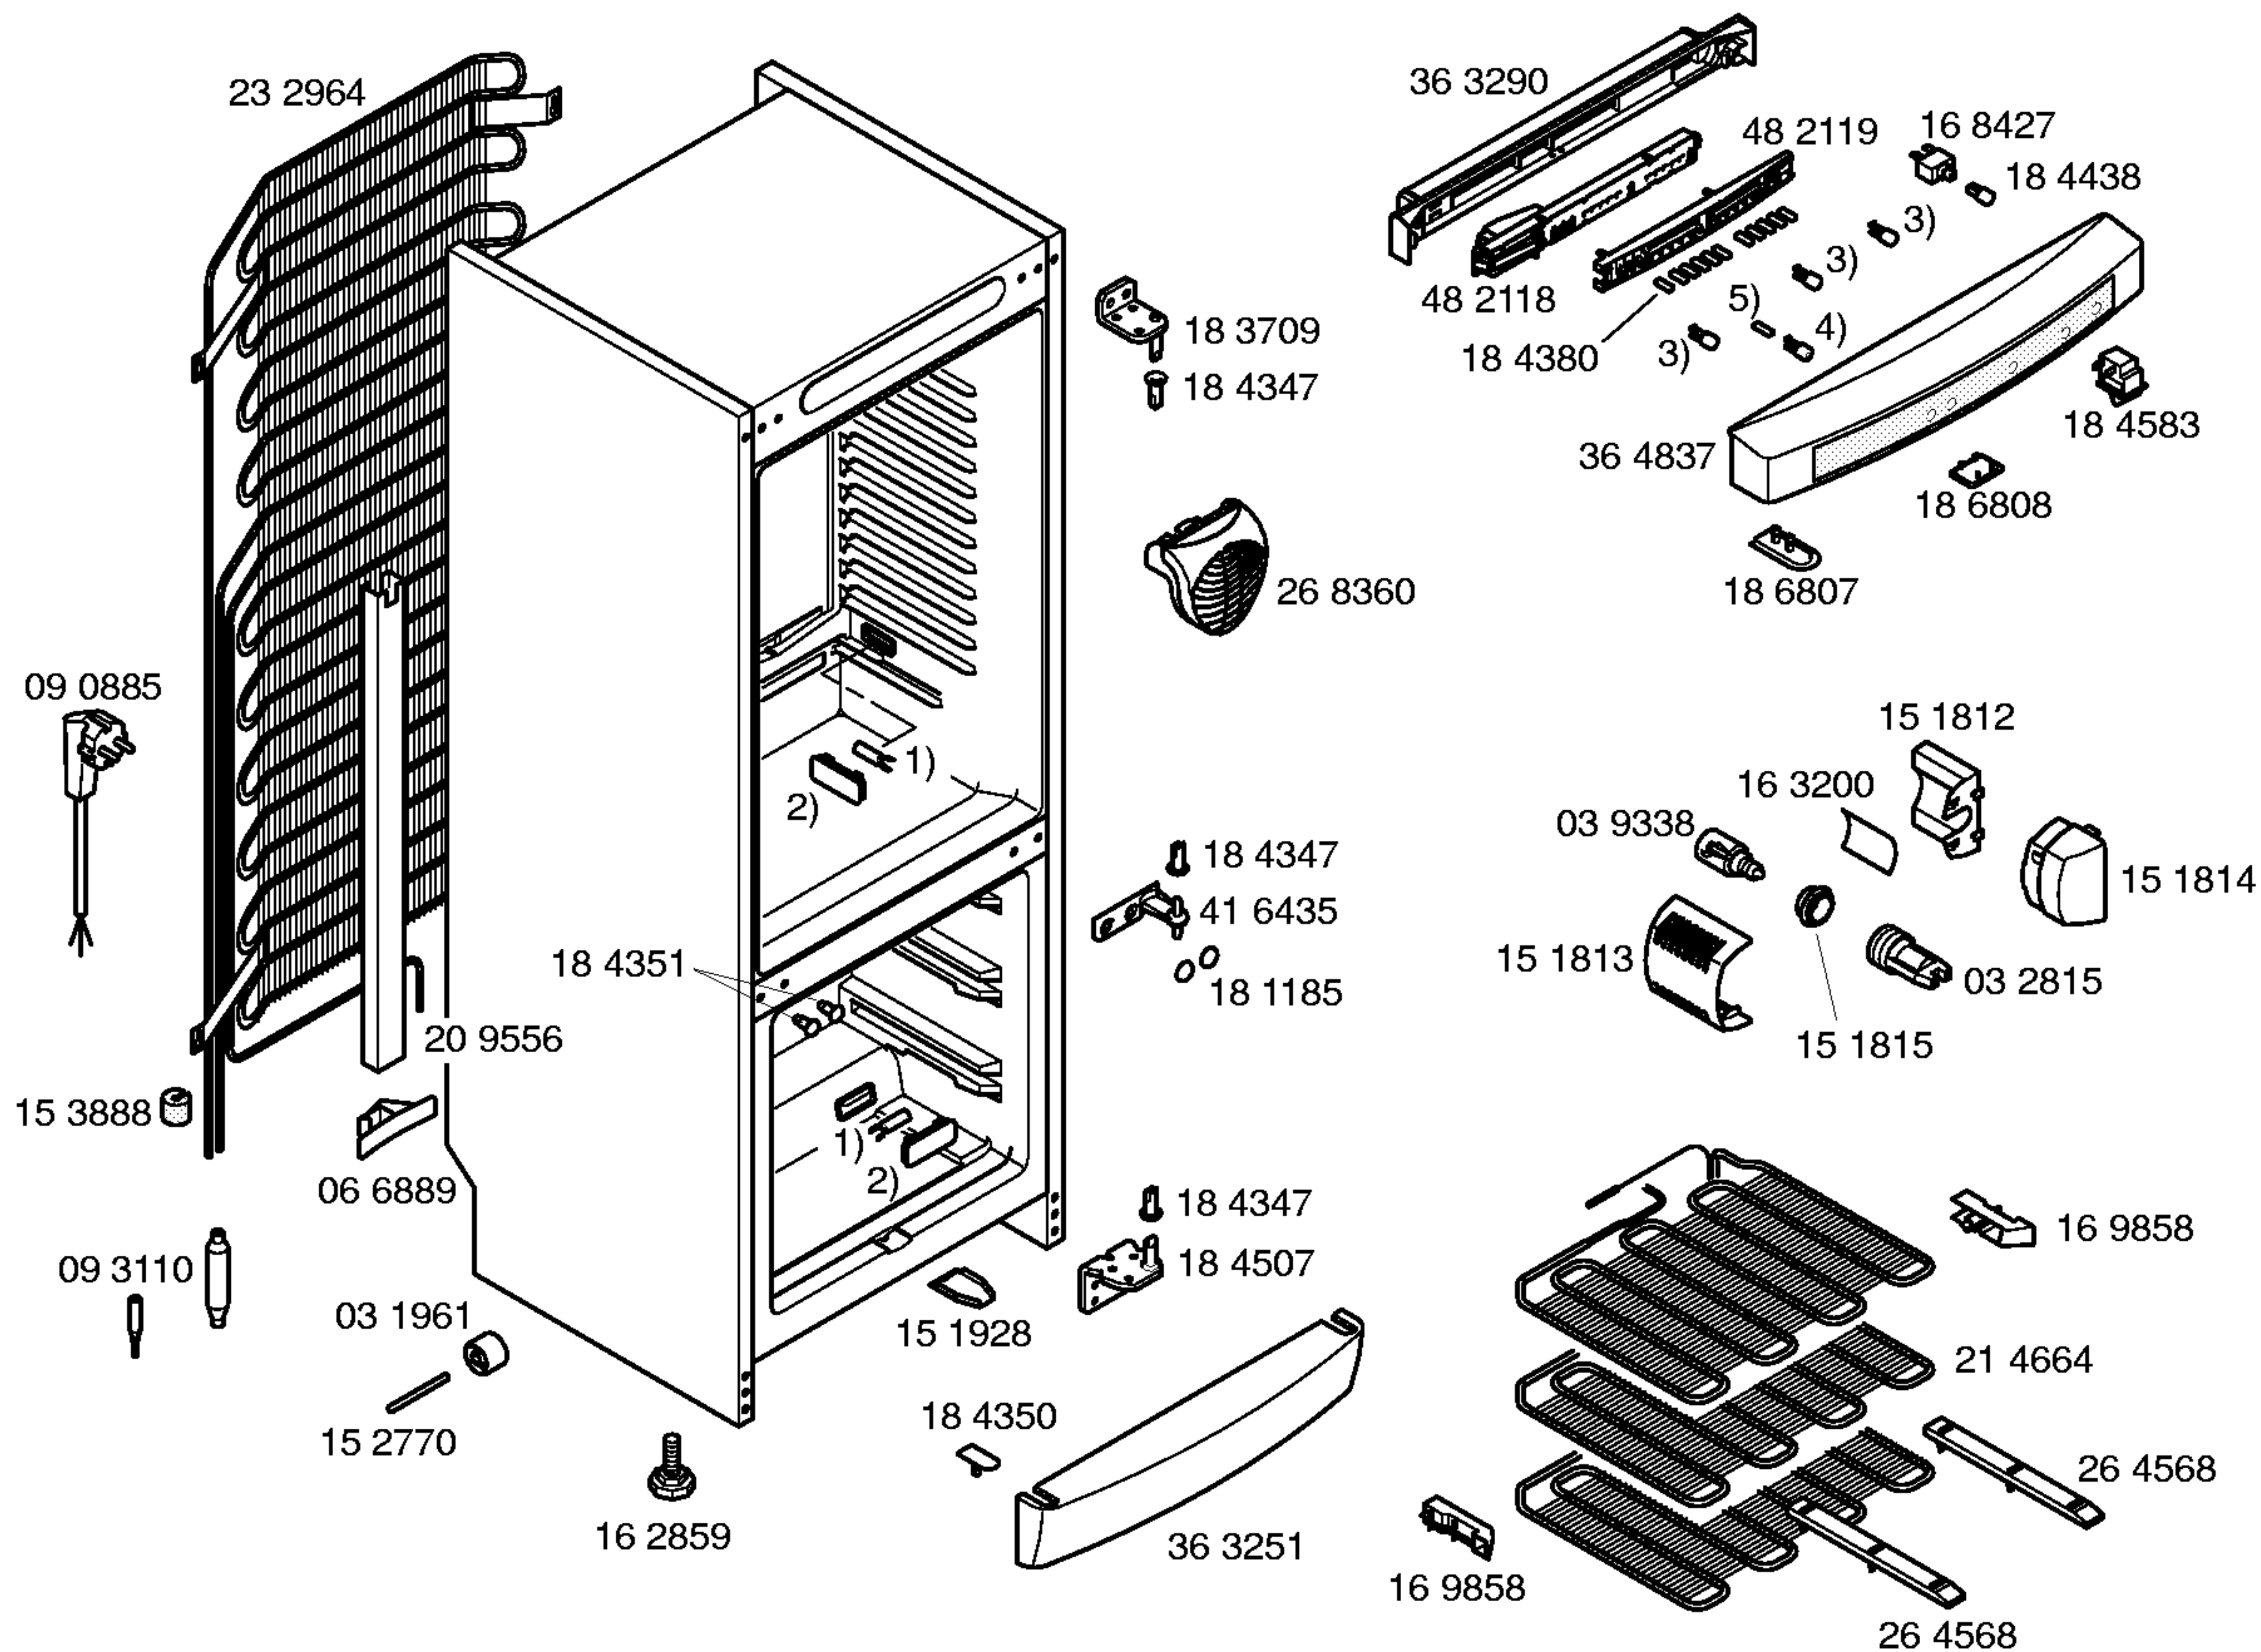

Ident – Nummern – Konstante	
3740	

Gebrauchsanweisung
52 9594
(de,en,fr,es,it,pt,el)

Montageanweisung
52 4888
(de,en,fr,nl,es,it,pt,el,pl,
sv,no,fi,da,ru)


1) 16 8766
Rep. Satz


2) 16 9176

3) 18 4426

4) 18 4428

5) 18 4433

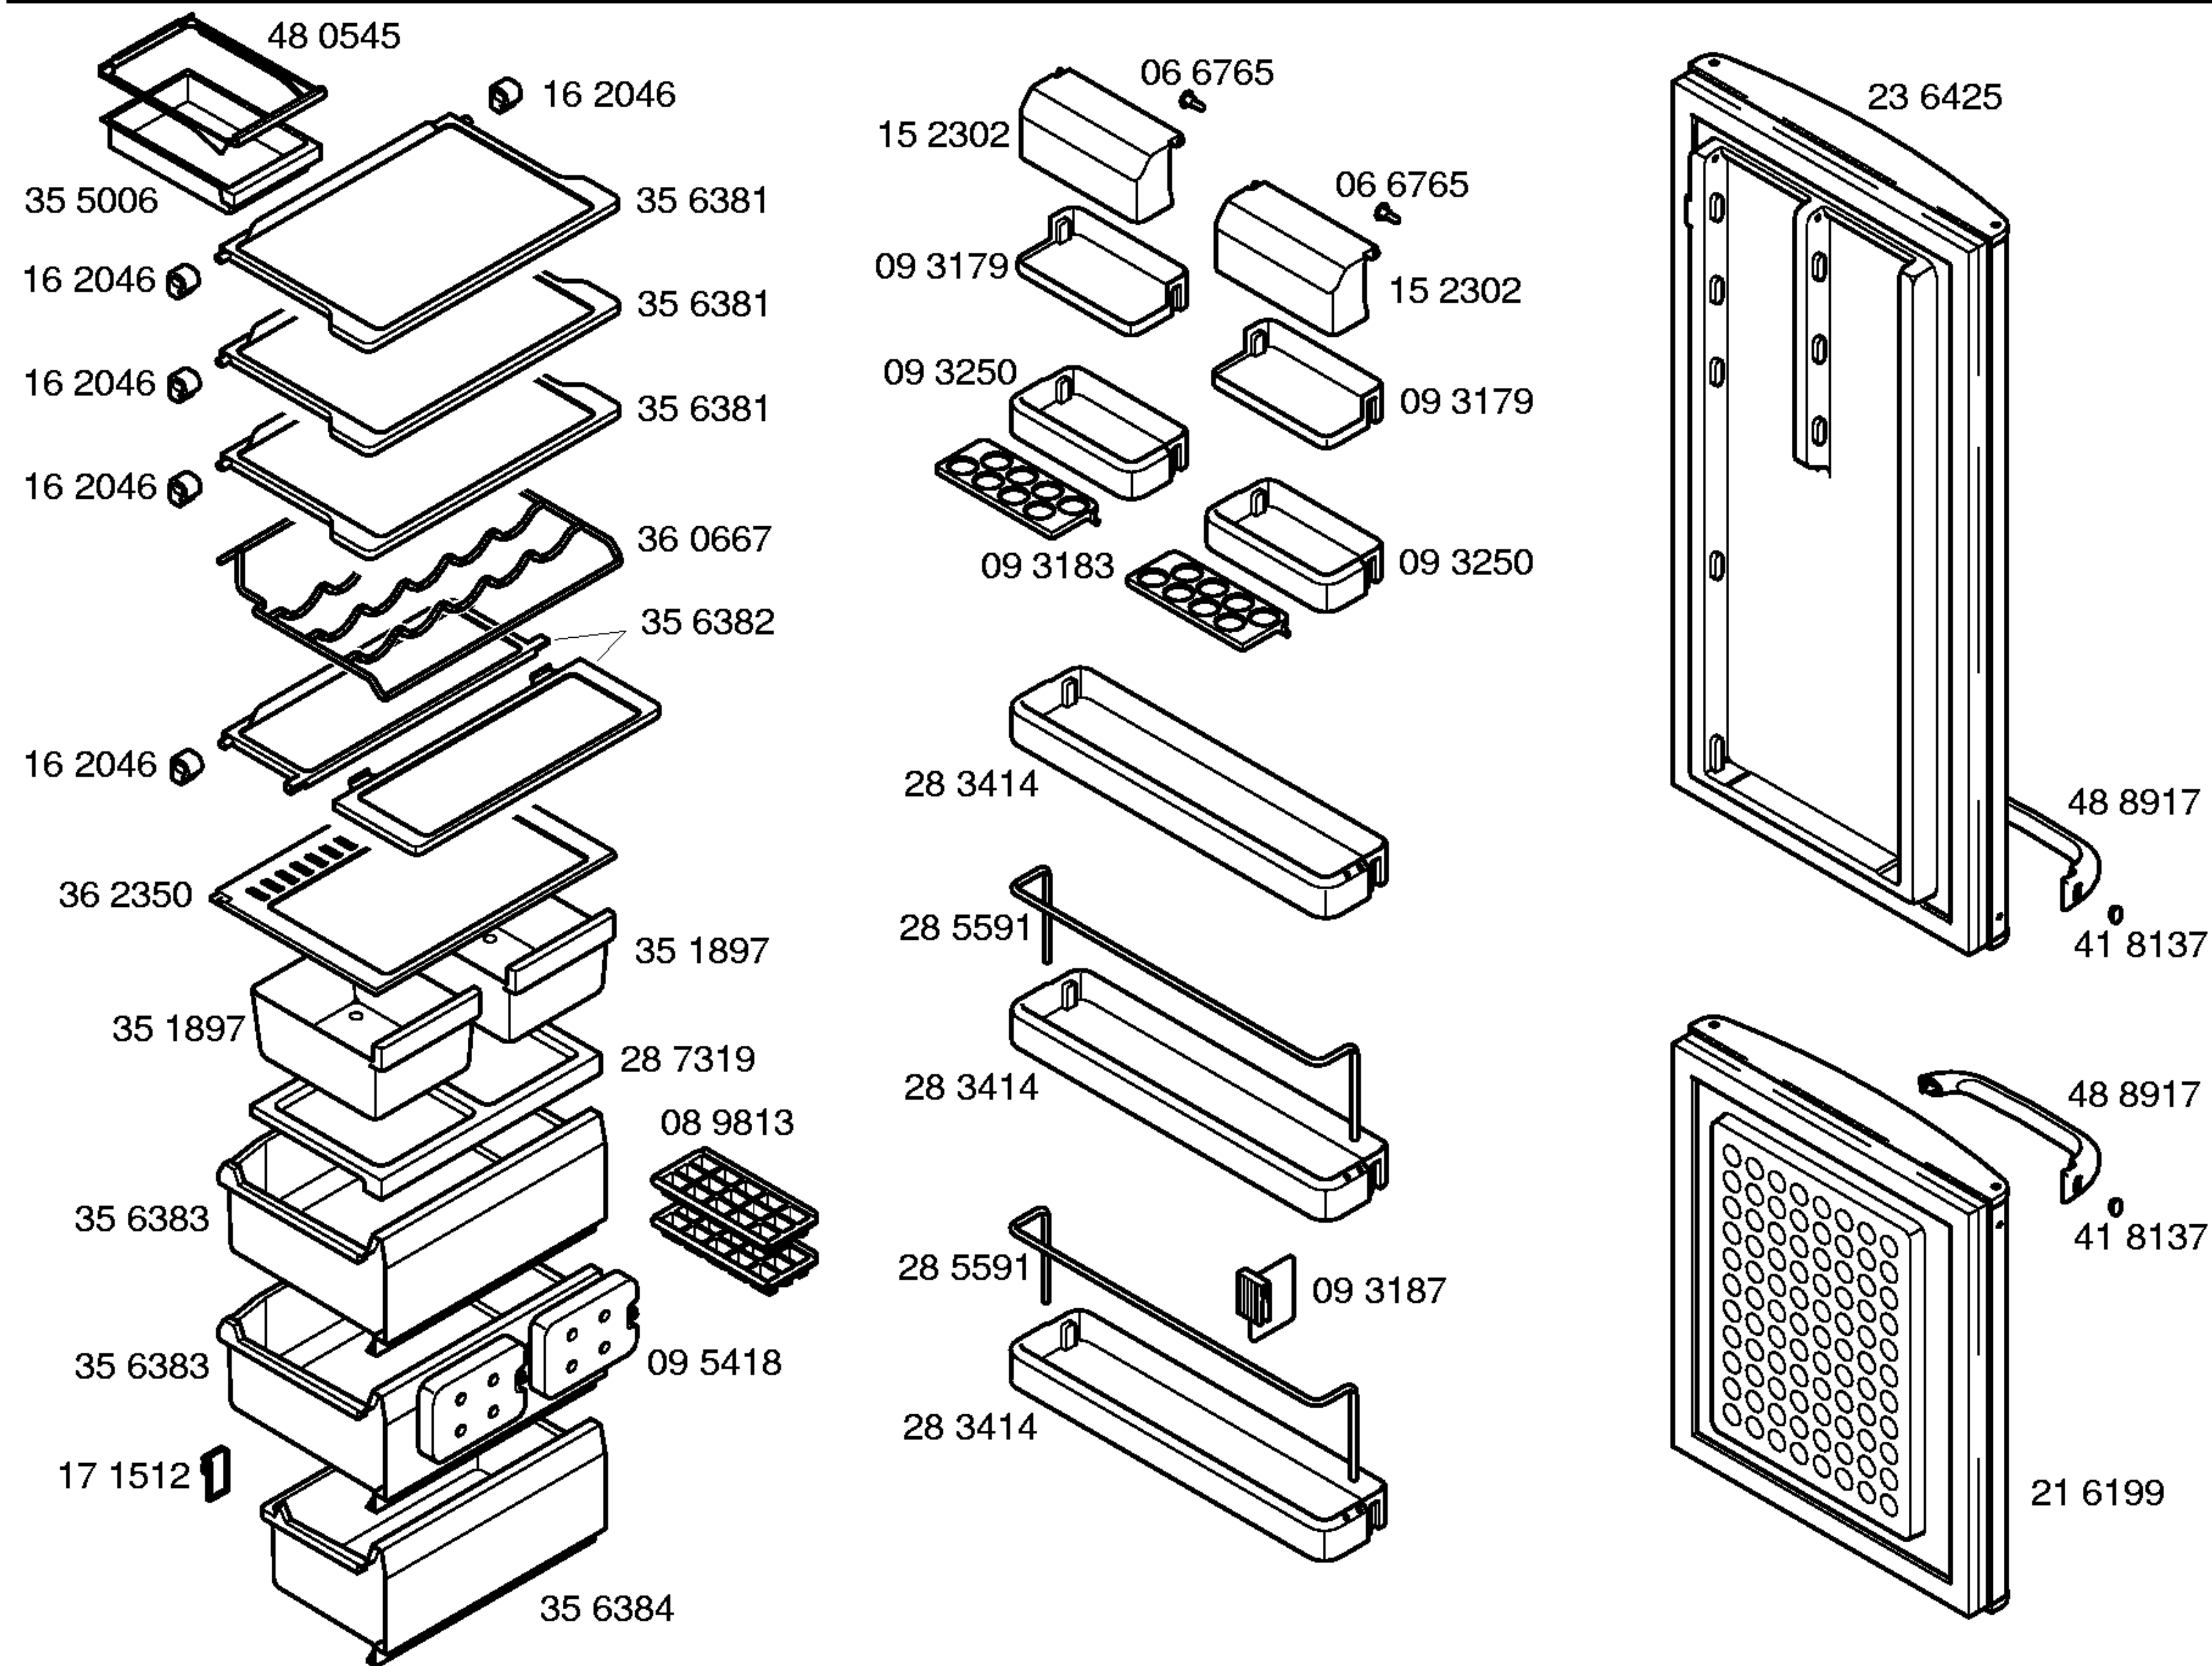

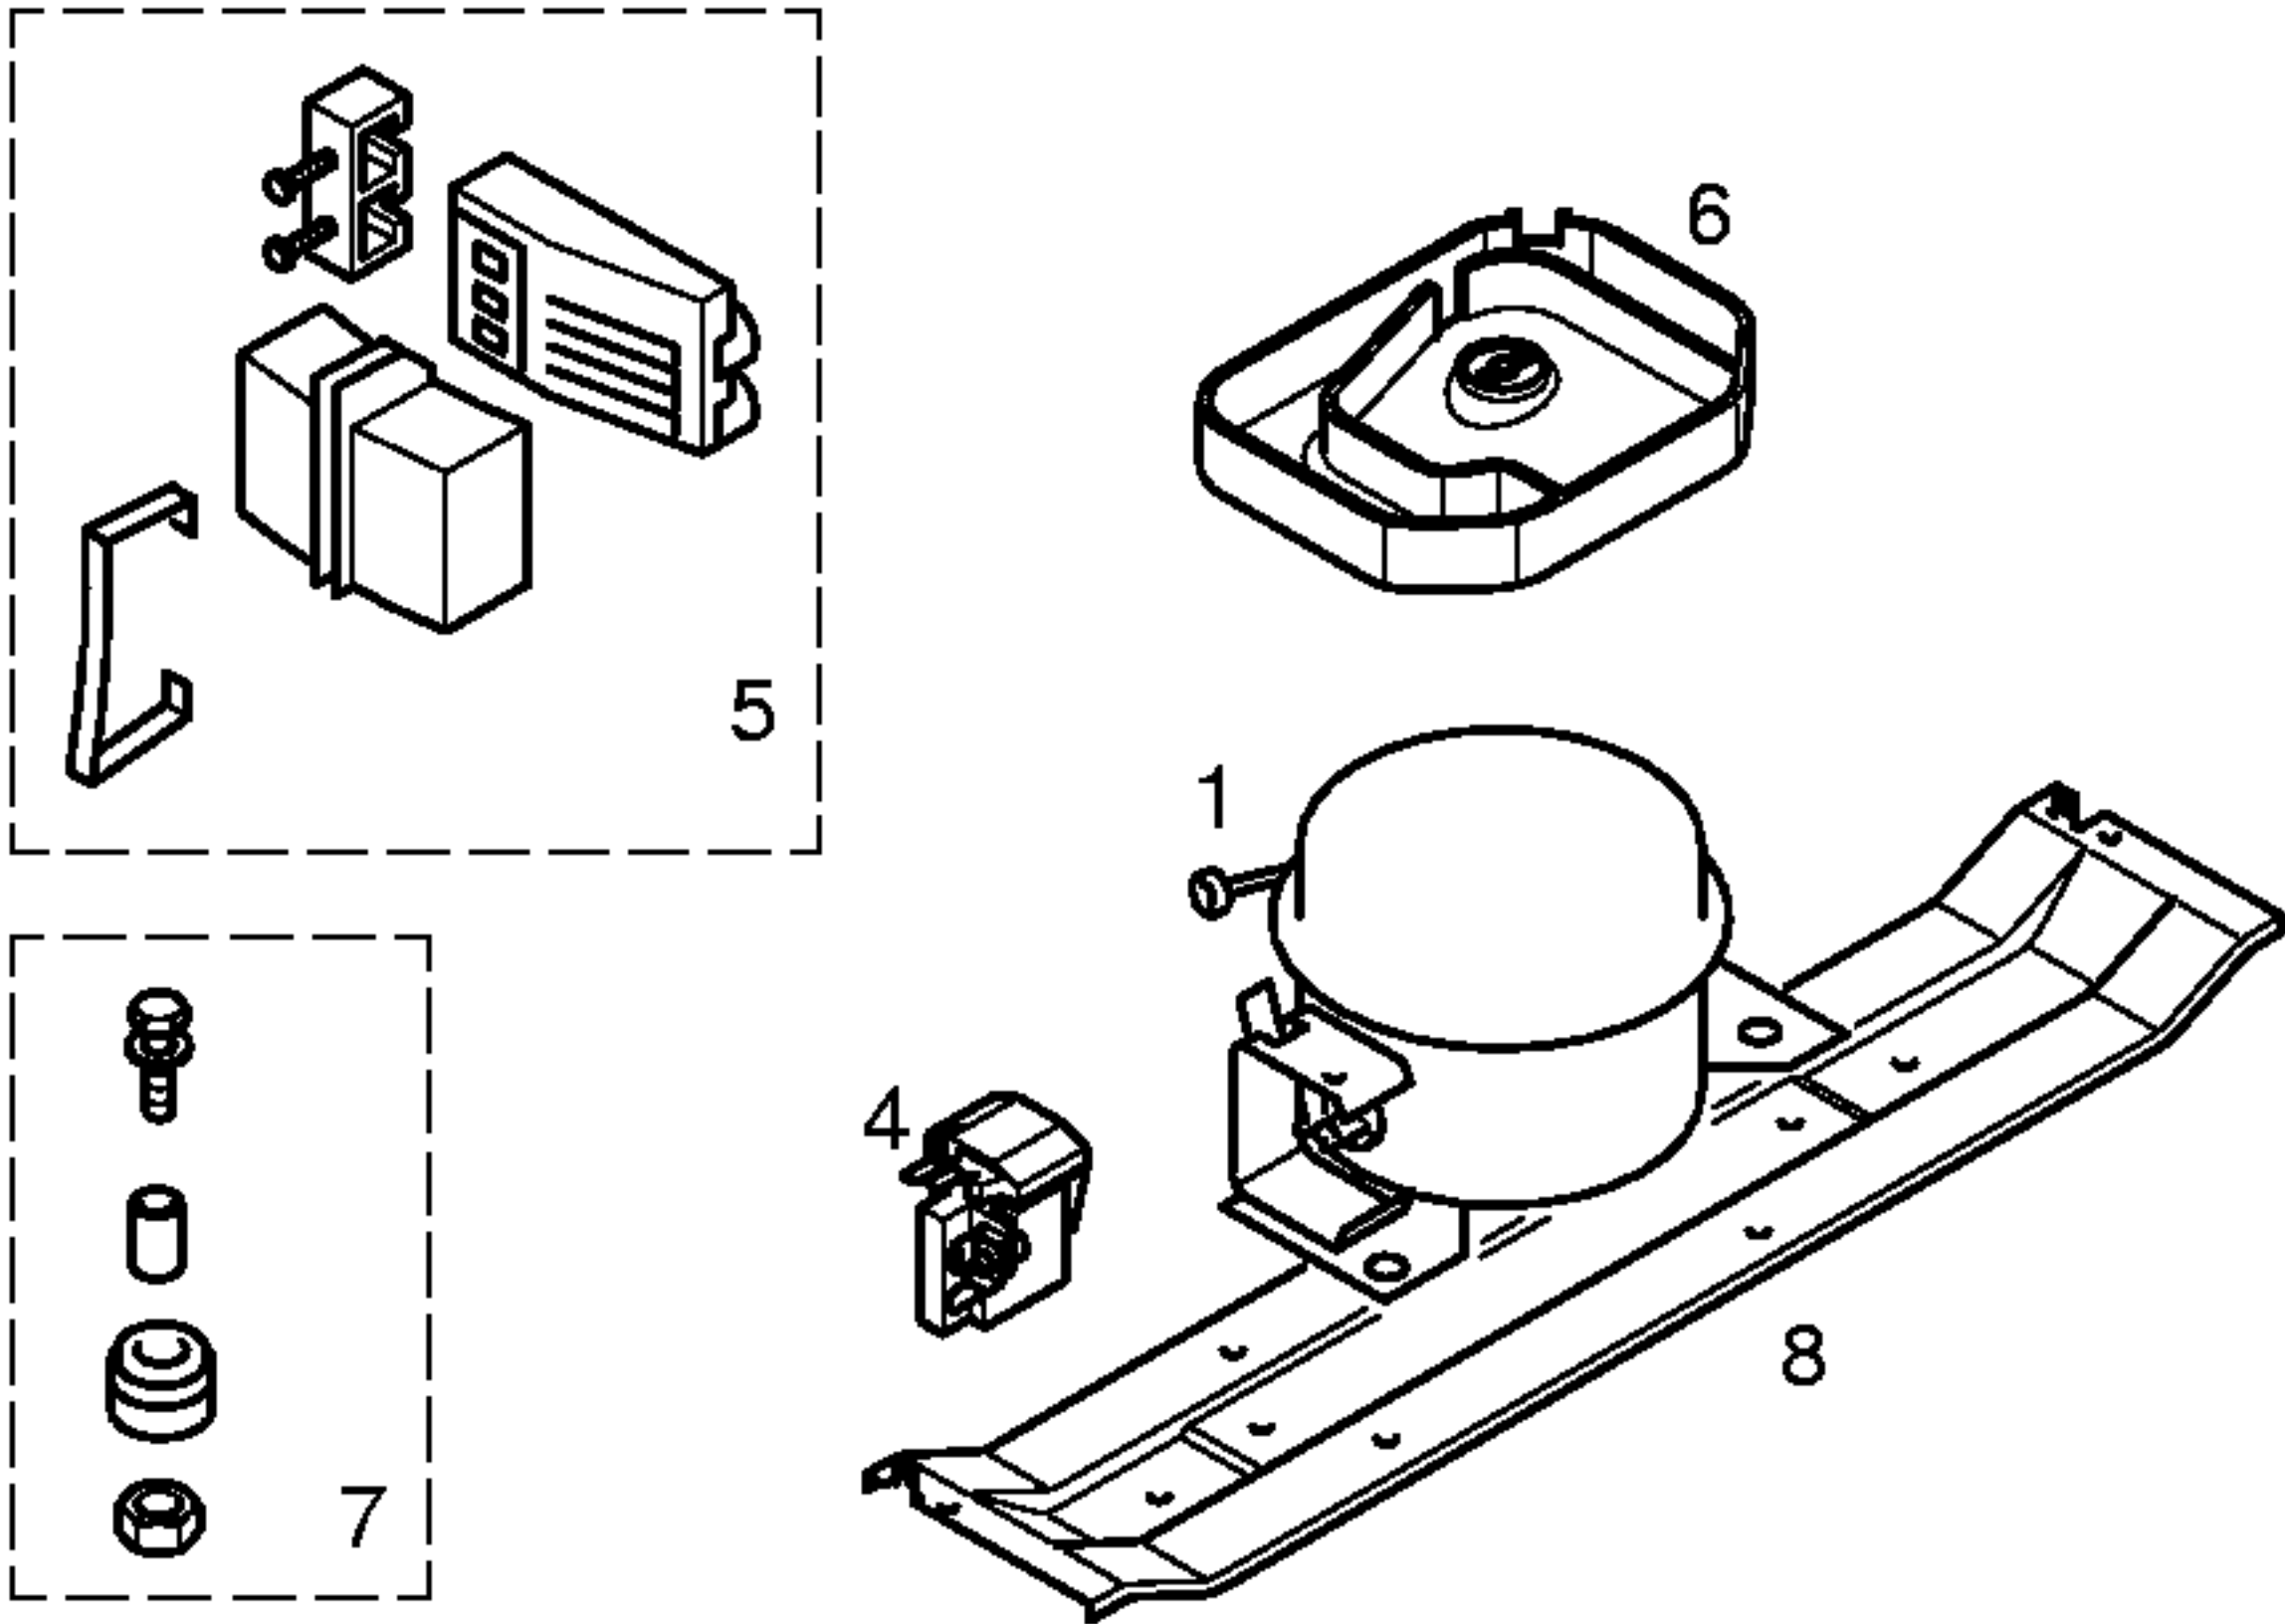

Pos.	****			
	LG	Aspera		
	NDA62NAEG	EMT40-CLP		
1	14 2000	14 2001		
2				
3				
4	17 1011	41 6671		
5				
6	48 4330			
7	05 0166	05 0166		
8	28 8253	28 8253		
9				
10				
11				
12				
13				

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES / DATOS TECNICOS		

Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux. Ohm	LG NDA62NAEG 0,48 35,21 21,49	Aspera EMT40-CLP 0,63 32,05 26,59
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon.°C (..abtaven' od) ..alarm' °C Verdampfersensor/Evaporator sensor/Sonda evaporador Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon.°C	Electronic. KS E2000 Komfort MIN. MAX. 11 1 10 0 4 4 — —	Electronic. GS E2000 Komfort MIN. MAX. -12,5 -24'5 -14 -26
Füllmenge/Fill. quantily/Charge/Carga R600a. g	*	*
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	71	90
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Ohm Leistung/Power/Puissance/Potencia W		
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia Ohm		
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Ohm Spannung/Voltage/Tension/Tensión V		
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador		

* Siehe Typenschild / See identification plate / Voir plaque de caractéristiques / Ver plaqueta de características