



Ident – Nummern – Konstante  
3740 . . . . .**51 2705**  
**Gebrauchsanweisung**  
(D,GB,F,I,NL,E)**51 5436**  
**Montageanleitung**  
(D,GB,F,I,NL,N,S,E)**08 4136**  
**Schraubensatz****08 8957**  
**Befestigungssatz**



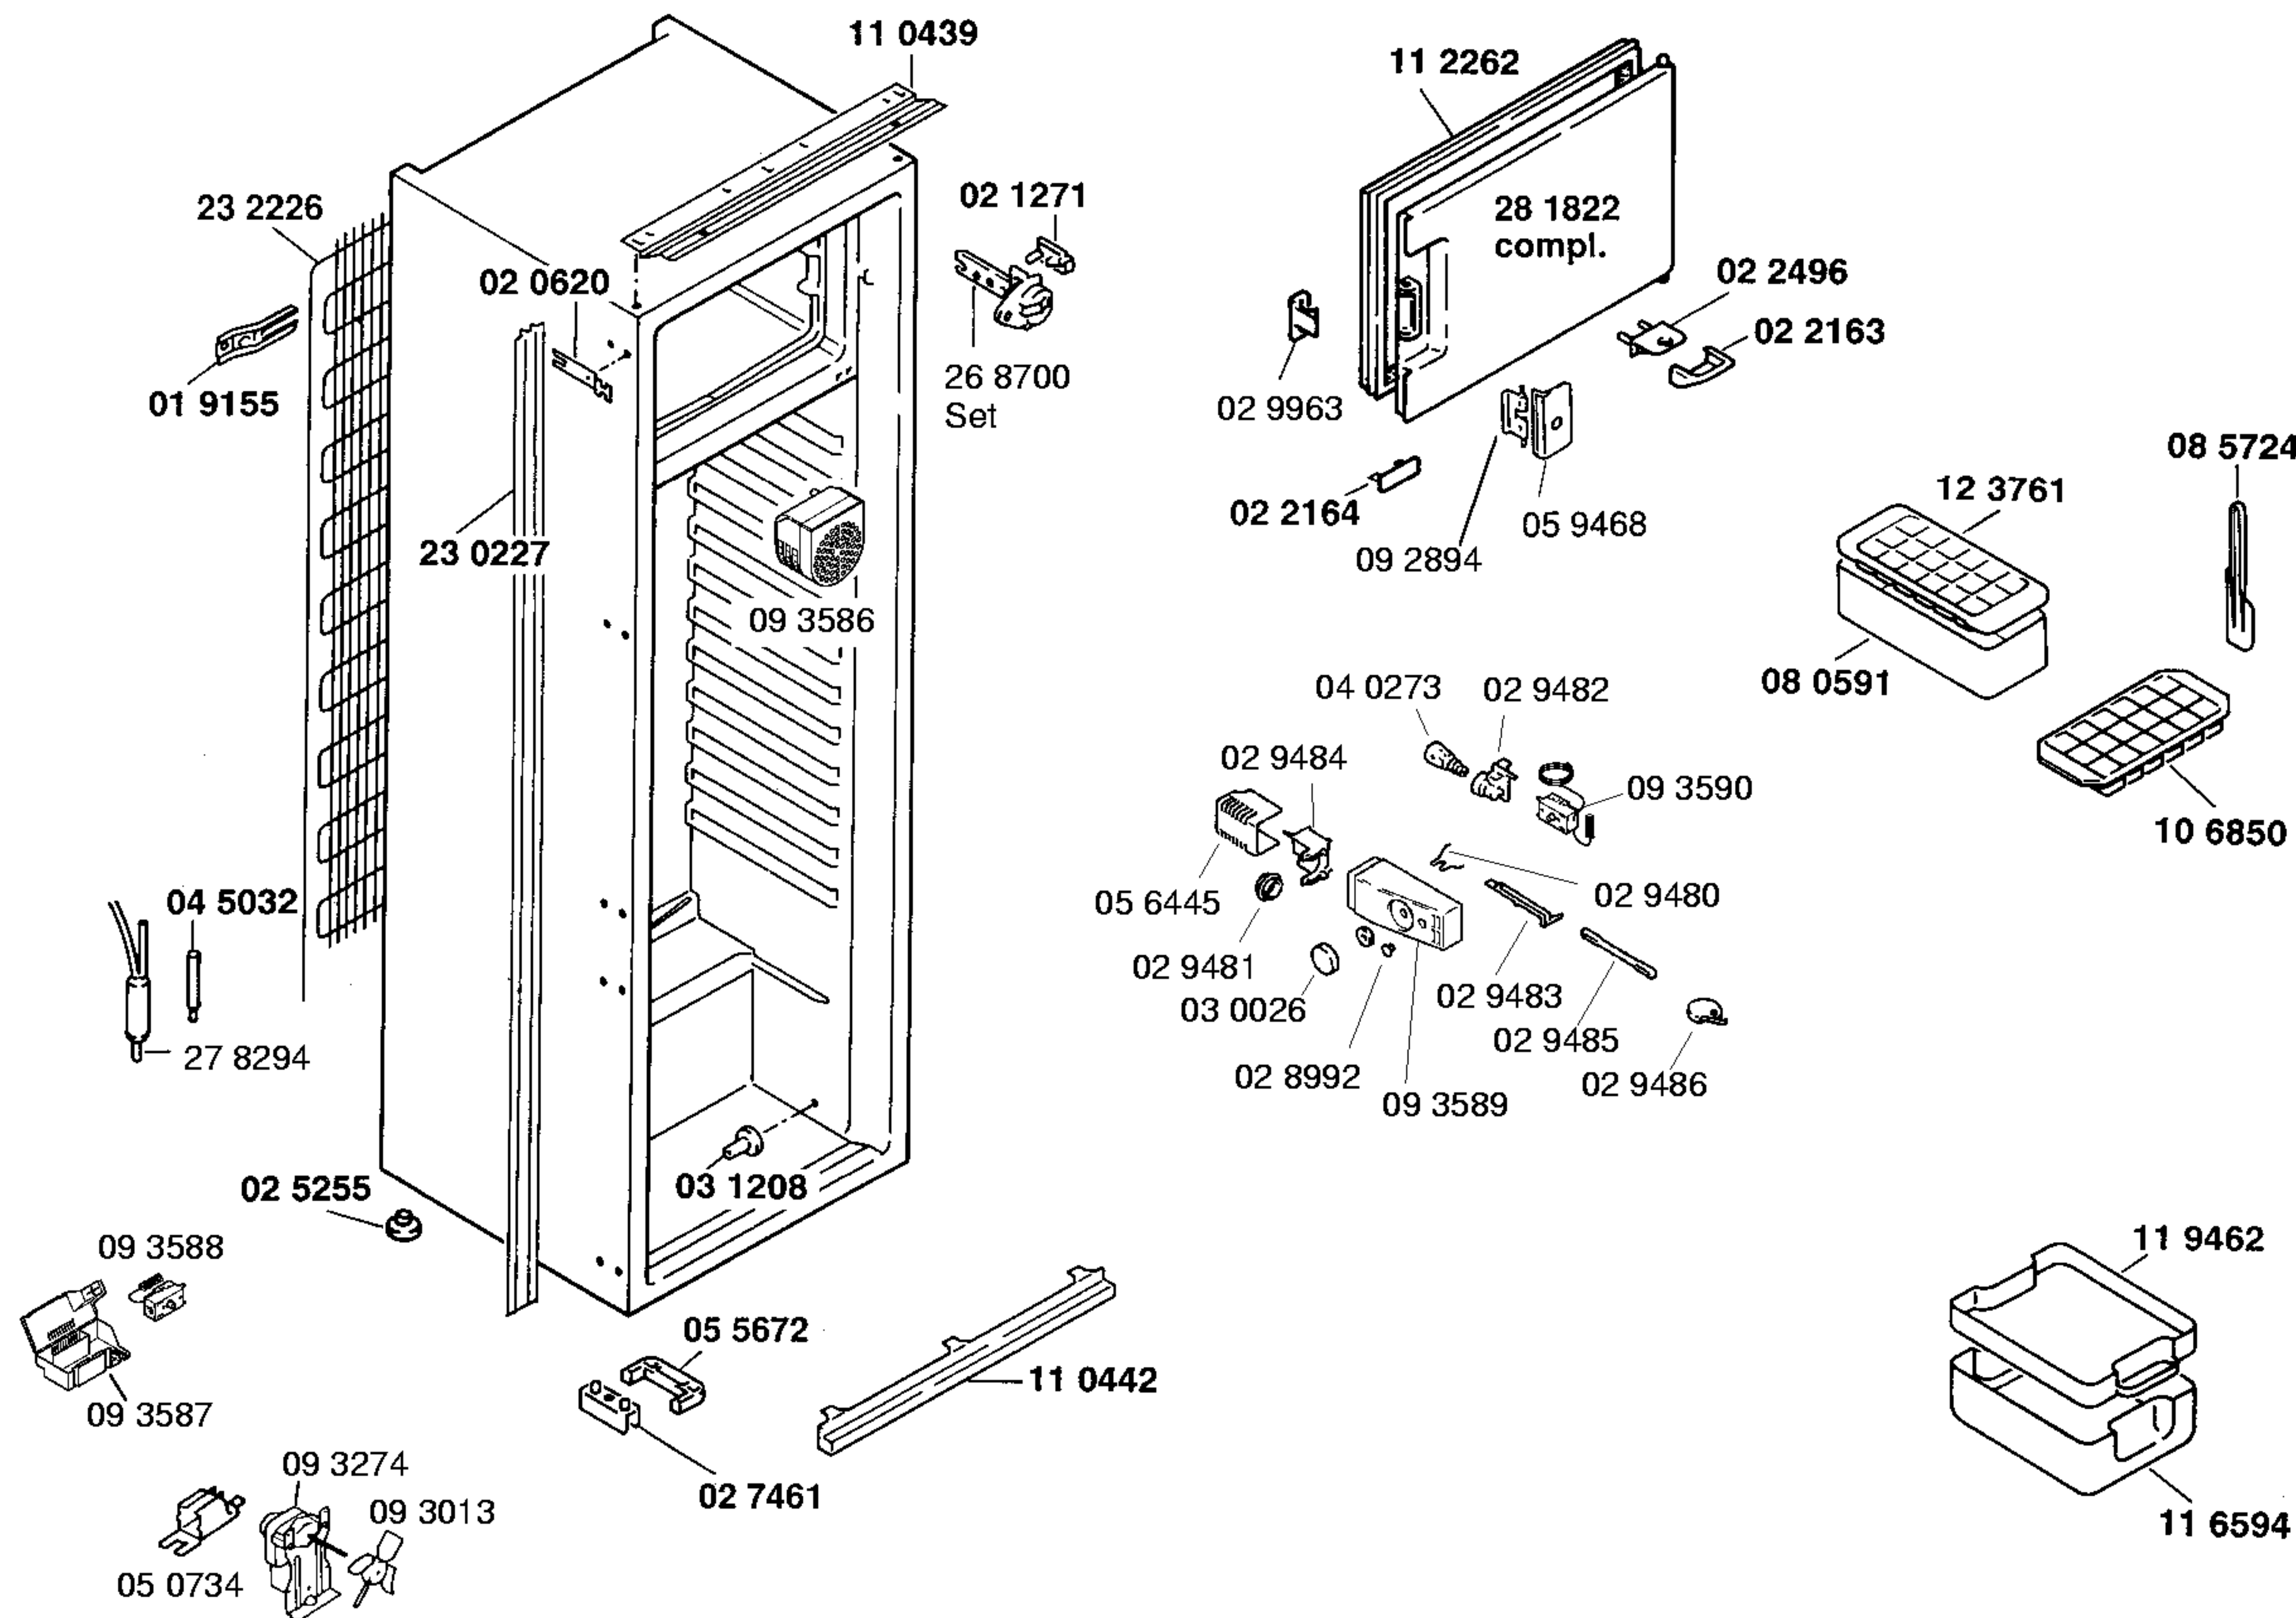


Ident – Nummern – Konstante  
3740 . . . . .

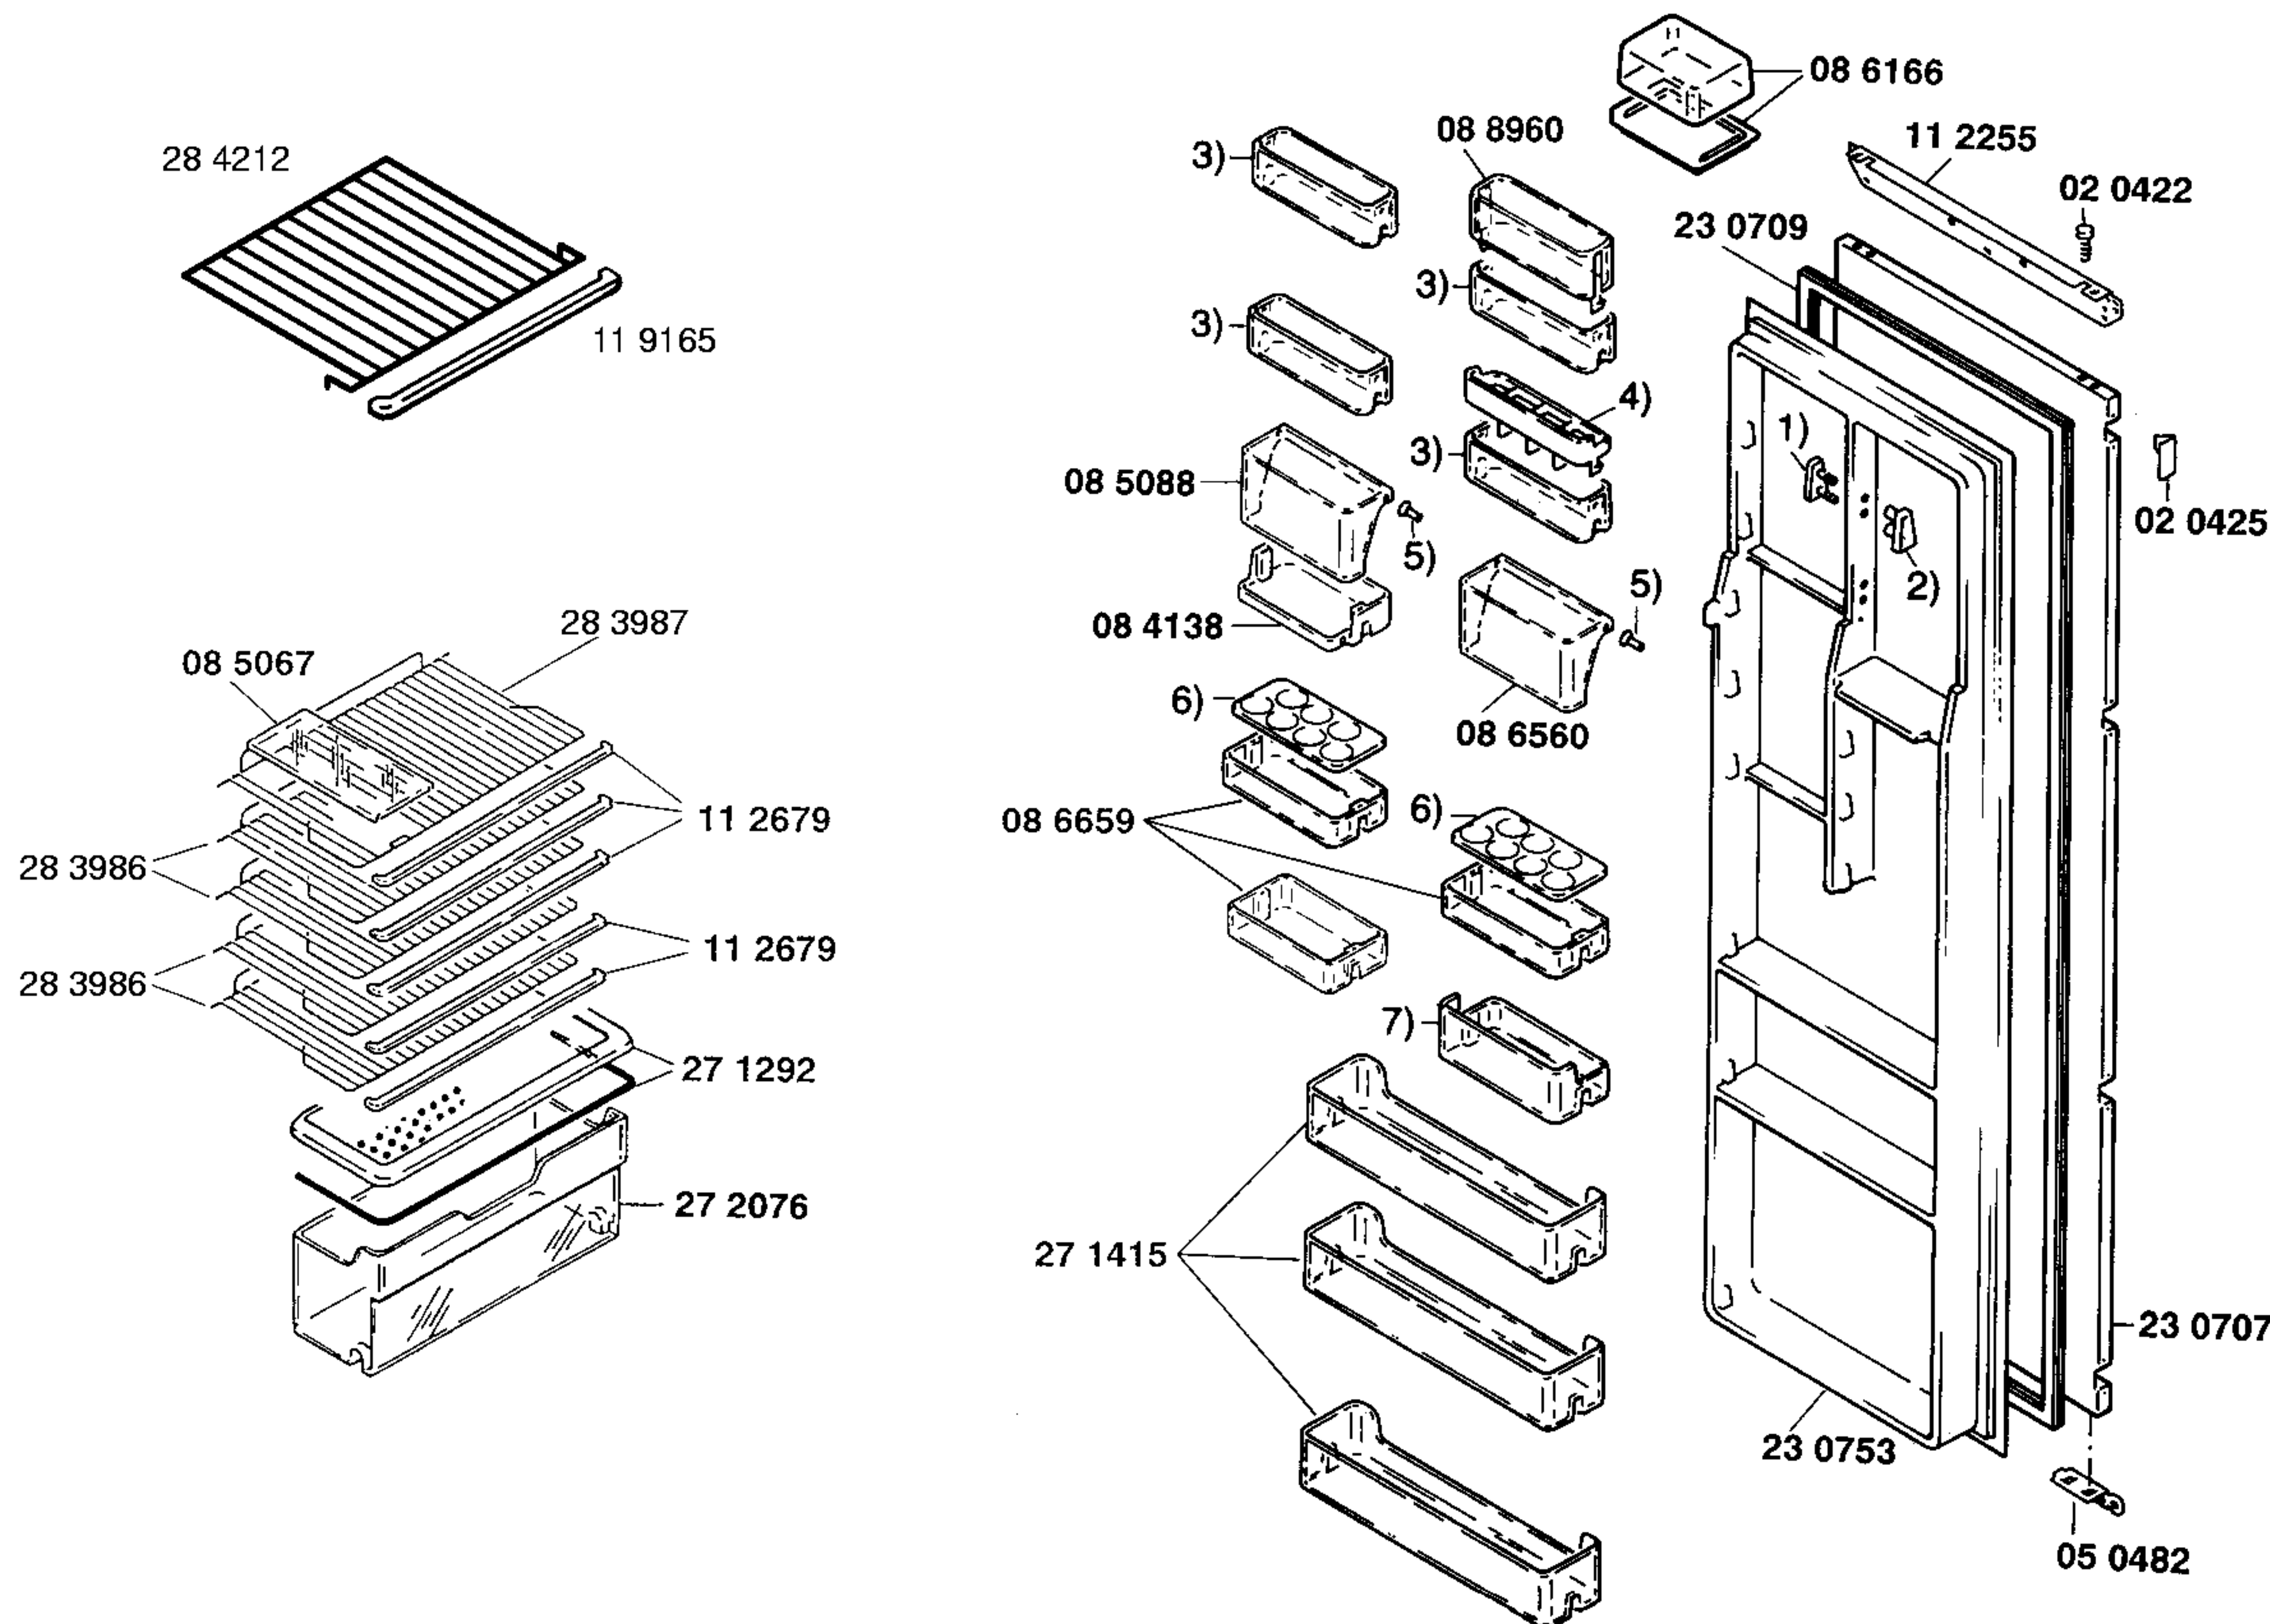

- 1) 02 2437
- 2) 02 6566
- 3) 08 8959
- 4) 08 6169
- 5) 02 9967
- 6) 08 7561  
EU1,CH1  
08 4592  
F1
- 7) 08 7562

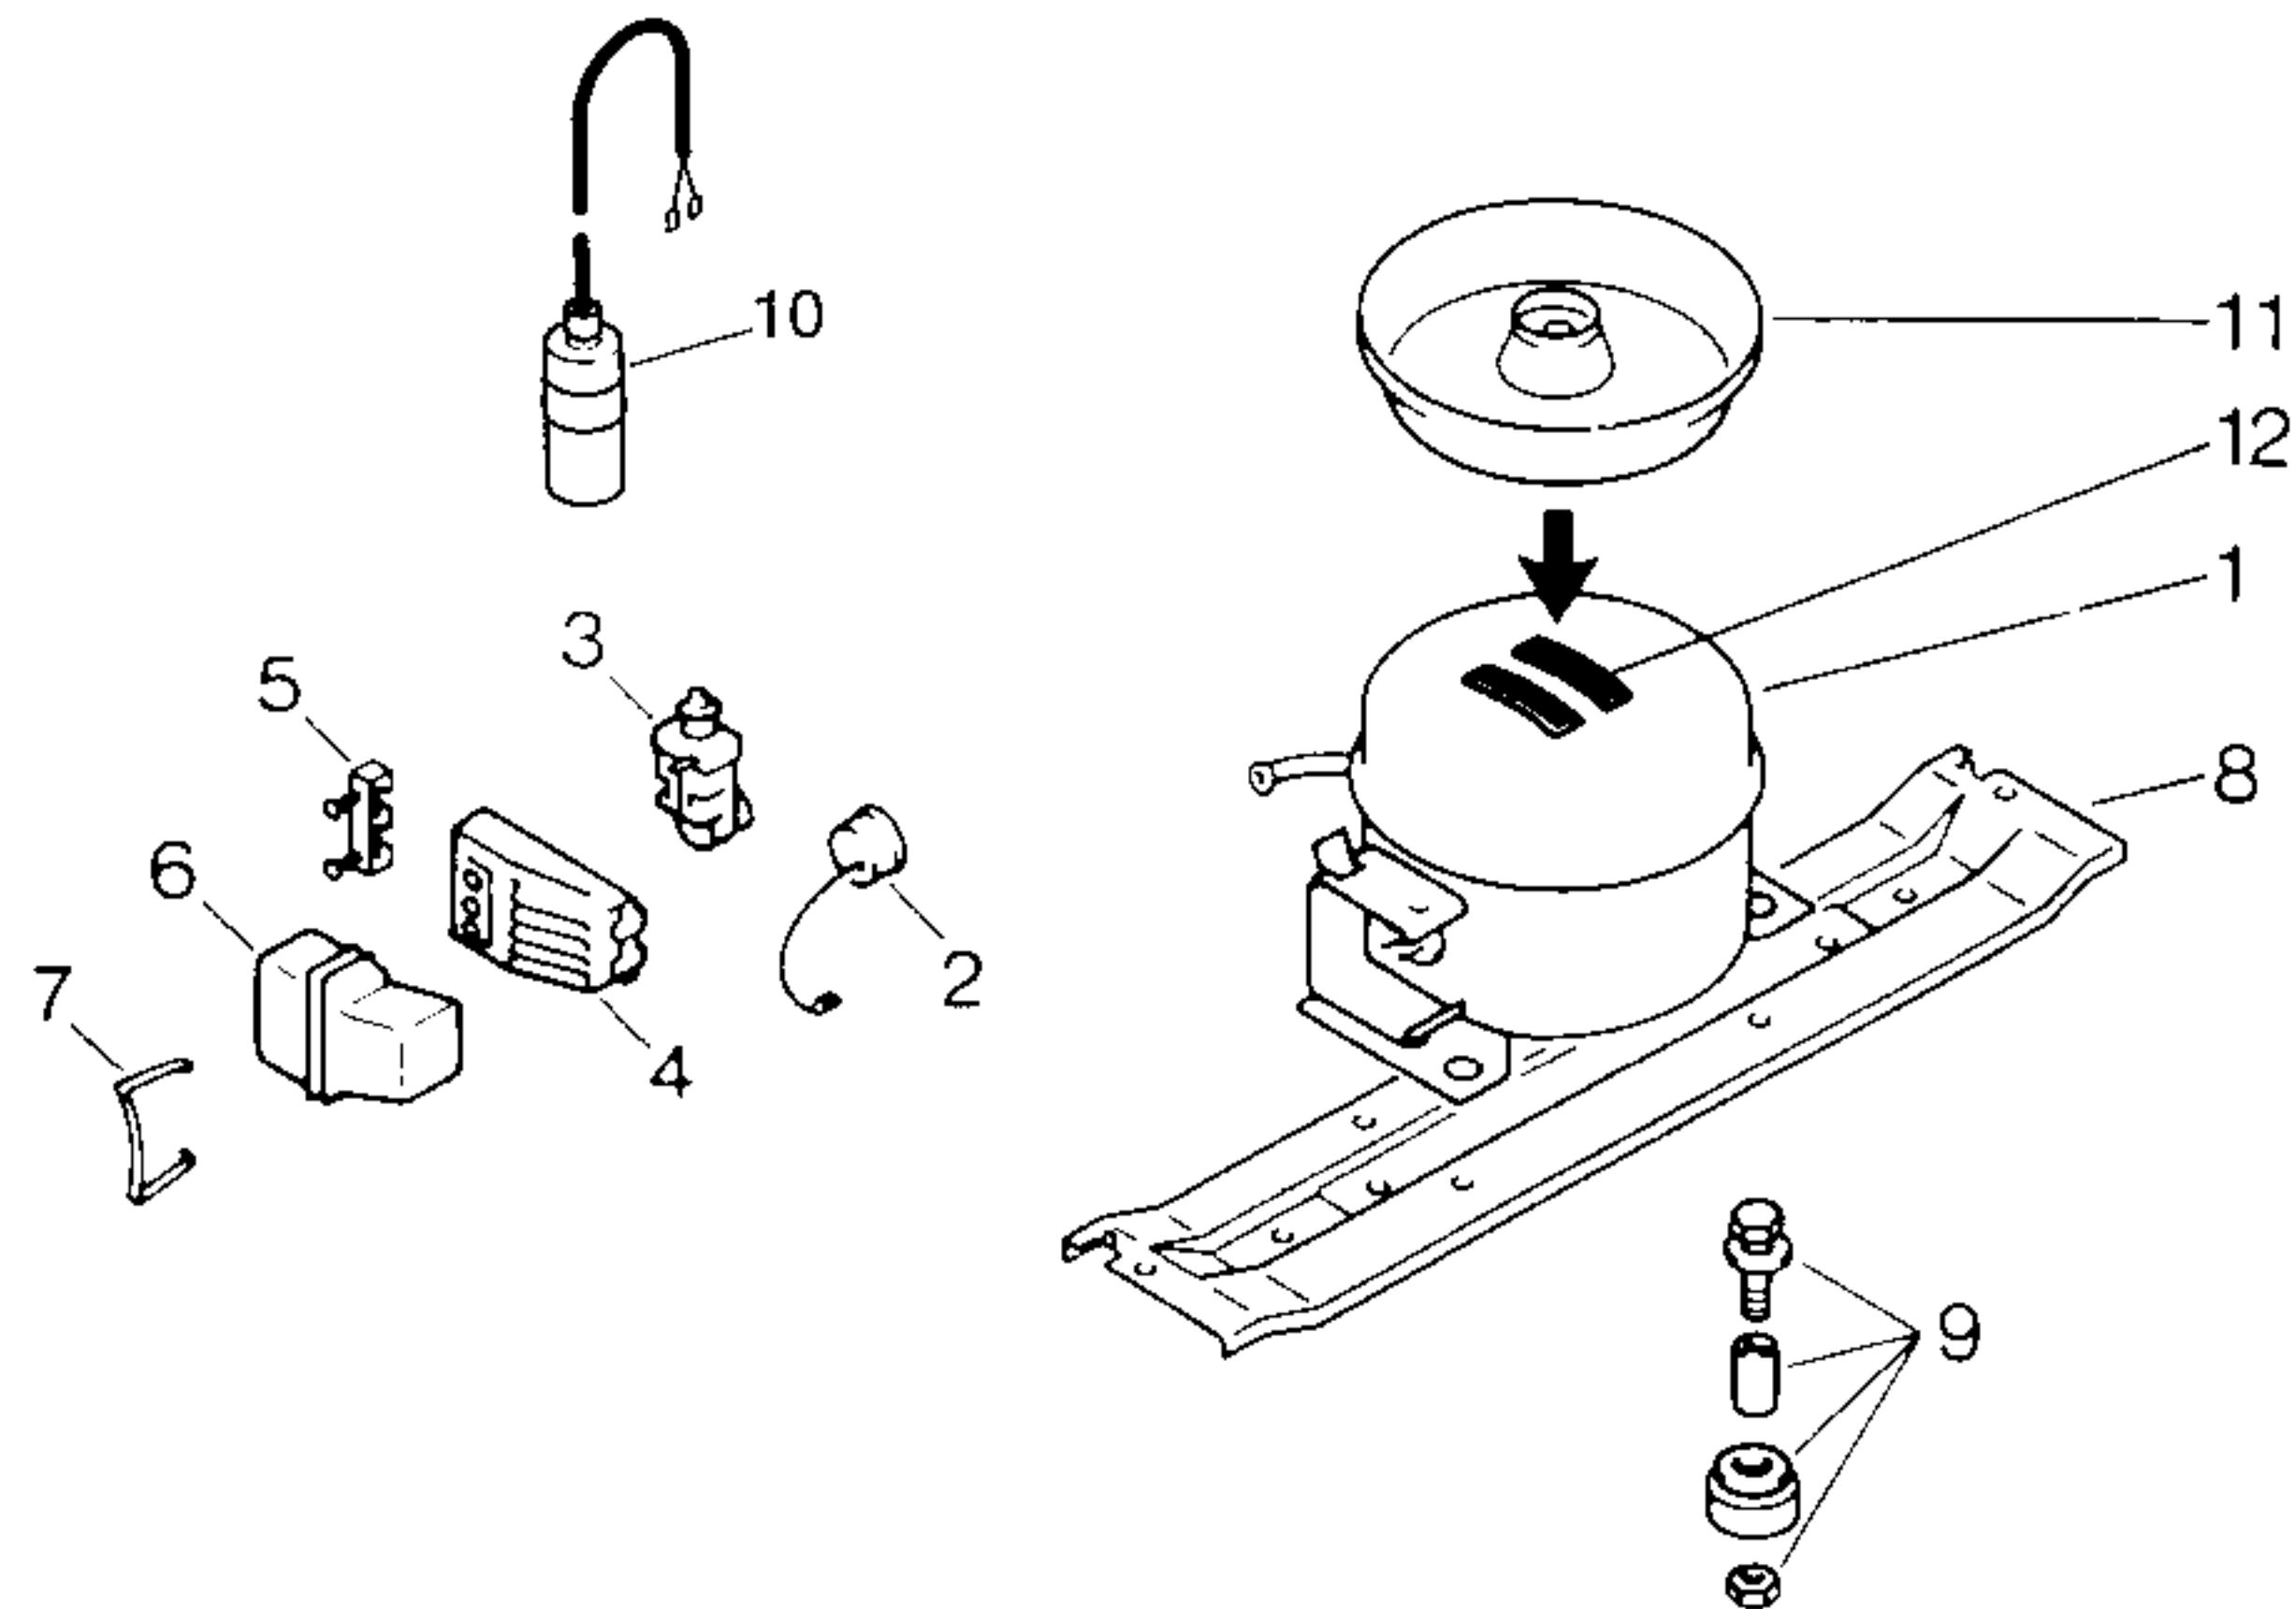

Ident – Nummern – Konstante  
3740 . . . . .

| Pos. |            |  |  |
|------|------------|--|--|
|      | Matsushita |  |  |
|      | D116LRAA   |  |  |
| 1    | 14 0563    |  |  |
| 2    | 05 8506    |  |  |
| 3    |            |  |  |
| 4    |            |  |  |
| 5    |            |  |  |
| 6    | 05 8458    |  |  |
| 7    | 02 6731    |  |  |
| 8    | 28 1825    |  |  |
| 9    | 05 0166    |  |  |
| 10   | 05 9467    |  |  |
| 11   | 08 5182    |  |  |
| 12   | 05 6008    |  |  |

| TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES  |  |                         |                   |                       |
|---------------------------------------------------------|--|-------------------------|-------------------|-----------------------|
| Verdichter/Compressor/Compresseur                       |  | Matsushita              |                   |                       |
| Typ/Type                                                |  | D116LRAA                |                   |                       |
| Förderleistung/Delivery/Débit                           |  | l/h                     | 1184              |                       |
| Anlaufstrom/Starting current/Cour de démarrage          |  | A                       | 8,75              |                       |
| Widerstand/Resistance/Résistance                        |  | Ha/main/prin. $\Omega$  | 12,0              |                       |
|                                                         |  | Hi/aux $\Omega$         | 28,7              |                       |
| Temp.-Regler/Thermostat                                 |  | Ranco                   | Innentemp. K 52-1 | Außentemp. K 50-L5772 |
| Typ/Type                                                |  |                         |                   |                       |
| Reglerstellung/Position                                 |  | °C                      | kalt              | warm                  |
| Schaltwerte/Switching values/<br>Valeurs de commutation |  | „ein“                   | +4                | +7,5                  |
|                                                         |  | „aus“                   | 0                 | +10                   |
|                                                         |  | („abtauen“ od.) „alarm“ |                   | +31,5                 |
|                                                         |  |                         |                   | +28,5                 |
| Füllmenge/Fill.quantity/Charge                          |  | R12 g                   | 130               |                       |
| Anschlußwert/Conn.load/Puiss. connectée                 |  | W                       | 150               |                       |
| Heizung/Heater/Chauffage                                |  |                         |                   |                       |
| Widerstand/Resistance/Résistance                        |  | $\Omega$                |                   |                       |
| Leistung/Power/Puissance                                |  | W                       |                   |                       |
| Ventilator/Blower/Ventilateur                           |  |                         | Innen             | Außen                 |
| Widerstand/Resistance/Résistance                        |  | $\Omega$                | 1300              | 350                   |
| Schaltuhr/Timer/Minuterie de contact                    |  |                         |                   |                       |
| Widerstand/Resistance/Résistance                        |  | $\Omega$                |                   |                       |
| Magnetventil/Magnetic valve/Electrovanne                |  |                         |                   |                       |
| Widerstand/Resistance/Résistance                        |  | $\Omega$                |                   |                       |
| Spannung/Voltage/Tension                                |  | V                       |                   |                       |