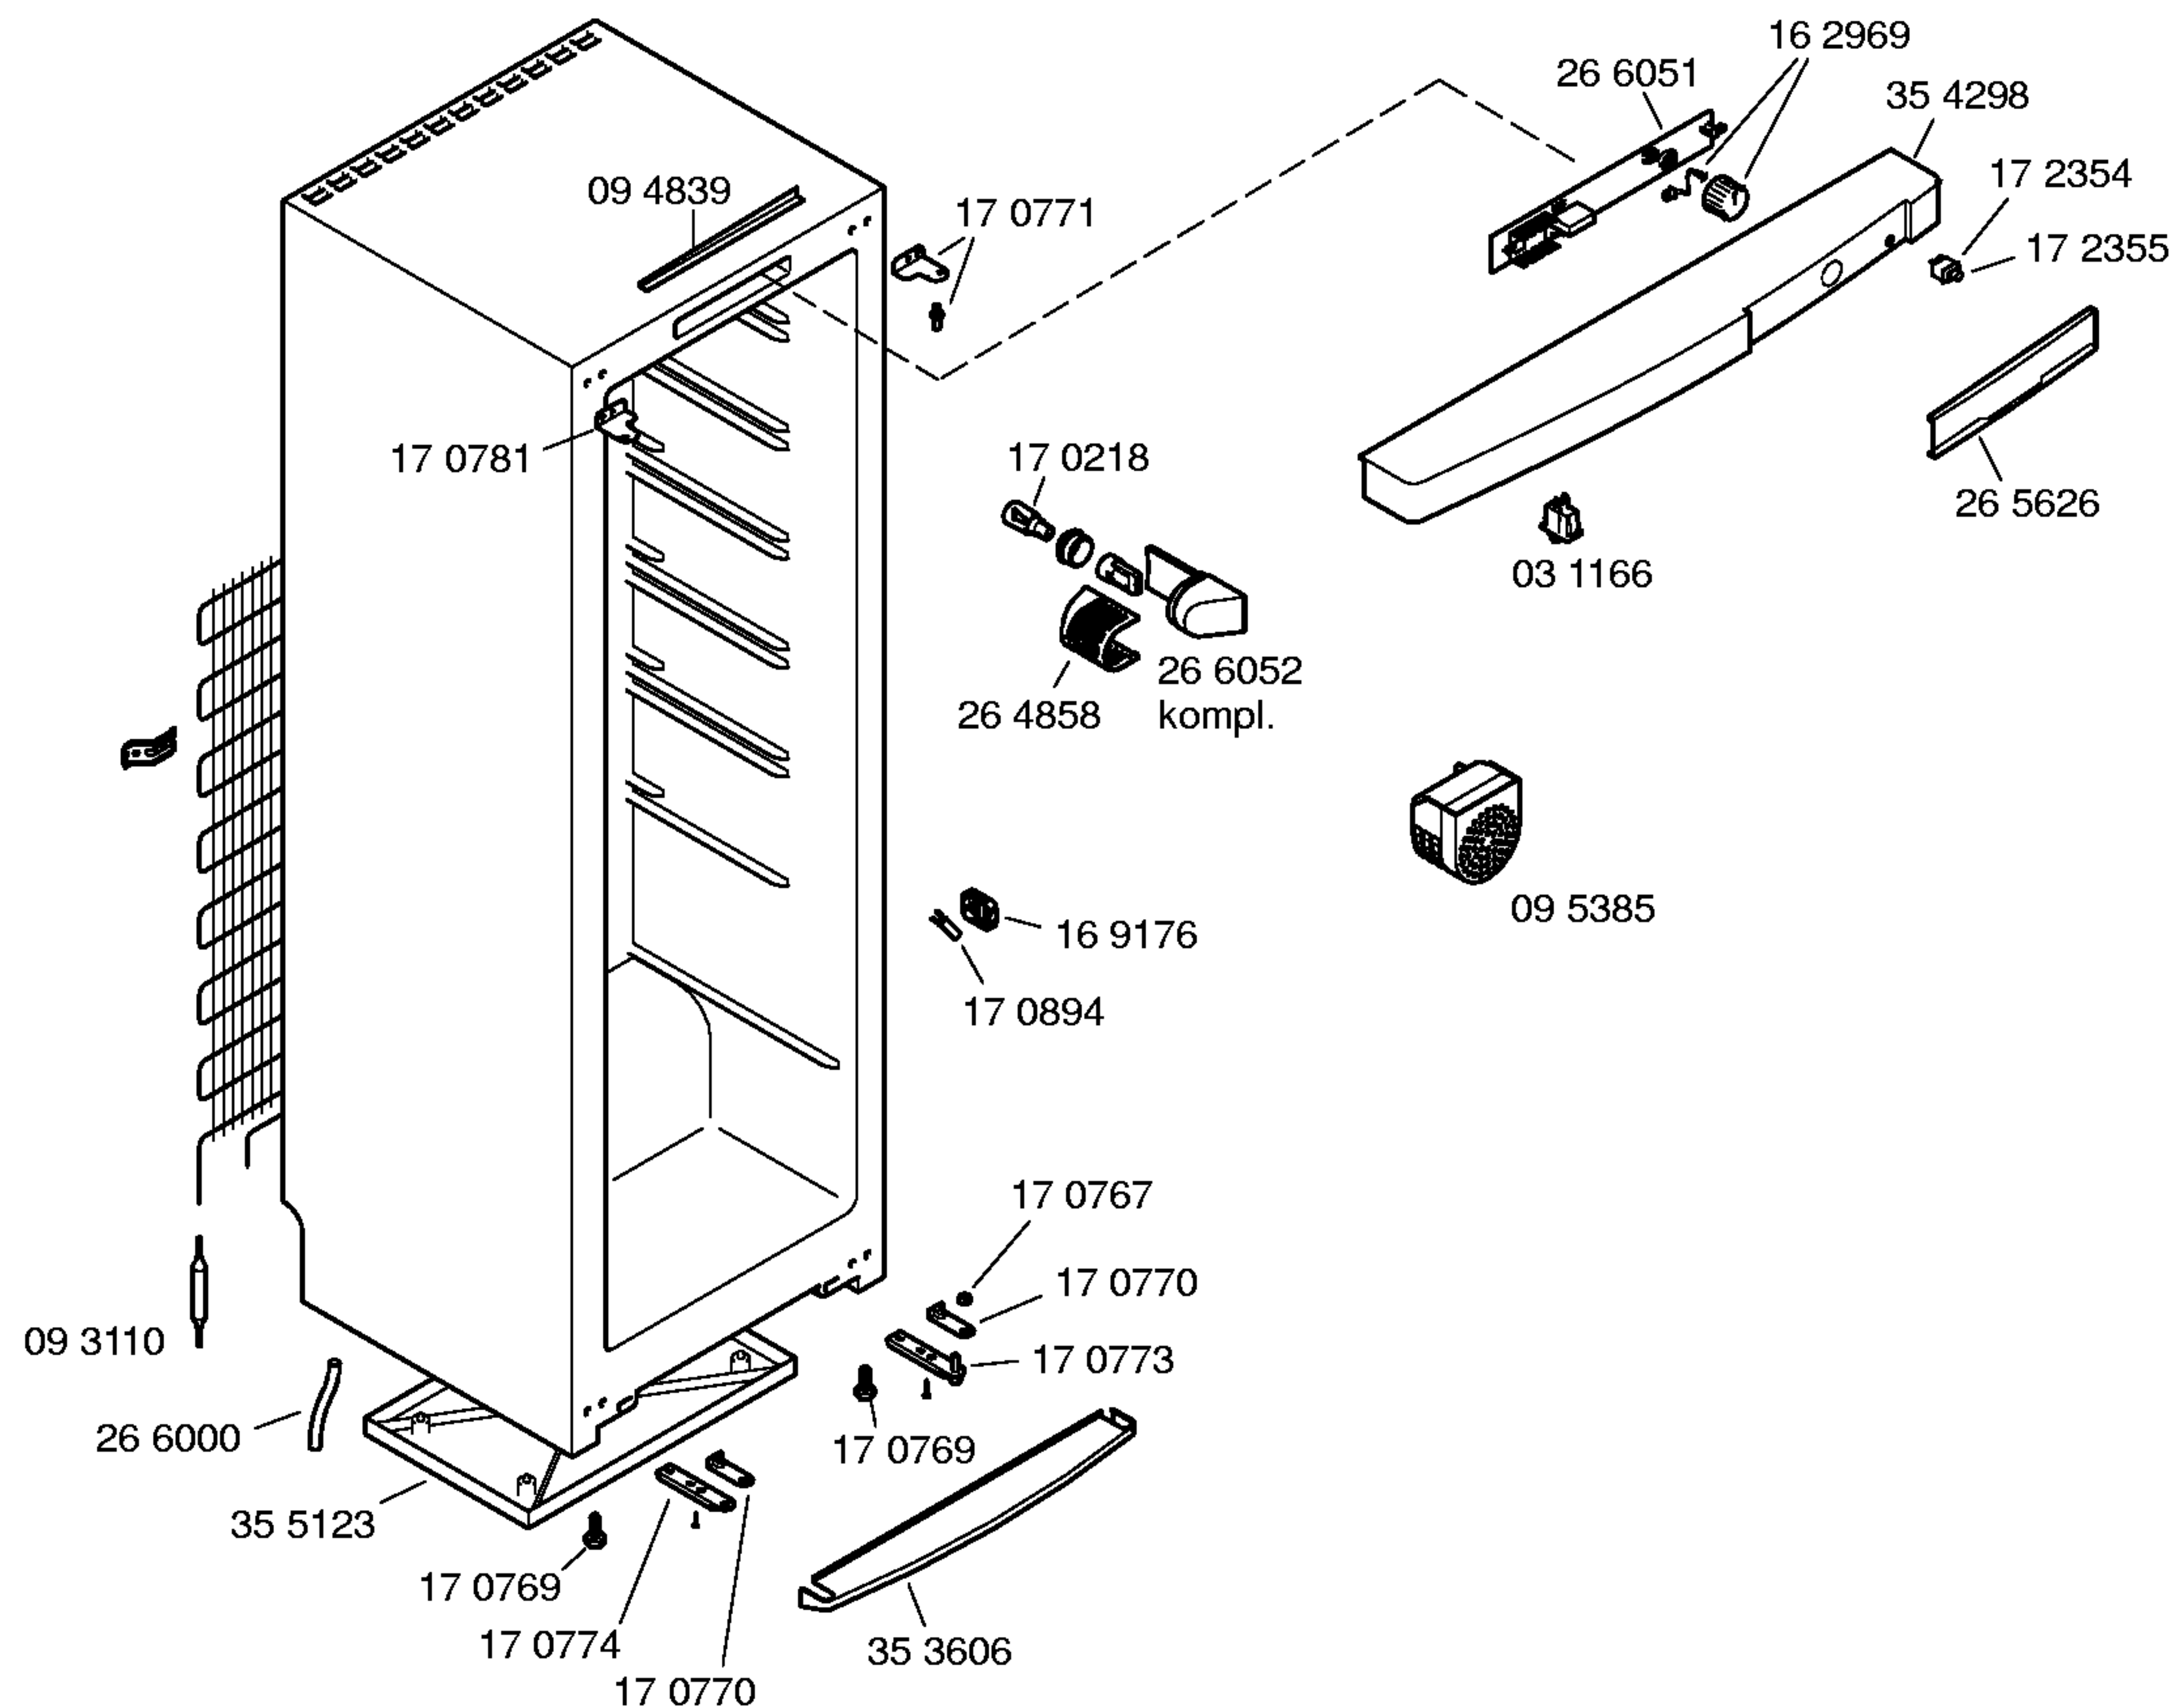


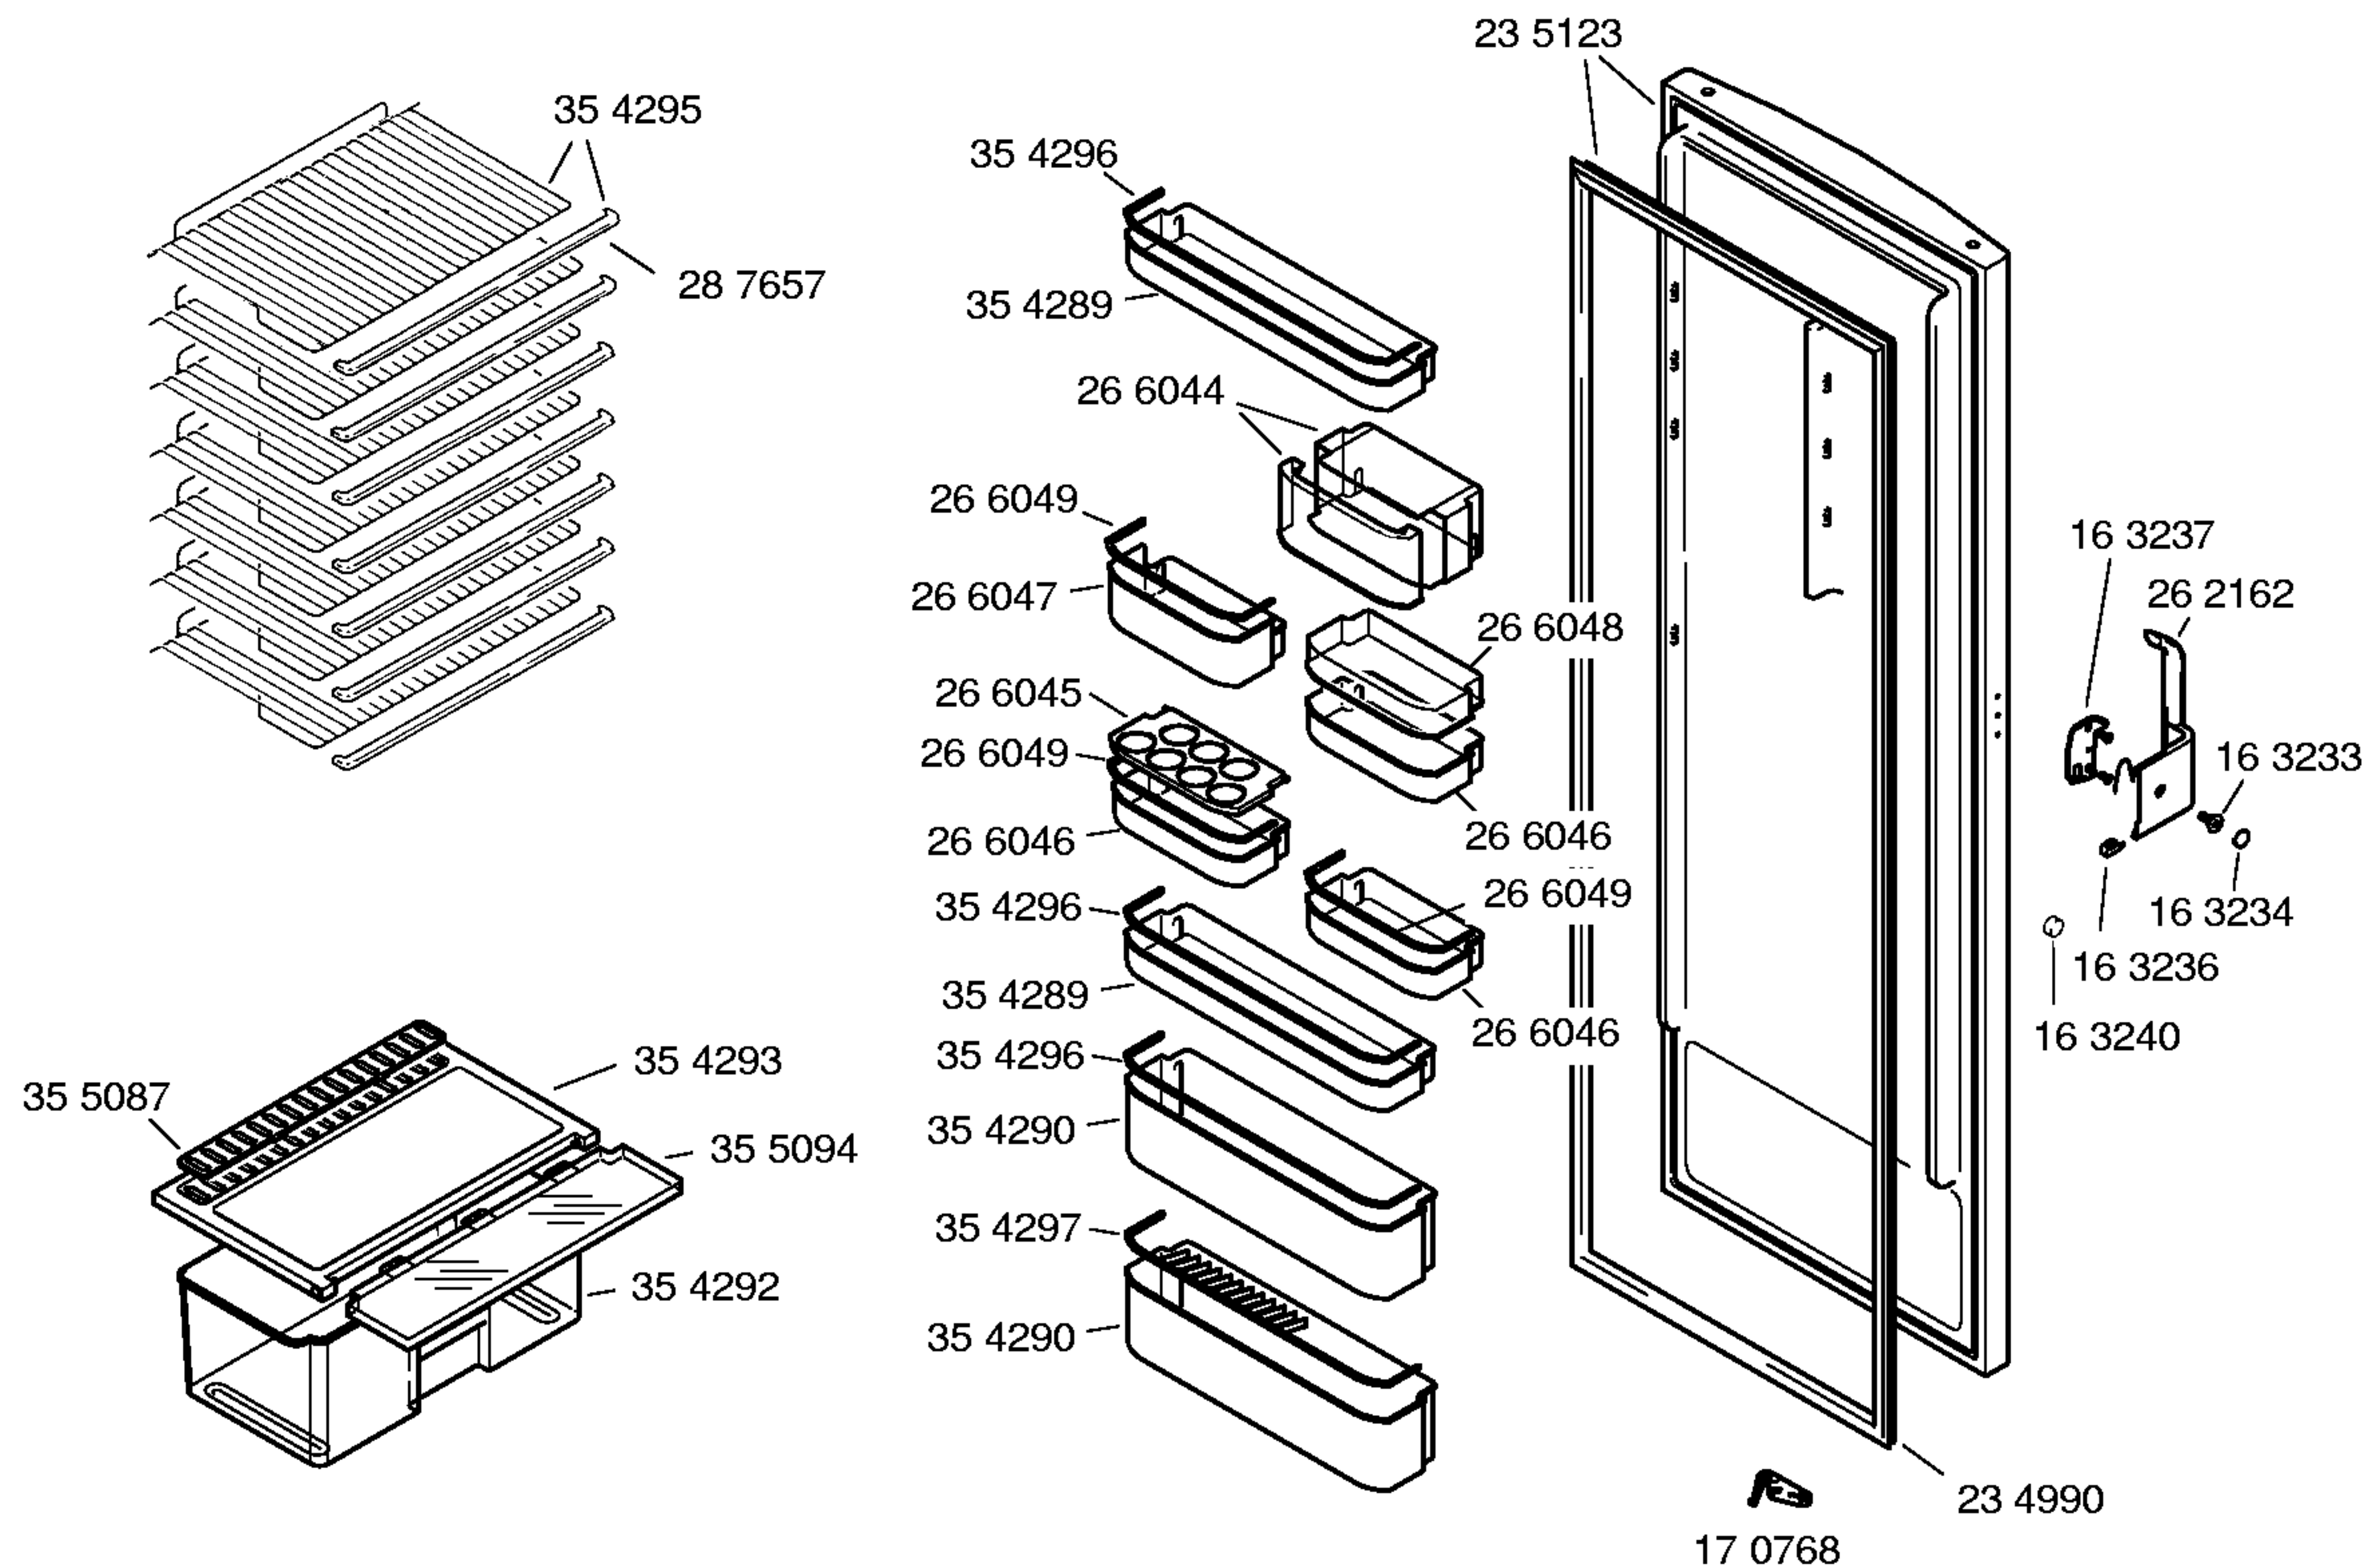


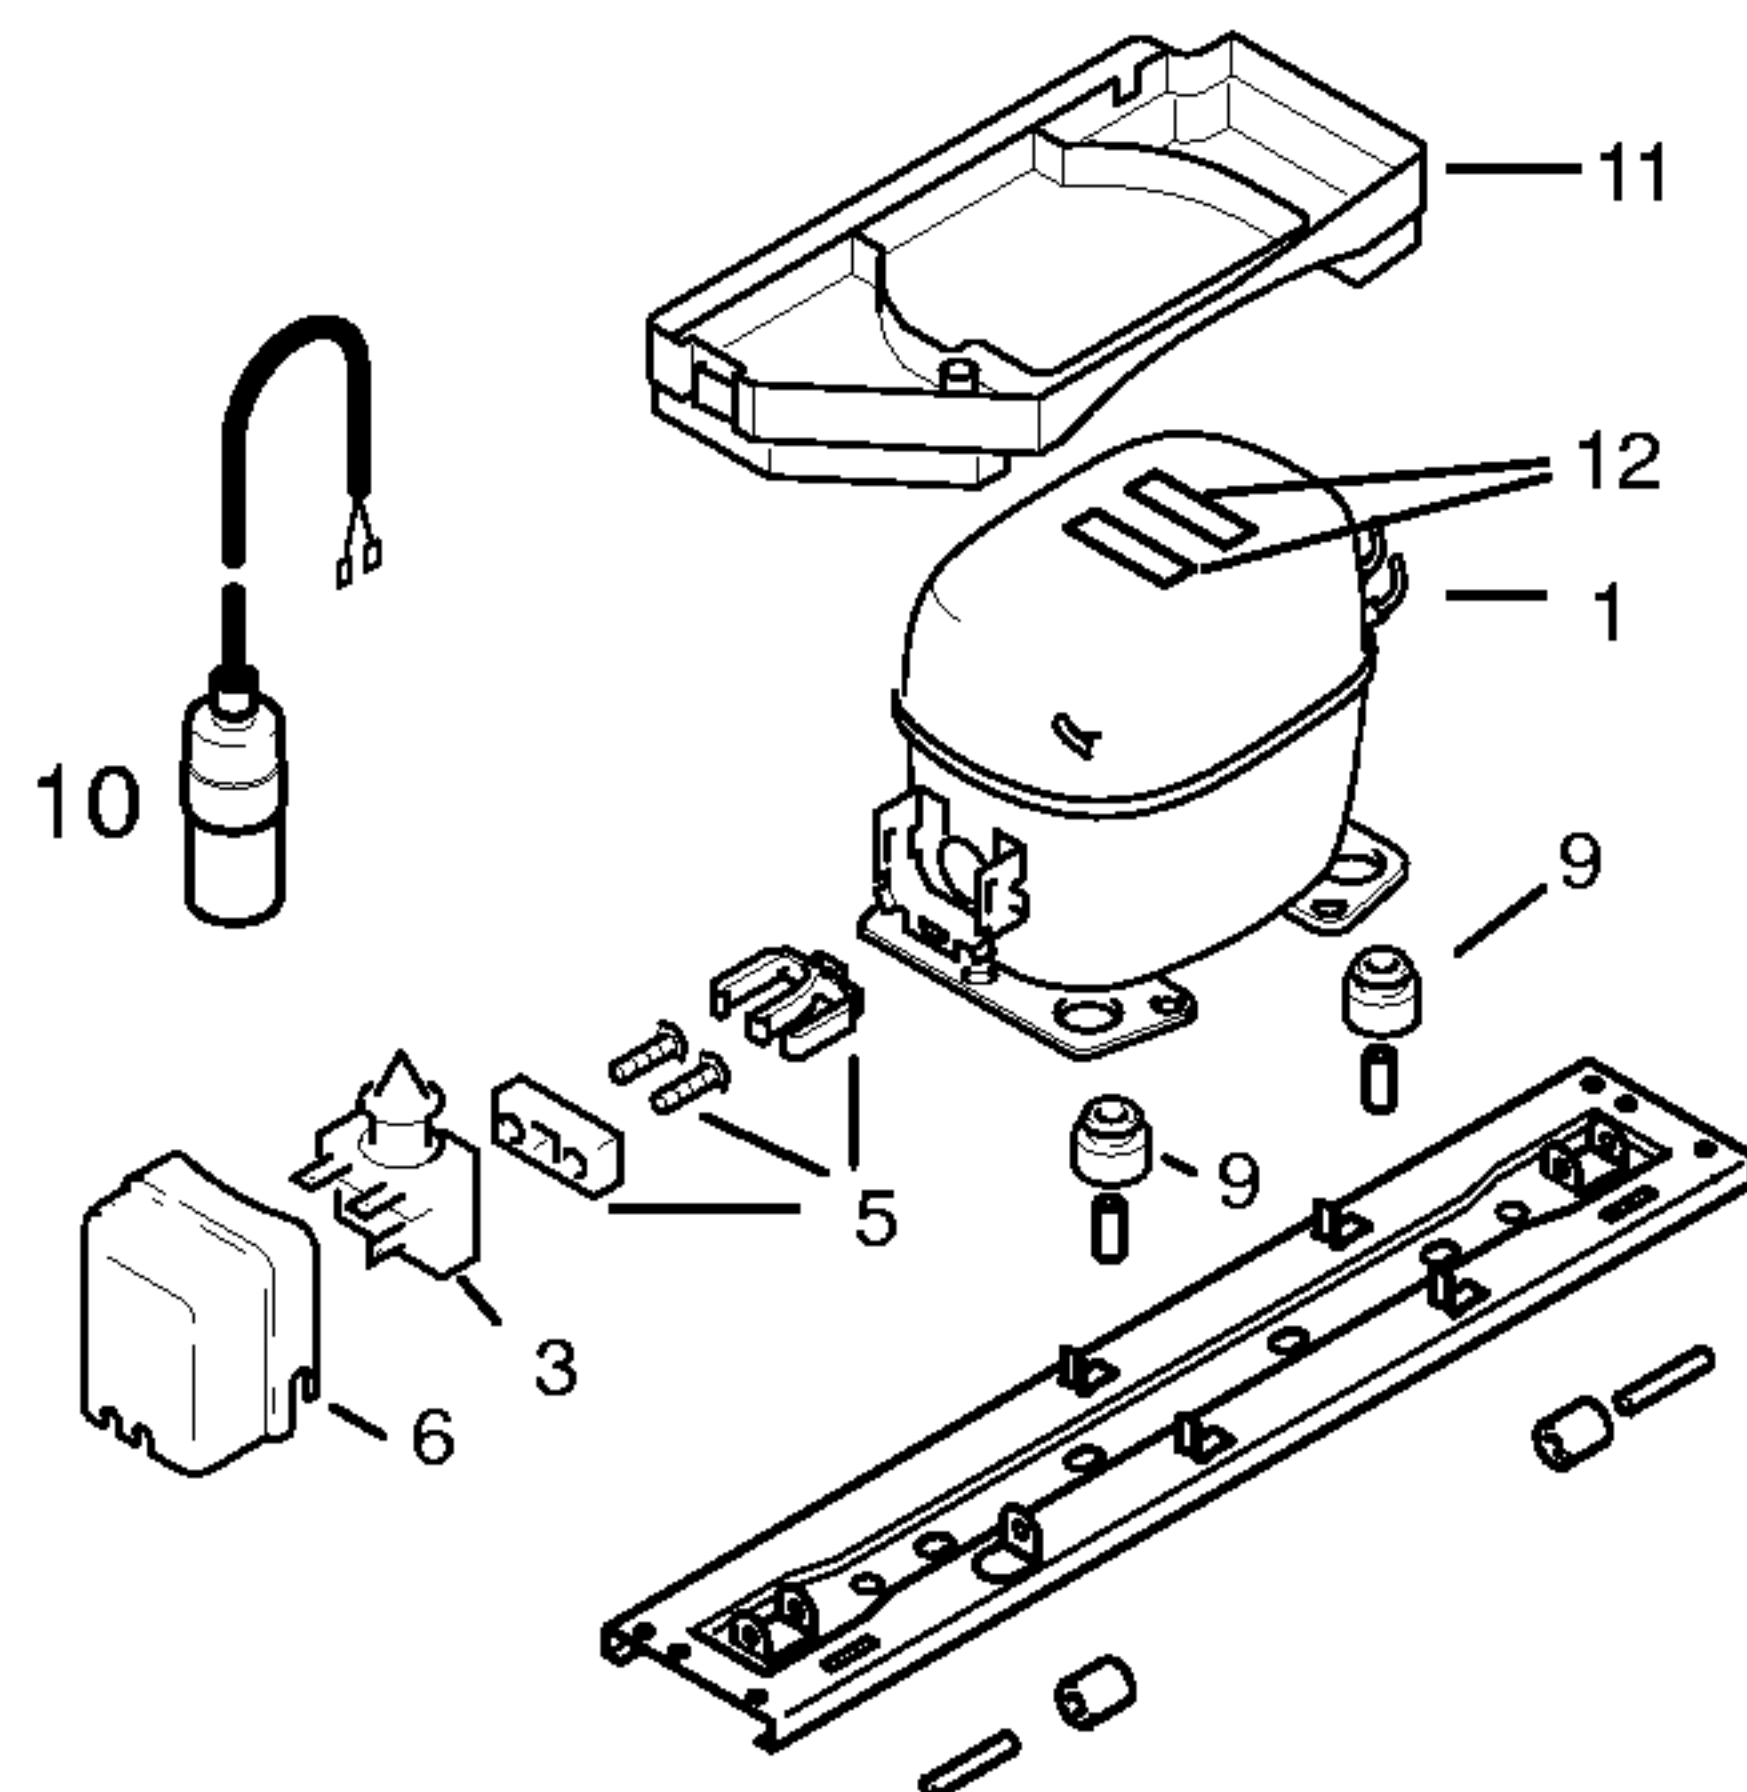
Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
52 3223
(D,GB,F,I,NL)
52 6459
(DK,N,S,SF,E,P)
Montageanleitung
52 2772

Beistellsatz
17 2357

Side by Side
Beistellsatz zu GS
48 1044

Mat. – Nr. – Konstante
3740

Mat. – Nr. – Konstante
3740

Pos.	V01		
	Danfoss		
	TLES 5 K		
1	14 1633		
2			
3	15 1055		
4	15 1053		
5	15 0760		
6	15 1072		
7	16 9319		
8	26 4879		
9	05 0166		
10	16 5852		
11	08 4744		
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		TLES 5 K			
Förderleistung/Delivery/Débit	l/h	914			
Anlaufstrom/Starting current/Cour de démarrage	A	2,9			
Widerstand/Resistance/Résistance	Ha/main/prin	Ω	25,7		
	Hi/aux	Ω	15,7		
Temp.-Regler/Thermostat					
Typ/Type					
Regelstellung/Position					
Schaltwerte/Switching values	"warm"				
Valeurs de commutation	"kalt"				
	"alarm"				
Füllmenge/Fill.quantity/Charge	R600a	*			
Anschlußwert/Conn.load/Puiss. connectée	W	59			
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance	Ω				
	W				
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance	Ω				
NTC-Fühler / Sensor		°C	kΩ	°C	kΩ
		+10	9,95 ±0,18	-18	43,31 ±1,10
		+5	12,70 ±0,18	-22	54,66 ±1,59
		0	16,33 ±0,16	-26	69,42 ±2,29
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance	Ω				
	V				

* siehe Typenschild