


SECTION 5 PARTS LIST

SAFETY PRECAUTION

Parts identified by the  symbol are critical for safety. Replace only with specified part numbers.

5.1 PACKING AND ACCESSORY ASSEMBLY <M1>


The instruction manual to be provided with this product will differ according to the destination.

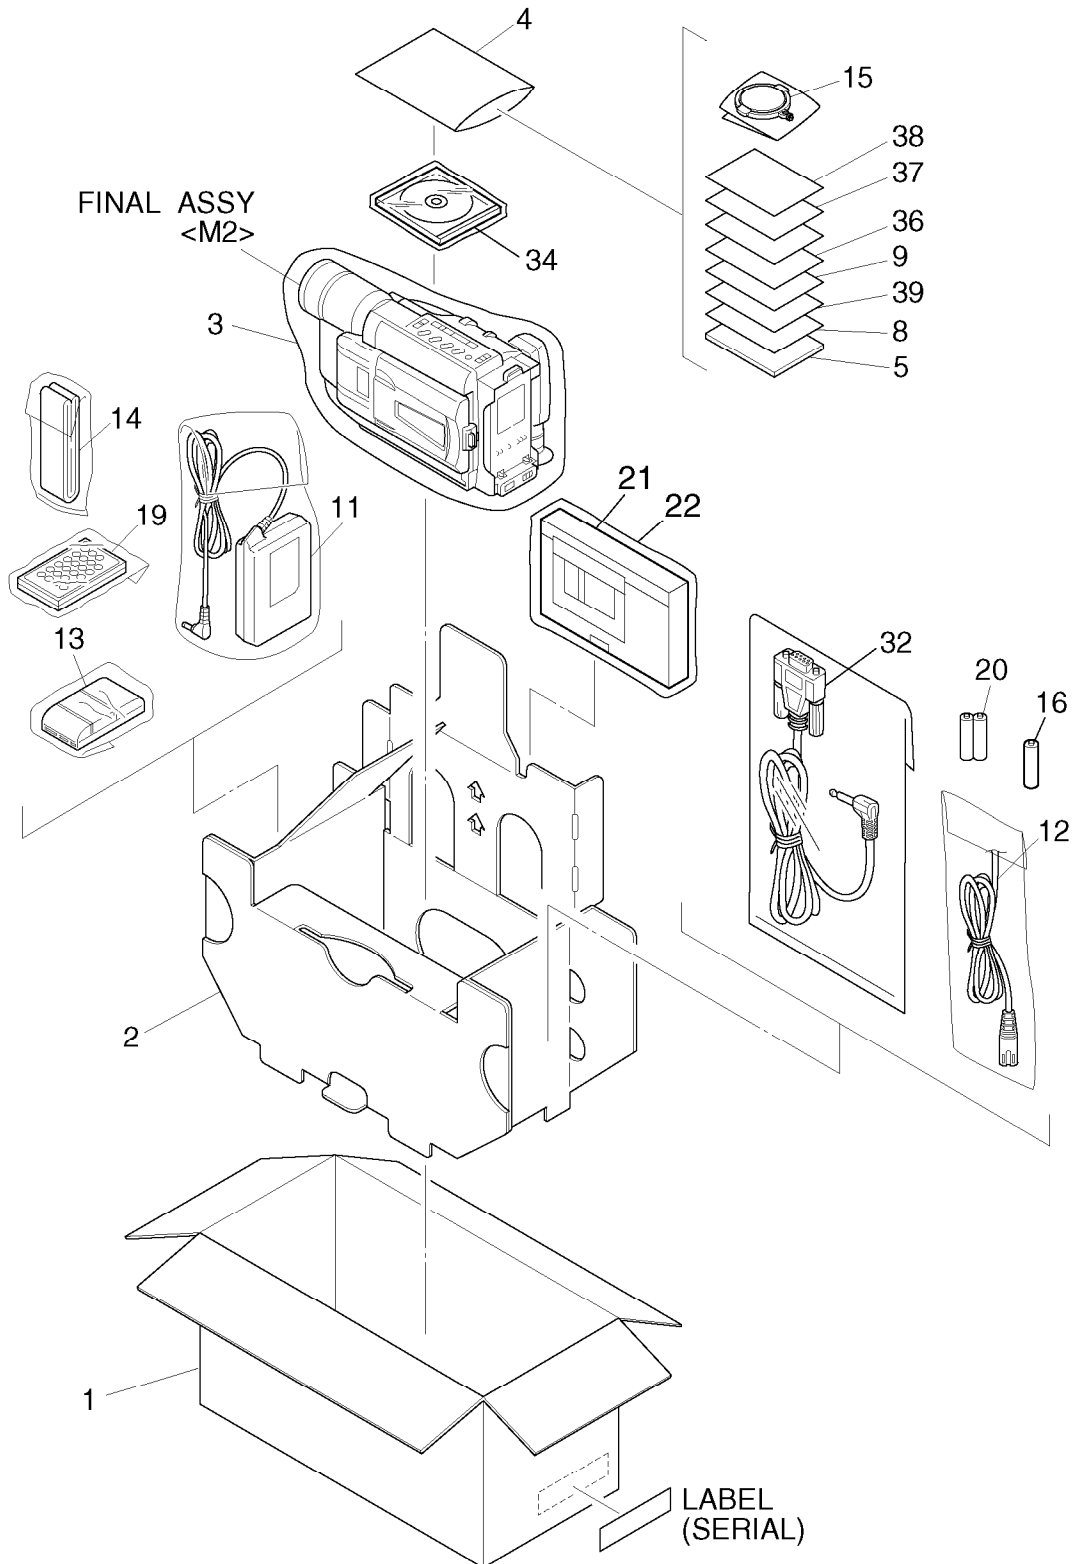

This exploded view diagram illustrates the assembly of a video camera, organized into three main functional sections:


- Top Section (Main Body and Mounting):** Shows the main camera body (110) with its handle (110B) and various mounting brackets (111, 112, 113, 114, 115, 116, 117, 118). It includes an **ELECTRONIC VIEWFINDER <M4>** (148) and a **MAIN <01>** mounting plate (144). The viewfinder is connected via a cable (nn) to the main body. The main plate (144) features a central sensor area (r) and various mounting points (bb, gg, ff, ss, hh, jj, dd, ee, cc, aa, nn, ff, z, s, n, w, x, y).
- Bottom Left Section (Optical Block Section):** Details the internal optical components, including the lens assembly (251) with lens elements (251A, 251B, 251C, 251D), the CCD sensor (257) labeled **CCD <02>**, and the associated mounting brackets (252, 253, 254, 255, 256).
- Bottom Right Section (Lens and Mounting):** Shows the external lens assembly (135) with lens elements (135A, 135B, 135C, 135D, 135E, 135F, 135G, 135H, 135J, 135K) and the mounting brackets (136, 137, 138, 139) that secure the lens to the main body.

The diagram uses dashed lines to indicate the assembly path and alignment of the various parts, ensuring precise fit and function of the camera components.

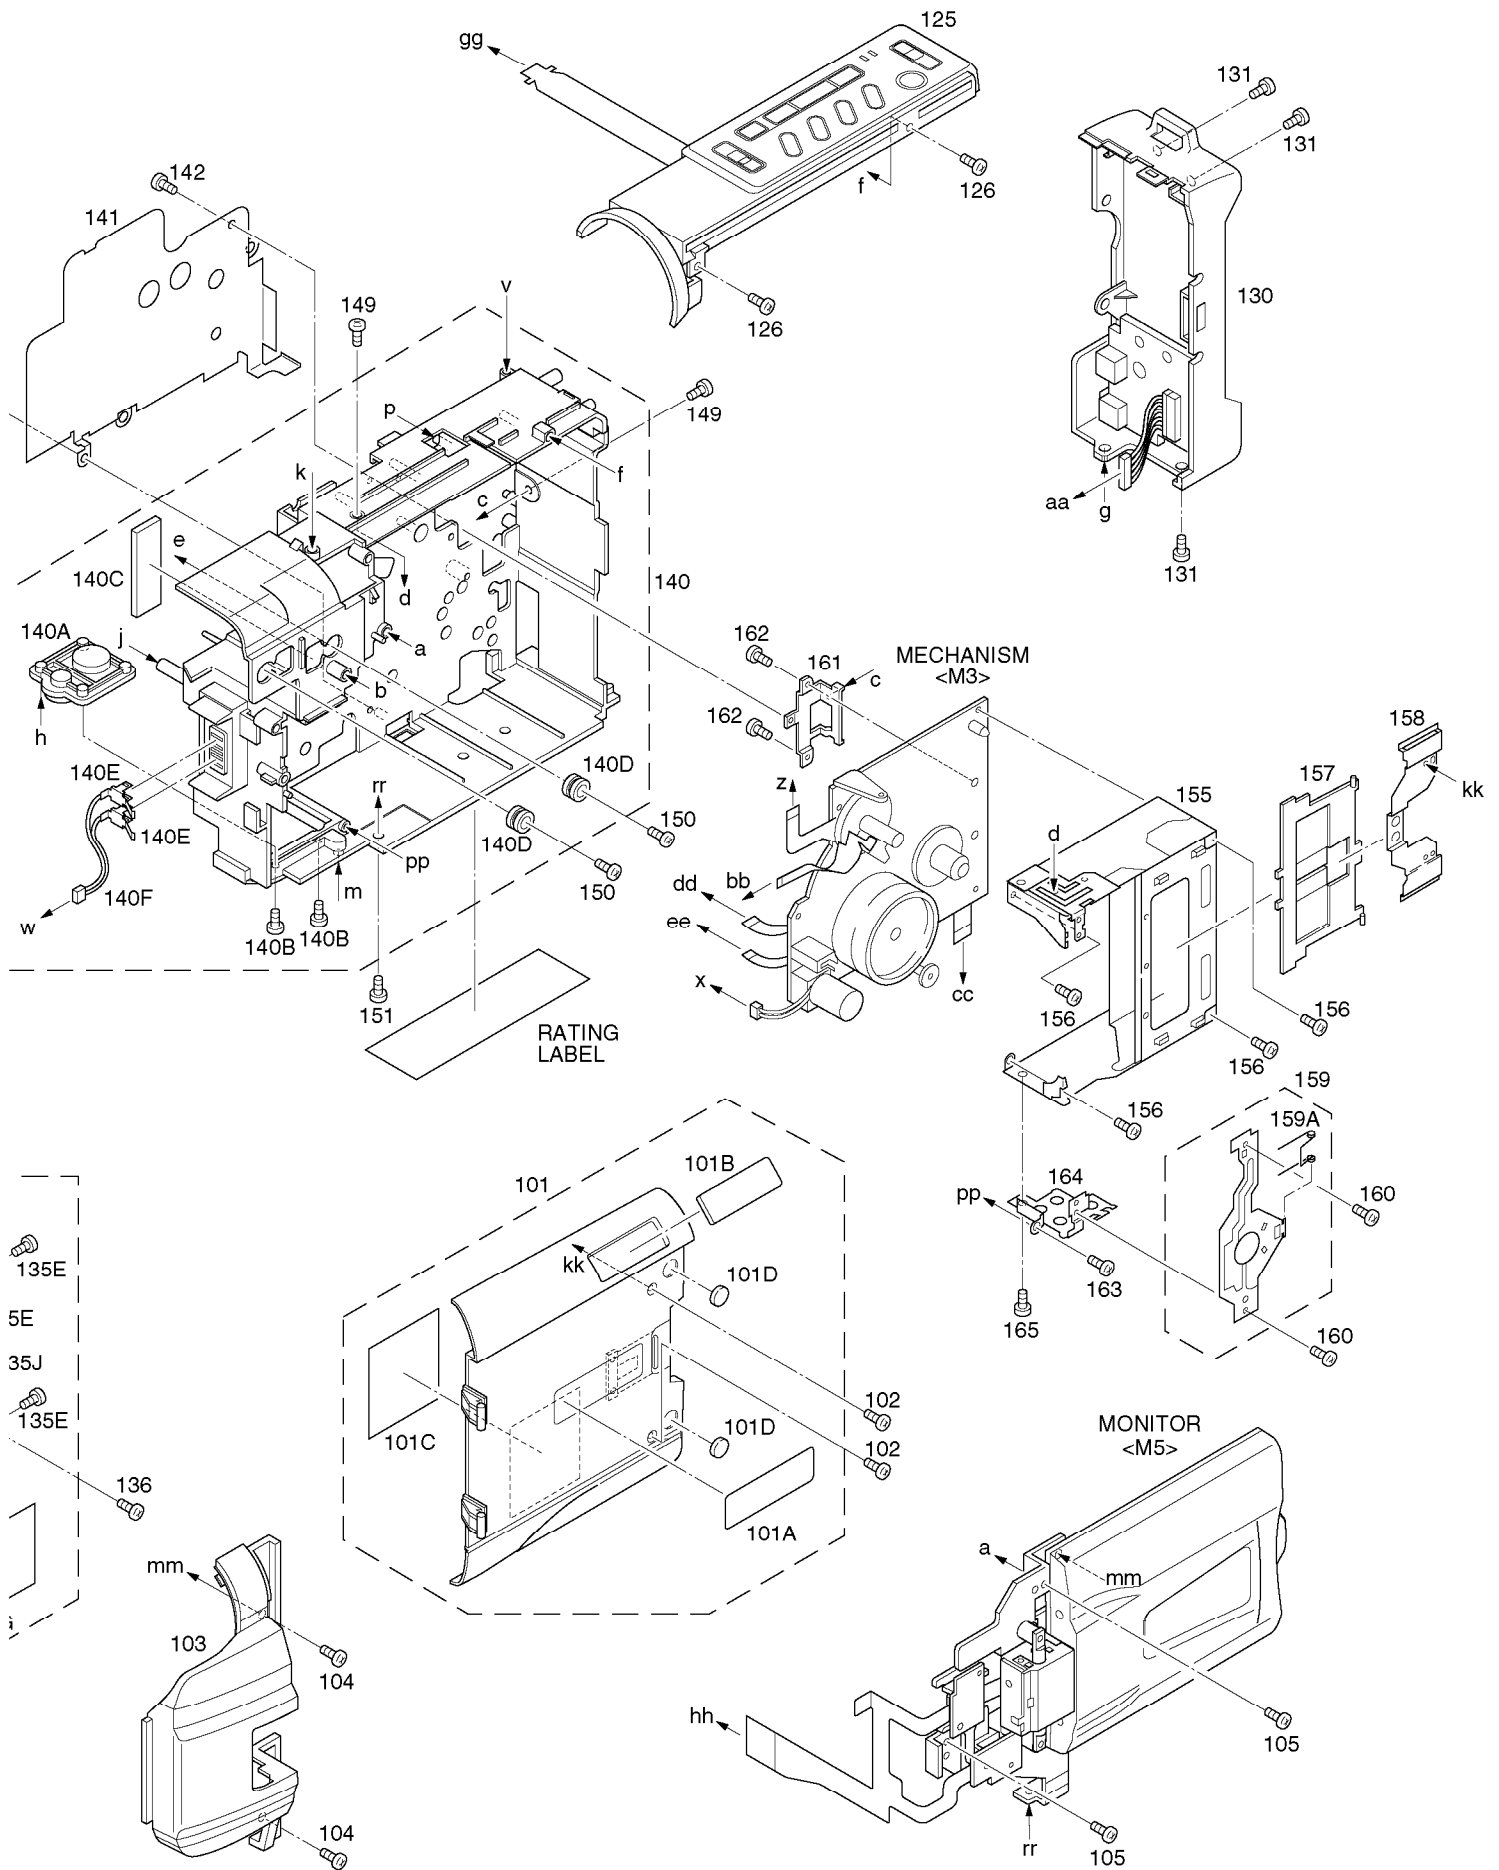

5.3 MONITOR ASSEMBLY <M5> [GR-SXM757UM/UB]

500

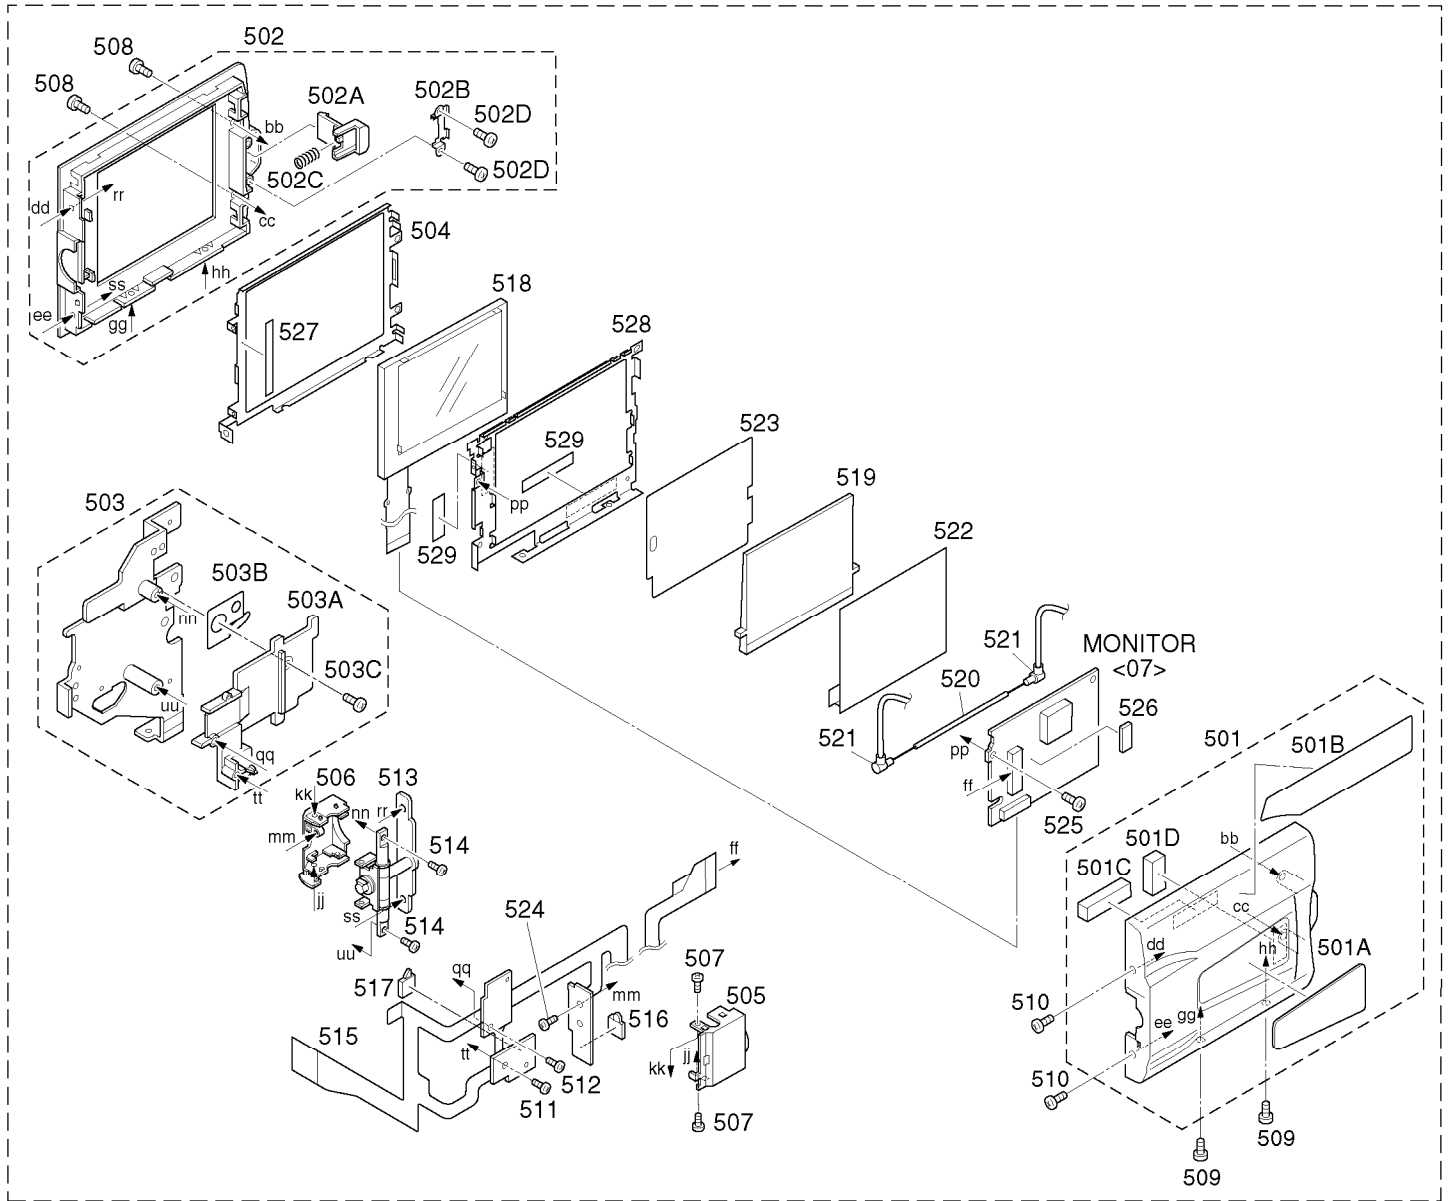

△ REF No. PART No. PART NAME, DESCRIPTION

MONITOR ASSEMBLY <M5>

△ 500	LY20836-010A	MONITOR ASSY
△ 501	LY20834-007A	MONITOR COVER ASSY
501A	LY32329-002A	PLATE(WINDOW)
501B	LY32554-003A	STICKER(B)
501C	LY30029-0R3A	SPACER(A)
501D	LY30029-0R4A	SPACER(A)
502	LY32035-001A	MONITOR CASE(3)ASSY
502A	LY31954-001A	KNOB(LOCK)
502B	LY42760-001A	BRACKET(LOCK)
502C	LY30002-043A	COMPRESSION SPRING
502D	LY30018-063A	SPECIAL SCREW,X2
503	LY32034-003A	BRACKET(UPPER)ASSY
503A	LY20652-003A	HOLDER
503B	LY42761-001A	EARTH PLATE
503C	QYSLSP2025D	SCREW
504	LY32332-001A	SHIELD CASE(3)
505	LY31939-001A	HINGE COVER(UPPER)
506	LY31940-001A	HINGE COVER(LOWER)
507	LY30018-0C9A	SPECIAL SCREW,X2

△ REF No. PART No. PART NAME, DESCRIPTION

508	LY30018-052A	SPECIAL SCREW,X2
509	LY30018-0C9A	SPECIAL SCREW,X2
510	LY30018-0C5A	SPECIAL SCREW,X2
511	QYSLSF2040D	SCREW
512	QYSLSP2070D	SCREW
513	LY31957-001A	HINGE ASSY
514	LY30018-090A	SPECIAL SCREW,X2
515	QAL0391-001	FPC
516	NSW0095-001X	DETECT SWITCH,REVERSE
517	NSW0105-001X	DETECT SWITCH,OPEN
518	QLD0213-001	LCD MODULE
519	LY43391-001A	LIGHT SCREEN
520	QLL0111-001	LAMP
521	LY43394-001A	HOLDER,X2
522	LY43395-001A	SHEET
523	LY43363-001A	DIFFUSION SHEET(3)
524	LY30018-063A	SPECIAL SCREW
525	LY30018-0C9A	SPECIAL SCREW
526	LY30016-049A	SPACER-A
527	LY30029-0R6A	SPACER(A)
528	LY32333-001A	LCD FRAME(3)
529	LY30029-0R5A	SPACER(A),X2