


7.Exploded Views and Parts List


7-1 Cassette Deck Exploded View and Parts List

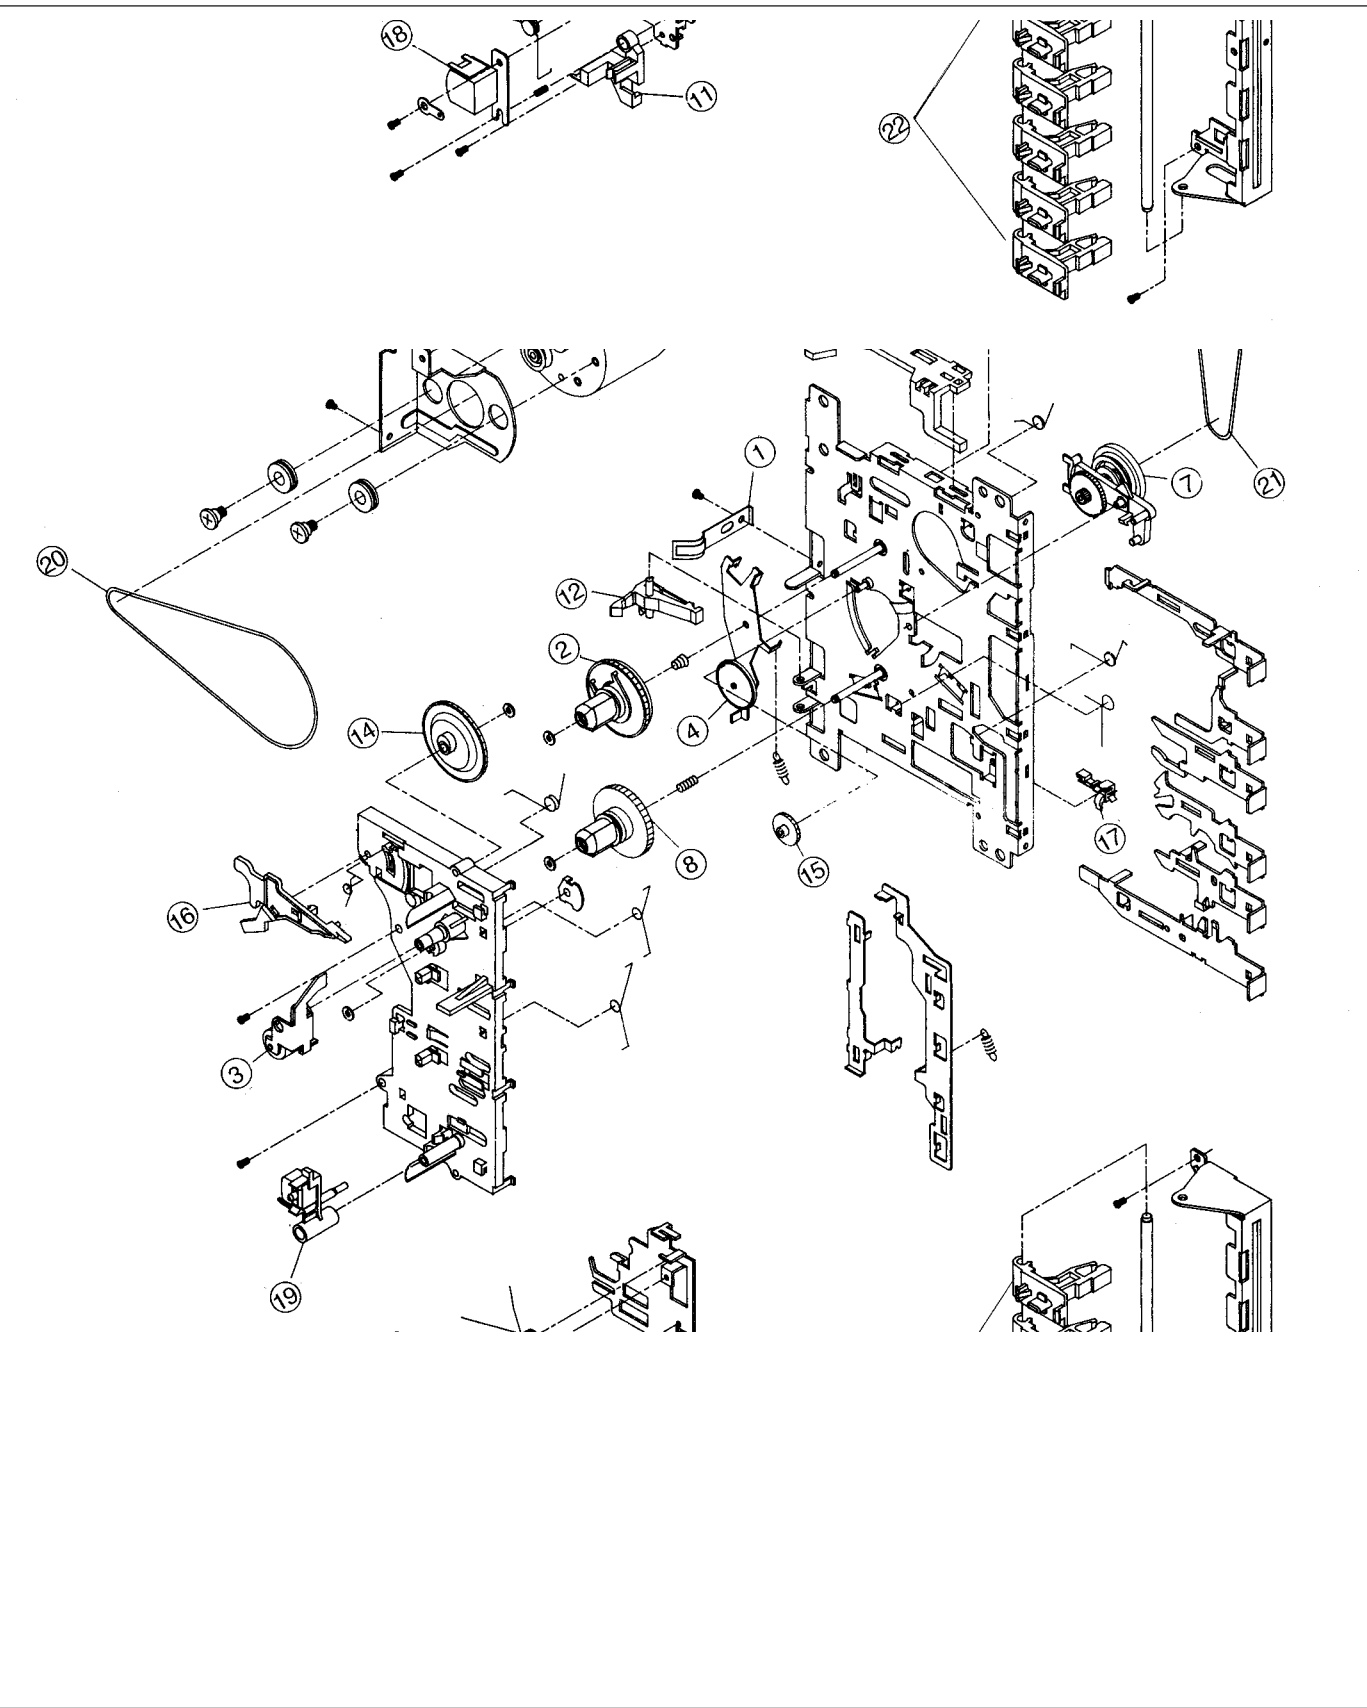

No.	Code No.	Description	Specification	Remarks
	AH59-20003T	DECK-CASSETTE	ADR2083FRU	
1	AH81-10026C	PACK-SPRING	51299-02506XC	
2	AH81-10025B	TAKE UP REEL ASS'Y	ADR28-010	
3	AH81-10025D	PINCH ARM ASS'Y	ADR26-001	
4	AH81-10025E	IDLER ARM ASS'Y	ADR02-042	
5	AH81-10025F	FLYWHEEL GEAR S ASS'Y	ADR15-021	
6	AH81-10688A	MOTOR	EG530AD 2B	
7	AH81-10025J	F.R ARM ASS'Y	ADR22-012	
8	AH81-10025K	SUPPLY REEL GEAR ASS'Y	11128-00045AA	
9	AH81-10025S	PAUSE CAP	11116-00011AA	
10	AH81-10025M	PAUSE LOCK CAM	11116-00011AA	
11	AH81-10025P	HEAD BASE M	11105-00031AA	
12	AH81-10026B	REC SAFETY LEVER	11134-01000AA	
13	AH81-10026M	EJECT LEVER F	11134-01220AA	
14	AH81-10026Q	CAM GEAR	11128-00393AA	
15	AH81-10025R	F.F GEAR	11128-00055AA	
16	AH81-10025T	SENSOR ARM	11102-00530AA	
17	AH81-10026T	LEAF SW(MAIN)	MSW1541 X ACV	
18	AH81-10022E	R/P HEAD	MS15RA-A2N1	
19	AH81-10022T	E-HEAD	PHK380-MS16A	
20	AH81-10026V	BELT(MAIN)	Ø45.5 X T1.0	
21	AH81-10026H	BELT(SUB)	Ø34.7 PI X T1.0	
22	AH81-10025U	BUTTON KNOB	11133-00010AA	

7-2 Main Exploded View and Parts List

7-2-1 Exploded View

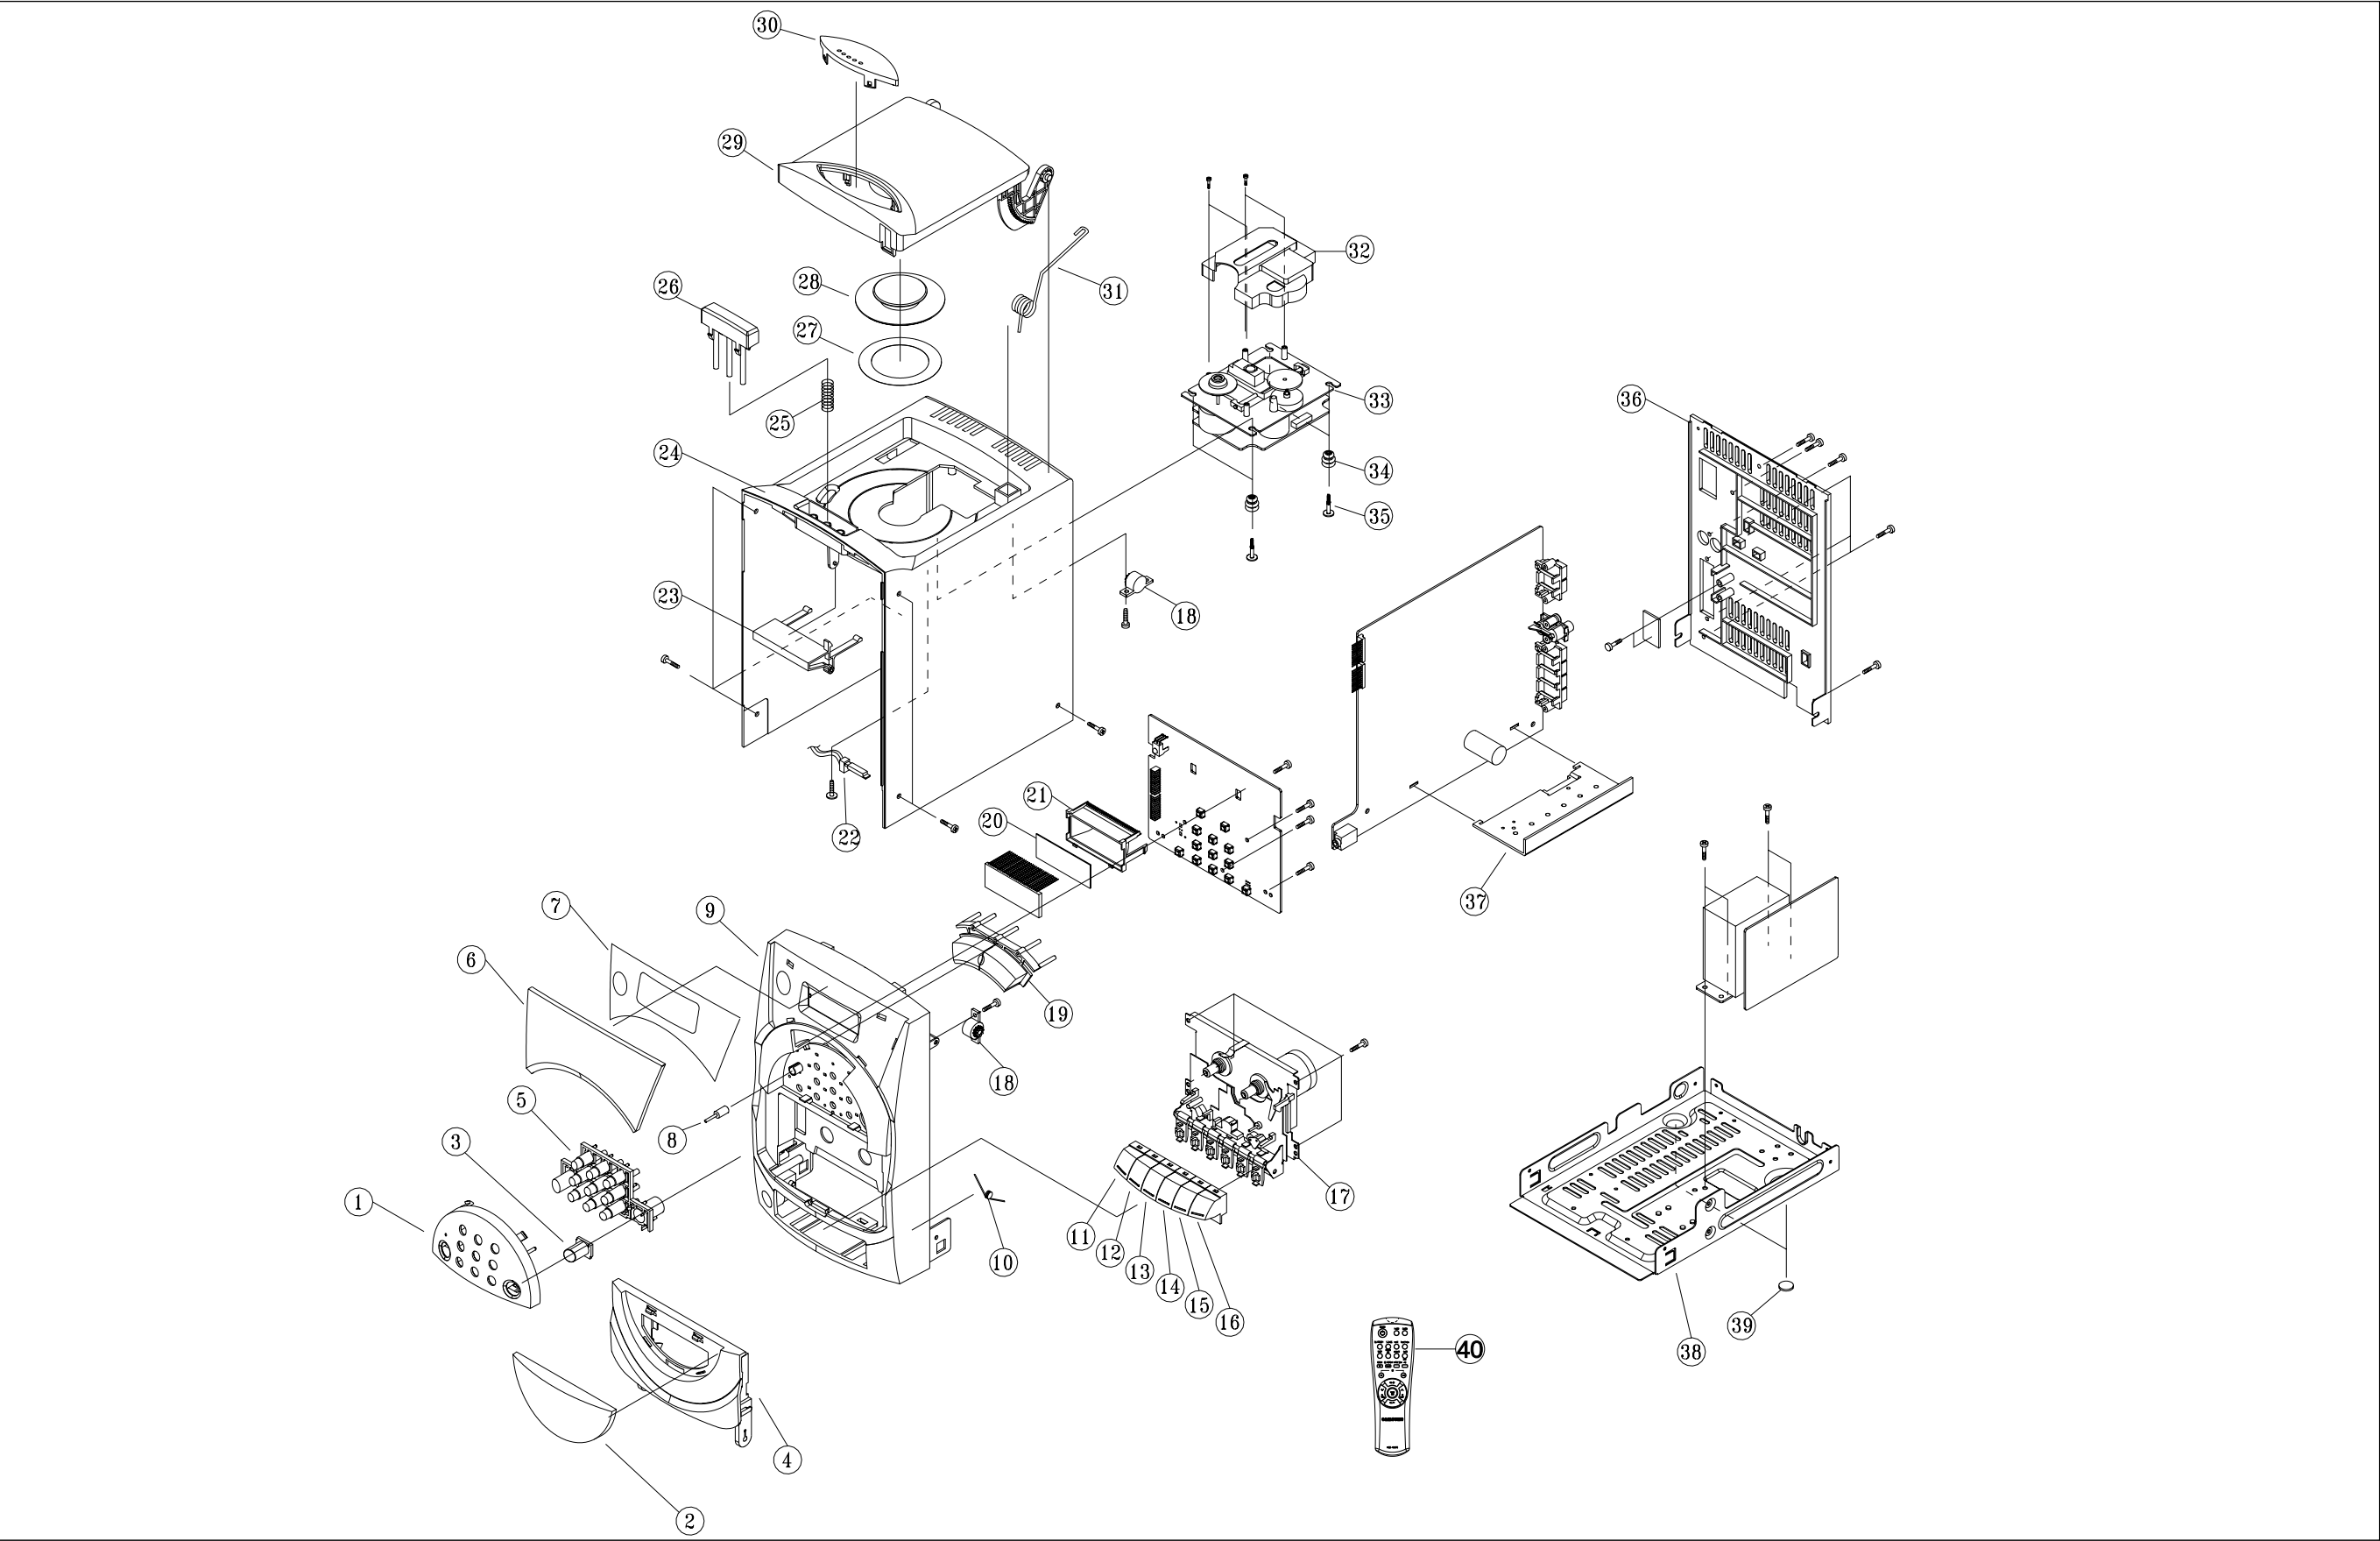


7-2-2 Parts List

No.	Code No.	Description	Specification	Remarks
1	AH64-42012C	DECORATION-FRONT	-,HIPS,94HB,T2.5,BLK,-	
2	AH64-42011B	WINDOW=DOOR	-,PMMA,-,T2.5,SMOGE	
3	AH67-12001B	LENS-3S	-,PMMA,-,-,CLEAR,MM18	
4	AH64-52003B	DOOR-CASSETTE	-,ABS,94HB,T3.0,-	
5	AH64-11271A	KNOB-POWER	-,ABS,94HB,BLK,-,MM-17	
6	AH64-42010A	WINDOW-TUNER	-,PMMA,-,T2.5,SMOGE	
7	AH68-52034A	LABEL-STICKER	MM17,TOYO TAPE,-,-,-,-	
8	AH67-12002A	LENS-POWER	-,PMMA,-,-,CLEAR,MM17	
9	AH64-32002B	CABINET-FRONT	-,HIPS,94HB,T3,-,BLK	
10	AH61-60129B	SPRING-EJECT	SUS,PI1.0,-,-,MAX-345	
11	AH64-11273A	KNOB-DECK	-,ABS,94HB,BLK,-,MM-17	
12	AH64-11274A	KNOB-DECK,PLAY	-,ABS,94HB,BLK,-,MM-17	
13	AH64-11275A	KNOB-DECK,FF	-,ABS,94HB,BLK,-,MM-17	
14	AH64-11276A	KNOB-DECK,REW	-,ABS,94HB,BLK,-,MM-17	
15	AH64-11277A	KNOB-DECK,STOP	-,ABS,94HB,BLK,-,MM-17	
16	AH64-11278A	KNOB-DECK,PAUSE	-,ABS,94HB,BLK,-,MM-17	
17	AH59-20003T	DECK-CASSETTE	ADR2083FRU,CASSETTE,	
18	AH61-80030A	DAMPER-ASSY	-,POM,M0.8,G130,BLK,-,MAX-630	
19	AH64-11272A	KNOB-VOLUME	-,BS,94HB,BLK,MM-17	
20	AH67-40034A	FILTER-LCD	-,PC,T0.5,-,-,-,-,MM17	
21	AH61-22004A	HOLDER-LCD	-,ABS,94HB,BLK,-,MM17	
22	3409-000107	SWITCH-LEAF	16V,30mA,10gf,SPST	
23	AH66-30085A	LEVER-EJECT	-,PMMA,T2.5,L50,-,MM16	
24	AH64-32005B	CABINET-TOP	-,HIPS,94HB,T3,-,BLK	
25	AH61-62008A	SPRING-KNOB CD	-,SUS304,PI0.5,OD8.5	
26	AH64-11270A	KNOB-CD EJECT	-,ABS,94HB,BLK,-,MM27	
27	AH63-70025B	SHEET-CHUCK	HYMERON,T0.3,L50,W68,BLK	
28	16603-511-840	CHUCK-PLATE	ABS+GF BLK NEW	
29	AH64-52001D	DOOR-CD	-,ABS,94HB,T3.0,-,BLK	
30	AH64-42009A	WINDOW-CD	-,PMMA,-,T2.5,SMOGE,-,MM27	
31	AH61-62007A	SPRING-CD DOOR	-,SUS27,PI1.3,OD10,-	
32	AH61-20258C	CAP-P/U	ABS,-,BLK	
33	AJ59-20003E	DECK-CDP	CMS-P30AM6	
34	AH73-10012A	RUBBER-CD	SI RUBBER,-,CMS-M5M6C,BLU	
35	AH61-50182D	SHAFT-CD	-,MSWR,2.6,10.5,COATING,WHT	
36	AH64-32004F	CABINET-REAR	-,HIPS,94HB,T3,-,BLK	
37	AH62-32004A	HEAT-SINK	-,AL,-,t2.0,-,-,-,MM17	
38	AH64-32006A	CABINET-BOTTOM	-,SECC,-,T1.0,-,-,-,MM27	
39	AH73-10009A	RUBBER(FOOT)	URETAN,T1.5 PI8,MY-CD25	
40	AH59-10124D	REMOCON-ASSY	BU2478-2Z,22,MM-18	
	AH63-30244D	COVER-HIDDEN	-,ABS 94HB,-,2,BLK,AR4022	

7-3 CD Deck Exploded View and Parts List

7-3-1 Exploded View

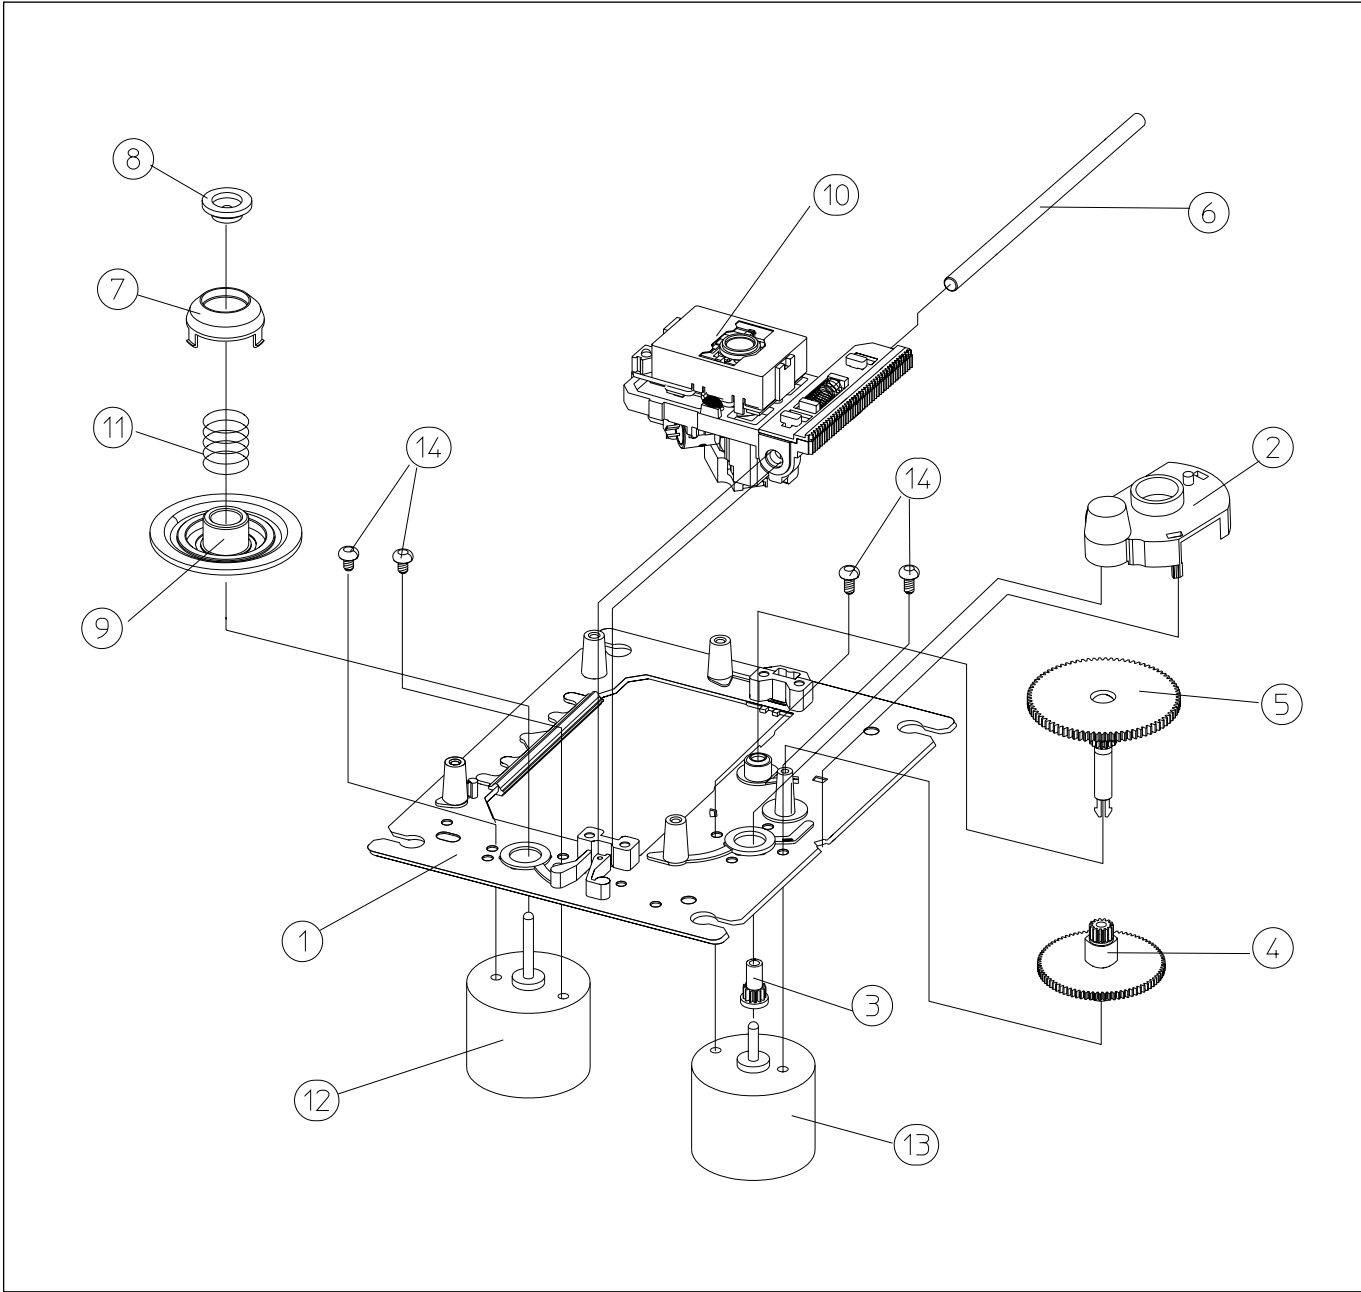


7-3-2 Parts List

No.	Code No.	Description	Specification	Remarks
	AJ59-20003F	DECK-CD	CMS-P30NM6	
1	AH61-10022B	CHASSIS-DECK(M)	CMSA30 POM M90-44	
2	AH63-30048A	COVER-GEAR	CMS-V30 BLK ABS	
3	AH66-20016A	GEAR(A)	CMS-V30 M0.3 Z13 SP POM	
4	AH66-20017A	GEAR(B)	CMS-V30 M0.3 Z13 SP POM	
5	AH66-20018A	GEAR(C)	CMS-V30 M0.3 Z16/Z90 SP POM	
6	AH71-50036A	SHAFT-PU	CMS-V30 D3 L79 SUS420J2	
7	15253-503-011	CENTER-RING	ABS+GS 20% CMS-V10N	
8	AH64-10648A	CENTER-KNOB	ABS 94HB	
9	AH66-90029A	TURN-TABLE(M)	---,CMS-V30	
10	AJ30-20001B	PICK-UP CDP	P/U SOH-A1 ROW V-P/J	
11	AH61-60055A	SPRING-T/TABLE	CS STS-W PI0.4 D5.7 L9.3 CMS-V10N	
12	AH31-10009A	MOTOR-SPINDLE	RF-310T-11400 43L 25V 85mA	
13	AH31-10002B	MOTOR-FEED	RF-310ta 30MM NDM4RA3ETL 11.0MM	
14	AH60-10014A	SCREW-PH(+M2*3)	+M2X3 FE FZY W700	

7-4 Speaker System

7-4-1 Exploded View

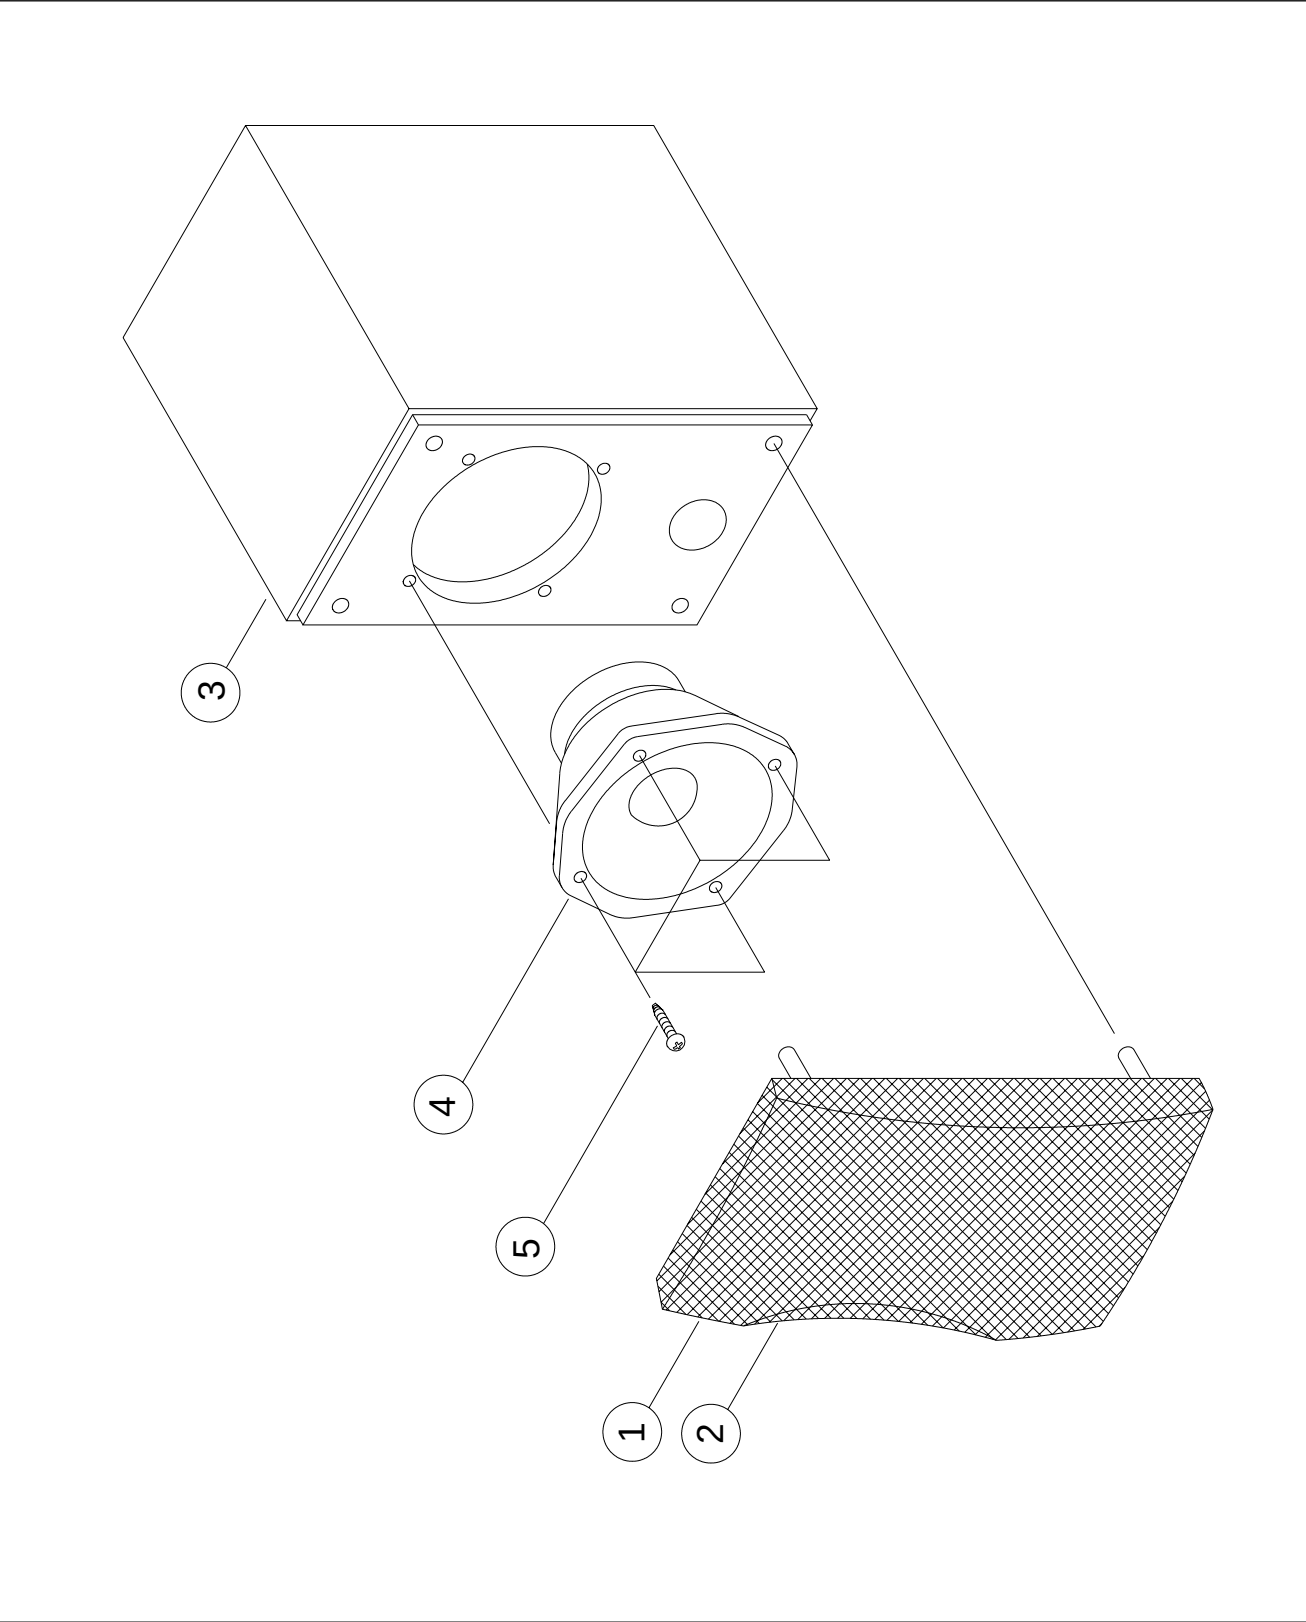

7-4-2 Parts List

No.	Code No.	Description	Specification	Remarks
	AH59-90230A	SPEAKER-SYSTEM	PS17E,MM17,-,-	
1	AH81-11047A	NET L	157 X 247.2 X 38.4t	
2	AH81-11047B	NET R	157 X 247.2 X 38.4t	
3	AH81-11047C	CABINET	W138.5 X H233.5 X D180	
4	AH81-11047D	WOOFER	5` SG12G33AFA	
5	AH81-11047Z	SCREW	M4 X 10 BLACK	