


CABINET AND MECHANICAL PARTS


LC-26GA6E Model

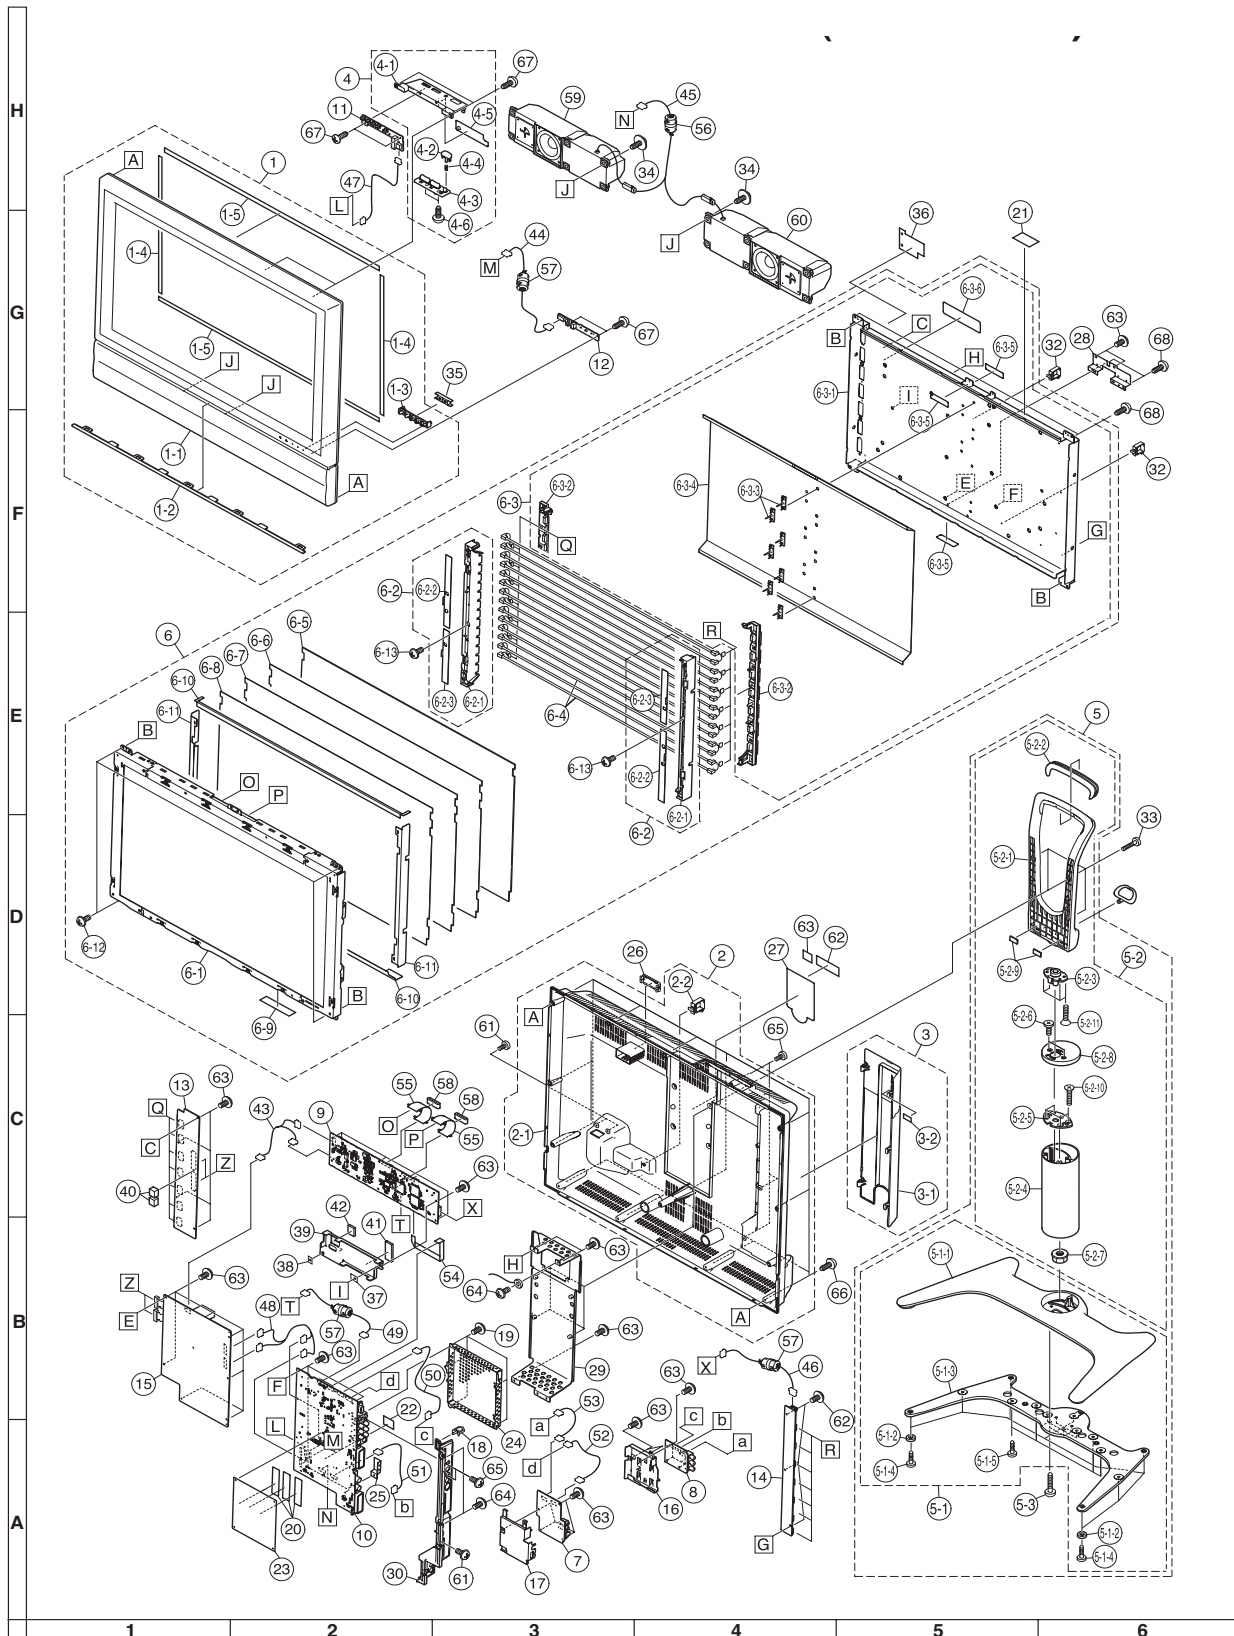

LC-26GA6E / LC-26BV6E CABINET AND MECHANICAL PARTS					
REF No.	PARTS	DESCRIPTION	* SN CODE	EX CODE	
1	CCABAB111WJ01	Front Cabinet Ass'y (LC26GA6E)	S BB	BS	
1	CCABAB111WJ02	Front Cabinet Ass'y (LC26BV6E)	S AY	BN	
1-1	Not Available	Front Cabinet	- -	-	
1-2	GCOVAB066WJKA	SP Decoration Cover	S -	-	
1.3	HDECQA471WJSA	LED Decoration Plate	S -	-	
1-4	PSPAHA323WJZZ	Spacer, x2	S AD	AD	
1-5	PSPAHA324WJZZ	Spacer, x2	S AC	AC	
2	CCABBA648WJ01	Rear Cabinet Ass'y (LC26GA6E)	S AV	BG	
2	CCABBA648WJ02	Rear Cabinet Ass'y (LC26BV6E)	S AZ	BP	
2-1	Not Available	Rear Cabinet	- -	-	
2-2	LHLDWA055WJKZ	Wire Holder AC CODE	S AC	AC	
3	CCOVAB065WJ01	Terminal Cover Ass'y (LC26GA6E)	S AE	AP	
3	CCOVAB065WJ02	Terminal Cover Ass'y (LC26BV6E)	S AK	AW	
3-1	Not Available	Terminal Cover	- -	-	
3-2	PSPAHA413WJZZ	Spacer	S -	-	
4	CCOVAB077WJ01	Top Cover Ass'y (LC26GA6E)	S AE	AN	
4	CCOVAB077WJ02	Top Cover Ass'y (LC26BV6E)	S AK	AW	
4-1	Not Available	Top Cover	- -	-	
4-2	JBTN-A254WJKB	Power Button (LC26GA6E)	S AG	AG	
	JBTN-A254WJKE	Power Button (LC26BV6E)	S --	--	
4-3	JBTN-A404WJKA	Control Button (LC26GA6E)	S -	-	
	JBTN-A404WJKE	Control Button (LC26BV6E)	S --	--	
4-4	MSPRCA015WJFW	Spring	S AB	AB	
4-5	PZETKA119WJZZ	Barrier-Sheet	S -	-	
4-6	XEBSN30P08000	Screw, x2	S AA	AA	
5	CDAl-A146WEV2	Stand Ass'y (LC26GA6E)	S -	-	
5	CDAl-A146WEV4	Stand Ass'y Black (LC26BV6E)	S -	-	
5-1	CDAl-A146WJ04	Stand Base Ass'y (LC26GA6E)	S AX	BL	
5-1	CDAl-A146WJ06	Stand Base Ass'y Black (LC26BV6E)	S AX	BL	
5-1-1	Not Available	Stand Base	- -	-	
5-1-2	GLEGPA028WJZZ	Leg Cushion, x7	S AC	AC	
5-1-3	LANGKA234WJSA	Base Angle	S BD	BD	
5-1-4	XEBS940P12000	Screw, x2 LEG_TOP	S AB	AB	
5-1-5	XEBS940P14000	Screw, x11 LEG	S AB	AB	
5-2	CHNDPA014WJ07	Stand Handle Ass'y (LC26GA6E)	S AW	BH	
5-2	CHNDPA014WJ09	Stand Handle Ass'y Black (LC26BV6E)	S AW	BH	
5-2-1	Not Available	Stand Handle	- -	-	
5-2-2	GCOVAA713WJSA	Grip	S AH	AH	
5-2-3	GCOVAB019WJKD	Swivel Cover (LC26GA6E)	S -	-	
5-2-3	GCOVAB019WJKE	Swivel Cover (LC26BV6E)	S -	-	
5-2-4	GDAI-A157WJSB	Stand Support (LC26GA6E)	S -	-	
5-2-4	GDAI-A157WJSC	Stand Support (LC26BV6E)	S -	-	
5-2-5	LANGKA363WJF7	Swivel Base	S -	-	
5-2-6	LX-BZA019WJFN	Screw, x2 SVL_COV YO	S AB	AB	
5-2-7	LX-NZA001WJFN	Nut	S AD	AD	
5-2-8	MHNG-A083WJ01	Hinge	S -	-	
5-2-9	PSPAZA083WJZZ	Cushion, x2	S AB	AB	
5-2-10	XCSSN50P25000	Screw, x4 For Support	S AB	AB	
5-2-11	XUSSN40P25000	Screw, x4 HDL-SVL_BASE	S -	-	
5-3	XCBS950P25000	Screw, x4 SUPPRT/BASE-ANG	S AC	AC	
6	Not Available	26" LCD Panel Unit Ass'y	- -	-	
6-1	RLCDDTA054WJZZ	26" LCD Panel Unit	J DQ	DQ	
6-2	CHLDZA443WJ01	Lamp Holder Ass'y (Top), x2	J AQ	AQ	
6-2-1	Not Available	Lamp Holder (Top), x2	- -	-	
6-2-2	PSPAQA053WJZZ	Spacer, x2 Cover-A	J AE	AE	
6-2-3	PSPAQA054WJZZ	Spacer, x2 Cover-B	J AE	AE	
6-3	CSLDMA764WJ01	Back Light Shield Ass'y	J BP	BP	
6-3-1	Not Available	Back Light Shield	- -	-	
6-3-2	LHLDZA444WJKZ	Lamp Holder (Bottom), x2	J AL	AL	
6-3-3	LHLDZA576WJKZ	Lamp Clip, x7	J AC	AC	
6-3-4	PMIR-A084WJZZ	Mirror Sheet	J AT	AT	
6-3-5	PSPAZA561WJZZ	Spacer, x3	J AB	AB	
6-3-6	TCAUZA031WJZZ	Back Light Caution	J AB	AB	
6-4	KLMP-A078WJZZ	Lamp	J AY	AY	

REF No.	PARTS	DESCRIPTION	* SN CODE	EX CODE	
6-5	PCOVUA068WJZZ	Diffusion Panel	J AZ	AZ	
6-6	PSHEPA165WJZZ	Prism Sheet	J BH	BH	
6-7	PSHEPA360WJZZ	Prism Gurd Sheet	J AU	AU	
6-8	PSHEPA391WJZZ	Diffusion Sheet	J AT	AT	
6-9	PSPAHA466WJZZ	Spacer EDGE-PROTECT	J AB	AB	
6-10	PSPAZA783WJZZ	Spacer, x2	J AH	AH	
6-11	PSPAZA784WJZZ	Spacer, x2	J AG	AG	
6-12	XBBS740P08000	Screw, x4	J AA	AA	
6-13	XBPS730P08JS0	Screw, x2	J AB	AB	
7	DUNTKD322DE02	HDMI Unit	- --	--	
8	DUNTKD323DE02	COMPONENT Unit	- --	--	
9	DUNTKC919DE05	LCD CONTROL Unit	J --	--	
10	DUNTKD334WE02	MAIN Unit	S --	--	
11	DUNTKD335WE02	OPERATION Unit	S --	--	
12	DUNTKD336WE02	R/C, LED Unit	S --	--	
13	RUNTKA094WJZZ	INVERTER Unit	S AZ	BN	
14	RUNTKA095WJZZ	INVERTER GND Unit	S AM	AY	
15	RDENCA134WJZZ	POWER Unit	S BG	BY	
16	PSLDMA767WJFW	HDMI Shield (Top)	J AE	AE	
17	PSLDMA768WJFW	Bottom Shield	J AD	AD	
18	LHLDWA048WJKZ	Wire Holder, x2 FOR MAIN, INV-EAR	S AB	AB	
19	LX-BZ3370CEF7	Screw, x5	S -	-	
20	PMLT-A179WJZZ	Gasket, x3 MAIN GASKET	S -	-	
21	PMLT-A193WJZZ	Absorber Tuner_ANG S4	S -	-	
22	PRDARA173WJFW	Heat Sink	S -	-	
23	PSLDMA538WJFW	Shield	S -	-	
24	PSLDMA568WJFW	Shield	S -	-	
25	QEARPA149WJFW	Tuner Earth Angle	S -	-	
26	GCOVAB018WJKB	BUS Connector Cover (LC26GA6E)	S AB	AE	
26	GCOVAB018WJKE	BUS Connector Cover (LC26BV6E)	S AC	AH	
27	HINDPB338WJSA	Model Label (LC-26GA6E/K/F)	S -	-	
27	HINDPB339WJSA	Model Label (LC-26GA6I)	S -	-	
27	HINDPB477WJSA	Model Label (LC-26GA6R)	S -	-	
27	HINDPB414WJSA	Model Label (LC26BV6E)	S -	-	
28	LANGKA259WJFW	Fixing Metal	S AG	AG	
29	LANGTA146WJFW	Fixing Metal	S -	-	
30	LCHSMA226WJKA	Chassis Frame (LC26GA6E)	S -	-	
30	LCHSMA226WJKB	Chassis Frame (LC26BV6E)	S -	-	
31	LHLDW1046CEZZ	Wire Holder MAINTOMOJIME	S AA	AA	
32	LHLDW1173CEZZ	Wire Holder FOR BACKSHLD	S AD	AD	
33	LX-BZ3442CEF9	Screw, x4 Stand YO	S AB	AB	
34	LX-HZA003WJFN	Screw, x2 FOR SP Box	S AC	AC	
35	PCOVUA057WJZZ	LED Shading Cover	S -	-	
36	PFLT-A051WJZZ	Felt LCD_DODENFU	S -	-	
37	PFLT-A052WJZZ	Felt LCD_DODENFU_L	S -	-	
38	PFLT-A053WJZZ	Felt LCD_DODENFU_R	S -	-	
39	PRDARA187WJFW	Heat Sink IC4501/601/901	S -	-	
40	PSPAGA243WJZZ	Spacer, x2 INV Cushion	S -	-	
41	PSPAZA567WJKZ	Spacer HONETSU_45/601	S AK	AK	
42	PSPAZA568WJKZ	Spacer HONETSU_4901	S AG	AG	
43	QCNW-D041WJQZ	Connecting Cord PO/BL	S -	-	
44	QCNW-D042WJQZ	Connecting Cord RA	S -	-	
45	QCNW-D043WJQZ	Connecting Cord SP	S -	-	
46	QCNW-D045WJQZ	Connecting Cord GV	S -	-	
47	QCNW-D046WJQZ	Connecting Cord KE	S -	-	
48	QCNW-D047WJQZ	Connecting Cord PA	S -	-	
49	QCNW-D049WJQZ	Connecting Cord SH	S -	-	
50	QCNW-D810WJQZ	Connecting Cord YU	S -	-	
51	QCNW-D811WJQZ	Connecting Cord UV	S -	-	
52	QCNW-D812WJQZ	Connecting Cord HM	S -	-	
53	QCNW-D813WJQZ	Connecting Cord HC	S -	-	
54	QCNW-D949WJQZ	Connecting Cord FFC	S -	-	
55	QPWBMD121WJPZ	FPC, x2 FPC TO Panel	S -	-	
56	RCORF0103CEZZ	Core, Core FOR SP	S AK	AK	
57	RCORFA023WJZZ	Core, x3 CoreFORGV,SH,RA	S AK	AK	
58	RCORFA039WJZZ	Core, x2 FPC Core	S AG	AG	
59	RSP-ZA106WJZZ	Speaker-Box(Lch)	S AL	AX	
60	RSP-ZA107WJZZ	Speaker-Box(Rch)	S AL	AX	
61	XBBS930P06000	Screw, x3 AC-ANG_HDMI	S AA	AA	
62	XBPS730P06WS0	Screw, x19 INV/Power(19), (4+1)	S AA	AA	
63	XBPS730P08WS0	Screw, x30 CHS YO	S -	-	
64	XBPS830P04WS0	Screw, x5 INV_CHS-FRM	S -	-	
65	XEBS930P08000	Screw, x5 TANSHI YO	S AA	AA	
66	XEBS940P16000	Screw, x13 CAB-B	S AB	AB	
67	XEBSN30P08000	Screw, x6 LCD_CTL_ANG	S AA	AA	
68	XEBSN40P10000	Screw, x4 VESA YO	S AB	AB	


LC-32GA6E Model

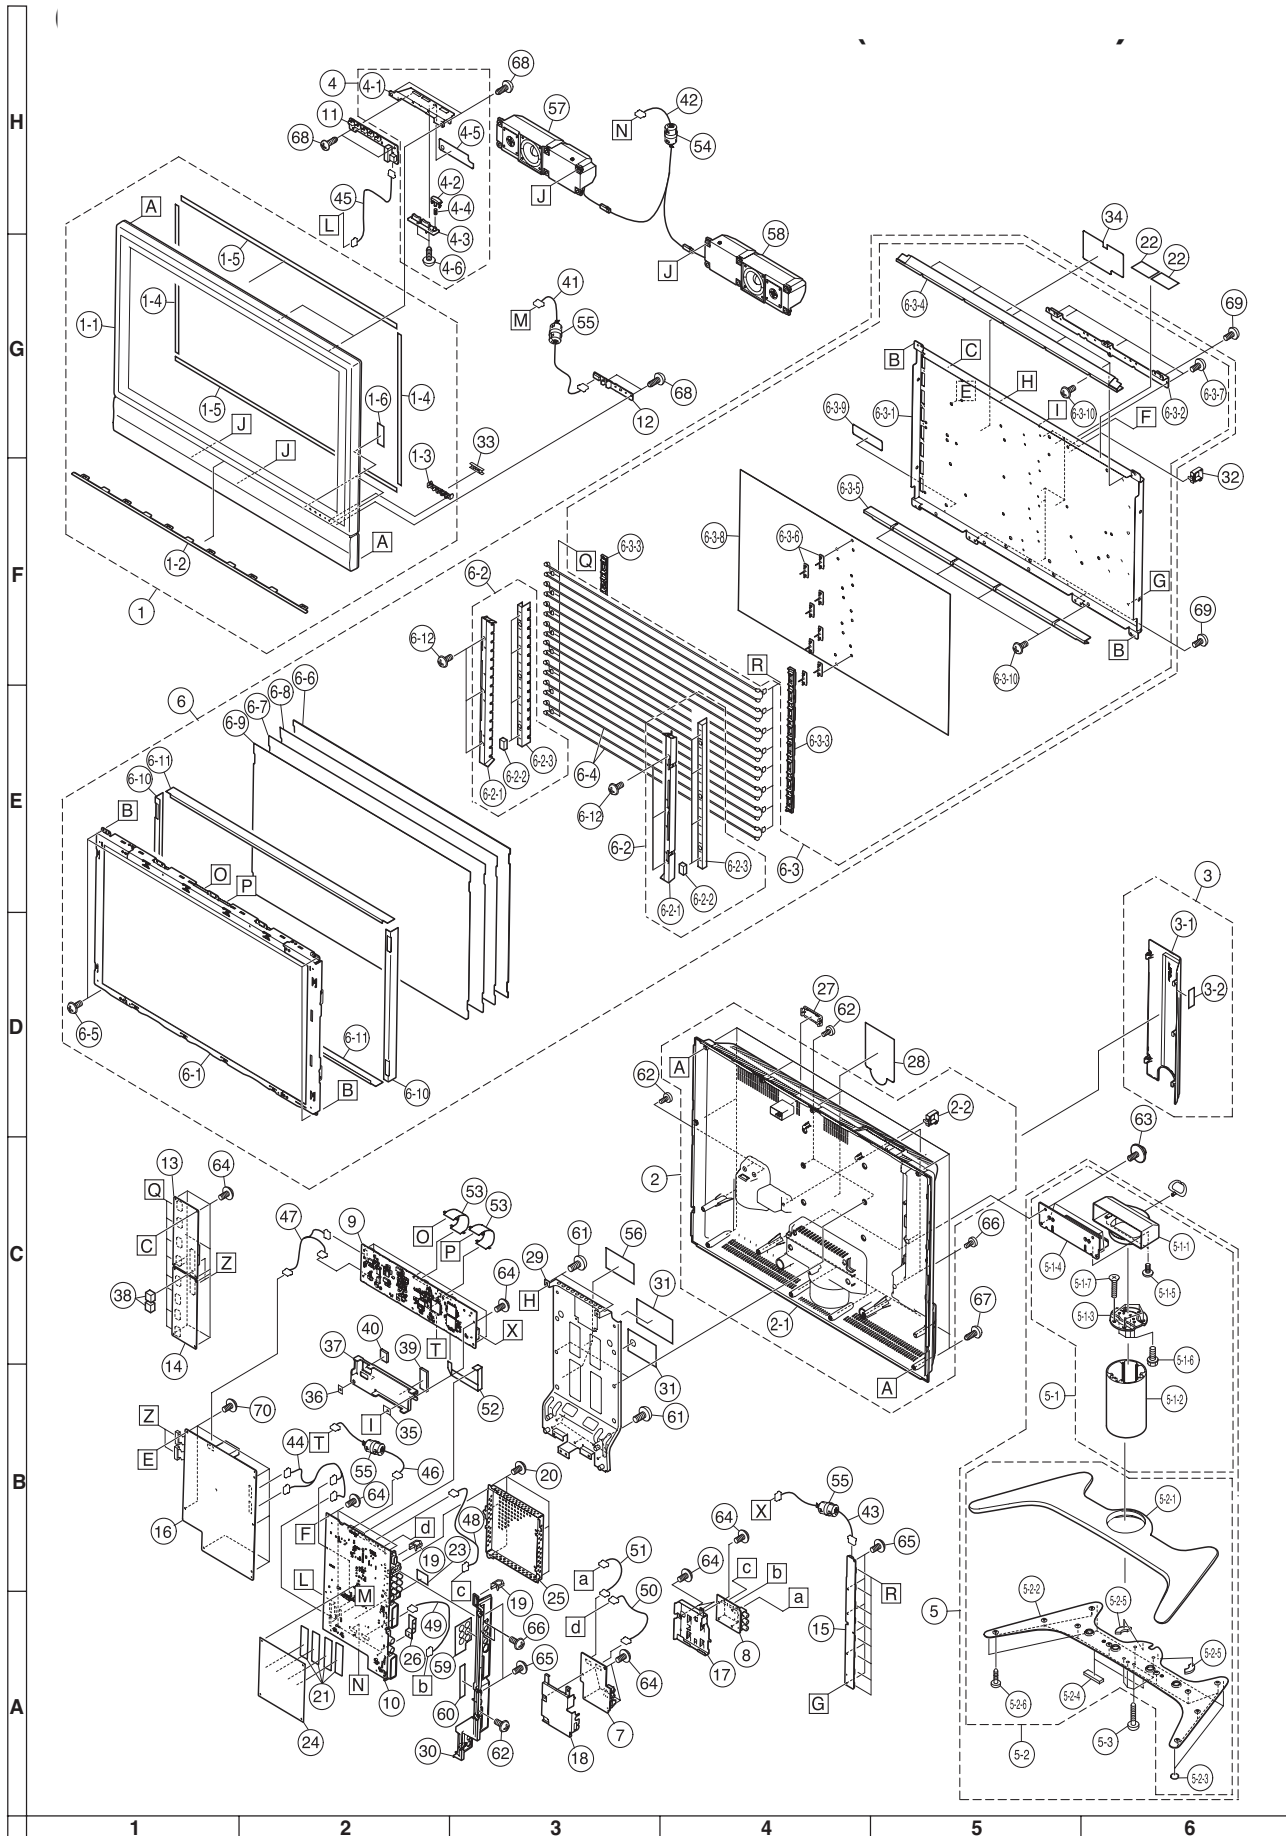

LC-32GA6E / LC-32BV6E CABINET AND MECHANICAL PARTS					
REF No.	PARTS	DESCRIPTION	* SN CODE	EX CODE	
1	CCABAB112WJ01	Front Cabinet Ass'y (LC32GA6E)	S BD	BT	
1	CCABAB112WJ02	Front Cabinet Ass'y (LC32BV6E)	S AZ	BP	
1-1	Not Available	Front Cabinet	- -	-	
1-2	GCOVAB063WJKA	SP Decoration Cover	S -	-	
1-3	HDECQA471WJSA	LED Decoration Plate	S -	-	
1-4	PSPAHA298WJZZ	Spacer x2	S AC	AC	
1-5	PSPAHA407WJZZ	Spacer x2	S AD	AD	
1-6	PSPAHA413WJZZ	Spacer x2 FOR LED-DEC	S AB	AB	
2	CCABBA649WJ01	Rear Cabinet Ass'y (LC32GA6E)	S AY	BM	
2	CCABBA649WJ02	Rear Cabinet Ass'y (LC32BV6E)	S BA	BR	
2-1	Not Available	Rear Cabinet	- -	-	
2-2	LHLDWA055WJKZ	Wire Holder FOR AC-CODE	S AC	AC	
3	CCOVAB062WJ01	Terminal Cover Ass'y (LC32GA6E)	S AE	AP	
3	CCOVAB062WJ02	Terminal Cover Ass'y Black (LC32BV6E)	S AK	AW	
3-1	Not Available	Terminal Cover	- -	-	
3-2	PSPAHA413WJZZ	Spacer	S AB	AB	
4	CCOVAB077WJ01	Top Cover Ass'y (LC32GA6E)	S AE	AN	
4	CCOVAB077WJ02	Top Cover Ass'y (LC32BV6E)	S AK	AW	
4-1	Not Available	Top Cover	- -	-	
4-2	JBTN-A254WJKB	Power Button	S AG	AG	
4-3	JBTN-A404WJKA	Control Button	S -	-	
4-4	MSPRCA015WJFW	Spring	S AB	AB	
4-5	PZETKA119WJZZ	Barrier-Sheet	S -	-	
4-6	XEBSN30P08000	Screw x2	S AA	AA	
5	CDAI-A147WEV2	Stand Ass'y (LC32GA6E)	S -	-	
5	CDAI-A147WEV6	Stand Ass'y Black (LC32BV6E)	S -	-	
5-1	CCOVAB012WJ06	Stand Hinge Ass'y (LC32GA6E)	S AX	BL	
5-1	CCOVAB012WJ11	Stand Hinge Ass'y Black (LC32BV6E)	S AX	BL	
5-1-1	Not Available	Hinge Cover	- -	-	
5-1-2	GDAI-A155WJSB	Stand Support (LC32GA6E)	S -	-	
5-1-2	GDAI-A155WJSE	Stand Support (LC32BV6E)	S -	-	
5-1-3	GDAI-A160WJF7	Support Cover	S -	-	
5-1-4	LANGTA156WJSA	Stand Bracket	S -	-	
5-1-5	LX-BZA046WJFN	Screw x2 FOR HINGE-COVER	S AA	AA	
5-1-6	LX-BZA091WJF7	Screw x4	S -	-	
5-1-7	XCSS940P25000	Screw x5 FOR SUPPORT-COV	S AB	AB	
5-2	CDAI-A147WJ04	Stand Base Ass'y	S AY	BM	
5-2-1	Not Available	Stand Base	- -	-	
5-2-2	LANGKA282WJSA	Base Angle	S BF	BF	
5-2-3	PSPAZA476WJZZ	Leg Cushion-A x4	S AC	AC	
5-2-4	PSPAZA477WJZZ	Leg Cushion-B x2	S AD	AD	
5-2-5	PSPAZA530WJZZ	Leg Cushion-C x2	S AD	AD	
5-2-6	XEBS940P10000	Screw x10 FOR BASE	S AB	AB	
5-3	XCBS940P25000	Screw x5 FOR SUPPORT	S -	-	
6	Not Available	32" LCD Panel Unit Ass'y	- -	-	
6-1	RLCDDTA082WJZZ	32" LCD Panel Unit	J DM	DM	
6-2	CHLDZA446WJ01	Lamp Holder Ass'y (Top) x2	J AQ	AQ	
6-2-1	Not Available	Lamp Holder (Top) x2	- -	-	
6-2-2	PSPAGA251WJZZ	Spacer x8	J AB	AB	
6-2-3	PSPAQA064WJZZ	Spacer x2 COVER-A	J AG	AG	
6-3	CSLDMA765WJ01	Back Light Shield Ass'y	J BT	BT	
6-3-1	Not Available	Back Light Shield	- -	-	
6-3-2	LANGKA395WJFW	Fixing Metal	J -	-	
6-3-3	LHLDZA309WJK0	Holder x2	J AL	AL	
6-3-4	LHLDZA476WJKZ	Holder REF-HLD-TOP	J AR	AR	
6-3-5	LHLDZA477WJKZ	Holder REF-HLD-BTM	J AR	AR	
6-3-6	LHLDZA624WJKZ	Lamp Clip x8	J AC	AC	
6-3-7	LX-BZA046WJFN	Screw x5	J AA	AA	
6-3-8	PMIR-A083WJZZ	Mirror Sheet	J AV	AV	
6-3-9	TCAUZA031WJZZ	Caution Label	J AB	AB	
6-3-10	XBBSN30P08000	Screw x9	J AA	AA	
6-4	KLMP-A077WJZZ	Lamp x8	J AY	AY	
6-5	LX-BZA051WJFN	Screw x4	J AB	AB	
6-6	PCOVUA067WJZZ	Diffusion Panel	J BB	BB	

REF No.	PARTS	DESCRIPTION	* SN CODE	EX CODE	
6-7	PSHEPA358WJZZ	Prism Gurd Sheet	J AW	AW	
6-8	PSHEPA359WJZZ	Prism Sheet	J BG	BG	
6-9	PSHEPA390WJZZ	Diffusion Sheet	J AW	AW	
6-10	PSPAZA776WJZZ	Sheet Spacer-S x2	J AF	AF	
6-11	PSPAZA777WJZZ	Sheet Spacer-L x2	J AH	AH	
6-12	XBBSN30P08000	Screw x6	J AA	AA	
7	DUNTKD322DE01	HDMI Unit	- -	-	
8	DUNTKD323DE01	COMPONENT Unit	- -	-	
9	DUNTKC919DE04	LCD CONTROL Unit	J -	-	
10	DUNTKD334WE01	MAIN Unit	S -	-	
11	DUNTKD335WE01	OPERATION Unit	S -	-	
12	DUNTKD336WE01	R/C LED Unit	S -	-	
13	RUNTKA164WJZZ	INVERTER-A Unit	S AV	BG	
14	RUNTKA165WJZZ	INVERTER-B Unit	S AU	BF	
15	RUNTKA166WJZZ	INVERTER GND Unit	S AN	AZ	
16	RDENCA135WJZZ	POWER Unit	S BH	BZ	
17	PSLDM767WJFW	HDMI Shield (Top)	J AE	AE	
18	PSLDM768WJFW	Bottom Shield	J AD	AD	
19	LHLDWA048WJKZ	Wire Holder x2 FOR MAIN	S AB	AB	
20	LX-BZ3370CEF7	Screw x5	S -	-	
21	PMLT-A179WJZZ	Gasket x4 MAIN_GASKET	S -	-	
22	PMLT-A193WJZZ	Absorber x2 TUNER_ANG S4	S -	-	
23	PRDARA173WJFW	Heat Sink	S -	-	
24	PSLDM538WJFW	Shield	S -	-	
25	PSLDM568WJFW	Shield	S -	-	
26	QEARPA149WJFW	Tuner Earth Angle	S -	-	
27	GCOVAB018WJKB	BUS Connector Cover (LC32GA6E)	S AB	AE	
27	GCOVAB018WJKE	BUS Connector Cover (LC32BV6E)	S AC	AH	
28	HINDPB340WJSA	Model Label (LC-32GA6E/K/F)	S -	-	
28	HINDPB341WJSA	Model Label (LC-32GA6I)	S -	-	
28	HINDPB478WJSA	Model Label (LC-32GA6R)	S -	-	
28	HINDPB415WJSA	Model Label (LC32BV6E)	S -	-	
29	LANGTA149WJZZ	Center Angle	S -	-	
30	LCHSMA226WJKA	Chassis Frame (LC-32GA6E)	S -	-	
30	LCHSMA226WJKB	Chassis Frame (LC32BV6E)	S -	-	
31	PFLT-A054WJZZ	Felt x2 GASKET_B-SHIELD	S -	-	
32	LHLDW1173CEZZ	Wire Holder x7 FOR BACKSHLD	S AD	AD	
33	PCOVUA057WJZZ	LED Shading Cover	S -	-	
34	PFLT-A051WJZZ	Felt	S -	-	
35	PFLT-A052WJZZ	Felt LCD_DODENFU_L	S -	-	
36	PFLT-A053WJZZ	Felt LCD_DODENFU_R	S -	-	
37	PRDARA187WJFW	Heat Sink IC4501/601/901	S -	-	
38	PSPAGA243WJZZ	Spacer x2 INV_CUSHION	S -	-	
39	PSPAZA567WJKZ	Spacer HONETSU_45/601	S AK	AK	
40	PSPAZA568WJKZ	Spacer HONETSU_4901	S AG	AG	
41	QCWNW-D058WJQZ	Connecting Cord RA	S -	-	
42	QCWNW-D059WJQZ	Connecting Cord SP	S -	-	
43	QCWNW-D060WJQZ	Connecting Cord GV	S -	-	
44	QCWNW-D061WJQZ	Connecting Cord PA	S -	-	
45	QCWNW-D046WJQZ	Connecting Cord KE	S -	-	
46	QCWNW-D063WJQZ	Connecting Cord SH	S -	-	
47	QCWNW-D249WJQZ	Connecting Cord PO	S -	-	
48	QCWNW-D810WJQZ	Connecting Cord YU	S -	-	
49	QCWNW-D811WJQZ	Connecting Cord UV	S -	-	
50	QCWNW-D812WJQZ	Connecting Cord HM	S -	-	
51	QCWNW-D813WJQZ	Connecting Cord HC	S -	-	
52	QCWNW-D950WJQZ	Connecting Cord FFC	S -	-	
53	QPWBMD121WJPZ	FPC x2 TO PANEL	S -	-	
54	RCORF0103CEZZ	Core FOR SP	S AK	AK	
55	RCORFA023WJZZ	Core x4 COREGV	S AK	AK	
56	PFLT-A060WJZZ	Felt x3 EMI SHEET	S -	-	
57	RSP-ZA106WJZZ	Speaker SP-BOX(Lch)	S AL	AX	
58	RSP-ZA107WJZZ	Speaker SP-BOX(Rch)	S AL	AX	
59	PMLT-A194WJZZ	Absorber GASKET_FRAME	S -	-	
60	PMLT-A195WJZZ	Absorber FRAME-SPACER	S -	-	
61	XBBS740P06000	Screw x7 FOR CENTER-ANG	S AA	AA	
62	XBBS930P06000	Screw x5 AC-ANG/CAB	S AA	AA	
63	XBBSN50P12JS0	Screw x4 FOR STAND	S AF	AF	
64	XBPS730P08WS0	Screw x28 FOR PWB	S -	-	
65	XBPS830P04WS0	Screw x8 INV_CHS-FRM	S -	-	
66	XBBS930P08000	Screw x5 FOR TERMINAL	S AA	AA	
67	XBBS940P16000	Screw x15 CAB-B	S AB	AB	
68	XBBSN30P08000	Screw x6 LED/CTRL/COV	S AA	AA	
69	XBBSN40P10000	Screw x3 FOR LED UNIT	S AB	AB	
70	XBPS730P06WS0	Screw x5 M3X6(4+1)	J AA	AA	

LC-37GA6E Model

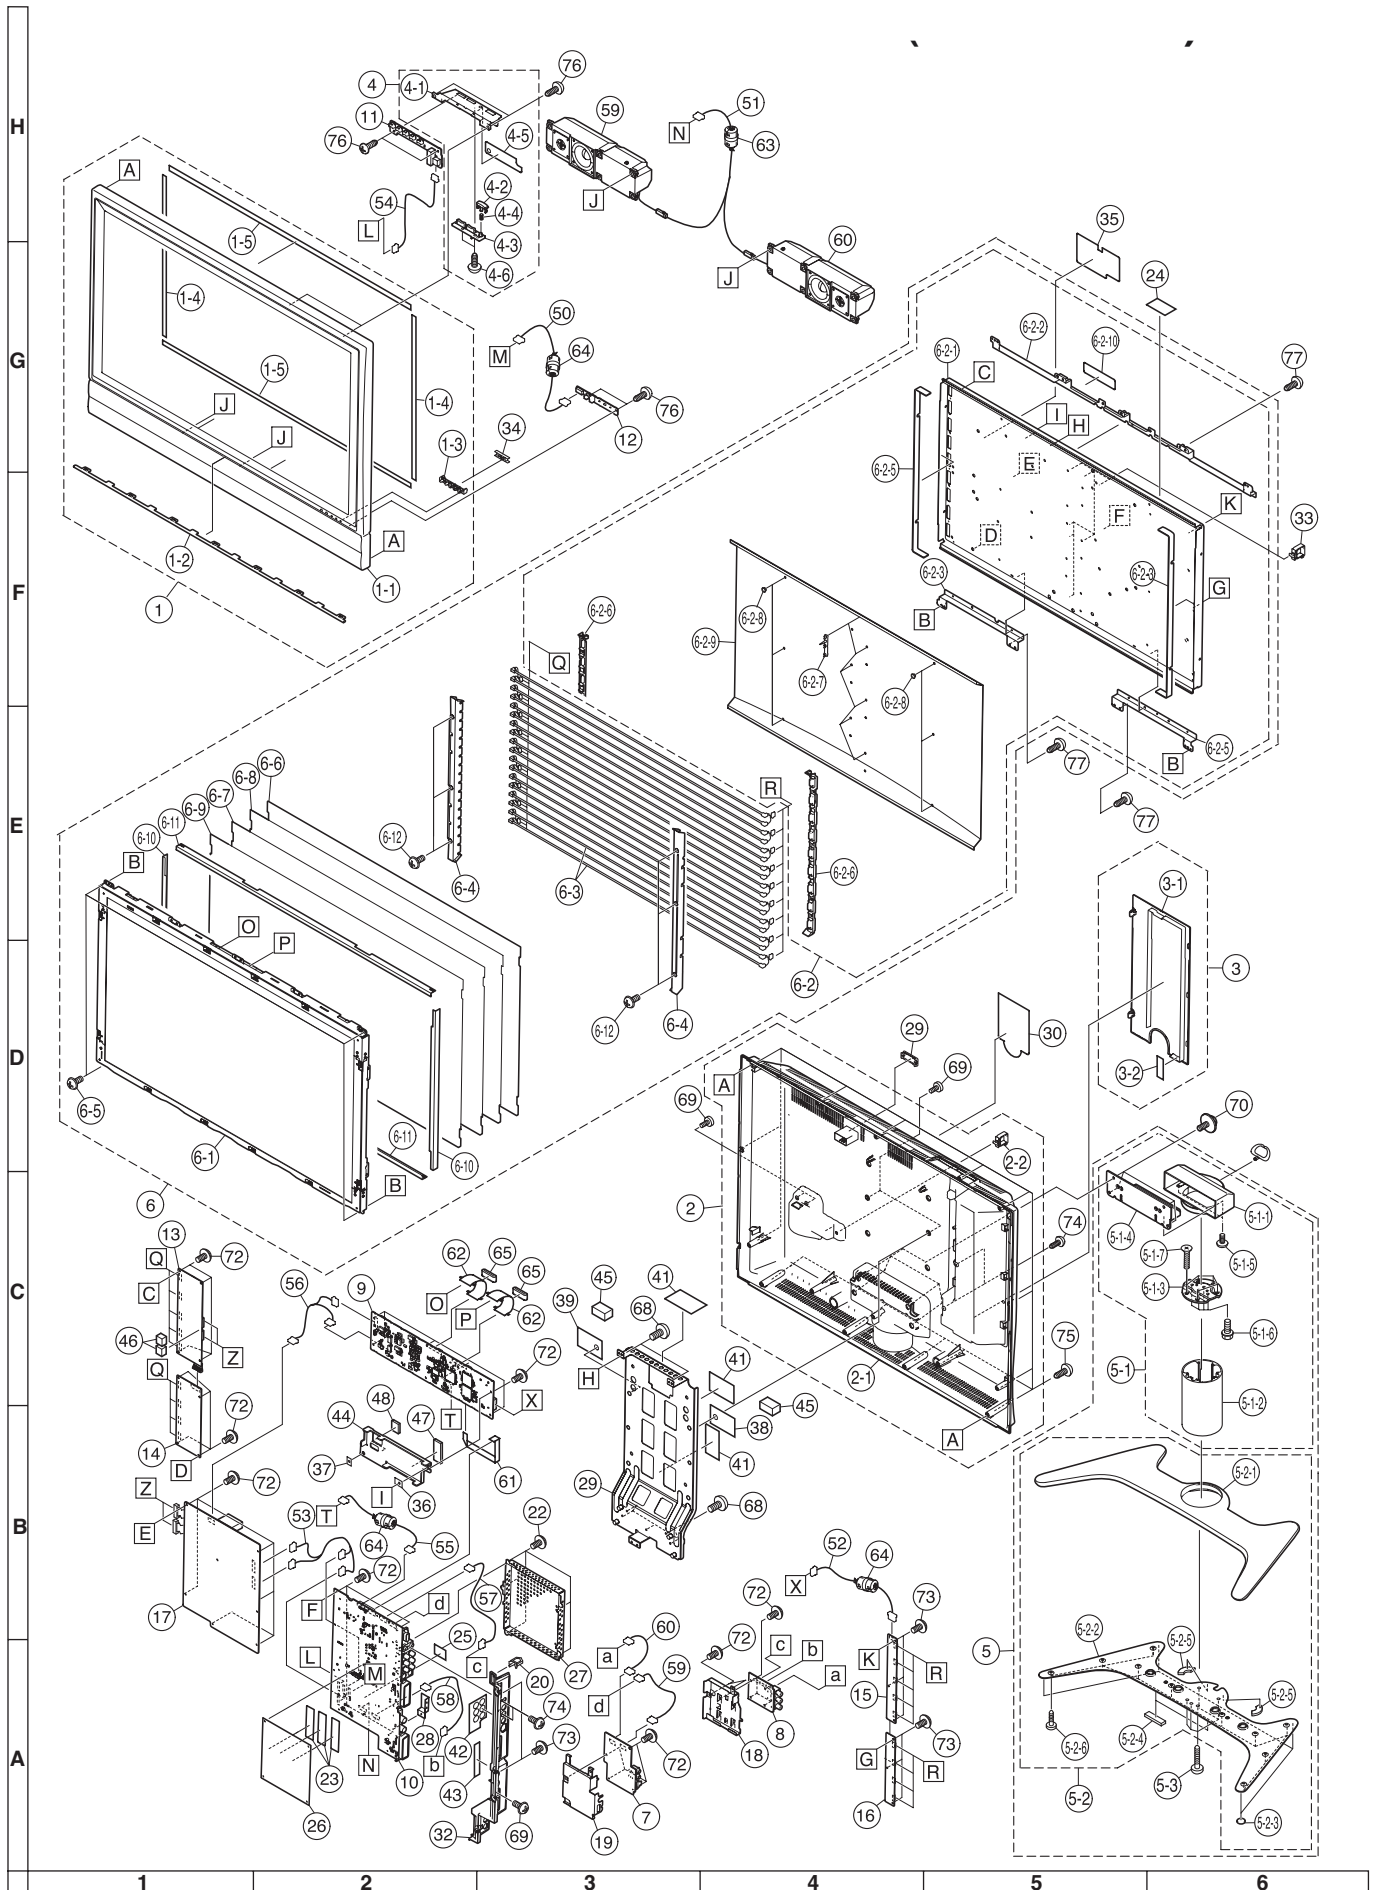


LC-37GA6E CABINET AND MECHANICAL PARTS

REF No.	PARTS	DESCRIPTION	* SN CODE	EX CODE
1	CCABAB113WJ01	Front Cabinet Ass'y	S	BE BV
1-1	Not Available	Front Cabinet	S	- -
1-2	GCOVAB127WJKA	SP Decoration Cover	S	- -
1-3	HDECQA471WJSA	LED Decoration Plate	S	- -
1-4	PSPAHA416WJZZ	Spacer, x2	S	- -
1-5	PSPAHA513WJZZ	Spacer, x2	S	- -
1-6	PSPAHA580WJZZ	Spacer, x1	S	- -
2	CCABBA650WJ01	Rear Cabinet Ass'y	S	AZ BP
2-1	Not Available	Rear Cabinet	-	- -
2-2	LHLDWA055WJKZ	Wire Holder	S	- -
3	CCOVAB126WJ01	Terminal Cover Ass'y	S	- -
3-1	Not Available	Terminal Cover	-	- -
3-2	PSPAHA413WJZZ	Spacer	S	- -
4	CCOVAB077WJ01	Top Cover Ass'y	S	AE AN
4-1	Not Available	Top Cover	-	- -
4-2	JBTN-A254WJKB	Power Button	S	- -
4-3	JBTN-A404WJKA	Control Button	S	- -
4-4	MSPRCA015WJFW	Spring	S	- -
4-5	PZETKA119WJZZ	Barrier-Sheet	S	- -
4-6	XEBNS30P08000	Screw, x2	S	- -
5	CDAl-A147WEV2	Stand Ass'y	-	- -
5-1	CCOVAB012WJ06	Stand Hinge Ass'y	S	AX BL
5-1-1	Not Available	Hinge Cover	-	- -
5-1-2	GDAI-A155WJSB	Stand Support	S	- -
5-1-3	GDAI-A160WJF7	Support Cover	S	- -
5-1-4	LANGTA156WJSA	Stand Bracket	S	- -
5-1-5	LX-BZA046WJFN	Screw, x2	S	- -
5-1-6	LX-BZA091WJF7	Screw, x4	S	- -
5-1-7	XCSS940P25000	Screw, x5	S	- -
5-2	CDAl-A147WJ04	Stand Base Ass'y	S	AY BM
5-2-1	Not Available	Stand Base	-	- -
5-2-2	LANGKA282WJSA	Base Angle	S	- -
5-2-3	PSPAZA476WJZZ	Leg Cushion-A, x4	S	- -
5-2-4	PSPAZA477WJZZ	Leg Cushion-B, x2	S	- -
5-2-5	PSPAZA530WJZZ	Leg Cushion-C, x2	S	- -
5-2-6	XEBS940P10000	Screw, x10	S	- -
5-3	XCBS940P25000	Screw, x5	S	- -
6	Not Available	37" LCD Panel Unit Ass'y	-	- -
6-1	RLCDTA083WJZZ	37" LCD Panel Unit	J	- -
6-2	CSLDMA766WJ01	Back Light Shield Ass'y	-	- -
6-2-1	Not Available	Back Light Shield	-	- -
6-2-2	LANGKA410WJZZ	Fixing Metal (Top)	J	- -
6-2-3	LANGKA411WJZZ	Fixing Metal (Bottom-L)	J	- -
6-2-4	LANGKA412WJZZ	Frame, x2	J	- -
6-2-5	LANGKA426WJZZ	Fixing Metal (Bottom-R)	J	- -
6-2-6	LHLDZA522WJKZ	Lamp Holder (Top), x2	J	AM AM
6-2-7	LHLDZA532WJKZ	Clip, x6	J	AD AD
6-2-8	LHLDZA543WJKZ	Lamp Clip, x6	J	AD AD
6-2-9	PMIR-A082WJZZ	Mirror Sheet	J	AY AY
6-2-10	TCAUZA031WJZZ	Caution Label	J	AB AB
6-3	KLMP-A076WJZZ	Lamp, x9	J	AZ AZ
6-4	LHLDZA521WJKZ	Lamp Holder (Top), x2	J	AN AN
6-5	LX-BZA051WJFN	Screw, x4	J	AB AB
6-6	PCOVUA066WJZZ	Diffusion Panel	J	BD BD
6-7	PSHEPA356WJZZ	Prism Gurd Sheet	J	AY AY
6-8	PSHEPA357WJZZ	Prism Sheet	J	BN BN
6-9	PSHEPA389WJZZ	Diffusion Sheet	J	AX AX
6-10	PSPAZA825WJZZ	Sheet Spacer-S, x2	J	AG AG
6-11	PSPAZA826WJZZ	Sheet Spacer-L, x2	J	AK AK
6-12	XBBSN30P08000	Screw, x6	J	AA AA
7	DUNTKD322DE03	HDMI Unit	J	- -

REF No.	PARTS	DESCRIPTION	* SN CODE	EX CODE
8	DUNTKD323DE03	COMPONENT Unit	-	- -
9	DUNTKC919DE06	LCD CONTROL Unit	J	- -
10	DUNTKD334WE03	MAIN Unit	S	- -
11	DUNTKD335WE03	OPERATION Unit	S	- -
12	DUNTKD336WE03	R/C, LED Unit	S	- -
13	RUNTKA167WJZZ	INVERTER-A Unit	S	AW BH
14	RUNTKA168WJZZ	INVERTER-B Unit	S	AV BG
15	RUNTKA169WJZZ	INVERTER GND-A Unit	S	AM AX
16	RUNTKA170WJZZ	INVERTER GND-A Unit	S	AL AX
17	RDENCA136WJZZ	POWER Unit	S	BK CA
18	PSLDMA767WJFW	HDMI Shield (Top)	J	AE AE
19	PSLDMA768WJFW	Bottom Shield	J	AD AD
20	LHLDWA048WJKZ	Wire Holder, X2	S	AB AB
22	LX-BZ3370CEF7	Screw, x5	S	- -
23	PMLT-A179WJZZ	Gasket, x3	S	- -
24	PMLT-A193WJZZ	Absorber TUNER_ANG S4	S	- -
25	PRDARA173WJFW	Heat Sink	S	- -
26	PSLDMA538WJFW	Shield	S	- -
27	PSLDMA568WJFW	Shield	S	- -
28	QEARPA149WJFW	Tuner Earth Angle	S	- -
29	GCOVAB018WJKB	BUS Connector Cover	S	AB AE
30	HiNDPB342WJSA	Model Label (LC-37GA6E/K/F)	S	- -
30	HiNDPB343WJSA	Model Label (LC-37GA6I)	S	- -
30	HiNDPB479WJSA	Model Label (LC-37GA6R)	S	- -
31	LANGTA174WJZZ	Center Angle	S	- -
32	LCHSMA226WJKA	Chassis Frame	S	- -
33	LHLDW1173CEZZ	Wire Holder WH FOR BACKSHLD	S	AD AD
34	PCOVUA057WJZZ	LED Shading Cover	S	- -
35	PFLT-A051WJZZ	Felt LCD_DODENFU	S	- -
36	PFLT-A052WJZZ	Felt LCD_DODENFU_L	S	- -
37	PFLT-A053WJZZ	Felt LCD_DODENFU_R	S	- -
38	PFLT-A054WJZZ	Gasket B-SHIELD	S	- -
39	PFLT-A056WJZZ	Gasket B-SHIELD	S	- -
40	PFLT-A059WJZZ	EMI Sheet	S	- -
41	PFLT-A060WJZZ	EMI Sheet	S	- -
42	PMLT-A194WJZZ	EMI Sheet	S	- -
43	PMLT-A195WJZZ	EMI Sheet	S	- -
44	PRDARA187WJFW	Heat Sink IC4501/601/901	S	- -
45	PSLDMA584WJZZ	Gasket, x2 GASKET	S	- -
46	PSPAGA243WJZZ	Spacer, x2 INV-CUSHION	S	- -
47	PSPAZA567WJKZ	Spacer HONETSU_45/601	S	AK AK
48	PSPAZA568WJKZ	Spacer HONETSU_4901	S	AG AG
49	LHLDW1046CEZZ	Wire Holder MAINTOMOJIME	S	AA AA
50	QCWN-D107WJQZ	Connecting Cord RA	S	- -
51	QCWN-D108WJQZ	Connecting Cord SP	S	- -
52	QCWN-D109WJQZ	Connecting Cord GV	S	- -
53	QCWN-D110WJQZ	Connecting Cord PA	S	- -
54	QCWN-D111WJQZ	Connecting Cord KE	S	- -
55	QCWN-D112WJQZ	Connecting Cord SH	S	- -
56	QCWN-D250WJQZ	Connecting Cord PO	S	- -
57	QCWN-D810WJQZ	Connecting Cord YU	S	- -
58	QCWN-D811WJQZ	Connecting Cord UV	S	- -
59	QCWN-D812WJQZ	Connecting Cord HM	S	- -
60	QCWN-D813WJQZ	Connecting Cord HC	S	- -
61	QCWN-D951WJQZ	Connecting Cord FFC	S	- -
62	QPWBMD121WJPZ	FPC, x2 TO PANEL	S	- -
63	RCORF0103CEZZ	Core FOR SP	S	AK AK
64	RCORFA023WJZZ	Core, x4 GV,SH,RA	S	AK AK
65	RCORFA039WJZZ	Core, x2 FPC CORE	S	AG AG
66	RSP-A106WJZZ	Speaker SP-BOX(Lch)	S	AL AX
67	RSP-ZA107WJZZ	Speaker SP-BOX(Rch)	S	AL AX
68	XBBS740P06000	Screw, x7 FOR CENTER-ANG	S	AA AA
69	XBBS930P06000	Screw, x5 FOR AC-ANG/CAB	S	AA AA
70	XBBSN50P12JS0	Screw, x4 FOR STAND	S	AF AF
71	XBPS730P06WS0	Screw, x19 INV/POWER SCREW+(4+1)	S	AA AA
72	XBPS730P08WS0	Screw, x29 FOR PWB	S	- -
73	XBPS830P04WS0	Screw, x8 INV_CHS-FRM	S	- -
74	XEBS930P08000	Screw, x5 FOR CHAS/CTRL	S	AA AA
75	XEBS940P16000	Screw, x15 FOR CAB-A/B	S	AB AB
76	XEBSN30P08000	Screw, x6 FOR LED/CTRL	S	AA AA
77	XEBSN40P10000	Screw, x3 FOR LCD-UNIT	S	AB AB

PACKING OF THE SET

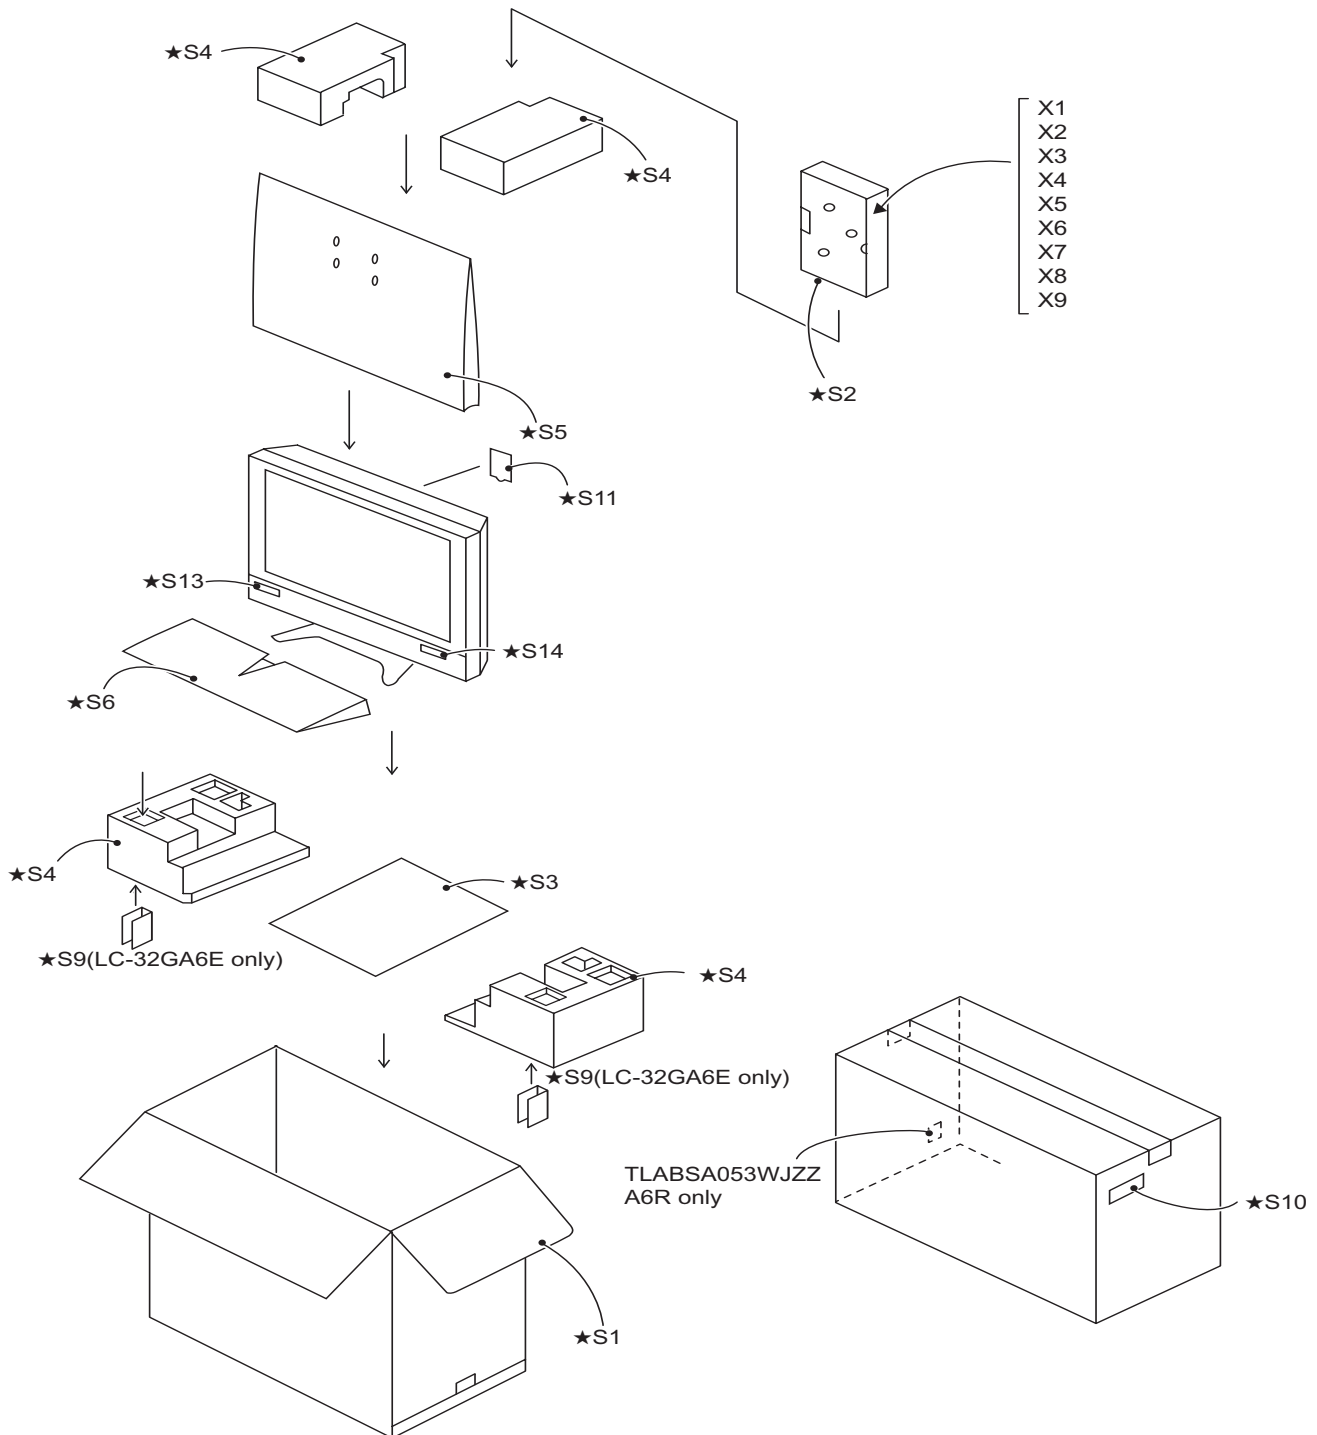

★ Not Replacement item

PACKING PARTS LISTING

(Not Replacement Item)

REF No.	PARTS	DESCRIPTION	* SN CODE	EX CODE
LC-26GA6E				
S1	SPAKCC095WJZZ	Packing Case (LC26GA6E)	- - -	
S1	SPAKCC113WJZZ	Packing Case (LC26BV6E)	- - -	
S2	SPAKFA783WJZZ	Packing Material ACCESSORY CASE	- - -	
S3	SPAKFA773WJZZ	Packing Material STAND-PAD	- - -	
S4	SPAKXA681WJZZ	Packing Add.	- - -	
S5	SPAKPA396WJZZ	Wrapping Paper HONTAI PP	- - -	
S6	SPAKPA391WJZZ	Wrapping Paper Stand PP	- - -	
S7	SSAKAA009WJZZ	Polyethylene Bag SACK150*100	- - -	
S8	SSAKAA010WJZZ	Polyethylene Bag A4	- - -	
S10	TLABKA002WJZZ	Case No. Label	- - -	
S11	TLABN0134BMZZ	SEES No. Label	- - -	
S12	TLABNB415WJZZ	No. Label	- - -	
S13	TLABZA792WJZZ	EICTA Label	- - -	
S14	TLABZB051WJZZ	Pop Label	- - -	
LC-32GA6E				
S1	SPAKCC059WJZZ	Packing Case (LC32GA6E)	- - -	
S1	SPAKCC114WJZZ	Packing Case (LC32BV6E)	- - -	
S2	SPAKFA784WJZZ	Packing Material ACCESSORY CASE	- - -	
S3	SPAKFA781WJZZ	Packing Material STAND-PAD	- - -	
S4	SPAKXA682WJZZ	Packing Add. PAD	- - -	
S5	SPAKPA382WJZZ	Wrapping Paper HOSO-PP-SET	- - -	
S6	SPAKPA377WJZZ	Wrapping Paper HOSO-PP-STAND	- - -	
S7	SSAKAA009WJZZ	Polyethylene Bag SACK150*100	- - -	
S8	SSAKAA010WJZZ	Polyethylene Bag A4	- - -	
S9	SPAKFA782WJZZ	Packing Material, x2 BOTTOM-IN-PAD	- - -	
S10	TLABKA002WJZZ	Case No. Label	- - -	
S11	TLABN0134BMZZ	SEES No. Label	- - -	
S12	TLABNB415WJZZ	No. Label	- - -	
S13	TLABZA792WJZZ	EICTA Label	- - -	
S14	TLABZB051WJZZ	Label	- - -	
LC-37GA6E				
S1	SPAKCC096WJZZ	Packing Case	- - -	
S2	SPAKFA745WJZZ	Packing Material ACCESSORY CASE	- - -	
S3	SPAKFA796WJZZ	Packing Material STAND-PAD	- - -	
S4	SPAKXA700WJZZ	Packing Add. PAD	- - -	
S5	SPAKPA338WJZZ	Wrapping Paper PP HONTAI	- - -	
S6	SPAKPA377WJZZ	Wrapping Paper PP STAND	- - -	
S7	SSAKAA009WJZZ	Polyethylene Bag SACK150*100	- - -	
S8	SSAKAA010WJZZ	Polyethylene Bag A4	- - -	
S10	TLABKA002WJZZ	Case No. Label	- - -	
S11	TLABN0134BMZZ	SEES No. Label	- - -	
S12	TLABNB415WJZZ	No. Label	- - -	
S13	TLABZA792WJZZ	EICTA Label	- - -	
S14	TLABZB051WJZZ	Label	- - -	
S15	TLABZA982WJZZ	Label	- - -	

SUPPLIED ACCESSORIES PARTS LISTING

REF No.	PARTS	DESCRIPTION	* SN CODE	EX CODE
LC-26GA6E				
△ X1	QACCKA007WJPZ	AC Cord (LC-26GA6E/F/I/R)	S AD	AM
△ X1	QACCB021WJPZ	AC Cord (LC-26GA6K)	S AG	AS
X2	RRMCGA323WJSA	Infrared Remote Control Unit (LC-26GA6E)	S AK	AW
X2	RRMCGA323WJSB	Infrared Remote Control Unit (LC-26BV6E)	S AH	AV
X3	LHLDW0110CEZZ	Cable Clamp	S -	-
X4	LHLDWA083WJ00	Cable Band	S -	-
X5	RCORFA020WJZZ	Core FOR AC COD	S -	-
X6	TINS-B900WJZZ	Operation Manual (LC-26GA6E/K/F/I) (ENGLISH..)	S AH	AT
X7	TINS-B901WJZZ	Operation Manual (LC-26GA6E/F) (SWEDISH..)	S AH	AT
X7	TINS-B902WJZZ	Operation Manual (LC-26GA6E) (POLISH..)	S AF	AR
X7	TINS-B903WJZZ	Operation Manual (LC-26GA6R) (POLISH..)	S	
X7	TINS-B978WJZZ	Operation Manual (LC-26BV6E) (ENGLISH..)	S AK	AW
X7	TINS-B979WJZZ	Operation Manual (LC-26BV6E) (POLISH..)	S AF	AQ
LC-32GA6E				
△ X1	QACCKA007WJPZ	AC Cord (LC-32GA6E/F/I/R)	S AD	AM
△ X1	QACCB021WJPZ	AC Cord (LC-32GA6K)	S AG	AS
X2	RRMCGA323WJSA	Infrared Remote Control Unit (LC-26GA6E)	S AK	AW
X2	RRMCGA323WJSB	Infrared Remote Control Unit (LC-26BV6E)	S AH	AV
X3	LHLDW0110CEZZ	Cable Clamp	S -	-
X4	LHLDWA083WJ00	Cable Band	S -	-
X5	RCORFA020WJZZ	Core FOR AC COD	S -	-
X6	TINS-B900WJZZ	Operation Manual (LC-32GA6E/K/F/I) (ENGLISH..)	S AH	AT
X7	TINS-B901WJZZ	Operation Manual (LC-32GA6E/F) (SWEDISH..)	S AH	AT
X7	TINS-B902WJZZ	Operation Manual (LC-32GA6E) (POLISH..)	S AF	AR
X7	TINS-B903WJZZ	Operation Manual (LC-32GA6R) (POLISH..)	S	
X7	TINS-B978WJZZ	Operation Manual (LC-32BV6E) (ENGLISH..)	S AK	AW
X7	TINS-B979WJZZ	Operation Manual (LC-32BV6E) (POLISH..)	S AF	AQ
X8	TCAUZA135WJZZ	Caution Card Class A eratta	S -	-
LC-37GA6E				
△ X1	QACCKA007WJPZ	AC Cord (LC-37GA6E/F/I/R)	S AD	AM
△ X1	QACCB021WJPZ	AC Cord (LC-37GA6K)	S AG	AS
X2	RRMCGA323WJSA	Infrared Remote Control Unit	S AK	AW
X3	LHLDW0110CEZZ	Cable Clamp	S -	-
X4	LHLDWA083WJ00	Cable Band	S -	-
X5	RCORFA020WJZZ	Core FOR AC COD	S -	-
X6	TINS-B900WJZZ	Operation Manual (LC-37GA6E/K/F/I) (ENGLISH..)	S AH	AT
X7	TINS-B901WJZZ	Operation Manual (LC-37GA6E/F) (SWEDISH..)	S AH	AT
X7	TINS-B902WJZZ	Operation Manual (LC-37GA6E) (POLISH..)	S AF	AR
X7	TINS-B903WJZZ	Operation Manual (LC-37GA6R) (POLISH..)	S	
X8	TCAUZA135WJZZ	Caution Card	S -	-