




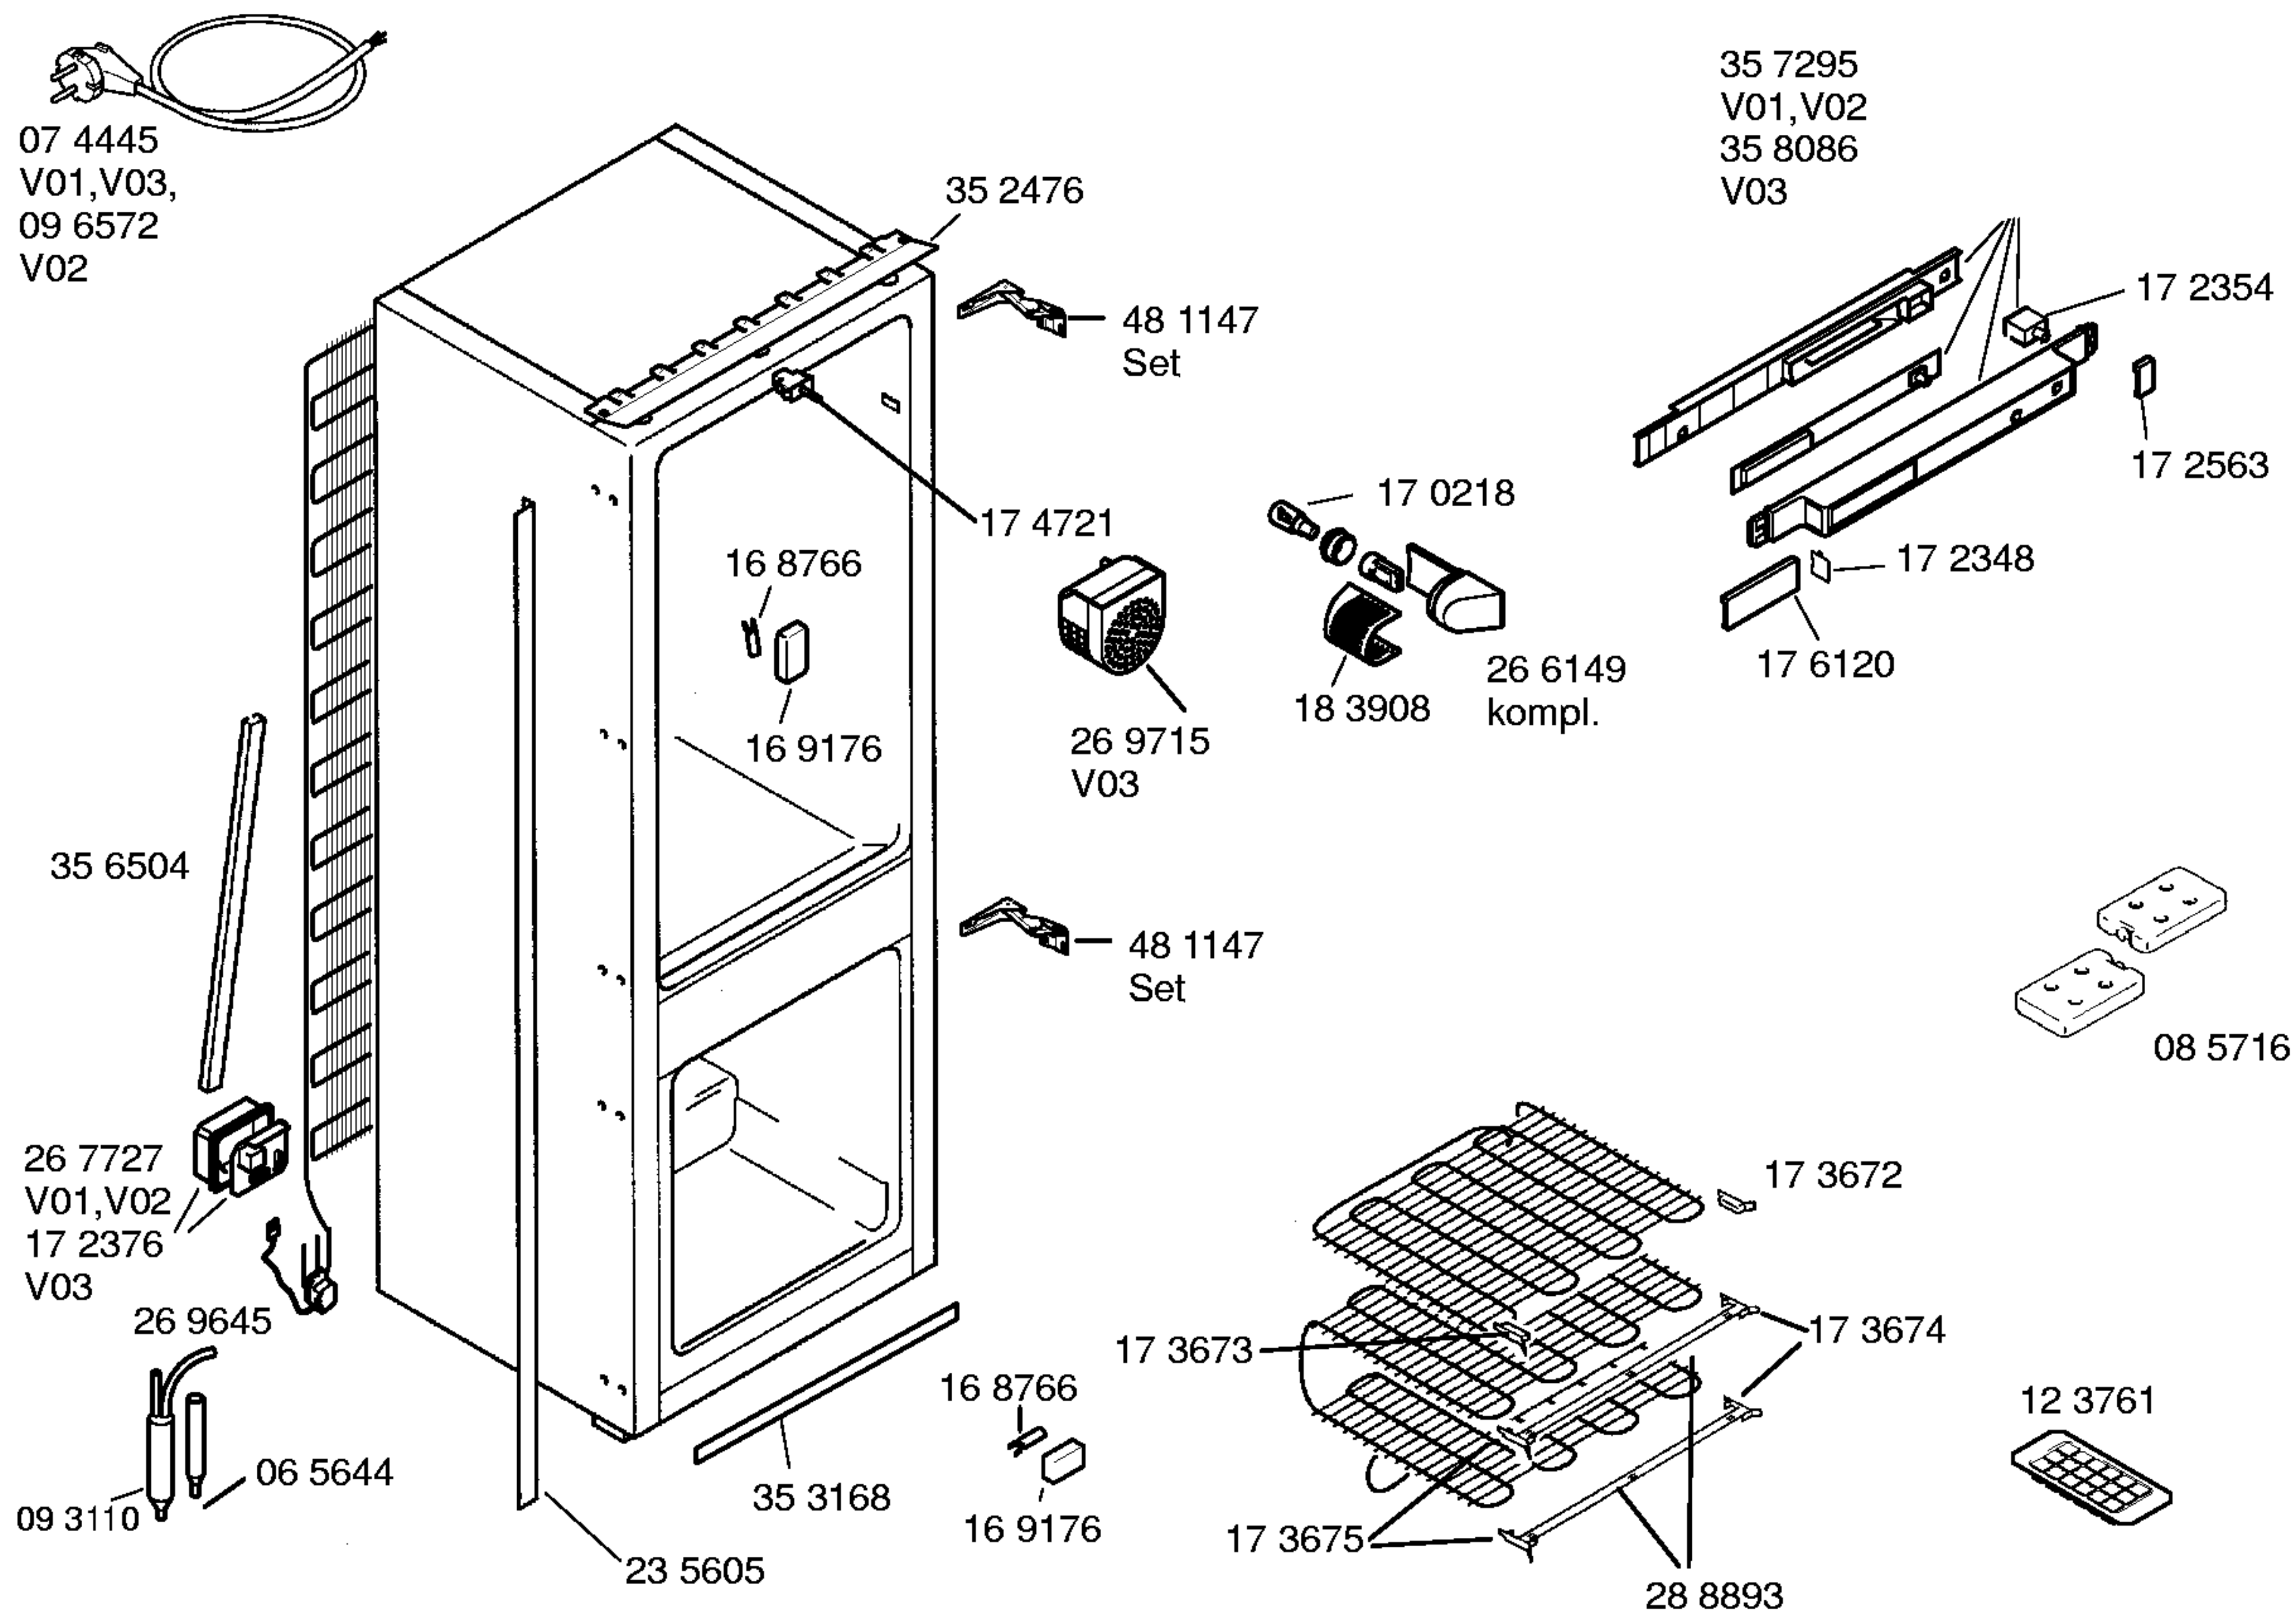

Gebrauchsanweisung
58 1223
(D,GB,F,I,NL,E,P,GR,TR)
58 1224
(I,E,P,GR)
Montageanleitung
52 2494 (DK,N,S,SF)

Befestigungssatz
26 6910

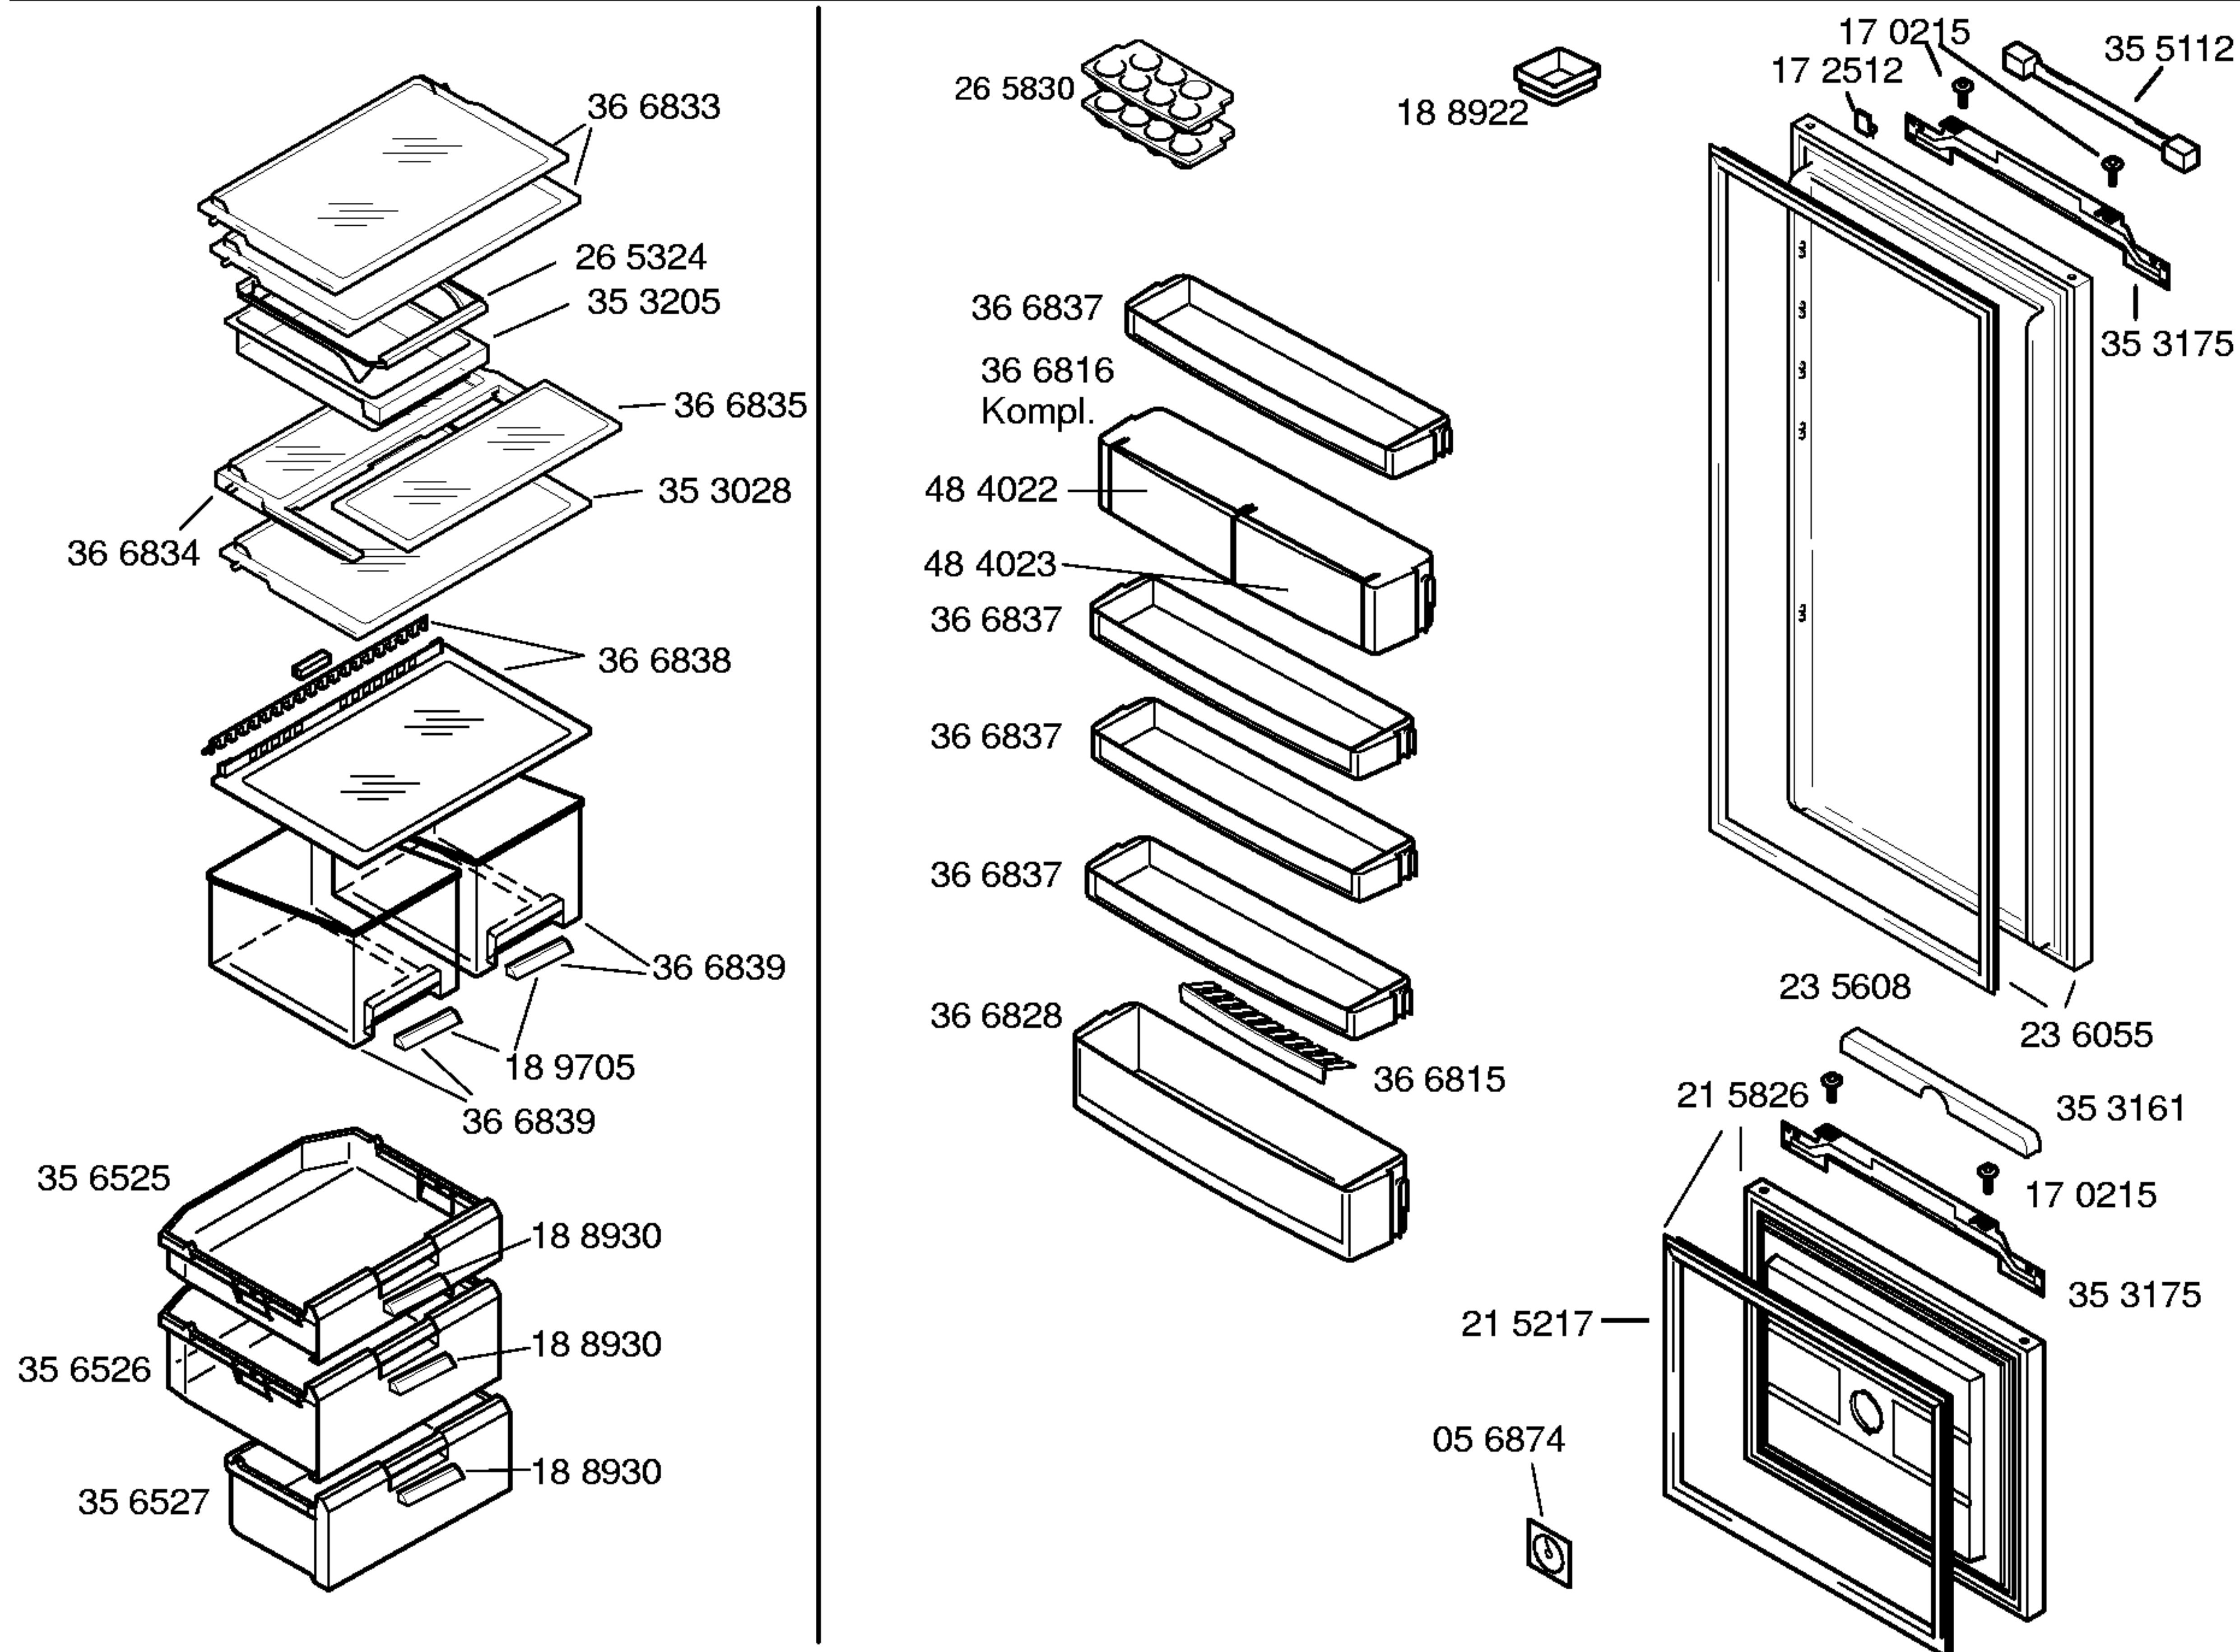

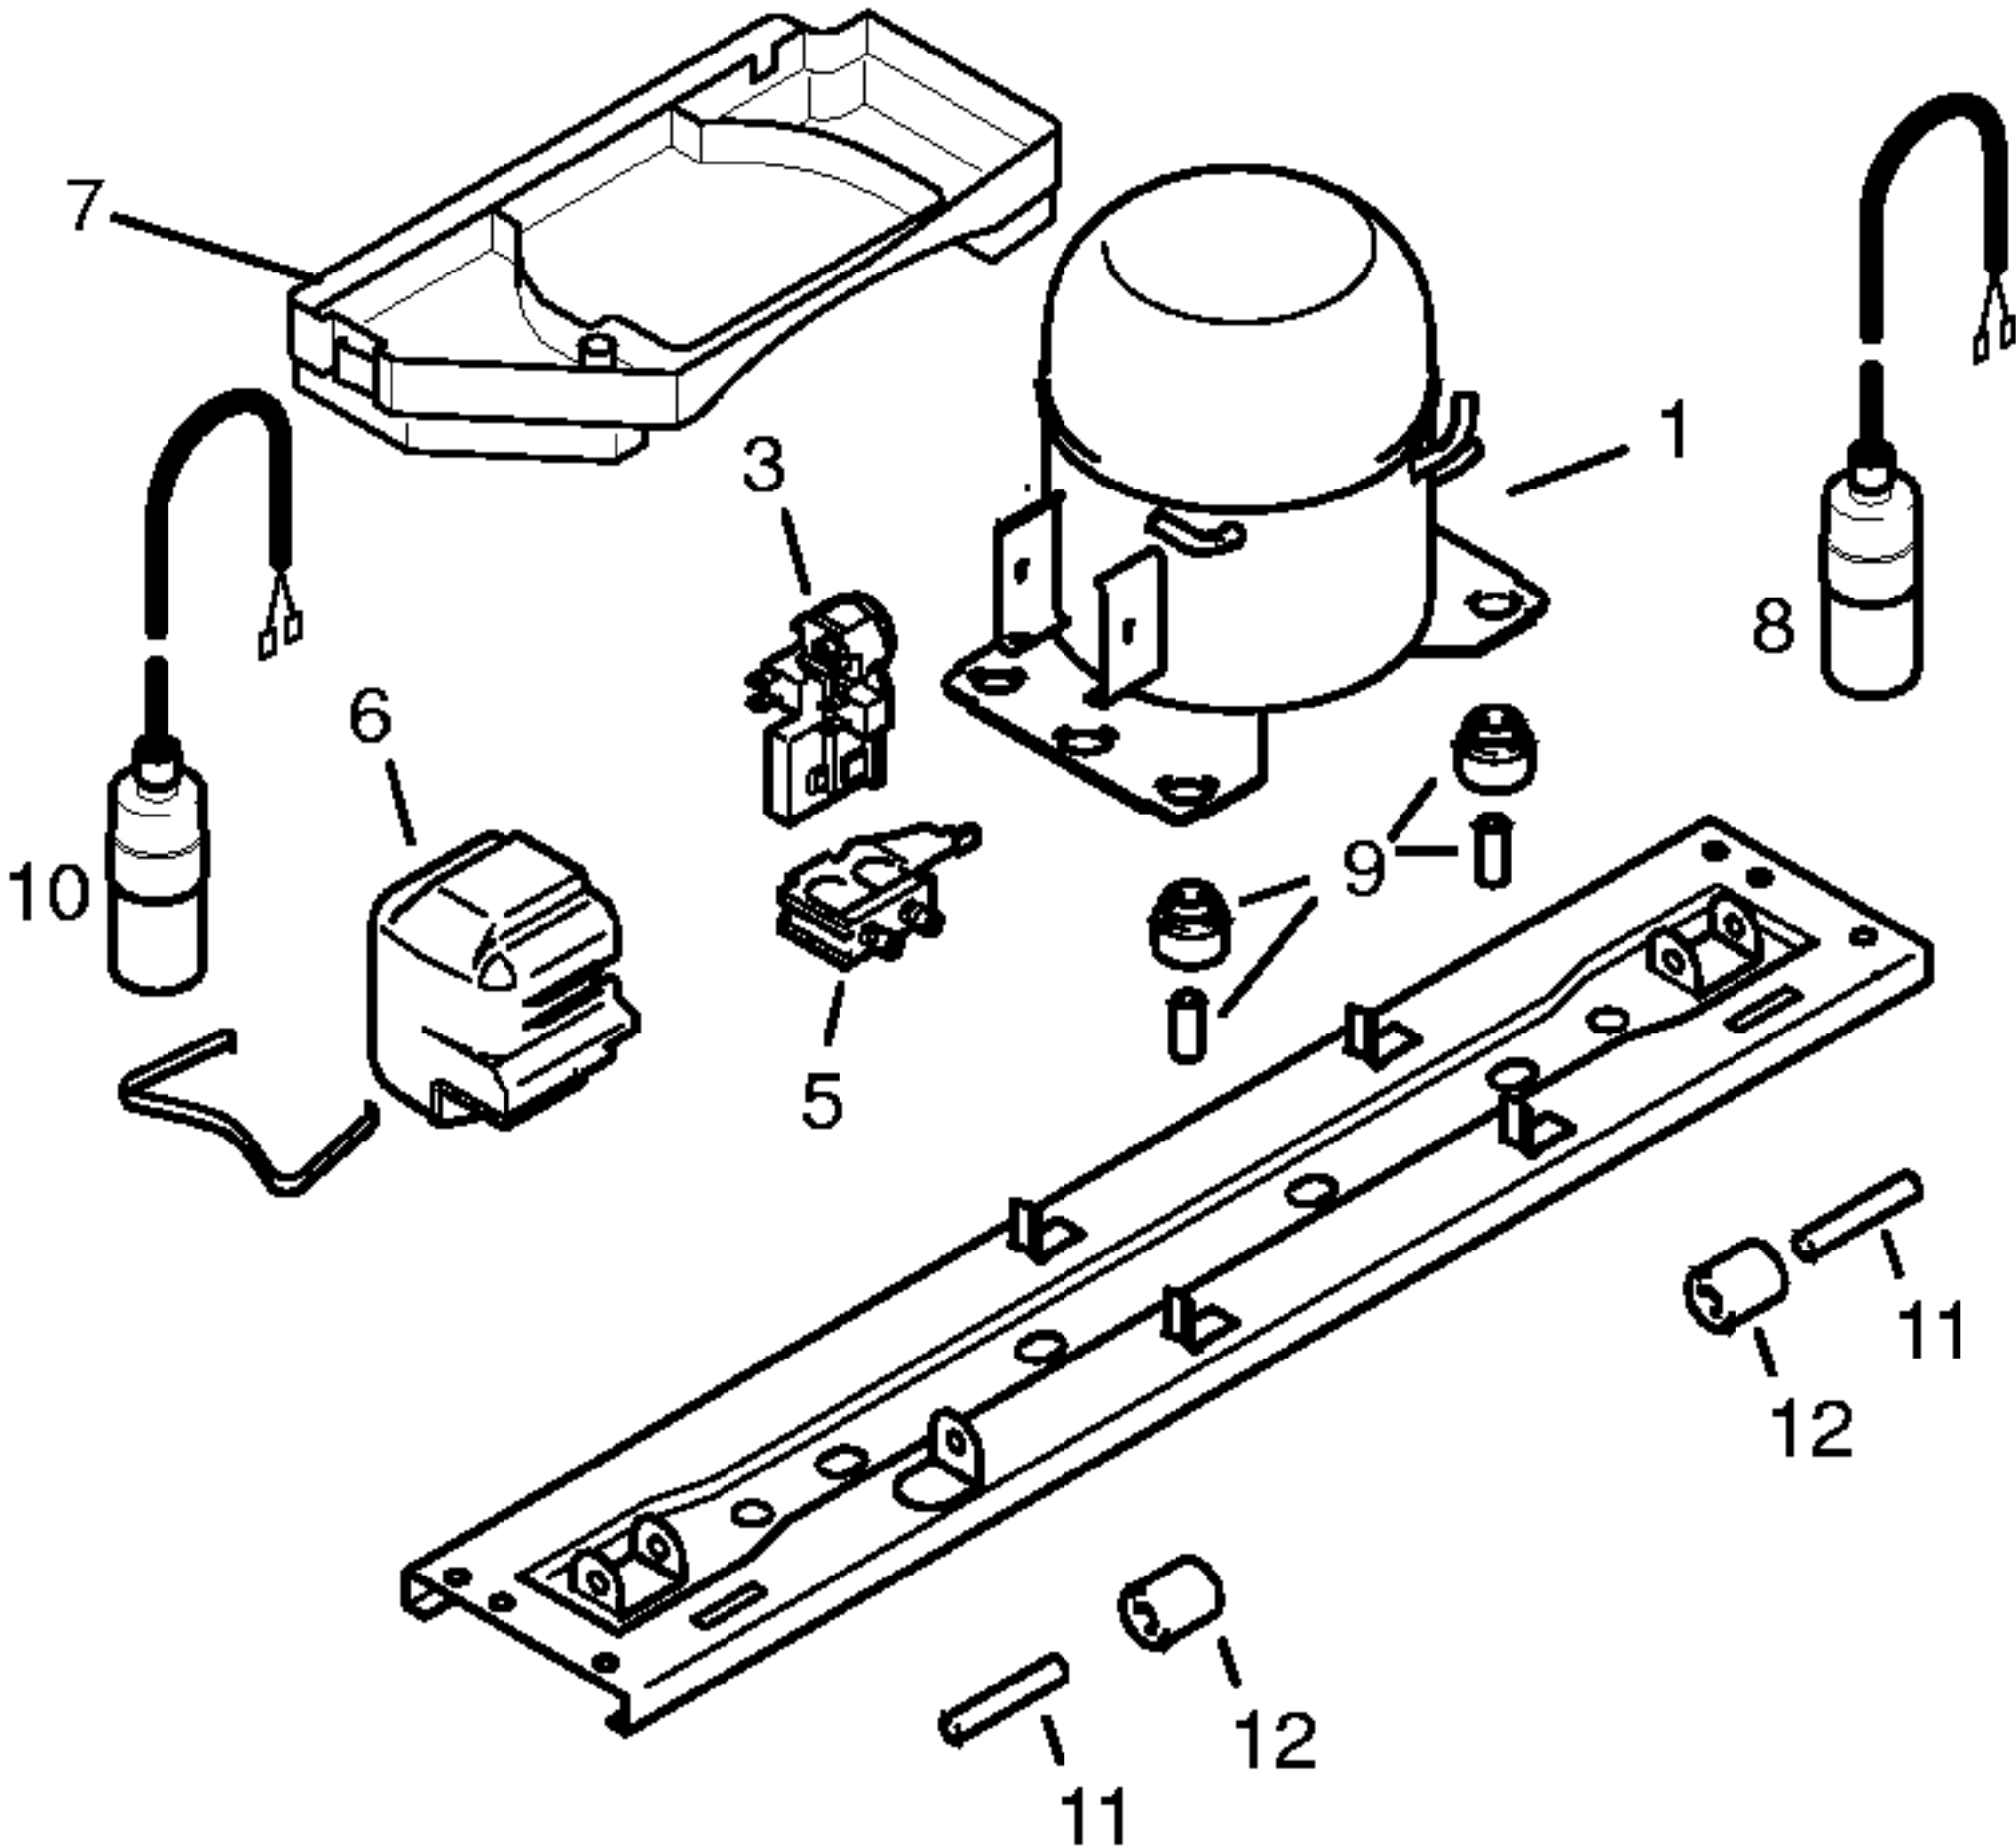

Pos.	V01-V03		
	Matsushita		
	DGX 110 E		
1	14 2360		
2			
3	18 8959		
4			
5	18 3590		
6	41 6624		
7	26 6624		
8	41 9025		
9	05 0166		
10	16 8603		
11	01 9017		
12	01 1916		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Matsushita			
Typ/Type		DGX 110 E			
Förderleistung/Delivery/Débit		l/h	1955		
Anlaufstrom/Starting current/Cour de démarrage		A	0,5		
Widerstand/Resistance/Résistance		Ha/main/prin	Ω	14,7	
		Hi/aux	Ω	27,3	
Temp.-Regler/Thermostat		Elektronisch			
Typ/Type		EIN AUS			
Regelstellung/Position		-15 -16			
Schaltwerte/Switching values		"warm"	-19 -20		
Valeurs de commutation		"kalt"	-23 -24		
		"alarm"	-9 -14		
Füllmenge/Fill.quantity/Charge		R600a	*		
Anschlußwert/Conn.load/Puiss. connectée		W	104		
Heizung/Heater/Chauffage		Abtauheizung Rinnenheizung			
Widerstand/Resistance/Résistance		Ω	288	240	
Leistung/Power/Puissance		W	200	24	
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω	560		
Raumtemperaturfühler		C	K	C	k
		+10	9,9	-18	43,3
		+5	12,7	-22	54,6
		+0	16,3	-26	69,4
Widerstand NTC-Fühler		°C	kΩ	°C	kΩ
		-1	17,3	-15	36,5
		-9	26,2	-16	38,8
		-14	34,5	-19	45,9
Magnetventil/Magnetic valve/Electrovanne					
		Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension		V			

* siehe Typenschild