

## SECTION 5 EXPLODED VIEWS


**NOTE :**

- Non-serviceable items with no part number and no description are not stocked because they are not required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

**5-1. CHASSIS**

**Note :** Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.


**Note :** The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

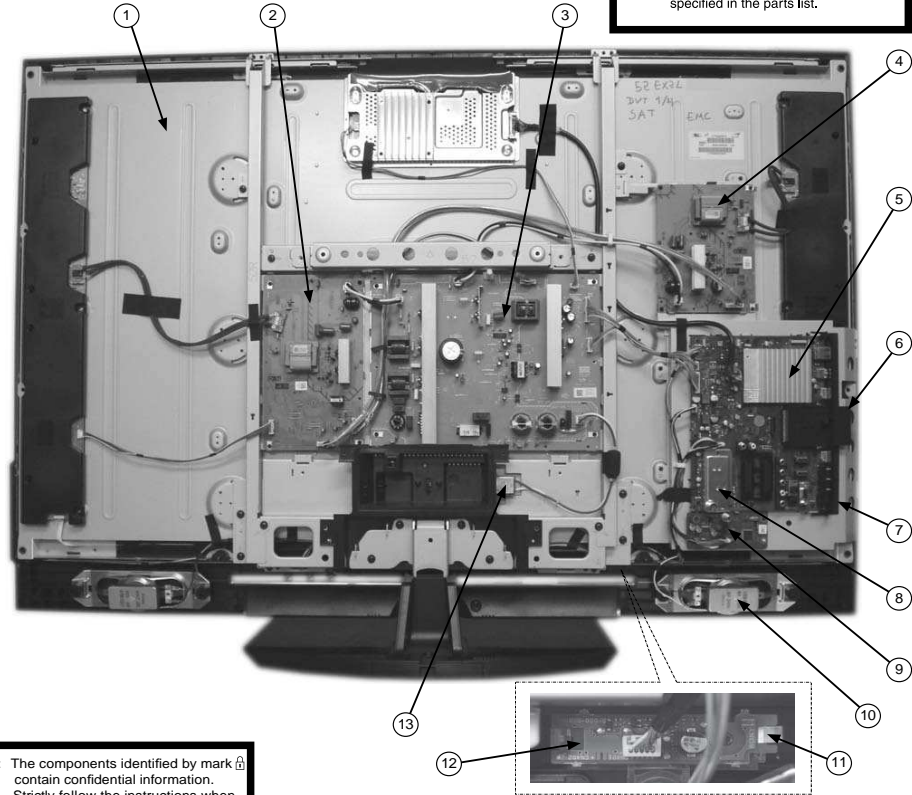

**Note :** The components identified by mark Δ contain confidential information. Strictly follow the instructions whenever the components are repaired and/or replaced.


REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
1	Δ 1-802-886-11	LCD PANEL (32 INCH FHD TFT)	32 inches	6	*4-136-306-01	CARD, DUMMY	
	Δ 1-802-885-11	LCD PANEL (37 INCH FHD TFT)	37 inches	7	4-132-225-02	BRACKET, SIDE JACK (STD)	
	Δ 1-802-877-21	LCD PANEL (40 INCH FHD TFT)	40 inches	8	8-597-702-00	UNIVERSAL SIL-TU SUT-HE101T	
	Δ 1-802-876-12	LCD PANEL (46 INCH FHD TFT)	46 inches	9	A-1742-442-A	TUS BOARD, COMPLETE	
	Δ 1-802-875-13	LCD PANEL (52 INCH FHD TFT)	52 inches	10	1-858-301-11	LOUDSPEAKER	32 inches
2	A-1663-196-A	D5 BOARD, COMPLETE	52 inches		1-858-184-11	LOUDSPEAKER	37 inches
3	1-474-153-13	POWER UNIT (G2)	32 inches		1-858-169-11	LOUDSPEAKER	40 inches
	1-474-162-13	POWER UNIT (G4)	37 inches		1-858-170-11	LOUDSPEAKER	46 inches
	A-1660-720-A	IP1 BOARD, COMPLETE	40 inches		1-858-183-11	LOUDSPEAKER	52 inches
	A-1660-728-A	IP2 BOARD, COMPLETE	46 inches	11	4-123-491-01	GUIDE, IR (B)	
	1-487-340-11	POWER UNIT (G5)	52 inches	12	A-1704-202-A	HSN BOARD, COMPLETE	
4	A-1663-200-A	D6 BOARD, COMPLETE	52 inches	13	Δ 1-822-617-11	AC INLET FILTER	40/46 inches
5	Δ A-1743-179-A	BA BOARD, COMPLETE			Δ 1-822-622-11	AC INLET FILTER	52 inches

5-1. CHASSIS Cont.

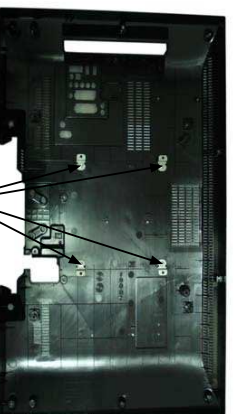

**Note :** Les composants identifiés par un triangle et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacez que par des pièces du numéro spécifié.

**Note :** The components identified by shape and marked Δ are critical for safety. Replace only with the part number specified in the parts list.

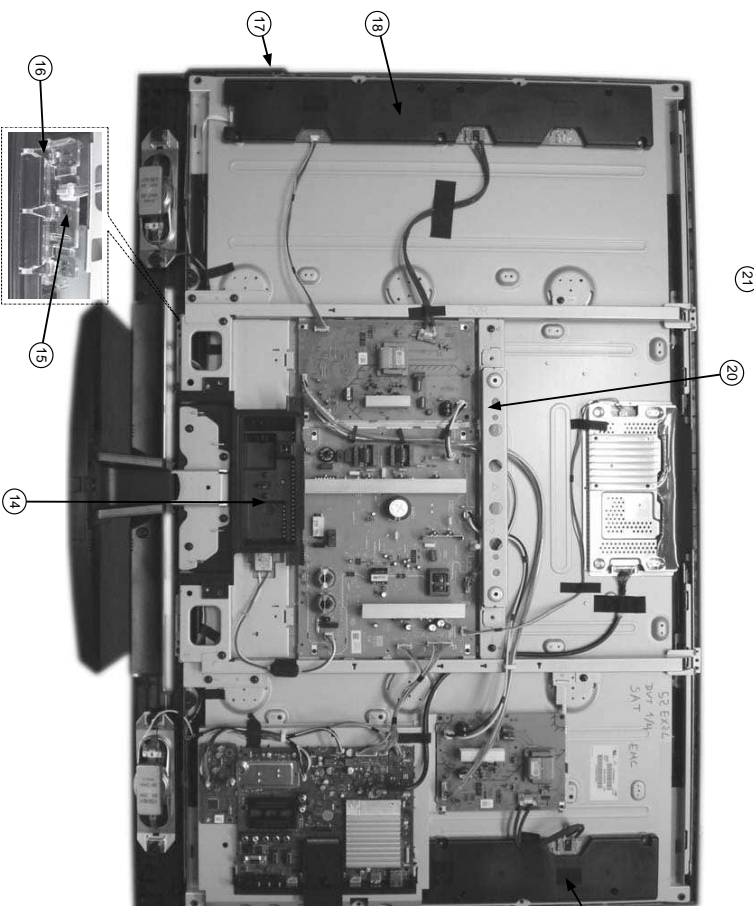

REF.NO.	PARTNO	DESCRIPTION	REMARK	REF.NO.	PARTNO	DESCRIPTION	REMARK
14	4-123-485-01	COVER, UNDER (S)	32 inches	18	1-857-394-11	ETC-INVERTER MT BOARD	32 in
	4-136-502-21	COVER, UNDER (M)	37 inches		1-857-395-11	ETC-INVERTER MT BOARD	37 in
	4-123-484-01	COVER, UNDER (M)	40/46 inches		1-857-370-11	ETC-INVERTER MT BOARD	40 in
	4-123-483-01	COVER, UNDER (L)	52 inches		1-857-371-11	ETC-INVERTER MT BOARD	46 in
15	A-1671-629-A	HEAA BOARD, COMPLETE	32/37/40 inches	19	1-857-372-11	ETC-INVERTER MT BOARD (LEFT)	52 in
16	4-123-490-01	GUIDE, LED (B-S)	46/52 inches	20	1-857-373-11	ETC-INVERTER MT BOARD (RIGHT)	52 in
17	4-123-489-01	GUIDE, LED (B-U)		21	4-129-446-01	FRAME, VESA TOP (S2)	
	1-487-233-11	SWITCH UNIT			4-122-585-01	FRAME, VESA (M6)	

5-2. BEZEL ASSY & STAND ASSY

**Note :** Les composants identifiés par un  
 cadre et par une marque Δ sont  
 d'une importance critique pour la  
 sécurité. Ne les remplacer que par  
 des pièces du numéro spécifié.

**Note :** The components identified by shape  
 and marked Δ are critical for safety.  
 Replace only with the part number  
 specified in the parts list.




REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
51	X-2346-387-2	BEZEL ASSY (32B)	32 inches	52	X-2345-373-1	STAND ASSY (M2)	32 inches
	X-2346-404-2	BEZEL ASSY (37B)	37 inches		X-2345-664-2	STAND ASSY (M12)	37/40 inches
	X-2349-430-2	BEZEL ASSY (40B)	40 inches		X-2345-668-2	STAND ASSY (L2A)	46 inches
	X-2346-543-2	BEZEL ASSY (46B)	46 inches		X-2345-970-2	STAND ASSY (L12A)	52 inches
	X-2349-467-1	BEZEL ASSY (52)	52 inches				

### 5-3. REAR COVER ASSY & POWER SUPPLY CORDS

**Note :** Les composants identifiés par un triangle et par une marque  $\Delta$  sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

**Note :** The components identified by a triangle and marked  $\Delta$  are critical for safe. Replace only with the part number specified in the parts list.

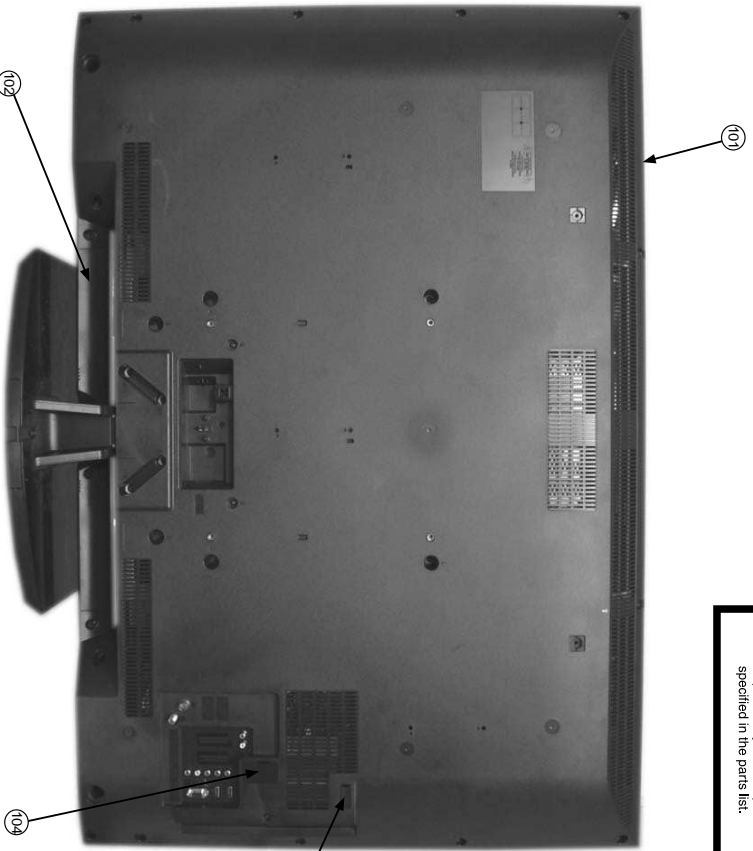

REF.NO.	PARTNO	DESCRIPTION	REMARK
101	X-2349-457-1	REAR COVER ASSY (32C SHN) 32 inches	
	X-2349-459-1	REAR COVER ASSY (37C SHN) 37 inches	
	X-2349-461-1	REAR COVER ASSY (40C SHN) 40 inches	
	X-2349-464-1	REAR COVER ASSY (46C SHN) 46 inches	
	X-2349-466-1	REAR COVER ASSY (52C SHN) 52 inches	
102	4-123-488-02	BAR, UNDER (S)	32/37/40 inches
	4-123-487-01	BAR, UNDER (M)	46 inches
	4-123-486-01	BAR, UNDER (L)	52 inches



REF.NO.	PARTNO	DESCRIPTION	REMARK
103	4-122-617-01	COVER, ECS (S)	(TTL Jtg)
104	3-106-546-31	COVER, ECS	Memory Slot
105	1-832-132-31	POWER-SUPPLY CORD (AEP)	32/37 inch
$\Delta$	1-835-200-11	POWER-SUPPLY CORD (AEP)	40/46/52 inch
$\Delta$	1-832-170-41	POWER-SUPPLY CORD (UK)	32/37 inch
$\Delta$	1-835-165-11	POWER-SUPPLY CORD (UK)	40/46/52 inch

UK MODELS ONLY


## SECTION 6 ELECTRICAL PARTS LIST

### PARTS LISTING TABLE OF CONTENTS

	<u>Page</u>
BA BOARD COMPLETE Parts List :	58
HL4A BOARD COMPLETE Parts List :	72
HSN BOARD COMPLETE Parts List :	72
TUS BOARD COMPLETE Parts List :	73
ACCESSORIES AND CONNECTORS :	75
REMOTE COMMANDER :	75

Note: To ensure safety and reliability it is Sony policy that power supply boards should not be repaired at component level in the field as a result... The D5N, D6N, G2, G4, G5, IP1 and IP2 boards are regarded as non service items for exchange only and are not indicated in the parts list of this service manual.

Note : Items marked "xxx" are not stocked since they are seldom required for routine service.  
Some delay should be anticipated when ordering these items.

Note : The components identified by mark  contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.

REFNO.	PARTNO	DESCRIPTION	REMARK	REFNO.	PARTNO	DESCRIPTION	REMARK
<b>A-1743-179-A BA Board Complete</b>							
< CAPACITOR >							
C1001	1-164-874-11	CERAMIC CHIP 100PF	5.00 <sup>8</sup> 50V	C2015	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C1002	1-112-781-11	CERAMIC CHIP 1UF	10 <sup>8</sup> 10V	C2016	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C1003	1-114-325-11	CERAMIC CHIP 0.1UF	10 <sup>8</sup> 25V	C2017	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C1004	1-114-325-11	CERAMIC CHIP 0.1UF	10 <sup>8</sup> 25V	C2018	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C1006	1-114-331-11	CERAMIC CHIP 4.7UF	10 <sup>8</sup> 10V	C2019	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C1007	1-114-553-11	CERAMIC CHIP 100F	10 <sup>8</sup> 16V	C2020	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C1008	1-114-553-11	CERAMIC CHIP 100F	10 <sup>8</sup> 16V	C2021	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C1010	1-165-872-21	ELECT CHIP 47UF	20 <sup>8</sup> 6.3V	C2022	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C1011	1-114-532-21	ELECT CHIP 330UF	20 <sup>8</sup> 4V	C2023	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C1012	1-100-909-11	CERAMIC CHIP 100F	10 <sup>8</sup> 6.3V	C2024	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C1013	1-114-332-11	CERAMIC CHIP 220F	10 <sup>8</sup> 6.3V	C2030	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C1014	1-100-909-11	CERAMIC CHIP 100F	10 <sup>8</sup> 6.3V	C2031	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C1015	1-112-781-11	CERAMIC CHIP 1UF	10 <sup>8</sup> 10V	C2032	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C1017	1-112-781-11	CERAMIC CHIP 1UF	10 <sup>8</sup> 10V	C2028	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C1018	1-112-781-11	CERAMIC CHIP 1UF	10 <sup>8</sup> 10V	C2029	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C1019	1-100-916-11	CERAMIC CHIP 0.1UF	10 <sup>8</sup> 16V	C2035	1-100-916-11	CERAMIC CHIP 0.1UF	10 <sup>8</sup> 1
C1020	1-112-064-11	CERAMIC CHIP 2.2UF	10 <sup>8</sup> 10V	C2036	1-100-916-11	CERAMIC CHIP 0.1UF	10 <sup>8</sup> 1
C1021	1-100-916-11	CERAMIC CHIP 0.1UF	10 <sup>8</sup> 16V	C2037	1-100-916-11	CERAMIC CHIP 0.1UF	10 <sup>8</sup> 1
C1022	1-112-064-11	CERAMIC CHIP 2.2UF	10 <sup>8</sup> 10V	C2500	1-100-916-11	CERAMIC CHIP 0.1UF	10 <sup>8</sup> 1
C1024	1-112-781-11	CERAMIC CHIP 1UF	10 <sup>8</sup> 10V	C2501	1-100-909-11	CERAMIC CHIP 100F	10 <sup>8</sup> 6
C1303	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 25V	C2502	1-100-916-11	CERAMIC CHIP 0.1UF	10 <sup>8</sup> 1
C1304	1-114-553-11	CAP CERAMIC 0.01UF X7R (1410)	10 <sup>8</sup> 25V	C2503	1-100-916-11	CERAMIC CHIP 0.1UF	10 <sup>8</sup> 1
C1306	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 25V	C2506	1-114-399-21	ELECT CHIP 47UF	20 <sup>8</sup> 6
C1321	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 25V	C3000	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C1322	1-114-331-11	CERAMIC CHIP 4.7UF	10 <sup>8</sup> 10V	C3001	1-100-905-11	CERAMIC CHIP 0.001UF	10 <sup>8</sup> 5
C1324	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 25V	C3002	1-100-905-11	CERAMIC CHIP 0.001UF	10 <sup>8</sup> 5
C1328	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 25V	C3008	1-100-905-11	CERAMIC CHIP 0.001UF	10 <sup>8</sup> 5
C1335	1-100-916-11	CERAMIC CHIP 0.1UF	10 <sup>8</sup> 16V	C3009	1-100-905-11	CERAMIC CHIP 0.001UF	10 <sup>8</sup> 5
C1357	1-100-912-11	CERAMIC CHIP 1UF	10 <sup>8</sup> 25V	C3004	1-100-905-11	CERAMIC CHIP 0.001UF	10 <sup>8</sup> 5
C1374	1-100-912-11	CERAMIC CHIP 1UF	10 <sup>8</sup> 25V	C3005	1-100-905-11	CERAMIC CHIP 0.001UF	10 <sup>8</sup> 5
C1380	1-100-916-11	CERAMIC CHIP 0.1UF	10 <sup>8</sup> 16V	C3006	1-100-905-11	CERAMIC CHIP 0.001UF	10 <sup>8</sup> 5
C1381	1-112-776-11	CERAMIC CHIP 0.0047UF	10 <sup>8</sup> 50V	C3007	1-112-064-11	CERAMIC CHIP 2.2UF	10 <sup>8</sup> 1
C1382	1-112-068-11	CERAMIC CHIP 220PF	10 <sup>8</sup> 50V	C3008	1-100-905-11	CERAMIC CHIP 0.001UF	10 <sup>8</sup> 5
C1384	1-114-553-11	CERAMIC CHIP 100F	10 <sup>8</sup> 16V	C3009	1-100-905-11	CERAMIC CHIP 0.001UF	10 <sup>8</sup> 5
C1385	1-114-325-11	CERAMIC CHIP 0.1UF	10 <sup>8</sup> 25V	C3010	1-112-777-11	CERAMIC CHIP 0.001UF	10 <sup>8</sup> 2
C1386	1-114-553-11	CERAMIC CHIP 100F	10 <sup>8</sup> 16V	C3011	1-100-905-11	CERAMIC CHIP 0.001UF	10 <sup>8</sup> 5
C2000	1-164-846-11	CERAMIC CHIP 6PF	0.50PF 50V	C3012	1-100-905-11	CERAMIC CHIP 0.001UF	10 <sup>8</sup> 5
C2001	1-164-846-11	CERAMIC CHIP 6PF	0.50PF 50V	C3013	1-100-905-11	CERAMIC CHIP 0.001UF	10 <sup>8</sup> 5
C2007	1-100-909-11	CERAMIC CHIP 100F	10 <sup>8</sup> 6.3V	C3014	1-100-905-11	CERAMIC CHIP 0.001UF	10 <sup>8</sup> 5
C2008	1-100-909-11	CERAMIC CHIP 100F	10 <sup>8</sup> 6.3V	C3015	1-112-781-11	CERAMIC CHIP 1UF	10 <sup>8</sup> 1
C2009	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 25V	C3016	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 2
C2010	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 25V	C3017	1-100-905-11	CERAMIC CHIP 0.001UF	10 <sup>8</sup> 5
C2011	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 25V	C3018	1-100-916-11	CERAMIC CHIP 0.1UF	10 <sup>8</sup> 1
C2012	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 25V	C3019	1-100-916-11	CERAMIC CHIP 0.1UF	10 <sup>8</sup> 1
C2013	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 25V	C3020	1-100-909-11	CERAMIC CHIP 100F	10 <sup>8</sup> 6
C2014	1-112-777-11	CERAMIC CHIP 0.01UF	10 <sup>8</sup> 25V	C3021	1-100-909-11	CERAMIC CHIP 100F	10 <sup>8</sup> 6

REFNO.	PARTNO.	DESCRIPTION	REMARK	REFNO.	PARTNO.	DESCRIPTION	REMARK
C3022	1-112-779-11	CERAMIC CHIP 0.040UF	10% 25V	C3083	1-100-905-11	CERAMIC CHIP 0.0010UF	10% 50V
C3023	1-114-970-11	CERAMIC CHIP 4.70UF	10% 16V	C3084	1-100-905-11	CERAMIC CHIP 0.0010UF	10% 50V
C3025	1-114-970-11	CERAMIC CHIP 4.70UF	10% 16V	C3085	1-100-909-11	CERAMIC CHIP 100PF	10% 60V
C3026	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C3086	1-100-909-11	CERAMIC CHIP 100PF	10% 60V
C3027	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V	C3087	1-100-909-11	CERAMIC CHIP 100PF	10% 60V
C3028	1-114-532-21	ELECT CHIP 330UF	20% 4V	C3088	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3030	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3089	1-100-905-11	CERAMIC CHIP 0.0010UF	10% 50V
C3031	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3501	1-100-909-11	CERAMIC CHIP 100PF	10% 60V
C3032	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3502	1-100-909-11	CERAMIC CHIP 100PF	10% 60V
C3033	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3503	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3034	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3505	1-100-909-11	CERAMIC CHIP 100PF	10% 60V
C3035	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3506	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3036	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3507	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3037	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3508	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3038	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3509	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3039	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3510	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3040	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3511	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3041	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3512	1-164-974-11	CERAMIC CHIP 100PF	5.00% 50V
C3042	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3513	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3043	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3514	1-100-909-11	CERAMIC CHIP 100PF	10% 60V
C3044	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3515	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3045	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3516	1-114-400-21	ELECT CHIP 100UF	20% 60V
C3046	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3517	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C3047	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3518	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C3048	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3519	1-100-909-11	CERAMIC CHIP 0.0010UF	10% 50V
C3049	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3520	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3050	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3523	1-100-905-11	CERAMIC CHIP 0.0010UF	10% 50V
C3051	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3524	1-100-161-21	ELECT CHIP 220UF	20% 10V
C3052	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3525	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3053	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3526	1-100-909-11	CERAMIC CHIP 100PF	10% 60V
C3057	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3527	1-100-909-11	CERAMIC CHIP 100PF	10% 60V
C3058	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3801	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3059	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3806	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3060	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3807	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3061	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3808	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3062	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3809	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3063	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3810	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3064	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C3811	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3065	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	C3812	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3066	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	C3813	1-100-905-11	CERAMIC CHIP 0.0010UF	10% 50V
C3067	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	C3814	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C3068	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	C3815	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3069	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	C4000	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3070	1-100-905-11	CERAMIC CHIP 0.0010UF	10% 50V	C4001	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3077	1-100-904-11	CERAMIC CHIP 330PF	10% 50V	C4003	1-164-950-11	CERAMIC CHIP 10PF	0.50PF 50V
C3078	1-100-905-11	CERAMIC CHIP 0.0010UF	10% 50V	C4006	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3079	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4007	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C3080	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4008	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V
C3081	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4009	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C3082	1-100-905-11	CERAMIC CHIP 0.0010UF	10% 50V	C4010	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10V



REFNO.	PARTNO.	DESCRIPTION	REMARK	REFNO.	PARTNO.	DESCRIPTION	REMARK
C4011	1-112-777-11	CERAMIC CHIP 0.01UF	10%	C4419	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4012	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C4420	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4013	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C4421	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4014	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C4423	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C4015	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C4424	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C4016	1-112-779-11	CERAMIC CHIP 0.047UF	10%	C4425	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C4017	1-164-974-11	CERAMIC CHIP 100PF	5.00%	C4427	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C4018	1-164-978-11	CERAMIC CHIP 150PF	5%	C4428	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C4019	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C4429	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C4020	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C4430	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C4021	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C4431	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C4022	1-100-909-11	CERAMIC CHIP 100F	10%	C4432	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C4027	1-100-909-11	CERAMIC CHIP 100F	10%	C4433	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C4028	1-100-909-11	CERAMIC CHIP 100F	10%	C4434	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C4029	1-100-909-11	CERAMIC CHIP 100F	10%	C4502	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4030	1-100-909-11	CERAMIC CHIP 100F	10%	C4503	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4031	1-100-909-11	CERAMIC CHIP 100F	10%	C4504	1-100-909-11	CERAMIC CHIP 100F	10%
C4032	1-100-909-11	CERAMIC CHIP 100F	10%	C4506	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4033	1-100-909-11	CERAMIC CHIP 100F	10%	C4507	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4034	1-100-909-11	CERAMIC CHIP 100F	10%	C4508	1-114-689-11	CERAMIC CHIP 2.20F	10%
C4035	1-100-909-11	CERAMIC CHIP 100F	10%	C4509	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4036	1-100-909-11	CERAMIC CHIP 100F	10%	C4510	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4037	1-100-909-11	CERAMIC CHIP 100F	10%	C4511	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4038	1-100-909-11	CERAMIC CHIP 100F	10%	C4512	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C4039	1-100-909-11	CERAMIC CHIP 100F	10%	C4513	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C4056	1-114-354-11	CAP. CERAMIC 0.1UF XTR (1410)		C4514	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C4057	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C4515	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C4058	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C4516	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4200	1-112-781-11	CERAMIC CHIP 1UF	10%	C4517	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4201	1-112-781-11	CERAMIC CHIP 1UF	10%	C5004	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4202	1-112-781-11	CERAMIC CHIP 1UF	10%	C5005	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4205	1-112-781-11	CERAMIC CHIP 1UF	10%	C5006	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4209	1-112-781-11	CERAMIC CHIP 1UF	10%	C5007	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4210	1-112-781-11	CERAMIC CHIP 1UF	10%	C5009	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4211	1-112-781-11	CERAMIC CHIP 1UF	10%	C5010	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4213	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C5011	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4214	1-114-331-11	CERAMIC CHIP 4.7UF	10%	C5012	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4401	1-116-979-11	CERAMIC CHIP 100F	10%	C5027	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4402	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C5500	1-112-781-11	CERAMIC CHIP 1UF	10%
C4406	1-114-332-11	CERAMIC CHIP 220F	10%	C5501	1-100-909-11	CERAMIC CHIP 0.0010UF	10%
C4407	1-100-909-11	CERAMIC CHIP 100F	10%	C5505	1-112-781-11	CERAMIC CHIP 1UF	10%
C4408	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C5506	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4409	1-112-779-11	CERAMIC CHIP 0.047UF	10%	C5507	1-112-781-11	CERAMIC CHIP 1UF	10%
C4410	1-112-779-11	CERAMIC CHIP 0.047UF	10%	C5509	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4411	1-112-779-11	CERAMIC CHIP 0.047UF	10%	C5510	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4413	1-112-779-11	CERAMIC CHIP 0.047UF	10%	C5511	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4414	1-112-779-11	CERAMIC CHIP 0.047UF	10%	C5512	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4415	1-112-779-11	CERAMIC CHIP 0.047UF	10%	C5514	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4416	1-112-779-11	CERAMIC CHIP 0.047UF	10%	C5516	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C4417	1-112-779-11	CERAMIC CHIP 0.047UF	10%	C5517	1-100-916-11	CERAMIC CHIP 0.1UF	10%



REFNO.	PARTNO.	DESCRIPTION	REMARK	REFNO.	PARTNO.	DESCRIPTION	REMARK
C5318	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7039	1-114-354-11	CAP, CERAMIC 0.1MF XTR (1410)	10% 10% 1
C5319	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7040	1-100-916-11	CERAMIC CHIP 0.1UF	10% 10% 1
C5322	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7041	1-112-777-11	CERAMIC CHIP 0.01UF	10% 2
C5323	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7042	1-164-850-11	CERAMIC CHIP 100PF	0.50PF 5
C5325	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7043	1-164-850-11	CERAMIC CHIP 100PF	0.50PF 5
C5328	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7202	1-112-777-11	CERAMIC CHIP 0.01UF	10% 2
C5329	1-164-850-11	CERAMIC CHIP 100PF	0.50PF 50V	C7203	1-114-193-11	ELECT CHIP 4700F	20% 2
C5330	1-164-852-11	CERAMIC CHIP 12PF	5.00% 50V	C7204	1-114-193-11	ELECT CHIP 4700F	20% 2
C5331	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7205	1-114-193-11	ELECT CHIP 4700F	20% 2
C5333	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7206	1-114-325-11	CERAMIC CHIP 0.1UF	10% 2
C5335	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7207	1-100-909-11	CERAMIC CHIP 100F	10% 6
C5336	1-114-130-11	CERAMIC CHIP 1UF	10% 6.3V	C7208	1-114-325-11	CERAMIC CHIP 0.1UF	10% 2
C5340	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7209	1-114-326-11	CERAMIC CHIP 0.22UF	10% 2
C5342	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C7210	1-100-912-11	CERAMIC CHIP 1UF	10% 2
C5343	1-100-909-11	CERAMIC CHIP 100F	10% 6.3V	C7211	1-114-326-11	CERAMIC CHIP 0.22UF	10% 2
C5344	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7212	1-114-326-11	CERAMIC CHIP 0.22UF	10% 2
C5346	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7213	1-114-326-11	CERAMIC CHIP 0.22UF	10% 2
C5348	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7214	1-100-912-11	CERAMIC CHIP 1UF	10% 2
C5350	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7215	1-114-325-11	CERAMIC CHIP 0.22UF	10% 2
C5351	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7216	1-114-325-11	CERAMIC CHIP 0.1UF	10% 2
C5352	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C7217	1-114-334-11	CERAMIC CHIP 100F	10% 2
C5353	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C7218	1-114-325-11	CERAMIC CHIP 0.1UF	10% 2
C7001	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7220	1-114-814-11	CERAMIC CHIP 0.33UF	10% 2
C7007	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7221	1-114-814-11	CERAMIC CHIP 0.33UF	10% 2
C7008	1-100-167-21	ELECT CHIP 220UF	20% 16V	C7222	1-114-814-11	CERAMIC CHIP 0.33UF	10% 2
C7009	1-114-354-11	CAP, CERAMIC 0.1MF XTR (1410)	10% 10%	C7223	1-114-814-11	CERAMIC CHIP 0.33UF	10% 2
C7010	1-114-354-11	CAP, CERAMIC 0.1MF XTR (1410)	10% 10%	C7224	1-164-874-11	CERAMIC CHIP 100PF	5.00% 5
C7011	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C7225	1-164-874-11	CERAMIC CHIP 100PF	5.00% 5
C7012	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7226	1-164-874-11	CERAMIC CHIP 100PF	5.00% 5
C7013	1-100-167-21	ELECT CHIP 220UF	20% 16V	C7227	1-164-874-11	CERAMIC CHIP 100PF	5.00% 5
C7014	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C7301	1-114-331-11	CERAMIC CHIP 4.7UF	10% 1
C7016	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7302	1-114-331-11	CERAMIC CHIP 4.7UF	10% 1
C7017	1-114-130-11	CERAMIC CHIP 1UF	10% 6.3V	C7303	1-137-942-21	ELECT CHIP 47UF	20% 2
C7018	1-114-130-11	CERAMIC CHIP 1UF	10% 6.3V	C7304	1-114-320-11	CAP, CERAMIC 1MF X6S (1410)	10% 5
C7020	1-114-354-11	CAP, CERAMIC 0.1MF XTR (1410)	10% 10%	C7305	1-112-776-11	CERAMIC CHIP 0.0047UF	10% 5
C7021	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7306	1-114-320-11	CAP, CERAMIC 1MF X6S (1410)	10% 2
C7023	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7307	1-112-776-11	CERAMIC CHIP 0.0047UF	10% 5
C7025	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C7308	1-114-325-11	CERAMIC CHIP 0.1UF	10% 2
C7026	1-114-520-11	CAP, CERAMIC 1MF X6S (1410)	10% 10%	C7311	1-114-320-11	CAP, CERAMIC 1MF X6S (1410)	10% 2
C7027	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7312	1-114-325-11	CERAMIC CHIP 0.1UF	10% 2
C7029	1-114-354-11	CAP, CERAMIC 0.1MF XTR (1410)	10% 10%	C7313	1-114-331-11	CERAMIC CHIP 4.7UF	10% 1
C7030	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C7314	1-100-916-11	CERAMIC CHIP 0.1UF	10% 1
C7031	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7315	1-114-325-11	CERAMIC CHIP 0.1UF	10% 1
C7032	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C7316	1-114-331-11	CERAMIC CHIP 4.7UF	10% 1
C7033	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7318	1-114-325-11	CERAMIC CHIP 0.1UF	10% 2
C7034	1-100-167-21	ELECT CHIP 220UF	20% 16V	C7319	1-114-334-11	CERAMIC CHIP 100F	10% 2
C7035	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7320	1-100-916-11	CERAMIC CHIP 0.1UF	10% 1
C7036	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C7321	1-114-331-11	CERAMIC CHIP 4.7UF	10% 1
C7037	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7322	1-116-870-11	CERAMIC CHIP 100F	10% 1
C7038	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7326	1-114-320-11	CAP, CERAMIC 1MF X6S (1410)	10% 1

REFNO.	PARTNO.	DESCRIPTION	REMARK	REFNO.	PARTNO.	DESCRIPTION	REMARK
C7327	1-114-520-11	CAP, CERAMIC 1UF X6S (1410)	10%	C7914	1-112-775-11	CERAMIC CHIP 0.0022UF	10%
C7328	1-112-781-11	CERAMIC CHIP 1UF	10%	C7916	1-114-520-11	CERAMIC CHIP 0.22UF	10%
C7329	1-112-781-11	CERAMIC CHIP 1UF	10%	C7918	1-114-531-11	CERAMIC CHIP 4.7UF	10%
C7330	1-114-534-11	CERAMIC CHIP 100PF	10%	C7923	1-135-566-11	ELECT CHIP 100UF	20%
C7331	1-100-766-21	ELECT CHIP 47UF	20%	C7925	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C7332	1-100-766-21	ELECT CHIP 47UF	20%	C7927	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C7335	1-112-781-11	CERAMIC CHIP 1UF	10%	C7929	1-164-874-11	CERAMIC CHIP 100PF	5.00%
C7336	1-112-781-11	CERAMIC CHIP 1UF	10%	C7930	1-114-532-11	CERAMIC CHIP 220PF	10%
C7337	1-112-781-11	CERAMIC CHIP 1UF	10%	C7931	1-112-781-11	CERAMIC CHIP 1UF	10%
C7338	1-112-781-11	CERAMIC CHIP 1UF	10%	C7932	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C7341	1-112-781-11	CERAMIC CHIP 1UF	10%	C7933	1-112-781-11	CERAMIC CHIP 1UF	10%
C7342	1-112-781-11	CERAMIC CHIP 1UF	10%	C7936	1-135-566-11	ELECT CHIP 100UF	20%
C7343	1-112-781-11	CERAMIC CHIP 1UF	10%	C7937	1-164-874-11	CERAMIC CHIP 100PF	5.00%
C7344	1-112-781-11	CERAMIC CHIP 1UF	10%	C7938	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C7345	1-112-781-11	CERAMIC CHIP 1UF	10%	C7940	1-135-566-11	ELECT CHIP 100UF	20%
C7346	1-112-781-11	CERAMIC CHIP 1UF	10%	C7944	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C7401	1-100-909-11	CERAMIC CHIP 100F	10%	C7945	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C7402	1-114-554-11	CAP, CERAMIC 0.1UF XTR (1410)	10%	C7946	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C7403	1-100-909-11	CERAMIC CHIP 100F	10%	C7955	1-112-781-11	CERAMIC CHIP 1UF	10%
C7405	1-112-781-11	CERAMIC CHIP 1UF	10%	C7963	1-112-064-11	CERAMIC CHIP 2.2UF	10%
C7406	1-112-774-11	CERAMIC CHIP 4700F	10%	C7976	1-135-566-11	ELECT CHIP 1000F	20%
C7407	1-112-781-11	CERAMIC CHIP 1UF	10%	C7977	1-135-566-11	ELECT CHIP 1000F	20%
C7408	1-112-774-11	CERAMIC CHIP 4700F	10%	C7978	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C7600	1-112-777-11	CERAMIC CHIP 0.01UF	10%	C7979	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C7601	1-112-777-11	CERAMIC CHIP 0.01UF	10%	C7980	1-135-566-11	ELECT CHIP 1000F	20%
C7602	1-112-777-11	CERAMIC CHIP 0.01UF	10%	C7981	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C7603	1-112-777-11	CERAMIC CHIP 0.01UF	10%	C7983	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C7604	1-112-777-11	CERAMIC CHIP 0.01UF	10%	C7984	1-112-781-11	CERAMIC CHIP 1UF	10%
C7605	1-112-777-11	CERAMIC CHIP 0.01UF	10%	C7985	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C7606	1-112-777-11	CERAMIC CHIP 0.01UF	10%	C7986	1-164-872-11	CERAMIC CHIP 82PF	5.00%
C7607	1-112-777-11	CERAMIC CHIP 0.01UF	10%	C7991	1-100-909-11	CERAMIC CHIP 100F	10%
C7608	1-112-777-11	CERAMIC CHIP 0.01UF	10%	C7994	1-100-916-11	CERAMIC CHIP 100F	10%
C7610	1-112-777-11	CERAMIC CHIP 0.01UF	10%	C9602	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C7611	1-112-777-11	CERAMIC CHIP 0.01UF	10%	C9608	1-112-781-11	CERAMIC CHIP 1UF	10%
C7612	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C9610	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C7614	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C9612	1-100-931-91	CERAMIC CHIP 0.001UF	2%
C7615	1-114-130-11	CERAMIC CHIP 1UF	10%	C9614	1-100-931-91	CERAMIC CHIP 0.001UF	2%
C7617	1-164-874-11	CERAMIC CHIP 100PF	5.00%	C9616	1-114-513-11	CERAMIC CHIP 1UF	10%
C7900	1-100-766-21	ELECT CHIP 47UF	20%	C9617	1-114-513-11	CERAMIC CHIP 1UF	10%
C7901	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C9636	1-100-916-11	CERAMIC CHIP 0.1UF	10%
C7903	1-112-778-11	CERAMIC CHIP 0.022UF	10%	C9637	1-112-777-11	CERAMIC CHIP 0.01UF	10%
C7904	1-164-874-11	CERAMIC CHIP 100PF	5.00%	C9638	1-162-927-11	CERAMIC CHIP 100PF	5.00%
C7905	1-112-779-11	CERAMIC CHIP 0.047UF	10%	C9639	1-162-927-11	CERAMIC CHIP 100PF	5.00%
C7906	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C9642	1-100-931-91	CERAMIC CHIP 0.001UF	2%
C7907	1-114-532-11	CERAMIC CHIP 220F	10%	C9643	1-100-931-91	CERAMIC CHIP 0.001UF	2%
C7908	1-112-776-11	CERAMIC CHIP 0.0047UF	10%	C9645	1-100-905-11	CERAMIC CHIP 0.001UF	10%
C7909	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C9646	1-114-513-11	CERAMIC CHIP 1UF	10%
C7910	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C9647	1-114-513-11	CERAMIC CHIP 1UF	10%
C7911	1-100-916-11	CERAMIC CHIP 0.1UF	10%	C9648	1-112-068-11	CERAMIC CHIP 220PF	10%
C7913	1-114-599-21	ELECT CHIP 47UF	20%	C9649	1-112-068-11	CERAMIC CHIP 220PF	10%



REFNO.	PARTNO.	DESCRIPTION	REMARK	REFNO.	PARTNO.	DESCRIPTION	REMARK
		< FERRITE BEAD >				< FILTER >	
F91000	1-481-515-11	FERRITE	00H	F14500	1-234-944-21	FILTER, EMI REMOVAL (SMD)	
F91302	1-400-834-11	FERRITE	00H	F14501	1-200-014-21	FILTER, EMI REMOVAL (SMD)	
F91303	1-400-834-11	FERRITE	00H	F17600	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
F91305	1-400-834-11	FERRITE	00H				
F91309	1-400-834-11	FERRITE	00H				
F91310	1-400-089-21	FERRITE	00H				
F92000	1-400-461-21	FERRITE	00H	IC1000	6-713-863-01	IC BD95408EV-E2	
F92001	1-400-461-21	FERRITE	00H	IC1001	6-711-041-01	IC S-1132B18-05T1G	
F93302	1-481-466-11	FERRITE	00H	IC1002	6-710-941-01	IC M9G1412MR (1.07V)	
F93303	1-481-466-11	FERRITE	00H	IC1003	6-711-338-01	IC N4M2878B3-15 (WE2)	
F93304	1-481-466-11	FERRITE	00H	IC1004	6-711-231-01	IC N4M2878B3-33 (WE2)	
F93305	1-481-466-11	FERRITE	00H				
F93306	1-481-466-11	FERRITE	00H	IC1308	6-714-033-01	IC BD93218E3-E2	
F93800	1-481-517-11	FERRITE	00H	IC2003	6-712-391-01	IC 74AHC1086M-125	
F94000	1-400-462-21	FERRITE	00H	IC2901	6-713-838-01	IC K9P12080C-P180T	
F94001	1-400-462-21	FERRITE	00H	IC2902	6-713-833-01	IC K9P12080C-P180T	
F94002	1-400-462-21	FERRITE	00H	IC3001	6-710-948-01	IC SMD608006PMBR	
F95000	1-400-462-21	FERRITE	00H				
F95001	1-400-462-21	FERRITE	00H	IC3002	6-714-882-01	IC N95T06M1-60G-AC	
F95500	1-500-922-11	FERRITE	00H	IC3003	6-714-882-01	IC N95T06M1-60G-AC	
F95501	1-500-922-11	FERRITE	00H	IC3500	6-712-715-11	IC K28R0411TR	
F95902	1-500-922-11	FERRITE	00H	IC3507	6-714-523-01	IC MIC2005-0-5VM5BR	
F97001	1-481-517-11	FERRITE	00H	IC3801	6-714-523-01	IC TC74LC245EK	
F97201	1-400-089-21	FERRITE	00H				
F97202	1-400-089-21	FERRITE	00H	IC3808	6-714-523-01	IC TC74LC245EK	
F97203	1-400-089-21	FERRITE	00H	IC3809	6-714-523-01	IC TC74LC245EK	
F97204	1-400-089-21	FERRITE	00H	IC3810	6-711-888-01	IC MIC2005-0-5VM5BR	
F97900	1-469-869-21	FERRITE	00H	IC4200	6-753-289-16	IC CA62140-14	
F97901	1-400-834-11	FERRITE	00H	IC4400	6-708-641-11	IC SMA115AHL/V1, 518	
F97902	1-400-834-11	FERRITE	00H	IC5500	6-713-333-11	IC PSR8420UL	
F97903	1-400-834-11	FERRITE	00H	IC5501	6-711-041-01	IC S-1132B18-05T1G	
F97904	1-400-834-11	FERRITE	00H	IC5502	6-713-820-01	IC MB91F313APC-BEL	
F97905	1-400-834-11	FERRITE	00H	IC5503	6-710-188-01	IC TC7SH125FU (5S80YF)	
F97906	1-400-834-11	FERRITE	00H	IC5504	6-710-188-01	IC TC7SH125FU (5S80YF)	
F97907	1-400-834-11	FERRITE	00H	IC5505	6-704-573-01	IC W2AC32-MNMG1(B)	
F97908	1-400-834-11	FERRITE	00H	IC5506	6-713-333-11	IC PSR8420UL	
F97909	1-400-834-11	FERRITE	00H	IC5507	6-713-838-01	IC 1A75BD	
F97910	1-400-834-11	FERRITE	00H	IC5508	6-712-993-01	IC 74AHC1000M-125	
F97911	1-400-834-11	FERRITE	00H	IC7001	6-706-489-01	IC TC7SH22FU (5S80XJF)	
F97917	1-400-462-21	FERRITE	00H	IC7003	6-712-914-01	IC CD9363ANQ	
F97919	1-400-461-21	FERRITE	00H	IC7201	6-713-875-01	IC T85560DQAR	
F97920	1-400-461-21	FERRITE	00H	IC7301	8-753-314-50	IC CA378SR-16	
F97921	1-400-179-21	FERRITE	00H	IC7401	6-713-862-01	IC AA4388AET-82	
F99804	1-400-461-21	FERRITE	00H	IC7453	6-711-231-01	IC N4M2878B3-33 (WE2)	
F99805	1-400-461-21	FERRITE	00H	IC7600	8-753-310-83	IC CD81447R-76	
F99806	1-400-461-21	FERRITE	00H	IC7601	6-704-600-01	IC W2AC02-MNMG1(B)	
F99807	1-400-461-21	FERRITE	00H	IC7902	6-711-134-01	IC M9G291CNR8	
				IC7905	6-710-532-01	IC N4M2878B4-25 (WE2)	



REFNO.	PARTNO	DESCRIPTION	REMARK	REFNO.	PARTNO	DESCRIPTION	REMARK
IC9600	6-704-600-01	IC M2402-NN66T (B)					
IC9601	6-708-132-01	IC 74VCLAAW					
		< SOCKET >					
		< COLL >					
J9600	*1-822-524-31	PHONO JACK 2P		Q1000	6-550-354-01	TRANSISTOR RYQ0390ZTR	
J9601	1-822-528-11	JACK		Q1001	6-551-815-01	RR DMR2A1G0LS0	
J9605	1-822-581-12	MULTIPLE PHONO JACK 4P		Q1002	6-552-215-01	RR RRS10003PFFB1	
J9800	1-822-523-11	PHONO JACK 5P		Q1003	6-552-215-01	RR RRS10003PFFB1	
				Q1004	6-552-212-01	RR MRR618V7TR	
L1002	1-457-714-11	INDUCTOR 4.70H		Q1304	6-551-690-01	TRANSISTOR RT3N1LM-PP-1	
L1003	1-457-744-11	INDUCTOR 1.50H		Q1309	8-729-907-00	TRANSISTOR DTG114ED	
L1307	1-457-455-11	INDUCTOR 100H		Q1312	6-550-369-01	TRANSISTOR PFC8109(FE12)	
L1308	1-424-918-21	INDUCTOR 100H		Q1420	6-551-690-01	TRANSISTOR RT3N1LM-PP-1	
L3000	1-457-730-11	INDUCTOR 2.20H		Q1421	6-551-690-01	TRANSISTOR RT3N1LM-PP-1	
L3500	1-457-223-11	INDUCTOR 00H		Q4200	6-551-903-01	RR RT3S02M-711-1-1	
L4001	1-469-556-21	INDUCTOR 150H		Q4201	6-551-903-01	RR RT3S02M-711-1-1	
L4200	1-469-557-21	INDUCTOR 220H		Q4202	6-551-903-01	RR RT3S02M-711-1-1	
L4401	1-481-521-11	INDUCTOR 10H		Q4401	6-551-321-01	TRANSISTOR RT3M1LM-PP-1F	
L4514	1-481-521-11	INDUCTOR 10H		Q5500	6-551-775-01	RR 28A2122G0LS0	
L4515	1-457-539-11	INDUCTOR 00H		Q5501	6-551-815-01	RR DMR2A1G0LS0	
L4516	1-457-539-11	INDUCTOR 00H		Q5503	6-551-825-01	RR DMR2S5G0LS0	
L4517	1-457-539-11	INDUCTOR 00H		Q5504	6-551-825-01	RR DMR2S5G0LS0	
L4518	1-457-539-11	INDUCTOR 00H		Q5507	6-551-815-01	RR DMR2A1G0LS0	
L4519	1-457-539-11	INDUCTOR 00H		Q5510	6-551-824-01	RR DMR3A5G0LS0	
L4520	1-457-539-11	INDUCTOR 00H		Q5512	6-552-110-01	RR DMR2M2G0LS0	
L7002	1-481-524-11	INDUCTOR 100H		Q7201	6-551-669-01	RR RT3S55M-PP-1	
L7201	1-457-754-11	INDUCTOR 220H		Q7302	6-551-551-01	TRANSISTOR RT3N1M-PP-1	
L7204	1-457-754-11	INDUCTOR 220H		Q7303	6-551-943-01	RR RT3XBBM-711-1-1	
L7302	1-481-524-11	INDUCTOR 100H		Q7304	6-551-551-01	TRANSISTOR RT3N1M-PP-1	
L7303	1-481-524-11	INDUCTOR 100H		Q7305	6-551-551-01	TRANSISTOR RT3N1M-PP-1	
L7401	1-481-524-11	INDUCTOR 100H		Q7306	6-551-943-01	RR RT3XBBM-711-1-1	
L7600	1-456-844-11	INDUCTOR 00H		Q7307	6-551-943-01	RR RT3XBBM-711-1-1	
L7601	1-456-844-11	INDUCTOR 00H		Q7308	6-551-691-01	TRANSISTOR RT3P1LM-PP-1	
L7602	1-456-844-11	INDUCTOR 00H		Q7309	6-551-943-01	RR RT3XBBM-711-1-1	
L7603	1-456-844-11	INDUCTOR 00H		Q7901	6-551-904-01	RR RT3S03M-711-1-1	
L7604	1-456-844-11	INDUCTOR 00H		Q7902	6-551-904-01	RR RT3S03M-711-1-1	
L7605	1-456-844-11	INDUCTOR 00H		Q7916	6-551-776-01	RR 28C5950G0LS0	
L7606	1-456-844-11	INDUCTOR 00H		Q7905	6-551-775-01	RR 28A2122G0LS0	
L7607	1-456-844-11	INDUCTOR 00H		Q7906	6-551-775-01	RR 28A2122G0LS0	
L7901	1-469-549-21	INDUCTOR 10H		Q7910	6-551-775-01	RR 28C5950G0LS0	
L7902	1-400-791-21	INDUCTOR 100H		Q7914	6-551-904-01	RR RT3S03M-711-1-1	
L7903	1-412-996-41	INDUCTOR 8.20H		Q7916	6-551-776-01	RR 28C5950G0LS0	
L7905	1-400-791-21	INDUCTOR 100H		Q7917	6-551-775-01	RR 28A2122G0LS0	
L7907	1-400-791-21	INDUCTOR 100H		Q9601	6-551-815-01	RR DMR2A1G0LS0	
L7913	1-469-555-21	INDUCTOR 100H		Q9806	6-551-775-01	RR 28C5950G0LS0	
L8600	1-400-177-21	FERRITE 00H		Q9812	6-551-776-01	RR 28C5950G0LS0	
L9800	1-469-557-21	INDUCTOR 220H		Q9813	6-551-272-01	TRANSISTOR RT3C1LM	



REFNO.	PARTNO.	DESCRIPTION	REMARK	REFNO.	PARTNO.	DESCRIPTION	REMARK
Q9814	6-551-272-01	TRANSISTOR RECTIUM		R2047	1-218-937-11	METAL CHIP 2.2K 5%	1/1.6W
		< RESISTOR >		R2048	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
				R2049	1-218-937-11	METAL CHIP 2.2K 5%	1/1.6W
				R2050	1-218-961-11	METAL CHIP 4.7K 5%	1/1.6W
				R2051	1-218-961-11	METAL CHIP 4.7K 5%	1/1.6W
R1000	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R2056	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R1001	1-218-965-11	METAL CHIP 470K 5%	1/1.6W	R2057	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R1002	1-208-711-11	METAL CHIP 15K 0.5%	1/1.6W	R2066	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R1003	1-208-696-11	METAL CHIP 4.3K 0.5%	1/1.6W	R2068	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R1004	1-208-911-11	METAL CHIP 10K 0.5%	1/1.6W	R2070	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R1005	1-208-696-11	METAL CHIP 4.3K 0.5%	1/1.6W	R2076	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R1006	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R2086	1-208-883-81	METAL CHIP 680 0.5%	1/1.6W
R1007	1-218-978-11	METAL CHIP 120K 5%	1/1.6W	R2087	1-208-683-11	METAL CHIP 1K 0.5%	1/1.6W
R1008	1-218-953-11	METAL CHIP 1K 5%	1/1.6W	R2088	1-208-687-11	METAL CHIP 1.5K 0.5%	1/1.6W
R1009	1-218-974-11	METAL CHIP 56K 5%	1/1.6W	R2100	1-218-937-11	METAL CHIP 47 5%	1/1.6W
R1300	1-218-990-81	SHORT CHIP 0		R2138	1-218-937-11	METAL CHIP 47 5%	1/1.6W
R1301	1-218-990-81	SHORT CHIP 0		R2139	1-218-937-11	METAL CHIP 47 5%	1/1.6W
R1303	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R2140	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R1304	1-218-969-11	METAL CHIP 22K 5%	1/1.6W	R2141	1-218-937-11	METAL CHIP 47 5%	1/1.6W
R1311	1-218-990-81	SHORT CHIP 0		R2142	1-218-937-11	METAL CHIP 47 5%	1/1.6W
R1313	1-218-957-11	METAL CHIP 2.2K 5%	1/1.6W	R2143	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R1317	1-208-911-11	METAL CHIP 10K 0.5%	1/1.6W	R2144	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R1321	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R2145	1-218-990-81	SHORT CHIP 0	
R1322	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R2146	1-218-990-81	SHORT CHIP 0	
R1324	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R2147	1-218-990-81	SHORT CHIP 0	
R1328	1-218-941-81	METAL CHIP 100 5%	1/1.6W	R2148	1-218-990-81	SHORT CHIP 0	
R1331	1-218-983-11	METAL CHIP 330K 5%	1/1.6W	R2150	1-218-990-81	SHORT CHIP 0	
R1362	1-208-931-11	METAL CHIP 68K 0.5%	1/1.6W	R2151	1-218-990-81	SHORT CHIP 0	
R1363	1-218-977-11	METAL CHIP 100K 5%	1/1.6W	R2152	1-218-990-81	SHORT CHIP 0	
R1405	1-218-990-81	SHORT CHIP 0		R2506	1-218-937-11	METAL CHIP 47 5%	1/1.6W
R1406	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R2510	1-218-937-11	METAL CHIP 47 5%	1/1.6W
R1407	1-208-699-11	METAL CHIP 4.7K 0.5%	1/1.6W	R2514	1-218-937-11	METAL CHIP 47 5%	1/1.6W
R1408	1-208-709-11	METAL CHIP 12K 0.5%	1/1.6W	R2515	1-218-933-11	METAL CHIP 22 5%	1/1.6W
R1410	1-208-911-11	METAL CHIP 10K 0.5%	1/1.6W	R2517	1-218-933-11	METAL CHIP 22 5%	1/1.6W
R1420	1-218-977-11	METAL CHIP 100K 5%	1/1.6W	R2518	1-218-933-11	METAL CHIP 22 5%	1/1.6W
R1421	1-218-969-11	METAL CHIP 22K 5%	1/1.6W	R2519	1-218-933-11	METAL CHIP 22 5%	1/1.6W
R1500	1-218-990-81	SHORT CHIP 0		R2530	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R2001	1-218-941-81	METAL CHIP 100 5%	1/1.6W	R2579	1-218-937-11	METAL CHIP 47 5%	1/1.6W
R2002	1-218-937-11	METAL CHIP 47 5%	1/1.6W	R2580	1-218-937-11	METAL CHIP 47 5%	1/1.6W
R2008	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R2605	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R2010	1-218-990-81	SHORT CHIP 0		R2608	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R2011	1-218-937-11	METAL CHIP 47 5%	1/1.6W	R2612	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R2012	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R2616	1-218-949-11	METAL CHIP 10K 5%	1/1.6W
R2017	1-218-937-11	METAL CHIP 47 5%	1/1.6W	R2657	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R2021	1-218-941-81	METAL CHIP 100 5%	1/1.6W	R2674	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R2035	1-218-941-81	METAL CHIP 100 5%	1/1.6W	R2675	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R2040	1-218-937-11	METAL CHIP 47 5%	1/1.6W	R2704	1-218-965-11	METAL CHIP 1K 5%	1/1.6W
R2041	1-218-937-11	METAL CHIP 47 5%	1/1.6W	R2705	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R2043	1-218-939-11	METAL CHIP 68 5%	1/1.6W	R2706	1-218-961-11	METAL CHIP 4.7K 5%	1/1.6W
R2045	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R2707	1-218-937-11	METAL CHIP 47 5%	1/1.6W
R2046	1-218-965-11	METAL CHIP 10K 5%	1/1.6W				



REFNO.	PARTNO.	DESCRIPTION	REMARK	REFNO.	PARTNO.	DESCRIPTION	REMARK
R2709	1-218-941-81	METAL CHIP 100 5%	1/1.6W	R3809	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R3000	1-208-911-11	METAL CHIP 10K 0.5%	1/1.6W	R3810	1-218-937-11	METAL CHIP 47 5%	1/1.6W
R3001	1-208-911-11	METAL CHIP 10K 0.5%	1/1.6W	R3811	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R3002	1-208-663-11	METAL CHIP 150 0.5%	1/1.6W	R3812	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R3003	1-208-663-11	METAL CHIP 150 0.5%	1/1.6W	R3813	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R3009	1-218-990-81	SHORT CHIP 0		R3814	1-218-941-81	METAL CHIP 100 5%	1/1.6W
R3010	1-218-990-81	SHORT CHIP 0		R3815	1-218-941-81	METAL CHIP 100 5%	1/1.6W
R3013	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R3816	1-218-941-81	METAL CHIP 100 5%	1/1.6W
R3038	1-218-929-11	METAL CHIP 10 5%	1/1.6W	R3817	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R3044	1-208-960-81	METAL CHIP 75 0.5%	1/1.6W	R3818	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R3045	1-208-960-81	METAL CHIP 75 0.5%	1/1.6W	R3819	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R3046	1-208-960-81	METAL CHIP 75 0.5%	1/1.6W	R3820	1-218-953-11	METAL CHIP 1K 5%	1/1.6W
R3047	1-208-960-81	METAL CHIP 75 0.5%	1/1.6W	R3821	1-218-937-11	METAL CHIP 47 5%	1/1.6W
R3050	1-208-663-11	METAL CHIP 150 0.5%	1/1.6W	R3822	1-218-953-11	METAL CHIP 1K 5%	1/1.6W
R3051	1-208-663-11	METAL CHIP 150 0.5%	1/1.6W	R3823	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R3052	1-208-911-11	METAL CHIP 10K 0.5%	1/1.6W	R4001	1-218-990-81	SHORT CHIP 0	
R3053	1-208-911-11	METAL CHIP 10K 0.5%	1/1.6W	R4002	1-218-990-81	SHORT CHIP 0	
R3054	1-208-911-11	METAL CHIP 10K 0.5%	1/1.6W	R4003	1-218-941-81	METAL CHIP 100 5%	1/1.6W
R3055	1-208-911-11	METAL CHIP 10K 0.5%	1/1.6W	R4004	1-218-945-11	METAL CHIP 220 5%	1/1.6W
R3060	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R4005	1-220-177-81	METAL CHIP 360 5%	1/1.6W
R3061	1-208-911-11	METAL CHIP 15K 0.5%	1/1.6W	R4008	1-218-945-11	METAL CHIP 150 5%	1/1.6W
R3501	1-218-941-11	METAL CHIP 100 5%	1/1.6W	R4010	1-208-935-11	METAL CHIP 10 0.5%	1/1.6W
R3502	1-218-941-11	METAL CHIP 100 5%	1/1.6W	R4011	1-208-935-11	METAL CHIP 10 0.5%	1/1.6W
R3503	1-218-941-11	METAL CHIP 100 5%	1/1.6W	R4012	1-208-935-11	METAL CHIP 10 0.5%	1/1.6W
R3504	1-218-941-11	METAL CHIP 100 5%	1/1.6W	R4013	1-218-939-11	METAL CHIP 68 5%	1/1.6W
R3505	1-218-941-11	METAL CHIP 100 5%	1/1.6W	R4014	1-218-939-11	METAL CHIP 68 5%	1/1.6W
R3506	1-218-941-11	METAL CHIP 100 5%	1/1.6W	R4015	1-218-939-11	METAL CHIP 68 5%	1/1.6W
R3507	1-218-941-11	METAL CHIP 100 5%	1/1.6W	R4042	1-218-941-11	METAL CHIP 470 5%	1/1.6W
R3508	1-218-941-11	METAL CHIP 100 5%	1/1.6W	R4047	1-218-990-81	SHORT CHIP 0	
R3510	1-208-705-11	METAL CHIP 6.8K 0.5%	1/1.6W	R4049	1-218-990-81	SHORT CHIP 0	
R3511	1-218-939-11	METAL CHIP 68 5%	1/1.6W	R4070	1-218-939-11	METAL CHIP 56 5%	1/1.6W
R3512	1-218-937-11	METAL CHIP 47 5%	1/1.6W	R4072	1-218-939-11	METAL CHIP 68 5%	1/1.6W
R3513	1-218-978-11	METAL CHIP 120K 5%	1/1.6W	R4074	1-218-939-11	METAL CHIP 68 5%	1/1.6W
R3518	1-218-961-11	METAL CHIP 4.7K 5%	1/1.6W	R4091	1-208-955-81	METAL CHIP 47 0.5%	1/1.6W
R3524	1-218-953-11	METAL CHIP 1K 5%	1/1.6W	R4093	1-208-955-81	METAL CHIP 47 0.5%	1/1.6W
R3525	1-218-961-11	METAL CHIP 4.7K 5%	1/1.6W	R4095	1-208-955-81	METAL CHIP 47 0.5%	1/1.6W
R3528	1-218-953-11	METAL CHIP 1K 5%	1/1.6W	R4097	1-208-955-81	METAL CHIP 47 0.5%	1/1.6W
R3530	1-218-953-11	METAL CHIP 1K 5%	1/1.6W	R4099	1-208-955-81	METAL CHIP 47 0.5%	1/1.6W
R3534	1-218-953-11	METAL CHIP 1K 5%	1/1.6W	R4101	1-208-955-81	METAL CHIP 47 0.5%	1/1.6W
R3536	1-218-953-11	METAL CHIP 1K 5%	1/1.6W	R4102	1-208-961-11	METAL CHIP 1.5K 0.5%	1/1.6W
R3541	1-220-984-81	METAL CHIP 39 0.5%	1/1.6W	R4103	1-208-961-11	METAL CHIP 1.5K 0.5%	1/1.6W
R3542	1-220-984-81	METAL CHIP 39 0.5%	1/1.6W	R4119	1-218-990-81	SHORT CHIP 0	
R3544	1-208-668-11	METAL CHIP 1.5K 0.5%	1/1.6W	R4120	1-218-990-81	SHORT CHIP 0	
R3545	1-218-967-11	METAL CHIP 15K 5%	1/1.6W	R4121	1-218-941-81	METAL CHIP 100 5%	1/1.6W
R3546	1-218-967-11	METAL CHIP 15K 5%	1/1.6W	R4122	1-218-941-81	METAL CHIP 100 5%	1/1.6W
R3558	1-218-937-11	METAL CHIP 47 5%	1/1.6W	R4123	1-208-943-11	METAL CHIP 22 0.5%	1/1.6W
R3561	1-218-937-11	METAL CHIP 47 5%	1/1.6W	R4124	1-208-935-11	METAL CHIP 10 0.5%	1/1.6W
R3803	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R4125	1-208-935-11	METAL CHIP 10 0.5%	1/1.6W
R3806	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R4126	1-220-880-81	METAL CHIP 27 0.5%	1/1.6W
R3807	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R4127	1-220-880-81	METAL CHIP 27 0.5%	1/1.6W



REFNO.	PARTNO.	DESCRIPTION	REMARK	REFNO.	PARTNO.	DESCRIPTION	REMARK
R4128	1-220-880-81	METAL CHIP 27	0.5% 1/1.6W	R513	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R4129	1-220-880-81	METAL CHIP 27	0.5% 1/1.6W	R514	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R4130	1-220-880-81	METAL CHIP 27	0.5% 1/1.6W	R518	1-245-604-11	METAL CHIP 10K 5%	1/1.6W
R4131	1-220-880-81	METAL CHIP 27	0.5% 1/1.6W	R519	1-218-941-81	METAL CHIP 100 5%	1/1.6W
R4144	1-208-687-11	METAL CHIP 1.5K	0.5% 1/1.6W	R520	1-218-981-91	METAL CHIP 220K 5%	1/1.6W
R4145	1-208-687-11	METAL CHIP 1.5K	0.5% 1/1.6W	R521	1-208-911-11	METAL CHIP 10K 0.5%	1/1.6W
R4146	1-208-687-11	METAL CHIP 1.5K	0.5% 1/1.6W	R523	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R4153	1-208-683-11	METAL CHIP 1K	0.5% 1/1.6W	R526	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R4154	1-218-990-81	SHORT CHIP 0		R529	1-208-683-11	METAL CHIP 1K 0.5%	1/1.6W
R4201	1-218-941-81	METAL CHIP 100	5% 1/1.6W	R532	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R4203	1-218-962-11	METAL CHIP 5.6K	5% 1/1.6W	R534	1-208-991-11	METAL CHIP 2.2K 0.5%	1/1.6W
R4204	1-218-962-11	METAL CHIP 5.6K	5% 1/1.6W	R535	1-218-953-11	METAL CHIP 10K 5%	1/1.6W
R4205	1-218-941-81	METAL CHIP 100	5% 1/1.6W	R536	1-218-990-81	SHORT CHIP 0	
R4207	1-218-965-11	METAL CHIP 10K	5% 1/1.6W	R538	1-218-945-11	METAL CHIP 220 5%	1/1.6W
R4208	1-218-965-11	METAL CHIP 10K	5% 1/1.6W	R540	1-208-911-11	METAL CHIP 15K 0.5%	1/1.6W
R4216	1-218-990-81	SHORT CHIP 0		R542	1-208-703-11	METAL CHIP 6.8K 0.5%	1/1.6W
R4217	1-218-965-11	METAL CHIP 10K	5% 1/1.6W	R545	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R4218	1-218-965-11	METAL CHIP 10K	5% 1/1.6W	R546	1-208-931-11	METAL CHIP 68K 0.5%	1/1.6W
R4401	1-208-889-11	METAL CHIP 1.2K	0.5% 1/1.6W	R550	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R4403	1-218-958-11	METAL CHIP 2.7K	5% 1/1.6W	R552	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R4405	1-208-677-11	METAL CHIP 560	0.5% 1/1.6W	R553	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R4409	1-218-990-81	SHORT CHIP 0		R554	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R4411	1-218-933-11	METAL CHIP 22	5% 1/1.6W	R555	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R4420	1-218-937-11	METAL CHIP 47	5% 1/1.6W	R559	1-218-971-11	METAL CHIP 47 5%	1/1.6W
R4421	1-218-937-11	METAL CHIP 47	5% 1/1.6W	R560	1-218-937-11	METAL CHIP 47 5%	1/1.6W
R4422	1-216-925-91	SHORT CHIP 0		R561	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R4505	1-208-893-11	METAL CHIP 1.6K	0.5% 1/1.6W	R563	1-218-941-81	METAL CHIP 100 5%	1/1.6W
R4506	1-208-635-11	METAL CHIP 10	0.5% 1/1.6W	R564	1-218-941-81	METAL CHIP 100 5%	1/1.6W
R4507	1-218-990-81	SHORT CHIP 0		R567	1-218-941-81	METAL CHIP 100 5%	1/1.6W
R4512	1-216-864-11	SHORT CHIP 0		R568	1-218-941-81	METAL CHIP 100 5%	1/1.6W
R4513	1-216-864-11	SHORT CHIP 0		R569	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R4514	1-242-967-81	METAL CHIP 1	5% 1/1.6W	R570	1-218-953-11	METAL CHIP 1K 5%	1/1.6W
R4517	1-208-635-11	METAL CHIP 10	0.5% 1/1.6W	R571	1-218-971-11	METAL CHIP 100K 5%	1/1.6W
R4525	1-218-941-81	METAL CHIP 100	5% 1/1.6W	R572	1-218-971-11	METAL CHIP 100K 5%	1/1.6W
R4531	1-218-965-11	METAL CHIP 10K	5% 1/1.6W	R576	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R4532	1-218-990-81	SHORT CHIP 0		R577	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R5020	1-218-937-11	METAL CHIP 47	5% 1/1.6W	R578	1-208-939-11	METAL CHIP 150K 0.5%	1/1.6W
R5023	1-218-937-11	METAL CHIP 47	5% 1/1.6W	R579	1-208-931-11	METAL CHIP 100K 0.5%	1/1.6W
R5024	1-218-937-11	METAL CHIP 47	5% 1/1.6W	R582	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R5025	1-218-937-11	METAL CHIP 47	5% 1/1.6W	R594	1-218-941-81	METAL CHIP 100 5%	1/1.6W
R5051	1-218-937-11	METAL CHIP 47	5% 1/1.6W	R599	1-218-953-11	METAL CHIP 1K 5%	1/1.6W
R5000	1-208-703-11	METAL CHIP 6.8K	0.5% 1/1.6W	R603	1-218-953-11	METAL CHIP 1K 5%	1/1.6W
R5061	1-208-935-11	METAL CHIP 100K	0.5% 1/1.6W	R604	1-218-947-11	METAL CHIP 330 5%	1/1.6W
R5002	1-208-695-11	METAL CHIP 3.3K	0.5% 1/1.6W	R605	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R5003	1-218-961-11	METAL CHIP 4.7K	5% 1/1.6W	R803	1-216-864-11	SHORT CHIP 0	
R5004	1-218-965-11	METAL CHIP 10K	5% 1/1.6W	R7003	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R5007	1-218-977-11	METAL CHIP 100K	5% 1/1.6W	R7017	1-218-965-11	METAL CHIP 1K 5%	1/1.6W
R5010	1-218-949-11	METAL CHIP 470	5% 1/1.6W	R7024	1-220-199-81	METAL CHIP 24K 5%	1/1.6W
R5011	1-218-937-11	METAL CHIP 47	5% 1/1.6W	R7025	1-218-990-81	SHORT CHIP 0	
R5012	1-218-937-11	METAL CHIP 47	5% 1/1.6W	R7026	1-218-945-11	METAL CHIP 220 5%	1/1.6W



REFNO.	PARTNO.	DESCRIPTION	REMARK	REFNO.	PARTNO.	DESCRIPTION	REMARK
R7027	1-218-945-11	METAL CHIP 220 5%	1/1.6W	R7908	1-218-961-11	METAL CHIP 4.7K 5%	1/1.6W
R7028	1-218-989-11	METAL CHIP 1M 5%	1/1.6W	R7910	1-208-939-11	METAL CHIP 150K 0.5%	1/1.6W
R7030	1-218-990-81	SHORT CHIP 0		R7911	1-218-989-11	METAL CHIP 1M 5%	1/1.6W
R7031	1-218-990-81	SHORT CHIP 0		R7912	1-218-989-11	METAL CHIP 1M 5%	1/1.6W
R7034	1-218-990-81	SHORT CHIP 0		R7914	1-218-957-11	METAL CHIP 2.2K 5%	1/1.6W
R7035	1-218-990-81	SHORT CHIP 0		R7916	1-218-959-11	METAL CHIP 3.3K 5%	1/1.6W
R7036	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R7917	1-218-990-81	SHORT CHIP 0	
R7037	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R7918	1-218-958-11	METAL CHIP 2.7K 5%	1/1.6W
R7038	1-218-990-81	SHORT CHIP 0		R7919	1-208-997-11	METAL CHIP 3.3K 0.5%	1/1.6W
R7201	1-218-990-81	SHORT CHIP 0		R7920	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R7202	1-218-990-81	SHORT CHIP 0		R7922	1-218-941-81	METAL CHIP 100 5%	1/1.6W
R7204	1-218-990-81	SHORT CHIP 0		R7925	1-218-990-81	SHORT CHIP 0	
R7209	1-218-953-11	METAL CHIP 1K 5%	1/1.6W	R7926	1-218-989-11	METAL CHIP 1M 5%	1/1.6W
R7211	1-218-977-11	METAL CHIP 100K 5%	1/1.6W	R7927	1-216-864-11	SHORT CHIP 0	
R7212	1-218-977-11	METAL CHIP 100K 5%	1/1.6W	R7930	1-218-990-81	SHORT CHIP 0	
R7213	1-218-977-11	METAL CHIP 100K 5%	1/1.6W	R7935	1-218-959-11	METAL CHIP 3.3K 5%	1/1.6W
R7214	1-218-977-11	METAL CHIP 100K 5%	1/1.6W	R7936	1-218-990-81	SHORT CHIP 0	
R7302	1-218-990-81	SHORT CHIP 0		R7937	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R7303	1-218-990-81	SHORT CHIP 0		R7941	1-218-941-81	METAL CHIP 100 5%	1/1.6W
R7304	1-218-990-81	SHORT CHIP 0		R7942	1-218-990-81	SHORT CHIP 0	
R7305	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R7950	1-218-941-81	METAL CHIP 100 5%	1/1.6W
R7313	1-218-990-81	SHORT CHIP 0		R7951	1-216-864-11	SHORT CHIP 0	
R7314	1-218-990-81	SHORT CHIP 0		R7966	1-218-990-81	SHORT CHIP 0	
R7401	1-218-953-11	METAL CHIP 1K 5%	1/1.6W	R7968	1-216-864-11	SHORT CHIP 0	
R7600	1-218-929-11	METAL CHIP 10 5%	1/1.6W	R7973	1-218-957-11	METAL CHIP 2.2K 5%	1/1.6W
R7601	1-218-929-11	METAL CHIP 10 5%	1/1.6W	R7974	1-218-933-11	METAL CHIP 22 5%	1/1.6W
R7602	1-218-929-11	METAL CHIP 10 5%	1/1.6W	R7975	1-218-933-11	METAL CHIP 22 5%	1/1.6W
R7603	1-208-683-11	METAL CHIP 1K 0.5%	1/1.6W	R7982	1-218-961-11	METAL CHIP 4.7K 5%	1/1.6W
R7604	1-208-683-11	METAL CHIP 1K 0.5%	1/1.6W	R7984	1-218-965-11	METAL CHIP 10K 5%	1/1.6W
R7605	1-208-683-11	METAL CHIP 1K 0.5%	1/1.6W	R7986	1-218-990-81	SHORT CHIP 0	
R7606	1-218-929-11	METAL CHIP 10 5%	1/1.6W	R7987	1-218-990-81	SHORT CHIP 0	
R7607	1-208-683-11	METAL CHIP 1K 0.5%	1/1.6W	R7988	1-218-990-81	SHORT CHIP 0	
R7608	1-218-941-81	METAL CHIP 100 5%	1/1.6W	R7992	1-208-689-11	METAL CHIP 180 0.5%	1/1.6W
R7609	1-218-941-81	METAL CHIP 100 5%	1/1.6W	R8000	1-218-990-81	SHORT CHIP 0	
R7610	1-218-941-81	METAL CHIP 100 5%	1/1.6W	R8003	1-218-990-81	SHORT CHIP 0	
R7611	1-218-941-81	METAL CHIP 100 5%	1/1.6W	R8004	1-216-864-11	SHORT CHIP 0	
R7612	1-208-689-11	METAL CHIP 4.7K 0.5%	1/1.6W	R8300	1-216-864-11	SHORT CHIP 0	
R7613	1-218-973-11	METAL CHIP 47K 5%	1/1.6W	R8301	1-218-933-11	METAL CHIP 22 5%	1/1.6W
R7621	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R8302	1-218-933-11	METAL CHIP 22 5%	1/1.6W
R7622	1-218-990-81	SHORT CHIP 0		R8303	1-400-834-11	ERRRTE 00H	
R7624	1-218-970-11	METAL CHIP 27K 5%	1/1.6W	R8306	1-218-990-81	SHORT CHIP 0	
R7625	1-218-941-81	METAL CHIP 100 5%	1/1.6W	R8600	1-218-990-81	SHORT CHIP 0	
R7626	1-218-953-11	METAL CHIP 1K 5%	1/1.6W	R8601	1-218-990-81	SHORT CHIP 0	
R7627	1-218-957-11	METAL CHIP 2.2K 5%	1/1.6W	R8602	1-218-990-81	SHORT CHIP 0	
R7628	1-218-957-11	METAL CHIP 2.2K 5%	1/1.6W	R8603	1-216-853-11	METAL CHIP 470K 5%	1/1.0W
R7634	1-218-965-11	METAL CHIP 10K 5%	1/1.6W	R8604	1-216-853-11	METAL CHIP 470K 5%	1/1.0W
R7902	1-218-941-81	METAL CHIP 100 5%	1/1.6W	R8610	1-218-990-81	SHORT CHIP 0	
R7903	1-218-990-81	SHORT CHIP 0		R8612	1-218-990-81	SHORT CHIP 0	
R7905	1-218-957-11	METAL CHIP 2.2K 5%	1/1.6W	R8614	1-218-990-81	SHORT CHIP 0	
R7907	1-218-961-11	METAL CHIP 4.7K 5%	1/1.6W	R8617	1-218-965-11	METAL CHIP 10K 5%	1/1.6W



REFNO.	PARTNO.	DESCRIPTION	REMARK	REFNO.	PARTNO.	DESCRIPTION	REMARK
RB2504	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB5000	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB2505	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB5001	1-234-371-21	RES, NETWORK 47	(1005X4)
RB2506	1-234-705-21	RES, CHIP NETWORK 100X8	(3816)	RB5501	1-234-375-11	RES, NETWORK 2.2K	(1005X4)
RB2507	1-234-371-21	RES, NETWORK 47	(1005X4)	RB5502	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2508	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	RB5503	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2509	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	RB5505	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2510	1-234-370-21	RES, NETWORK 22	(1005X4)	RB5506	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)
RB2512	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB5507	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2513	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB5508	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2516	1-234-799-21	RES, CHIP NETWORK 100X8	(3816)	RB5509	1-234-376-11	RES, NETWORK 2.2K	(1005X4)
RB2517	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB5510	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB2518	1-234-371-21	RES, NETWORK 47	(1005X4)	RB5512	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2519	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB5513	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2520	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB5514	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2521	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB5516	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB2522	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB5518	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2523	1-234-799-21	RES, CHIP NETWORK 100X8	(3816)	RB5519	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB3000	1-234-723-21	RES, NETWORK 75	(1005X4)	RB5520	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB3001	1-234-723-21	RES, NETWORK 75	(1005X4)	RB5521	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB3002	1-234-723-21	RES, NETWORK 75	(1005X4)	RB5522	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB3003	1-234-723-21	RES, NETWORK 75	(1005X4)	RB5524	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB3004	1-234-723-21	RES, NETWORK 75	(1005X4)	RB5525	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB3006	1-234-389-21	RES, NETWORK 10	(1005X4)	RB5526	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB3007	1-242-963-21	RES, NETWORK 33	(1005X4)	RB5527	1-234-372-11	RES, NETWORK 100	(1005X4)
RB3008	1-234-891-21	RES, CHIP NETWORK 100X8	(3816)	RB5528	1-234-372-11	RES, NETWORK 100	(1005X4)
RB3009	1-234-891-21	RES, CHIP NETWORK 100X8	(3816)	RB5530	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB3010	1-239-666-81	RESISTOR, NETWORK 22		RB5531	1-234-372-11	RES, NETWORK 100	(1005X4)
RB3011	1-239-666-81	RESISTOR, NETWORK 22		RB5532	1-234-372-11	RES, NETWORK 2.2K	(1005X4)
RB3500	1-234-371-21	RES, NETWORK 47	(1005X4)	RB5533	1-234-376-11	RES, NETWORK 2.2K	(1005X4)
RB3501	1-239-696-11	RESISTOR, NETWORK 10K		RB7001	1-234-376-21	RES, NETWORK 10K	(1005X4)
RB3502	1-234-377-21	RES, NETWORK 4.7K	(1005X4)	RB7002	1-234-372-11	RES, NETWORK 100	(1005X4)
RB3503	1-234-371-21	RES, NETWORK 47	(1005X4)	RB7003	1-234-372-11	RES, NETWORK 100	(1005X4)
RB3504	1-234-371-21	RES, NETWORK 47	(1005X4)	RB7004	1-234-372-11	RES, NETWORK 100	(1005X4)
RB3802	1-234-799-21	RES, CHIP NETWORK 100X8	(3816)	RB7005	1-234-882-21	RES, CHIP NETWORK 47X8	(3816)
RB3803	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB7007	1-234-882-21	RES, CHIP NETWORK 47X8	(3816)
RB3804	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB7008	1-234-376-21	RES, NETWORK 10K	(1005X4)
RB3805	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB7009	1-234-380-21	RES, NETWORK 47K	(1005X4)
RB3806	1-234-371-21	RES, NETWORK 47	(1005X4)	RB7013	1-234-379-21	RES, NETWORK 2K	(1005X4)
RB3807	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB7301	1-234-381-11	RES, NETWORK 100K	(1005X4)
RB3809	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB7302	1-234-375-11	RES, NETWORK 100	(1005X4)
RB3810	1-234-371-21	RES, NETWORK 47	(1005X4)	RB7303	1-234-381-11	RES, NETWORK 100K	(1005X4)
RB3811	1-234-371-21	RES, NETWORK 47	(1005X4)	RB7304	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB3812	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB7305	1-234-722-21	RES, NETWORK 75	(1005X4)
RB4200	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7306	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB4201	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7307	1-234-373-21	RES, NETWORK 220	(1005X4)
RB4203	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7308	1-234-381-11	RES, NETWORK 100K	(1005X4)
RB4204	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7310	1-234-373-21	RES, NETWORK 220	(1005X4)
RB4401	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	RB7311	1-234-381-11	RES, NETWORK 100K	(1005X4)
RB4503	1-239-662-81	RESISTOR, NETWORK 10		RB7312	1-234-373-21	RES, NETWORK 220	(1005X4)
RB4504	1-234-371-21	RES, NETWORK 47	(1005X4)	RB7313	1-234-373-21	RES, NETWORK 220	(1005X4)



BA HL4A HS

REFNO.	PARTNO.	DESCRIPTION	REMARK	REFNO.	PARTNO.	DESCRIPTION	REMARK
RB7401	1-234-372-11	RES, NETWORK 100	(1005X4)				
RB7402	1-234-378-21	RES, NETWORK 10K	(1005X4)				
RB7403	1-234-378-21	RES, NETWORK 10K	(1005X4)	D301	6-502-615-01	DI SMC-214MTT86A	
RB7406	1-234-375-21	RES, NETWORK 1K	(1005X4)	D302	6-502-609-01	DI SMC-214VTT86A	
RB7600	1-239-674-81	RESISTOR, NETWORK 100		D303	6-502-615-01	DI SMC-214MTT86A	
RB7601	1-239-674-81	RESISTOR, NETWORK 100		D305	6-502-609-01	DI SMC-214VTT86A	
RB7602	1-239-674-81	RESISTOR, NETWORK 100					
RB7603	1-239-706-81	RESISTOR, NETWORK 47K					
RB7604	1-239-706-81	RESISTOR, NETWORK 47K					
RB7605	1-239-706-81	RESISTOR, NETWORK 47K					
RB7606	1-234-378-21	RES, NETWORK 10K	(1005X4)				
RB7607	1-239-674-81	RESISTOR, NETWORK 100					
RB7608	1-239-706-81	RESISTOR, NETWORK 47K					
RB7610	1-239-690-81	RESISTOR, NETWORK 2.2K					
RB7901	1-234-372-11	RES, NETWORK 100	(1005X4)				
RB7902	1-234-785-21	RES, CHIP NETWORK 100K(13816)					
RB7903	1-234-372-11	RES, NETWORK 100	(1005X4)				
RB7904	1-239-690-81	RESISTOR, NETWORK 2.2K					
RB7906	1-239-690-81	RESISTOR, NETWORK 2.2K					
RB7907	1-234-378-21	RES, NETWORK 10K	(1005X4)				
RB7908	1-234-370-21	RES, NETWORK 22	(1005X4)				
RB8300	1-234-711-21	RES, CHIP NETWORK 22K8	(3816)				
		< TUNER >					
T07904	8-597-702-10	UNIVERSAL STD-TD SUP-HELIOT(10					
		< VARISTOR >					
VD9605	1-802-090-21	VARISTOR, CHIP					
VD9834	1-802-090-21	VARISTOR, CHIP					
VD9835	1-802-090-21	VARISTOR, CHIP					
VD9836	1-802-090-21	VARISTOR, CHIP					
		< CRYSTAL >					
XZ200	1-814-253-11	QUARTZ CRYSTAL UNIT					
X3500	1-814-147-11	QUARTZ CRYSTAL OSCILLATOR					
X3501	1-814-252-11	PIEZOELECTRIC OSCILLATOR 30MHZ					
X3500	1-813-070-21	PIEZOELECTRIC OSCILLATOR					
X3501	1-813-784-21	VIBRATOR, CRYSTAL					
X7001	1-814-267-11	QUARTZ CRYSTAL UNIT					
		< CAPACITOR >					
C304	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V				
		< CONNECTOR >					
CR301	*1-821-147-11	HEADER ASSEMBLY FOR PWB 7P					
		< DIODE >					
D401	*1-821-132-11	HEADER ASSEMBLY FOR PWB 5P					
		< DIODE >					
D402	6-501-732-01	DIODE MA2605601S0					
		< IC >					
IC401	6-600-681-01	IC RS-770N					
IC402	6-600-680-01	PHOTO DIODE BH160DFVC-TR					
		< TRANSISTOR >					
Q401	6-551-775-01	TR 2N2122G01S0					
		< RESISTOR >					
R401	1-218-941-81	METAL CHIP	100 5% 1/16W				
R402	1-218-937-11	METAL CHIP	47 5% 1/16W				
R403	1-218-990-81	SHORT CHIP	0				
R404	1-218-955-11	METAL CHIP	1.5K 5% 1/16W				
R406	1-218-990-81	SHORT CHIP	0				
R407	1-218-979-11	METAL CHIP	150K 5% 1/16W				
R408	1-218-965-11	METAL CHIP	10K 5% 1/16W				

A-1704-202-A HSN Board, Complete

A-1671-629-A HL4A Board, Complete

HSN

TU

REFNO.	PARTNO	DESCRIPTION	REMARK	REFNO.	PARTNO	DESCRIPTION	REMARK
R409	1-218-971-11	METAL CHIP 33K 5%	1/16W	C550	1-112-777-11	CERAMIC CHIP 0.01UF	10% 2
R411	1-218-953-11	METAL CHIP 1K 5%	1/16W	C551	1-100-916-11	CERAMIC CHIP 0.1UF	10% 1
<b>A-1742-442-A TUS Board Complete</b>							
< CAPACITOR >							
C500	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C555	1-112-777-11	CERAMIC CHIP 0.01UF	10% 2
C501	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C556	1-112-777-11	CERAMIC CHIP 0.01UF	10% 2
C502	1-164-850-11	CERAMIC CHIP 100PF	0.50PF 50V	C557	1-100-916-11	CERAMIC CHIP 0.1UF	10% 1
C504	1-164-843-11	CERAMIC CHIP 3PF	0.25PF 50V	C558	1-100-916-11	CERAMIC CHIP 0.1UF	10% 1
C506	1-100-907-11	CERAMIC CHIP 0.1UF	10% 10V	C559	1-112-777-11	CERAMIC CHIP 0.01UF	10% 2
C507	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C560	1-100-916-11	CERAMIC CHIP 0.1UF	10% 1
C508	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C561	1-112-777-11	CERAMIC CHIP 0.01UF	10% 2
C509	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C562	1-100-916-11	CERAMIC CHIP 0.1UF	10% 1
C510	1-164-862-11	CERAMIC CHIP 33PF	5.00% 50V	C563	1-100-916-11	CERAMIC CHIP 0.1UF	10% 1
C512	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C564	1-112-777-11	CERAMIC CHIP 0.01UF	10% 2
C514	1-112-892-11	CERAMIC CHIP 1000PF	5% 50V	C565	1-100-916-11	CERAMIC CHIP 0.1UF	10% 1
C516	1-164-862-11	CERAMIC CHIP 33PF	5.00% 50V	C566	1-100-916-11	CERAMIC CHIP 0.1UF	10% 1
C518	1-164-850-11	CERAMIC CHIP 100PF	0.50PF 50V	C567	1-164-868-11	CERAMIC CHIP 47PF	5.00% 5
C519	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C568	1-164-868-11	CERAMIC CHIP 47PF	5.00% 5
C520	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C569	1-114-334-11	CERAMIC CHIP 100PF	10% 2
C521	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C570	1-100-916-11	CERAMIC CHIP 0.1UF	10% 1
C522	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C571	1-100-916-11	CERAMIC CHIP 0.1UF	10% 1
C523	1-164-852-11	CERAMIC CHIP 12PF	5.00% 50V	C572	1-100-905-11	CERAMIC CHIP 100PF	10% 6
C524	1-164-852-11	CERAMIC CHIP 12PF	5.00% 50V	C573	1-114-334-11	CERAMIC CHIP 100PF	10% 2
C525	1-164-850-11	CERAMIC CHIP 100PF	0.50PF 50V	C574	1-100-916-11	CERAMIC CHIP 0.1UF	10% 1
C526	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C575	1-114-332-11	CERAMIC CHIP 22UF	10% 6
C527	1-164-850-11	CERAMIC CHIP 100PF	0.50PF 50V	C576	1-100-905-11	CERAMIC CHIP 0.001UF	10% 1
C528	1-100-909-11	CERAMIC CHIP 100PF	10% 6.3V	C577	1-127-772-81	CERAMIC CHIP 0.033UF	10% 5
C529	1-164-850-11	CERAMIC CHIP 100PF	0.50PF 50V	C578	1-100-905-11	CERAMIC CHIP 0.001UF	10% 5
C530	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C579	1-127-772-81	CERAMIC CHIP 0.033UF	10% 1
C531	1-164-850-11	CERAMIC CHIP 100PF	0.50PF 50V	C580	1-112-807-11	ELECT CHIP 1000PF	20% 5
C532	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C581	1-100-916-11	CERAMIC CHIP 0.1UF	10% 2
C533	1-164-850-11	CERAMIC CHIP 100PF	0.50PF 50V	C582	1-112-807-11	ELECT CHIP 1000PF	20% 5
C534	1-164-850-11	CERAMIC CHIP 100PF	0.50PF 50V	C583	1-114-329-11	CERAMIC CHIP 0.47UF	10% 5
C535	1-164-850-11	CERAMIC CHIP 100PF	0.50PF 50V	C584	1-112-807-11	ELECT CHIP 1000PF	20% 5
C536	1-164-850-11	CERAMIC CHIP 100PF	0.50PF 50V	C585	1-114-329-11	CERAMIC CHIP 0.47UF	10% 5
C537	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C586	1-114-329-11	CERAMIC CHIP 0.47UF	10% 5
C538	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C587	1-114-329-11	CERAMIC CHIP 0.47UF	10% 5
C539	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C588	1-125-899-91	CERAMIC CHIP 0.22UF	10.00% 5
C540	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C589	1-114-868-11	CERAMIC CHIP 0.1UF	10% 5
C541	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C590	1-125-898-91	CERAMIC CHIP 0.22UF	10.00% 5
C542	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C591	1-114-334-11	CERAMIC CHIP 100PF	10% 2
C543	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C592	1-100-905-11	CERAMIC CHIP 0.001UF	10% 5
C544	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C593	1-114-868-11	CERAMIC CHIP 0.1UF	10% 5
C545	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C594	1-112-781-11	CERAMIC CHIP 1UF	10% 1
C546	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C595	1-100-906-11	CERAMIC CHIP 0.01UF	10% 1
C547	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C596	1-100-916-11	CERAMIC CHIP 0.1UF	10% 1
C548	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V				
C549	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V				

REFNO.	PARTNO	DESCRIPTION	REMARK	REFNO.	PARTNO	DESCRIPTION	REMARK
		< CONNECTOR >				< TRANSISTOR >	
CMS00	*1-818-556-21	HEADER ASSEMBLY 30P		Q500	6-550-673-01	TRANSISTOR 2SC5751-72	
CMS01	1-822-761-11	COAXIAL CONNECTOR (F TYPE)				< RESISTOR >	
		< DIODE >				< RESISTOR CHIP >	
D501	8-719-076-47	DIODE 1SR308(TH35SNV,F)		R500	1-208-691-11	METAL CHIP 2.2K 0.5% 1/16W	
D502	8-719-053-18	DIODE 1SR154-400RE-25		R501	1-208-687-11	METAL CHIP 1.5K 0.5% 1/16W	
D503	8-719-081-67	DIODE M1PM3		R502	1-220-874-81	METAL CHIP 15 0.5% 1/16W	
D504	8-719-081-34	DIODE REL60M-30TR		R504	1-208-675-11	METAL CHIP 470 0.5% 1/16W	
D507	8-719-081-67	DIODE M1PM3		R508	1-412-971-31	INDUCTOR 0.22UH	
D508	8-719-053-18	DIODE 1SR154-400RE-25		R509	1-208-675-11	METAL CHIP 470 0.5% 1/16W	
D509	8-719-081-34	DIODE REL60M-30TR		R510	1-218-990-81	SHORT CHIP 0	
D510	6-501-818-01	DIODE MA21130G150		R512	1-218-937-11	METAL CHIP 47 5% 1/16W	
D511	6-502-943-01	DI LAMBDA4-304S		R513	1-242-667-81	METAL CHIP 1 5% 1/16W	
		< FERRITE BEAD >		R514	1-218-941-81	METAL CHIP 100 5% 1/16W	
F500	1-469-989-21	FERRITE 0RH		R515	1-218-941-81	METAL CHIP 100 5% 1/16W	
F501	1-469-084-21	FERRITE 0RH		R516	1-218-941-81	METAL CHIP 100 5% 1/16W	
F502	1-469-084-21	FERRITE 0RH		R517	1-218-941-81	METAL CHIP 100 5% 1/16W	
F503	1-469-084-21	FERRITE 0RH		R518	1-218-939-11	METAL CHIP 1K 5% 1/16W	
F504	1-469-084-21	FERRITE 0RH		R520	1-218-665-11	METAL CHIP 10K 5% 1/16W	
F505	1-469-084-21	FERRITE 0RH		R521	1-218-990-81	SHORT CHIP 0	
F506	1-469-084-21	FERRITE 0RH		R522	1-218-990-81	SHORT CHIP 0	
F507	1-469-084-21	FERRITE 0RH		R524	1-208-669-11	METAL CHIP 180 0.5% 1/16W	
F508	1-469-084-21	FERRITE 0RH		R528	1-218-961-11	METAL CHIP 4.7K 5% 1/16W	
F509	1-469-084-21	FERRITE 0RH		R529	1-218-969-11	METAL CHIP 22K 5% 1/16W	
F510	1-469-084-21	FERRITE 0RH		R521	1-218-952-11	METAL CHIP 820 5% 1/16W	
F511	1-469-084-21	FERRITE 0RH		R522	1-208-905-11	METAL CHIP 5.6K 0.5% 1/16W	
F512	1-400-180-21	FERRITE 0RH		R533	1-208-713-11	METAL CHIP 18K 0.5% 1/16W	
F513	1-400-180-21	FERRITE 0RH		R534	1-218-939-11	METAL CHIP 1K 5% 1/16W	
F514	1-400-180-21	FERRITE 0RH		R539	1-218-965-11	METAL CHIP 10K 5% 1/16W	
F515	1-400-180-21	FERRITE 0RH		R545	1-208-711-11	METAL CHIP 15K 0.5% 1/16W	
		< IC >		R546	1-218-941-81	METAL CHIP 100 5% 1/16W	
IC500	6-714-597-01	IC STV6110AT		R547	1-216-154-00	METAL CHIP 15 5% 1/8W	
IC501	6-714-562-01	IC STV0903BAB		R548	1-218-959-11	METAL CHIP 3.3K 5% 1/16W	
IC502	6-714-497-01	IC S71S03POR		R549	1-218-959-11	METAL CHIP 3.3K 5% 1/16W	
IC503	6-714-497-01	IC S71S03POR					
IC504	6-714-518-01	IC LMBR237PPR					
		< COIL >					
L500	1-481-673-21	INDUCTOR 27NH		R560	1-218-990-81	SHORT CHIP 0	
L501	1-414-786-21	INDUCTOR 10NH		R561	1-218-990-81	SHORT CHIP 0	
L502	1-164-839-11	CERAMIC CHIP 0.5PF	0.25PF 50V	R563	1-208-669-11	METAL CHIP 180 0.5% 1/16W	
L503	1-469-859-21	INDUCTOR 35NH		R564	1-208-669-11	METAL CHIP 180 0.5% 1/16W	
L507	1-457-849-11	INDUCTOR 3.6UH					
L508	1-481-546-11	INDUCTOR 4.7UH					
L509	1-457-850-11	INDUCTOR 22UH					
L510	1-457-851-11	INDUCTOR 220UH					
		< CRYSTAL >					
				X500	1-813-055-11	QUARTZ CRYSTAL UNIT	

REFNO.	PARTNO.	DESCRIPTION	REMARK
<b>ACCESSORIES AND CONNECTORS</b>			
<b>32 INCHES</b>			
	1-837-113-21	LEAD WIRE CONNECTOR (LWDS) (TCOM-BA(CM4501))	
	*1-910-054-76	CONNECTOR ASSY 14P (INVERTER(CM1)- e2 (CM2) -BA (CM301))	
	*1-910-054-77	CONNECTOR ASSY 13P (e2 (CM3) -BA (CM300))	
	*1-910-057-28	MULTI HARNESS SPEAKER ASSY (BA (CM5503/7201)- HSN (CM401) -HL4A (CM301) -SWITCH UNIT-SPEAKERS)	
	*1-910-058-88	CONNECTOR ASSY 30P (BA-TUS)	
<b>37 INCHES</b>			
	1-836-681-21	LEAD WIRE CONNECTOR (LWDS) (TCOM-BA (CM4501))	
	*1-910-054-57	CONNECTOR ASSY 13P (G4-BA (CM1300))	
	*1-910-054-58	CONNECTOR ASSY 14P (INVERTER-G4-BA (CM1301))	
	*1-910-057-30	MULTI HARNESS SPEAKER ASSY (BA (CM5503/7201)- HSN (CM401) -HL4A (CM301) -SWITCH UNIT-SPEAKERS)	
	*1-910-058-88	CONNECTOR ASSY 30P (BA-TUS)	
<b>40 INCHES</b>			
	*1-836-420-21	CONNECTOR ASSY, MDP61 (INVERTER-1P2 (CM6700))	
	1-836-679-21	LEAD WIRE CONNECTOR (LWDS) (TCOM-BA (CM4501))	
	*1-910-054-60	CONNECTOR ASSY 7P (INVERTER-1P1 (CM6701))	
	*1-910-054-61	HARNESS ASSY 7P (BA-1P2)	
	*1-910-054-81	CONNECTOR ASSY 4P (TCOM-1P2)	
	*1-910-057-32	MULTI HARNESS SPEAKER ASSY (BA (CM5503/7201)- HSN (CM401) -HL4A (CM301) -SWITCH UNIT-SPEAKERS)	
	*1-910-058-88	CONNECTOR ASSY 30P (BA-TUS)	
<b>46 INCHES</b>			
	1-836-674-21	LEAD WIRE CONNECTOR (LWDS) (TCOM-BA (CM4501))	
	*1-910-419-21	CONNECTOR ASSY, MDP61 (INVERTER-1P2 (CM6700))	
	*1-910-054-57	CONNECTOR ASSY 13P (1P2 (CM6150) -BA (CM1300))	
	*1-910-054-64	CONNECTOR ASSY 7P (BALANCER-1P2 (CM6701))	
	*1-910-054-66	CONNECTOR ASSY 8P (1P2 (CM6154) -BA (CM1301))	
	*1-910-054-84	CONNECTOR ASSY 4P (1P2-TCOM)	
	*1-910-057-34	MULTI HARNESS SPEAKER ASSY (BA (CM5503/7201)- HSN (CM401) -HL4A (CM301) -SWITCH UNIT-SPEAKERS)	
	*1-910-058-88	CONNECTOR ASSY 30P (BA-TUS)	
<b>52 INCHES</b>			
	*1-835-715-11	CONNECTOR ASSY 2P (DSN (CM6600) -BALANCER)	
	*1-836-138-11	CONNECTOR ASSY 2P (DBI (CM6900) -BALANCER)	
	*1-836-417-21	CONNECTOR ASSY, MDP61 (INVERTER-DSN (CM6700))	
	*1-836-418-21	CONNECTOR ASSY, MDP61 (INVERTER-D8N (CM6951))	
	1-836-673-21	LEAD WIRE CONNECTOR (LWDS) (TCOM-BA (CM4501))	
	*1-910-054-68	HARNESS ASSY (7P/13P) (G5-BA (CM1300/CM1301))	
	*1-910-054-72	CONNECTOR ASSY 8P (DS (CM6702) -G5)	
	*1-910-054-73	CONNECTOR ASSY 10P (DSN (CM6703) -D8N (CM6950))	
	*1-910-054-74	CONNECTOR ASSY 7P (BALANCER-DSN (CM6701))	

REFNO.	PARTNO.	DESCRIPTION	REMARK
	*1-910-054-84	CONNECTOR ASSY 4P (TCOM-G5)	
	*1-910-057-47	MULTI HARNESS SPEAKER ASSY (BA (CM5503/ HSN (CM401) -HL4A (CM301) -SWITCH UNIT-SPEAKERS)	
	*1-910-058-88	CONNECTOR ASSY 30P (BA-TUS)	

**INSTRUCTION MANUALS**

*4-159-944-11	INSTRUCTION MANUAL (0) ENGLISH
*4-159-944-21	INSTRUCTION MANUAL (E) ENGLISH/FRENCH/ ITALIAN/GERMAN/CZECH/SLOVAK/TC

**REMOTE COMMANDER**

1-487-228-11	REMOTE COMMANDER (RM-ED016)	(ASP
1-487-570-11	REMOTE COMMANDER (RM-ED020)	(DR C

9-883-465-01

Sony Corporation  
Sony UK  
Service Promotions Dept.

English  
09PZ710  
Printed in  
© 2005