



typ modelu:

RG1141WEU

Kod handlowy:

F017948

Informacje Główne

Przewodnik Dokumentacji Technicznej


Możesz tutaj odnaleźć podstawowe informacje ułatwiające korzystanie z dokumentacji technicznej

1. Modele tej samej gamy posiadają wspólne rysunki, które przedstawiają najbogatszy zestaw części; generalnie wybrany model niekoniecznie posiadać będzie w spisie części wszystkie pozycje przedstawione na rysunku
 2. Niektóre części nie mogą być przedstawione bezpośrednio na rysunku (instrukcje użytkownika, zestawy montażowe itd.). Można je odnaleźć w liście części pod pozycją gdzie są zainstalowane lub pod pozycją 09
 3. W prawym górnym rogu każdego rysunku widnieje numer seryjny wskazujący początek produkcji danej gamy urządzeń. Niektóre modele mogą posiadać więcej niż jeden rysunek dla podanej kategorii, każdy inny dla różnych numerów seryjnych.
 4. Rysunki złożeniowe mogą wymagać dalszych uaktualnień po ich publikacji. Nowe części zostaną dodane do odpowiednich oznaczeń numerycznych rysunku. Oznaczenie kodowe modyfikacji rysunku zawarte jest w ostatnich 4 cyfrach numeru seryjnego przedstawionego w prawym górnym rogu rysunku.
 5. Lista części odnosząca się do danego rysunku zawiera spis części tylko dla wybranego modelu; dostępne są dodatkowe informacje dla każdej części.
- REF. Numer referencyjny do tabeli; SUBSTITUT: lista części które zastępują dany kod zachowując takie same charakterystyki funkcjonalne
- KOD HANDLOWY: lista wariantów modelu (pokazana w nazwie modelu) gdzie dana część jest zastosowana; UWAGA: kod informacji potrzebny do interwencji, prześledź zmiany aby poprawnie ustalić kod części
6. Niektóre notatki techniczne są ogólne dla danej sekcji, zatem nie mogą być związane tylko konkretną częścią. Aby poruszać się w dokumentacjach modelu sprawnie, pomocne jest czytanie notatek i monitorowanie uaktualnień dokumentacji.
 7. Okładka dokumentacji technicznej przedstawia model sprzętu oraz jego kod handlowy.

5141060

rysunki

Matr.90215.0001

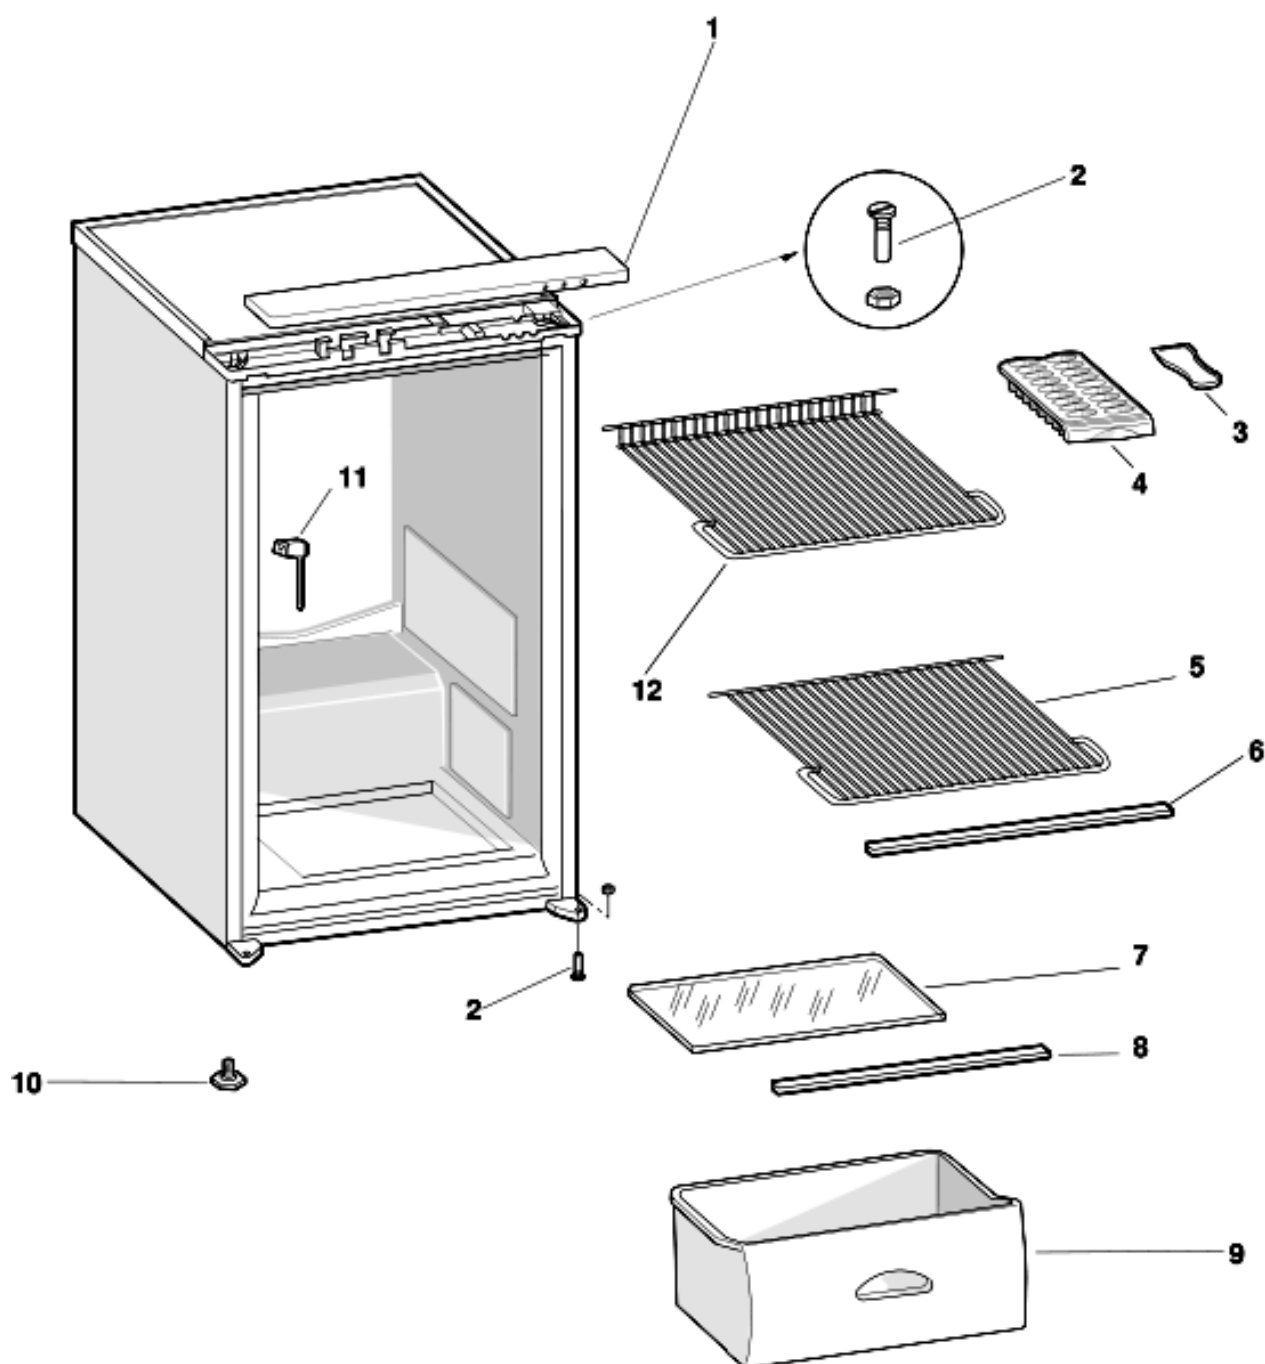

5141060

5141060


Lista części

Ref.	kod	Od S/N	Do S/N	Zamiennik	opis	Notatka	kod
000	C00060620				user instructions bookle		
001	C00060619				panel ster. biały 1-		
002	C00057829				sworzeń zawiasu doln. m8x8-25		
004	C00048575				miseczka na lód biała giugiario		
005	C00038962				wire shelf (428x320)-white		
007	C00034640				szkło pokrywy pojemn. na		
009	C00050207			1 x C00103293	white crisper (wxh		
010	C00053419				nóżka regulowana d.17,7x37,5		

5141130

rysunki

5141130

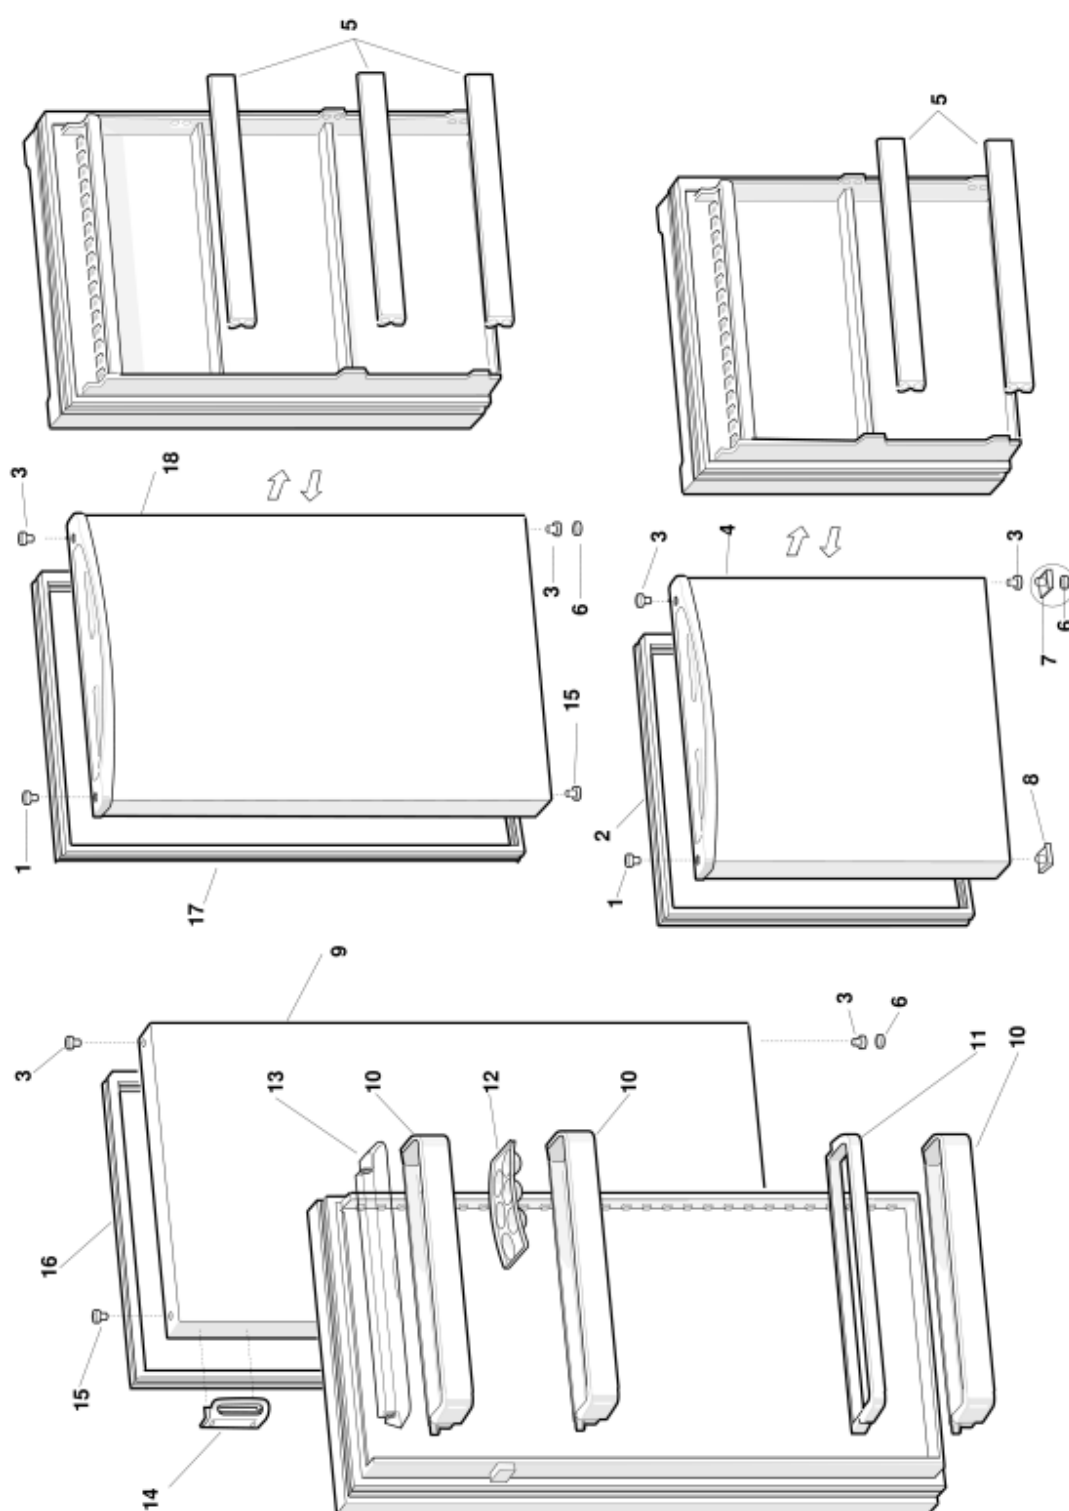

5141130


Lista części

Ref.	kod	Od S/N	Do S/N	Zamiennik	opis	Notatka	kod
001	C00045903			1 x C00114784	zatyczka biał. do bus. h.14		
002	C00037875				uszczelnienie biał. 487x784	0514012	
003	C00022161				tulejka biała 4x15 mm		
003	C00024267				tulejka biała 7x21,5 mm		
004	C00060614				drzwi chłodzi.biał.		
005	C00100317				white shelf mm (368+10)		

5141290

rysunki

Matr .90215.0002

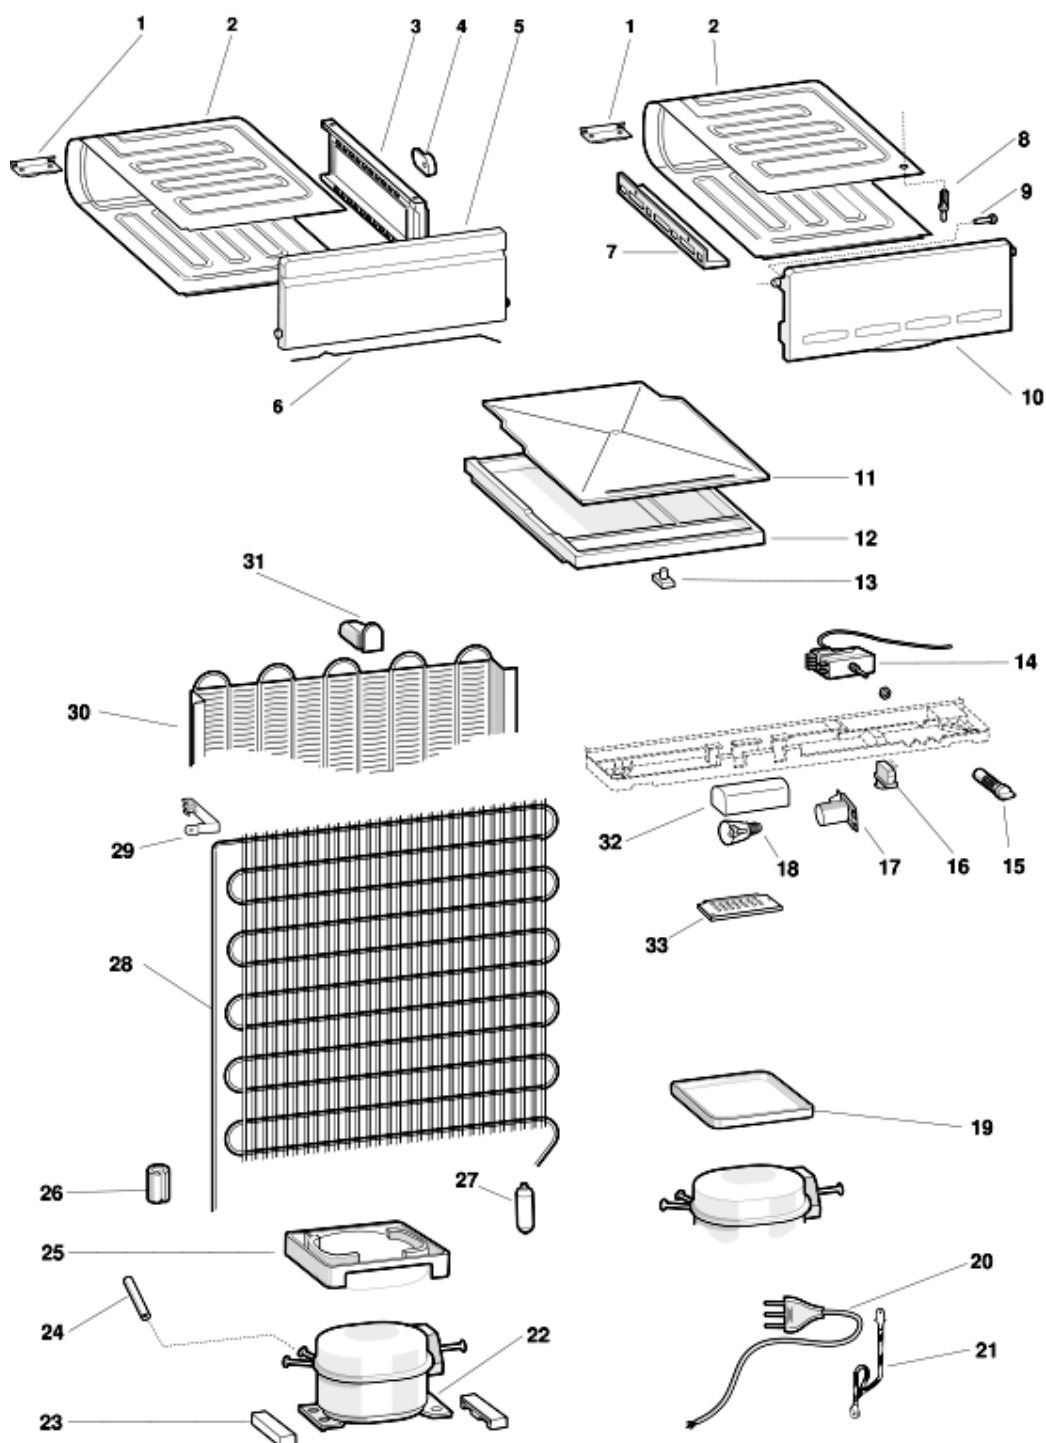

5141290

5141290

Lista części

Ref.	kod	Od S/N	Do S/N	Zamiennik	opis	Notatka	kod
001	C00042303				sprężynka bańki termostatu 'me		
002	C00043535			1 x C00046251	parownik (h=133x262)r134	n1025128	
007	C00023134				evaporator support white		
008	C00023837				evaporator spacer 36 mm (hole		
009	C00613015				tulejka okienko		
010	C00050161				drzwiczki parown. biały		
011	C00010082				przenośnik kondensat'mp145-me-		
012	C00050160				zbiorn.skropl. biały 432x295		
013	C00010088				zatyčka pojemnika na skropliny		
014	C00049061				termostat k50-l6539/a01-0587		
015	C00060618				pokrętko biały. termostatu d.6mm		
016	C00031238				wyłącznik światła	n1025114	
017	C00031233				oprawka żarówki(libero	n1025114	
017	C00086809				oprawka żarówki z wyłącznikiem	n1025114	
018	C00060617				lamp bulb 10w (e14)		
020	C00008598				kabel zasil.3x0,75 eu mm 2500		
022	C00056819			1 x C00057728	compressor assy u.h.gd30aa 220-		
022	C00057728			1 x C00074031	kompres.sicom az1320ys 220-		
023	C00057840				rubber shock absorber		
024	C00042354				rura doprowadzająca d.e.6x90		
026	C00037341				anti vibration rubber bush		
027	C00042357			1 x C00042334	filter gr.12 (r134a gas)		
030	C00060726				condenser (h=460+136x486)		
031	C00015332				przekładka kondensator		
032	C00061738				lamp heat protecting piece 80x38		
033	C00065277				lamp cover w.92x40x1,5		

Notatki

0514012: SEALS FOR DOORS FOAMED AS ONE PIECE

Various types of gaskets with different profile, as shown in figures (A) and (B), are used to fix the door (fig. A-5; B-5) and the inner door (fig. A-6; B-6) on the block foamed doors of combined freezers and refrigerators.

---Ilpea profile 245; 179; 412 (fig.A)

---Ilpea profile 287 (fig.B)

When replacing gaskets with profiles 245; 179; 412 these are fixed with screws (2 per corner) to the door.

Gaskets with profile 287 can not be used as spare parts but are designed to house the Ilpea type 900 gaskets (see figure C).

When replacing the gasket (287), once it is removed you will find a pocket (fig. B-1) between the door and inner door.

The rigid tooth (fig.C-1) of the gasket (900) is inserted inside between the pocket and the inner door, doing away with the need for screws.

Gasket with profile 287 is easy to identify since it has an exterior double edge (fig.B-2) which acts as a cushion when the door is closed.

To replace this gasket, follow these steps:

---Dismount the door and cut the four corners of the gasket along the joint (fig.D);

---lift the gasket and pull it carefully along its full length without tearing it (fig.E).

The purpose here is to detach the inner door slightly from the foam along the exterior edge for a depth equal to that of the gasket (fig.B-3);

---lift the corner of the inner door slightly, prising it up with your thumb (fig.F). Do not use a tool which might break the inner door;

---continue cutting the gasket inside the inner door for about 6 mm (fig.G);

---push in the tip of the pliers (type USAG N131) and pull outwards until you see the top edge of the pocket (fig. B-4) which is empty (fig.H-1);

---if you carry out this operation correctly (fig.L) you will be able to pull off the top edge of the pocket for the full length of the door.

If the gasket tears before the top edge (fig. L-2) you should repeat this operation from the other corner of the door.

---once the gasket (287), has been removed the space above the pocket (fig. L-1) can house the rigid tooth (fig. C-1) of the gasket 900.


When you fit this gasket ensure that it lies flush against the edge for the full length of the door.

If the rigid tooth is difficult to fit, eliminate any residues of foam between the door and the inner door in the gasket area.

fig.5131549A

n1025114: Switch lamp holder (086809) table and combined fridge models width 550 from Setubal.

From the month of October 2001 (registration no. 11002.0001) the Setubal (Portugal) production has been using a switch lamp holder, on Ariston and Indesit models 140 and 190 litre table fridges and 230 litre combined freezers. This lamp holder may not

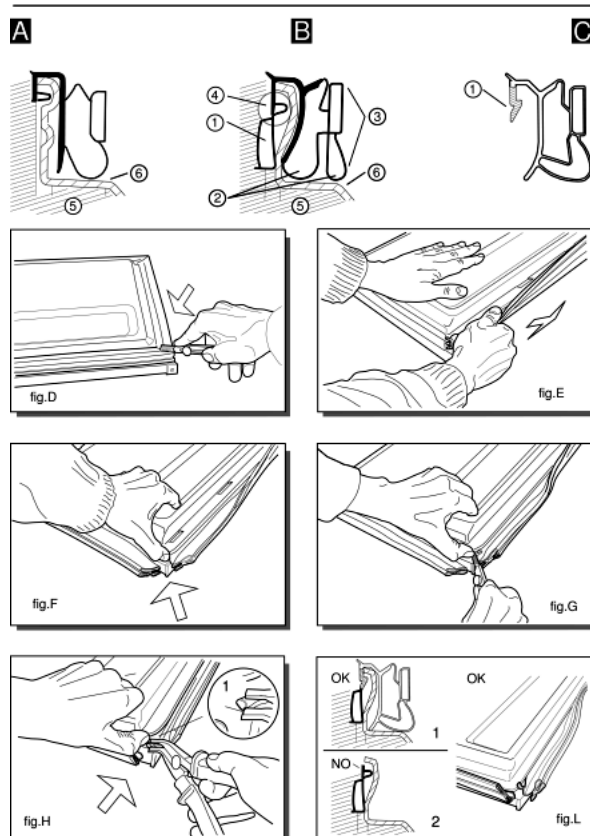

be mounted on pre-modification models which will continue to use the two single components: lamp holder 031233 and switch 031238.

New item codes:

086809 - LAMP-SOCKET WITH SWITCH 250V E14

Replaced item codes:

031238 - LIGHT SWITCH ARCOLETRIC 250V

031233 - LAMP-SOCKET (LIBERO 1061) 250V E14

n1025128: Non-varnished evaporators of refrigerators ME/MP140-185 (Setubal)

Since February 2003, the evaporators of refrigerators ME140-185 and MP140-185 are no longer varnished white. Furthermore, on the ME models, the evaporator is no longer equipped with the armaflex tube, while it is still supplied on the MP models, though shorter (now 125 mm long, previously 566 mm). When the varnished evaporators run out, the new ones will be managed with the same Sat code:

Modified items 140 litre refrigerator

043535 - EVAPORATOR (H=133X262) R134 ME140

064679 - EVAPORATOR (H=133X245)R134 MP140


Modified items 185 litre refrigerator

064690 - EVAPORATOR (H=133X262) R134A ME185

064677 - EVAPORATOR (H=133X245) R134A MP185

Schematy elektryczne i linki

Cod. 514003b

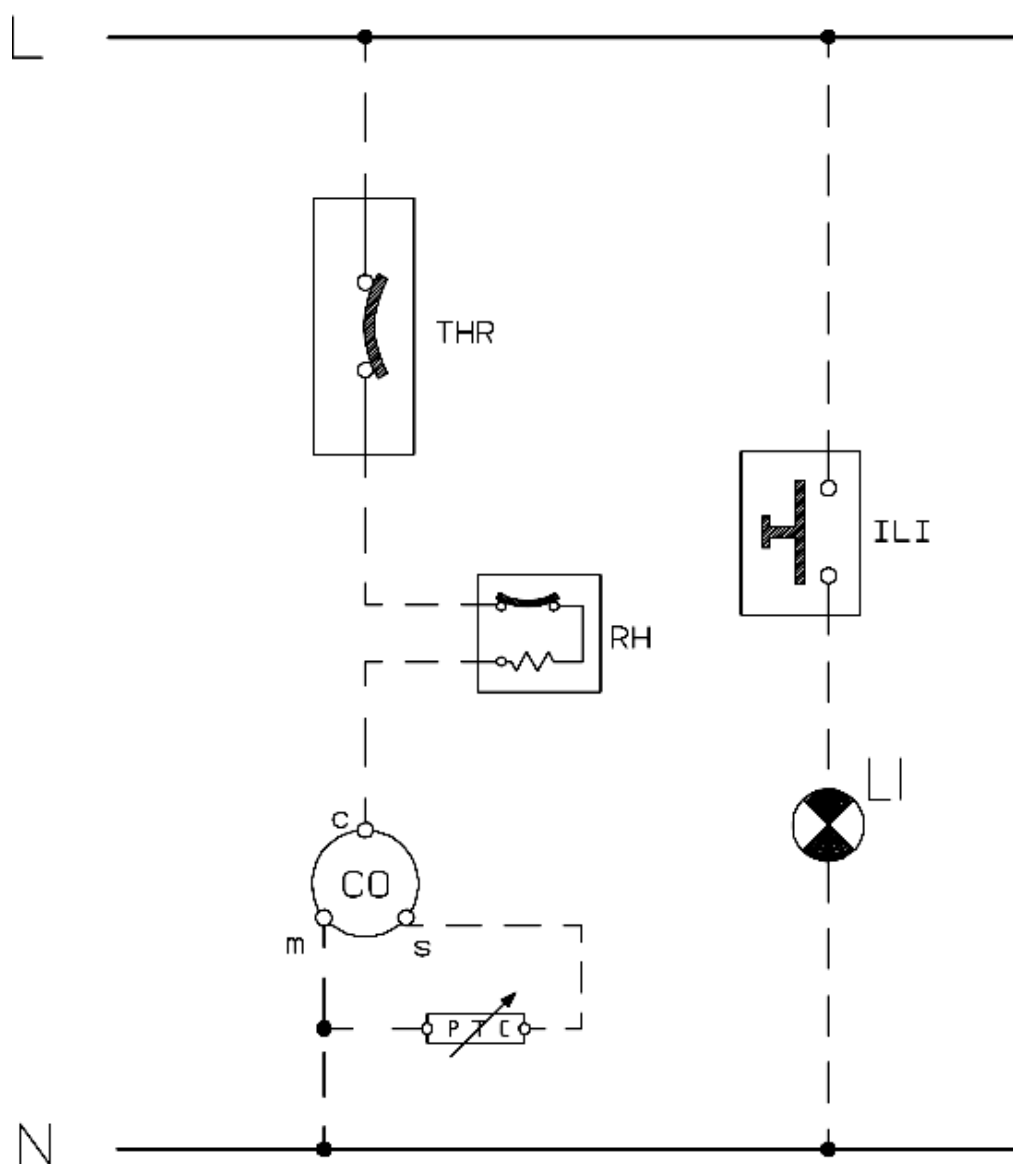

Legenda

Legenda: 514003b

CM	Running capacitor	N	Neutral
CO	Compressor	PTC	PTC relay
FA	Radio anti-trouble filter	R	Heating resistance
IDS	Schackler with warning	RA	Ammetrical relay
ILFR	Push-button for fridge lamp/fan	RAN	Heating element condensation
ILFZ	Push-button for freezer lamp/fan	RFZ	Heating element condensation freezer
ILI	Lamp switch	RH	Thermal relay
IP	Door switch	RS	Defrosting resistance
IR	Line switch	RS1	Defrosting resistance no-frost evaporator
ISC	Warning light-freezing switch	RS2	Defrosting resistance no-frost gutter
IV	Fan-motor switch	SDC	CONTROL CARD DIAGRAM
L	Line	SL	Line warning
LFR	Fridge lamp	SND1	PROBE REFRIGERATOR EVAP.
LFZ	Freezer lamp	SND2	AIR-PROBE FREEZER
LI	Lighting lamp	SND3	AIR-PROBE REFRIGERATOR
M	Mass/Eart symbol	T	Earth
MO	Terminal board	TC	Turbocooling
MT	Timer motor	TF	Fuse-thermic
MV	Fan motor	THI	Thermostat switch
MVCO	Compressor compartment fan	THR	Adjustable thermostat